



Owner's Manual

For your safety and comfort, read carefully and keep in the vehicle.

LAND CRUISER STATION WAGON



Pictorial index	Search by illustration	
For safety and security	Make sure to read through them (Main topics: Child seat, theft deterrent system)	1
Vehicle status information and indicators	Reading driving-related information (Main topics: Meters, multi-information display)	2
Before driving	Opening and closing the doors and windows, adjustment before driving (Main topics: Keys, doors, seats, power windows)	3
Driving	Operations and advice which are necessary for driving (Main topics: Starting engine, refueling)	4
Audio system	Operating the audio system (Main topics: Audio, phone)	5
Interior features	Usage of the interior features (Main topics: Air conditioner, storage features)	6
Maintenance and care	Caring for your vehicle and maintenance procedures (Main topics: Interior and exterior, light bulbs)	7
When trouble arises	What to do in case of malfunction and emergency (Main topics: Battery discharge, flat tire)	8
Vehicle specifications	Vehicle specifications, customizable features (Main topics: Fuel, oil, tire inflation pressure)	9
Index	Search by symptom	
	Search alphabetically	

2 TABLE OF CONTENTS

For your information	8
Reading this manual.....	12
How to search	13
Pictorial index.....	14

1 For safety and security

1-1. For safe use

Before driving.....	36
For safe driving	37
Seat belts	38
SRS airbags.....	43
Exhaust gas precautions	52

1-2. Child safety

Riding with children.....	53
Child restraint systems (except for India)	54
Child restraint systems (for India).....	85

1-3. Emergency assistance

eCall.....	102
ERA-GLONASS/EVAK	105

1-4. Theft deterrent system

Engine immobilizer system	109
Double locking system.....	110
Alarm	111
Fingerprint Authentication System.....	115

2 Vehicle status information and indicators

2-1. Instrument cluster

Warning lights and indicators	122
Gauges and meters (with 4.2-inch display).....	129

Gauges and meters (with 7-inch display)	133
Multi-information display (4.2-inch display).....	137
Multi-information display (7-inch display)	146
Head-up display.....	157
Fuel consumption screen....	161

3 Before driving

3-1. Key information

Keys.....	166
-----------	-----

3-2. Opening, closing and locking the doors

Side doors.....	169
Back door.....	173
Smart entry & start system	190

3-3. Adjusting the seats

Front seats.....	195
Rear seats	196
Head restraints	205

3-4. Adjusting the steering wheel and mirrors

Steering wheel	208
Inside rear view mirror	210
Outside rear view mirrors....	211

3-5. Opening, closing the windows and moon roof

Power windows.....	214
Moon roof.....	217

3-6. Favorite settings

Driving position memory	220
My Settings	224

4 Driving

4-1. Before driving

- Driving the vehicle**231**
- Cargo and luggage**238**
- Trailer towing (with towing hitch)
.....**239**
- Pintle hook.....**246**
- Electric winch.....**247**

4-2. Driving procedures

- Engine (ignition) switch.....**256**
- Automatic transmission (with M
mode)**261**
- Automatic transmission (with S
mode)**264**
- Turn signal lever**268**
- Parking brake.....**269**
- Brake Hold.....**272**

4-3. Operating the lights and wipers

- Headlight switch.....**275**
- AHS (Adaptive High-beam Sys-
tem)**280**
- AHB (Automatic High Beam)
.....**284**
- Fog light switch**287**
- Windshield wipers and washer
.....**288**
- Rear window wiper and washer
.....**292**

4-4. Refueling

- Opening the fuel tank cap...**294**

4-5. Using the driving support systems

- Toyota Safety Sense**297**

PCS (Pre-Collision System) **302**

LTA (Lane Tracing Assist) .. **314**

LDA (Lane Departure Alert with
Yaw Assist Function) **324**

RSA (Road Sign Assist)..... **331**

Dynamic radar cruise control
with full-speed range **335**

Dynamic radar cruise control
..... **348**

Cruise control..... **358**

Stop & Start system **361**

BSM (Blind Spot Monitor) ... **367**

Toyota parking assist-sensor
..... **372**

RCTA (Rear Cross Traffic Alert)
function **379**

RCD (Rear Camera Detection)
function **384**

PKSB (Parking Support Brake)
..... **388**

Parking Support Brake function
(static objects) **394**

Parking Support Brake function
(rear-crossing vehicles) **397**

Parking Support Brake function
(rear pedestrians) **399**

Rear view monitor system .. **401**

Toyota parking assist monitor
..... **408**

Multi-terrain Monitor..... **421**

Driving mode select switch . **473**

Four-wheel drive system..... **475**

Front differential lock system
..... **478**

Rear differential lock system
..... **480**

1

2

3

4

5

6

7

8

9

4 TABLE OF CONTENTS

Crawl Control (with Turn Assist function).....	481
Multi-terrain Select.....	486
Downhill assist control system	489
DPF (Diesel Particulate Filter) system	491
Driving assist systems	494
4-6. Driving tips	
Off-road precautions	502
Winter driving tips	504
Eco-friendly driving tips.....	507

5 Audio system

5-1. Basic Operations	
Audio system types.....	512
Using the steering wheel audio switches	513
AUX port/USB port.....	514
5-2. Using the audio system	
Optimal use of the audio system	515
5-3. Using the radio	
Radio operation	517
5-4. Playing an audio CD and MP3/WMA/AAC discs	
CD player operation.....	518
5-5. Using an external device	
Listening to an iPod	524
Listening to USB memory device	529
Using the AUX port	533
5-6. Using Bluetooth® devices	
Bluetooth® audio/phone.....	534

Using the steering wheel switches.....	538
Register a Bluetooth® device	538

5-7. "SETUP" menu

Using the "SETUP" menu ("Bluetooth" menu).....	540
Using the "SETUP" menu ("PHONE" menu)	543

5-8. Bluetooth® Audio

Operating a Bluetooth® enabled portable player.....	548
---	-----

5-9. Bluetooth® Phone

Making a phone call.....	550
When receiving a phone call	551
Speaking on the phone.....	551

5-10. Bluetooth®

Bluetooth®	553
------------------	-----

6 Interior features

6-1. Using the air conditioning system and defogger

Front automatic air conditioning system (vehicles without 12.3-inch display).....	556
Front automatic air conditioning system (vehicles with 12.3-inch display)	567
Rear cooler system.....	578
Rear air conditioning system	580
Heated steering wheel/seat heaters/seat ventilators	583

6-2. Using the interior lights
 Interior lights list.....**589**

6-3. Using the storage features
 List of storage features**593**
 Luggage compartment features
**598**

6-4. Using the other interior features
 Toyota multi-operation touch
 (vehicle with the 12.3-inch display).....**602**
 Other interior features.....**605**

7 Maintenance and care

7-1. Maintenance and care
 Cleaning and protecting the
 vehicle exterior**620**
 Cleaning and protecting the
 vehicle interior**623**

7-2. Maintenance
 Maintenance requirements **626**
 Scheduled maintenance**628**

7-3. Do-it-yourself maintenance
 Do-it-yourself service precautions**638**
 Hood**640**
 Engine compartment.....**641**
 Draining the fuel filter water
 (diesel engine only)**655**
 AdBlue™.....**657**
 Electric winch.....**661**
 Tires.....**662**
 Tire inflation pressure**674**
 Wheels.....**675**
 Air conditioning filter**677**

Electronic key battery**679**
 Checking and replacing fuses
**681**
 Light bulbs**685**

8 When trouble arises

8-1. Essential information
 Emergency flashers**690**
 If your vehicle has to be stopped
 in an emergency**690**
 If the vehicle is submerged or
 water on the road is rising **691**

8-2. Steps to take in an emergency
 If your vehicle needs to be
 towed**693**
 If you think something is wrong
**696**
 Fuel pump shut off system (gasoline
 engine only)**697**
 If a warning light turns on or a
 warning buzzer sounds.....**698**
 If a warning message is displayed
**709**
 If you have a flat tire**714**
 If the engine will not start....**725**
 If you lose your keys**727**
 If the electronic key or fingerprint
 authentication system does not
 operate properly**727**
 If the vehicle battery is discharged.....**729**
 If your vehicle overheats.....**736**
 If you run out of fuel and the
 engine stalls (diesel engine
 only)**739**



6 TABLE OF CONTENTS

If the vehicle becomes stuck
.....739

9 Vehicle specifications

9-1. Specifications

Maintenance data (fuel, oil level,
etc.).....742
Fuel information759

9-2. Customization


Customizable features761

9-3. Initialization

Items to initialize777

Index

What to do if... (Troubleshooting)
.....780
Alphabetical Index783



For your information

WARNING

■ General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

■ General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof (if equipped), or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options.

Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Toyota policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of equipment.

“For Eurasian Economic Union: The information on the procedure for the safe use of the vehicle and its systems, presented on the manufacturer's labels on the body in English, is intended only for service workers.”

Accessories, spare parts and modification of your Toyota

Both genuine Toyota and a wide variety of other spare parts and accessories for Toyota vehicles are currently available on the market. Should it be determined that any of the genuine Toyota parts or accessories supplied with the vehicle need to be replaced, Toyota recommends that genuine Toyota parts or accessories, be used to replace them. Other parts or accessories of matching quality can also be used.

Toyota cannot accept any liability or guarantee spare parts and accessories which are not genuine Toyota products, nor for replacement or installation involving such parts. In addition, damage or performance problems resulting from the use of non-genuine Toyota spare parts or accessories may not be covered under warranty.

Also, remodeling like this will have an effect on advanced safety equipment such as Toyota Safety Sense and there is a danger that it will not work properly or the danger that it may work in situations where it should not be working.

Installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Toyota Safety Sense
- Cruise control system
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with your Toyota dealer for precautionary measures or special instructions regarding installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of RF-transmitters, is available on request at your Toyota dealer.

Vehicle data recording

The vehicle is equipped with sophisticated computers that will record certain data, such as:

- Engine speed/Electric motor speed (traction motor speed)
- Accelerator status
- Brake status
- Vehicle speed
- Operation status of the driving assist systems
- Images from the cameras

Your vehicle is equipped with cameras. Contact your Toyota dealer for the location of recording cameras.

The recorded data varies according to the vehicle grade level, options and destinations with which it is equipped.

These computers do not record conversations or sounds, and only record images outside of the vehicle in certain situations.

● Data usage

Toyota may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Toyota will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner

- or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Toyota in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner
- Recorded image information can be erased by your Toyota dealer.

The image recording function can be disabled. However, if the function is disabled, data from when the system operates will not be available.

Event data recorder

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an airbag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. However, data may not be recorded depending on the severity and type of a crash.

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- How far (if at all) the driver was depressing the accelerator
- and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

● Disclosure of the EDR data

Toyota will not disclose the data recorded in an EDR to a third party except when:

- An agreement from the vehicle's owner (or the lessee for a leased vehicle) is obtained
- In response to an official request by the police, a court of law or a government agency

- For use by Toyota in a lawsuit

However, if necessary, Toyota may:

- Use the data for research on vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing information about the specific vehicle or vehicle owner

Scrapping of your Toyota

The SRS airbag and seat belt pretensioner devices in your Toyota contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Toyota dealer before you scrap your vehicle.

Noise levels inside the vehicle (V35A-FTS engine only)

For Russia, Kazakhstan and Belarus:

TECHNICAL REGULATION OF THE CUSTOMS UNION "ON THE SAFETY OF WHEELED VEHICLES" TR CU 018/2011 Attachment No.3, Section 2



(Requirements for vehicles concerning their interior noise), Table 2.1, Remarks 3

This vehicle may not be used for public purposes (as taxis, for example).


Reading this manual



Explains symbols used in this manual


Symbols in this manual

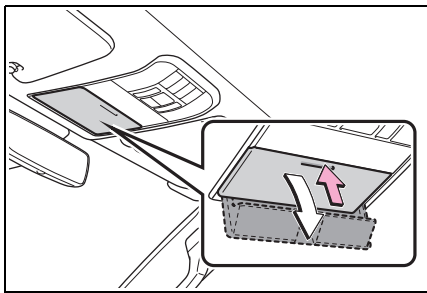

Symbols	Meanings
	WARNING: Explains something that, if not obeyed, could cause death or serious injury to people.
	NOTICE: Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.
1 2 3...	Indicates operating or working procedures. Follow the steps in numerical order.

Symbols in illustrations

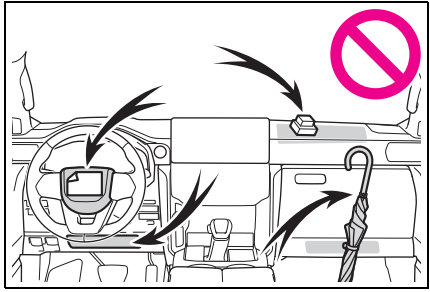

Symbols	Meanings
	Indicates the action (pushing, turning, etc.) used to operate switches and other devices.
	Indicates the outcome of an operation (e.g. a lid opens).




Symbols	Meanings
	Indicates the component or position being explained.
	Means Do not, Do not do this, or Do not let this happen.

How to search


■ Searching by name

- Alphabetical index: →P.783

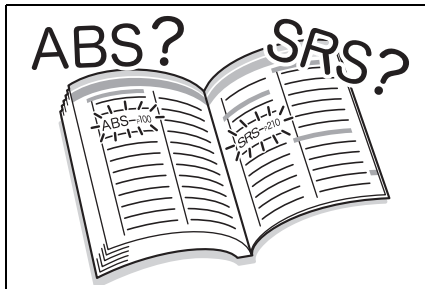

■ Searching by installation position

- Pictorial index: →P.14

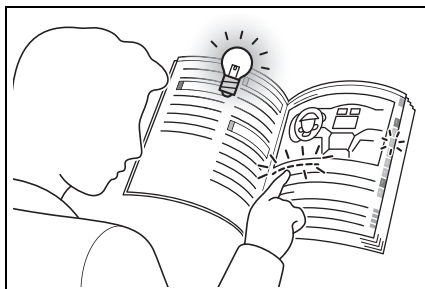


■ Searching by symptom or sound

- What to do if... (Troubleshooting): →P.780




■ Searching by title

- Table of contents: →P.2

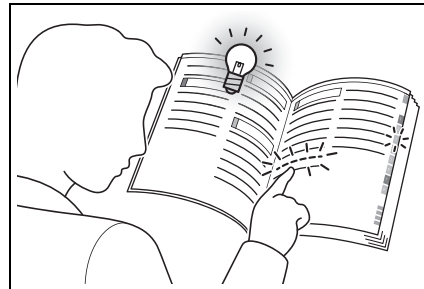

Pictorial index

■ Exterior

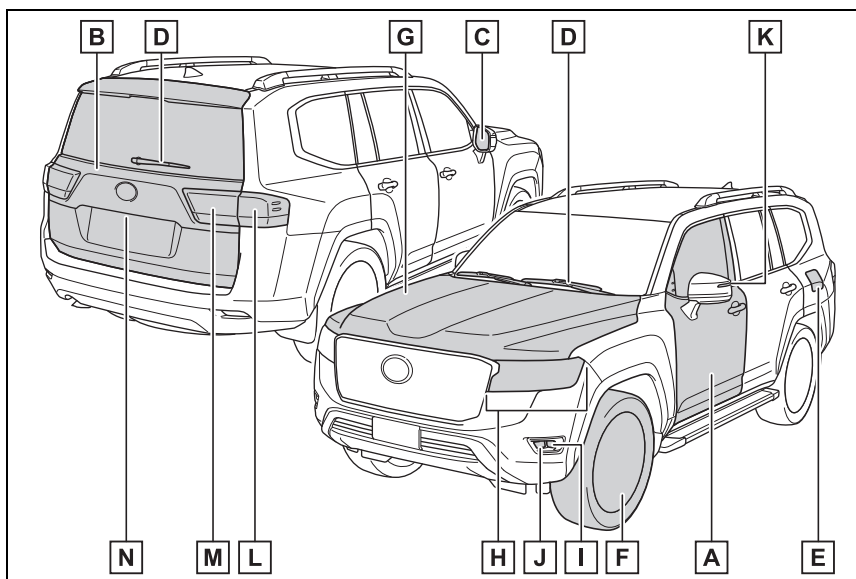

- A Side doors P.169**
 - Locking/unlocking P.169
 - Opening/closing the side windows P.214
 - Locking/unlocking by using the mechanical key P.727
 - Warning messages P.709
- B Back door P.173**
 - Locking/unlocking P.175
 - Opening/closing the back door P.175, 176
 - Power back door* P.176
 - Warning messages P.709
- C Outside rear view mirrors P.211**
 - Adjusting the mirror angle P.212
 - Folding the mirrors P.212
 - Driving position memory* P.220
 - Defogging the mirrors* P.559, 571

- D** **Windshield wipers** P.288
- Rear window wiper** P.292
- Precautions against winter season P.504
- To prevent freezing (windshield wiper de-icer^{*}) P.563, 575
- Precautions against car wash (rain-sensing windshield wipers)^{*} P.621
- E** **Fuel filler door (include AdBlue™ tank cap^{*})** P.294
- Refueling method P.294
- Refilling AdBlue™ method^{*} P.659
- Fuel type/fuel tank capacity P.747
- F** **Tires** P.662
- Tire size/inflation pressure P.757
- Winter tires/tire chain P.504
- Checking/rotation/tire pressure warning system^{*} P.662
- Coping with flat tires P.714
- G** **Hood** P.640
- Opening P.640
- Engine oil P.748
- Coping with overheat P.736
- Warning messages P.709

Light bulbs of the exterior lights for driving

(Replacing method: P.685, Watts: P.758)

- H** **Headlights/front position lights/daytime running lights/turn signal lights** P.268, 275
- I** **Front fog lights^{*}** P.287
- J** **Cornering lights^{*}** P.279
- K** **Turn signal lights** P.268
- L** **Stop lights/tail lights/turn signal lights** P.268, 275
- M** **Stop lights^{*}/tail lights/turn signal lights^{*}**

16 Pictorial index

rear fog lights* P.268, 275, 287


Back-up lights

Shifting the shift lever to R P.261, 264

N License plate lights P.275

* : If equipped

■ Instrument panel (Left-hand drive vehicles)

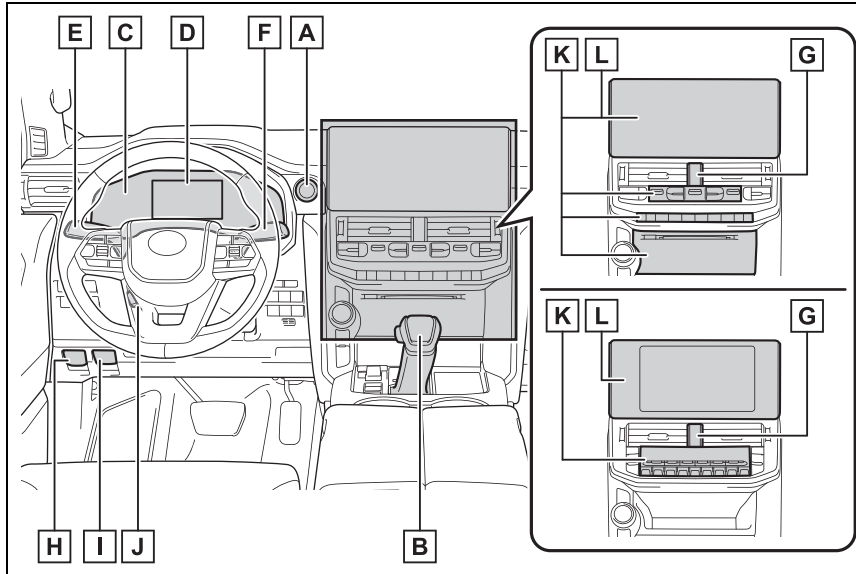

A	Engine switch	P.256
	Starting the engine/changing the modes	P.256, 259
	Emergency stop of the engine	P.690
	When the engine will not start.....	P.725
	Warning messages	P.709
B	Shift lever	P.261, 264
	Changing the shift position.....	P.261, 264
	Precautions against towing	P.693
	When the shift lever does not move.....	P.262, 266
C	Meters	P.129, 133
	Reading the meters/adjusting the instrument cluster light.....	P.129, 133, 141, 151
	Warning lights/indicator lights	P.122
	When the warning lights come on.....	P.698
D	Multi-information display	P.137, 146

Display P.137, 146
 When the warning messages are displayed P.709

E Turn signal lever P.268
Headlight switch P.275
 Headlights/front position lights/tail lights/
 daytime running lights P.275
 Front fog lights^{*1}/rear fog lights^{*1} P.287

F Windshield wiper and washer switch P.288
Rear window wiper and washer switch P.292
 Usage..... P.288, 292
 Adding washer fluid..... P.652

G Emergency flasher switch..... P.690

H Fuel filler door opener P.295

I Hood lock release lever P.640

J Tilt and telescopic steering control switch^{*1} P.208
 Adjustment P.208
 Driving position memory^{*1} P.220
Tilt and telescopic steering lock release lever^{*1} P.208


K Air conditioning system P.556, 567
 Usage..... P.556, 567
 Rear window defogger P.559, 571

L Audio system^{*1, 2} P.512

^{*1}: If equipped


^{*2}: For vehicles with a navigation system or a multimedia system, refer to the “Navigation and Multimedia System Owner’s Manual”.

■ Switches (Left-hand drive vehicles)

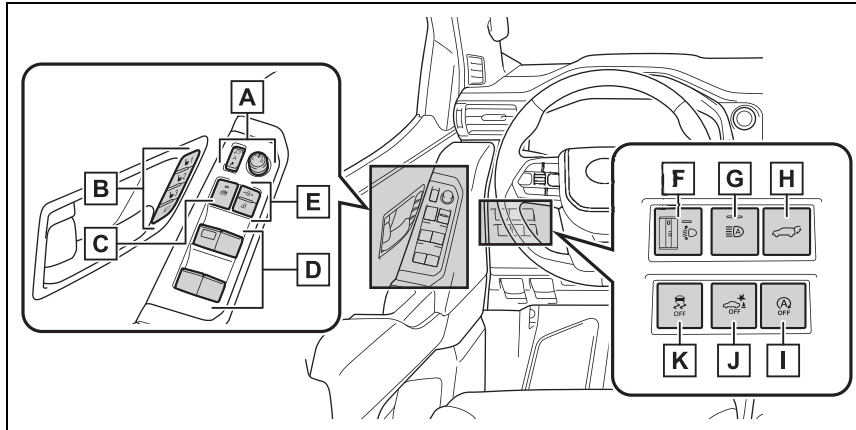


A	Outside rear view mirror switches	P.211
B	Driving position memory buttons *	P.220
C	Window lock switch	P.216
D	Power window switches	P.214
E	Door lock switch	P.171
F	Manual headlight leveling dial *	P.277
G	Adaptive High-beam System switch *	P.281
	Automatic High Beam switch *	P.284
H	Power back door switch *	P.176
I	Stop & Start cancel switch *	P.362
J	PKSB switch *	P.390
K	VSC OFF switch	P.496

* : If equipped

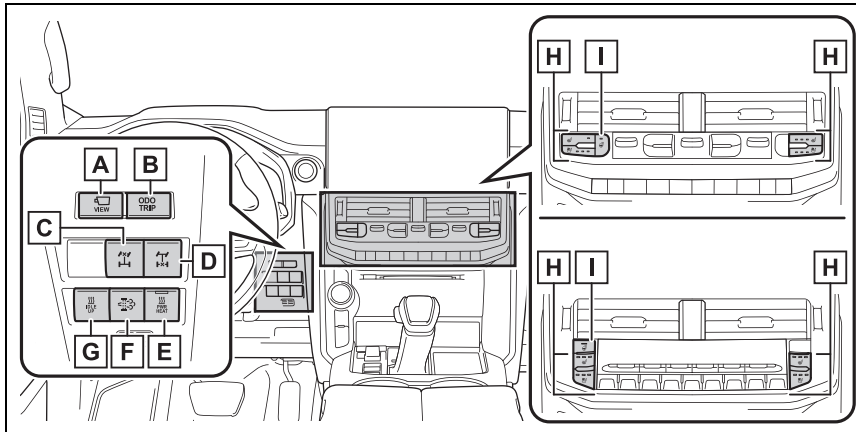

- A** VIEW switch * P.424
- B** “ODO TRIP” switch P.131, 135
- C** Front differential lock switch * P.478
- D** Rear differential lock switch * P.480
- E** Power heater switch * P.564, 576
- F** DPF system switch * P.491
- G** Heater idle up switch * P.564, 576
- H** Front seat heater switches * P.584
Front seat ventilator switches * P.586
- I** Heated steering wheel switch * P.584


*: If equipped

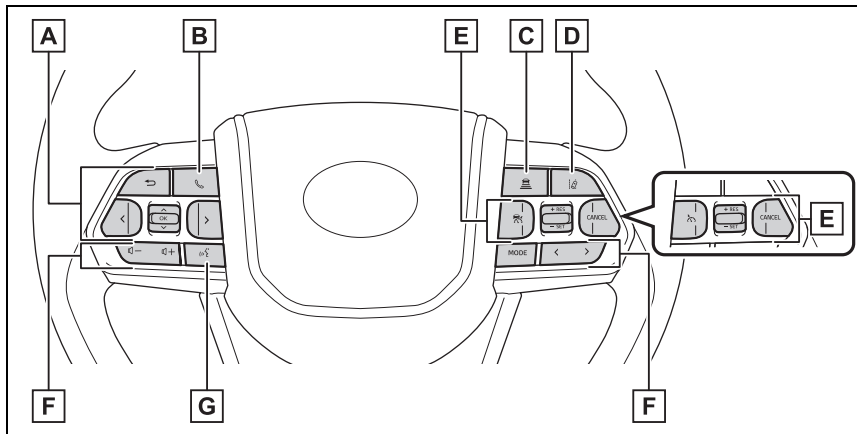

- A** Meter control switches P.137, 147
- B** Telephone switch^{*1}
- C** Vehicle-to-vehicle distance switch^{*2} P.340, 353
- D** LTA (Lane Tracing Assist) switch^{*2} P.314
LDA (Lane Departure Alert with Yaw Assist Function)
switch^{*2} P.324
- E** Cruise control switches^{*2}
Dynamic radar cruise control with full-speed range^{*2} P.335
Dynamic radar cruise control^{*2} P.348
Cruise control^{*2} P.358
- F** Audio remote control switches^{*1} P.513
- G** Talk switch^{*1, 2}

^{*1}: For vehicles with a navigation system or a multimedia system, refer to the “Navigation and Multimedia System Owner’s Manual”.


^{*2}: If equipped

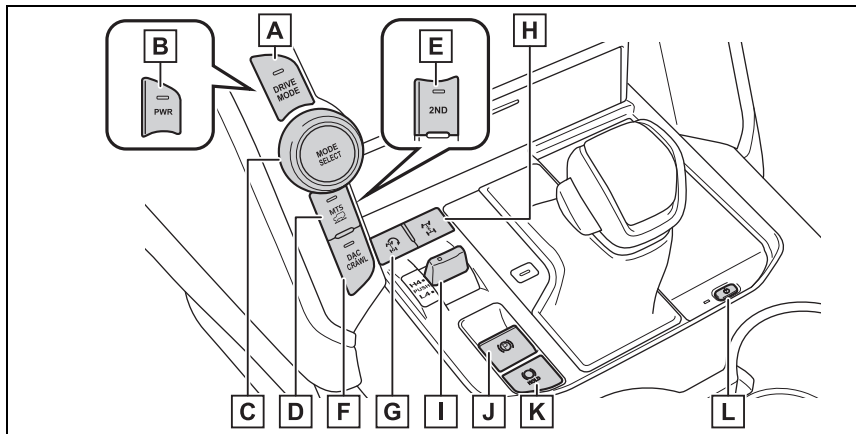

A	DRIVE MODE switch *	P.473
B	Power mode switch *	P.267
C	MODE SELECT switch *	P.473, 482, 486, 489
D	MTS switch *	P.486
E	Second start mode switch *	P.263, 267
F	DAC/CRAWL switch *	P.482, 489
G	Turn Assist switch *	P.484
H	Center differential lock switch	P.476
I	Four-wheel drive control switch	P.475
J	Parking brake switch	P.269
	Applying/releasing	P.269
	Precautions against winter season	P.506
	Warning buzzer/message	P.705, 709
K	Brake hold switch	P.272
L	Wireless charger switch *	P.610

*: If equipped

■ Interior (Left-hand drive vehicles)

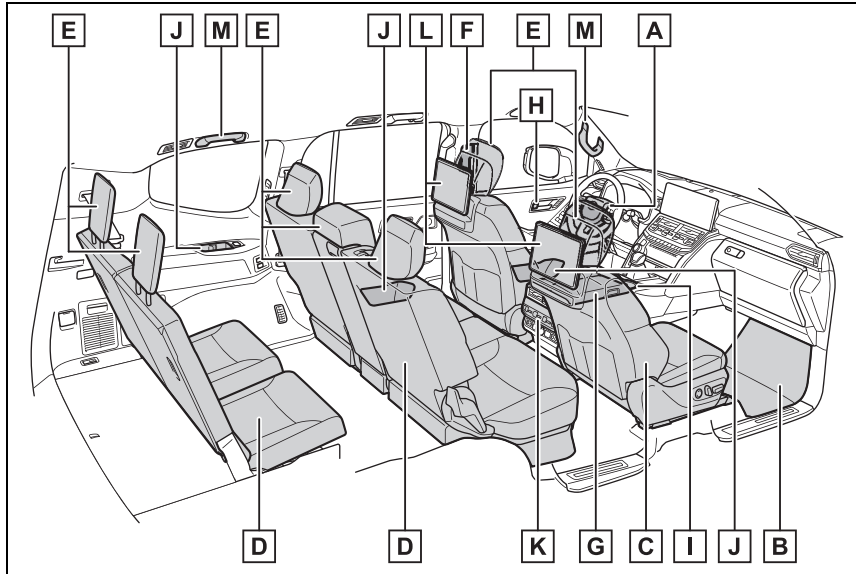

A SRS airbags.....	P.43
B Floor mats.....	P.36
C Front seats.....	P.195
D Rear seats ^{*1}	P.196
E Head restraints ^{*1}	P.205
F Seat belts.....	P.38
G Console box ^{*1}	P.594
Cool box ^{*1}	P.605
H Inside lock buttons.....	P.172
I Cup holders.....	P.595
J Bottle holders.....	P.596
K Rear cooler system ^{*1}	P.578
Rear air conditioning system ^{*1}	P.580


L Rear seat entertainment system^{*1, 2}

M Assist grips P.617

^{*1}: If equipped

^{*2}: For vehicles with a navigation system or a multimedia system, refer to the "Navigation and Multimedia System Owner's Manual".

■ Ceiling (Left-hand drive vehicles)

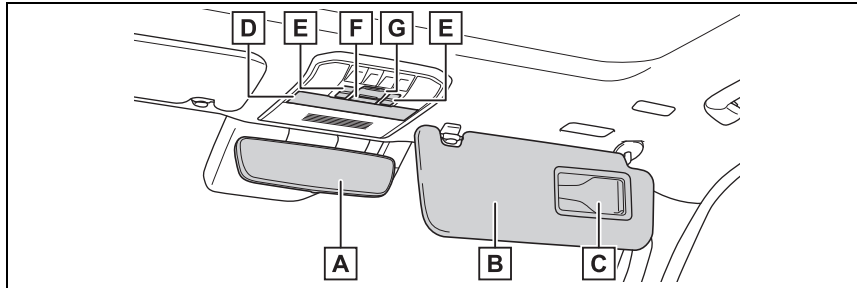

- A** Inside rear view mirror P.210
- B** Sun visors^{*2} P.607
- C** Vanity mirrors^{*1} P.607
- D** Interior lights^{*1, 3} P.590
 Personal lights^{*1, 3} P.590
- E** Moon roof switches^{*1} P.217
- F** Intrusion sensor and tilt sensor cancel switch^{*1} P.112
- G** "SOS" button^{*1} P.102, 105


^{*1}: If equipped

^{*2}: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P.57)



^{*3}: The illustration shows the front, but they are also equipped in the rear.

■ Instrument panel (Right-hand drive vehicles)

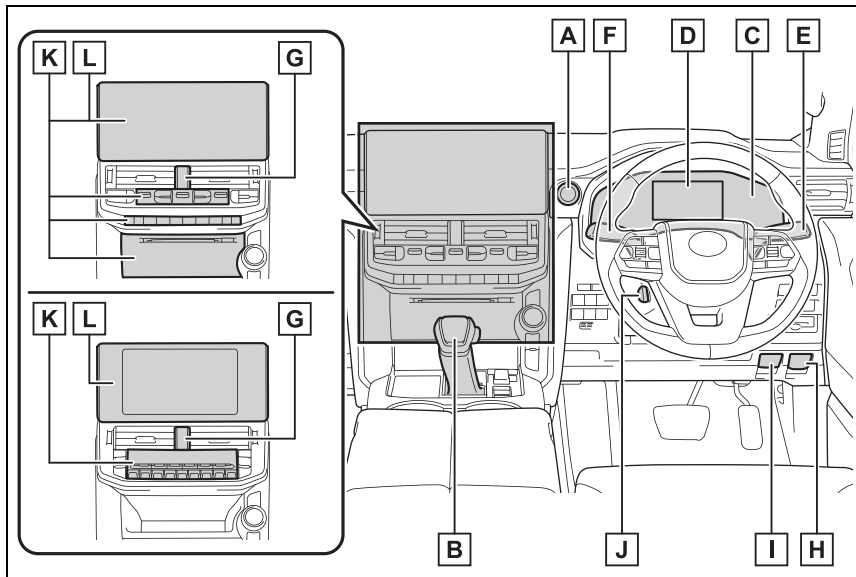


- A Engine switch** P.256
 Starting the engine/changing the modes P.256, 259
 Emergency stop of the engine P.690
 When the engine will not start P.725
 Warning messages P.709
- B Shift lever** P.261, 264
 Changing the shift position P.261, 264
 Precautions against towing P.693
 When the shift lever does not move P.262, 266
- C Meters** P.129, 133
 Reading the meters/adjusting the instrument cluster light P.129, 133, 141, 151
 Warning lights/indicator lights P.122
 When the warning lights come on P.698
- D Multi-information display** P.137, 146

Display	P.137, 146
When the warning messages are displayed	P.709
E Turn signal lever	P.268
Headlight switch	P.275
Headlights/front position lights/tail lights/daytime running lights	P.275
Front fog lights ^{*1} /rear fog lights ^{*1}	P.287
F Windshield wiper and washer switch	P.288
Rear window wiper and washer switch	P.292
Usage.....	P.288, 292
Adding washer fluid.....	P.652
G Emergency flasher switch.....	P.690
H Fuel filler door opener (include AdBlue™ tank cap^{*1}).....	P.295
I Hood lock release lever.....	P.640
J Tilt and telescopic steering control switch^{*1}.....	P.208
Adjustment	P.208
Driving position memory ^{*1}	P.220
Tilt and telescopic steering lock release lever^{*1}.....	P.208
K Air conditioning system.....	P.556, 567
Usage.....	P.556, 567
Rear window defogger	P.559, 571
L Audio system^{*1, 2}.....	P.512

^{*1}: If equipped


^{*2}: For vehicles with a navigation system or a multimedia system, refer to the "Navigation and Multimedia System Owner's Manual".

■ Switches (Right-hand drive vehicles)

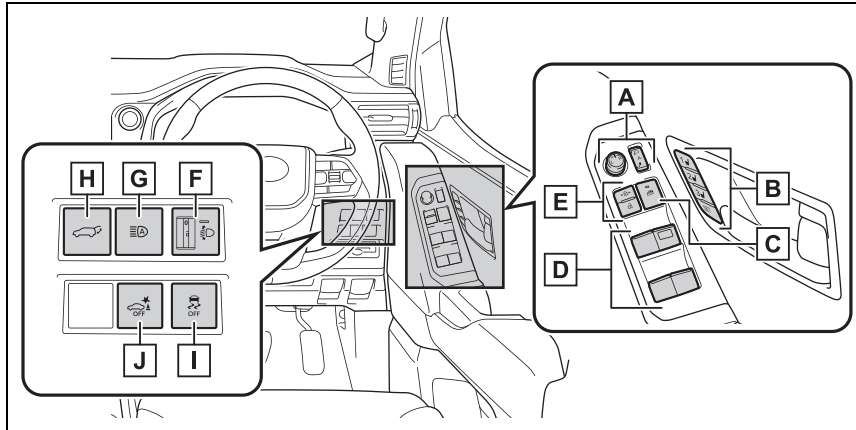


A	Outside rear view mirror switches	P.211
B	Driving position memory buttons *	P.220
C	Window lock switch	P.216
D	Power window switches	P.214
E	Door lock switch	P.171
F	Manual headlight leveling dial *	P.277
G	Adaptive High-beam System switch *	P.281
	Automatic High Beam switch *	P.284
H	Power back door switch *	P.176
I	VSC OFF switch	P.496
J	PKSB switch *	P.390

*: If equipped

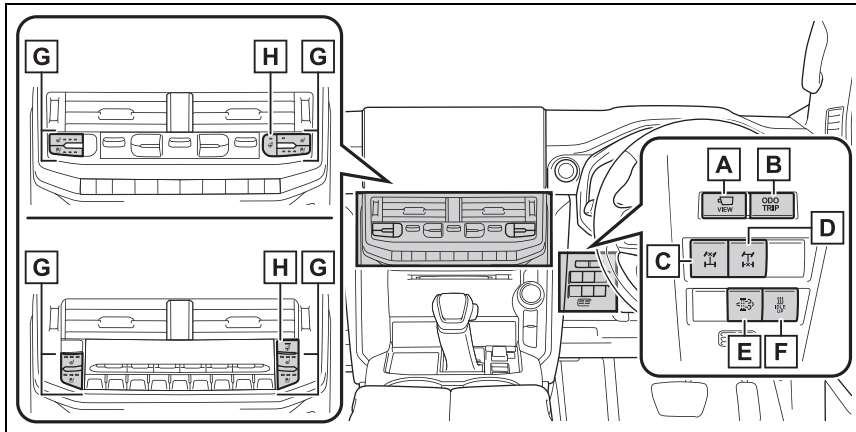

- A** VIEW switch* P.424
- B** “ODO TRIP” switch P.131, 135
- C** Front differential lock switch* P.478
- D** Rear differential lock switch* P.480
- E** DPF system switch* P.491
- F** Heater idle up switch* P.564, 576
- G** Front seat heater switches* P.584
 Front seat ventilator switches* P.586
- H** Heated steering wheel switch* P.584


*: If equipped

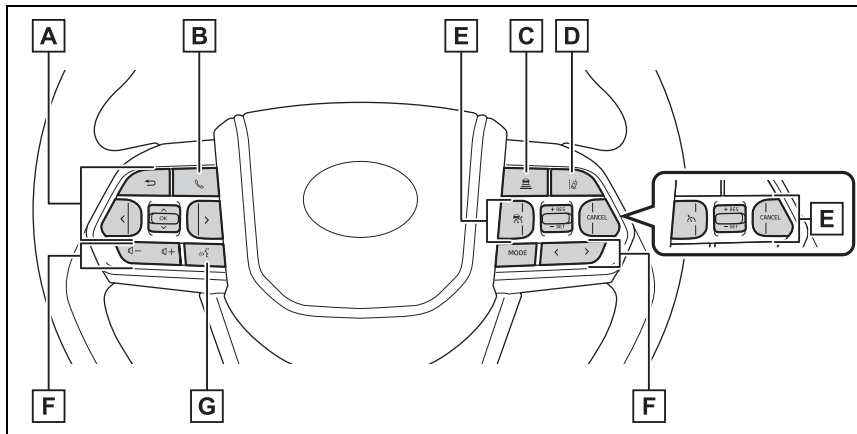

- A** Meter control switches P.137, 147
- B** Telephone switch^{*1}
- C** Vehicle-to-vehicle distance switch^{*2} P.340, 353
- D** LTA (Lane Tracing Assist) switch^{*2} P.314
LDA (Lane Departure Alert with Yaw Assist Function)
switch^{*2} P.324
- E** Cruise control switches^{*2}
 - Dynamic radar cruise control with full-speed range^{*2} P.335
 - Dynamic radar cruise control^{*2} P.348
 - Cruise control^{*2} P.358
- F** Audio remote control switches^{*1} P.513
- G** Talk switch^{*1, 2}

^{*1}: For vehicles with a navigation system or a multimedia system, refer to the "Navigation and Multimedia System Owner's Manual".


^{*2}: If equipped

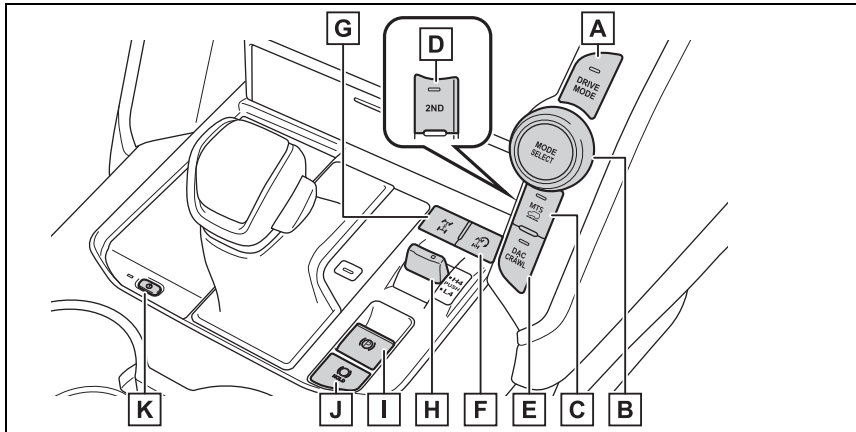

- A** DRIVE MODE switch P.473
- B** MODE SELECT switch* P.473, 482, 486, 489
- C** MTS switch* P.486
- D** Second start mode switch* P.263, 267
- E** DAC/CRAWL switch* P.482, 489
- F** Turn Assist switch* P.484
- G** Center differential lock switch..... P.476
- H** Four-wheel drive control switch..... P.475
- I** Parking brake switch P.269
 - Applying/releasing..... P.269
 - Precautions against winter season P.506
 - Warning buzzer/message P.705, 709
- J** Brake hold switch P.272
- K** Wireless charger switch* P.610

*: If equipped

■ Interior (Right-hand drive vehicles)

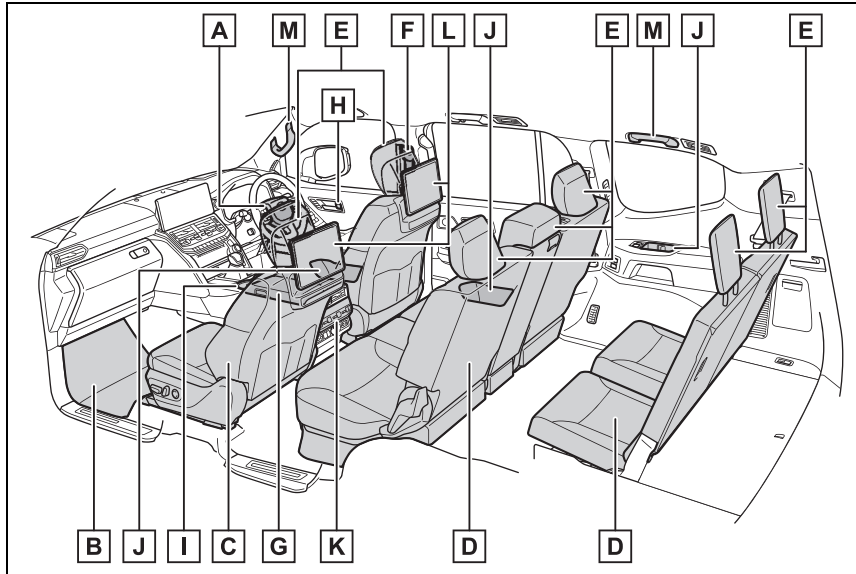

A	SRS airbags.....	P.43
B	Floor mats.....	P.36
C	Front seats.....	P.195
D	Rear seats ^{*1}	P.196
E	Head restraints ^{*1}	P.205
F	Seat belts.....	P.38
G	Console box ^{*1}	P.594
	Cool box ^{*1}	P.605
H	Inside lock buttons.....	P.172
I	Cup holders.....	P.595
J	Bottle holders.....	P.596
K	Rear cooler system ^{*1}	P.578
	Rear air conditioning system ^{*1}	P.580


L Rear seat entertainment system^{*1, 2}

M Assist grips P.617

^{*1}: If equipped

^{*2}: For vehicles with a navigation system or a multimedia system, refer to the "Navigation and Multimedia System Owner's Manual".

■ Ceiling (Right-hand drive vehicles)

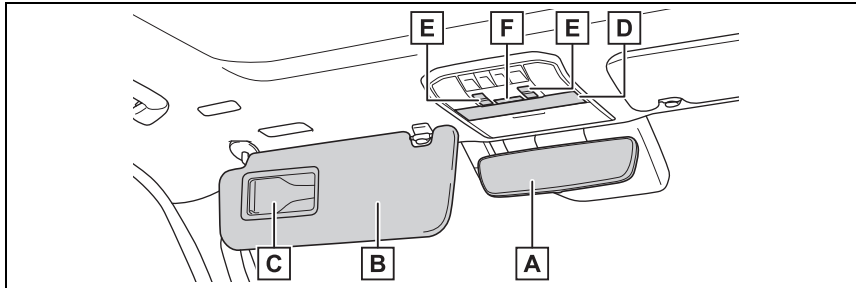

- A** Inside rear view mirror P.210
- B** Sun visors^{*2} P.607
- C** Vanity mirrors^{*1} P.607
- D** Interior lights^{*1, 3} P.590
- Personal lights^{*1, 3} P.590
- E** Moon roof switches^{*1} P.217
- F** Intrusion sensor and tilt sensor cancel switch^{*1} P.112

^{*1}: If equipped

^{*2}: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P.57)



^{*3}: The illustration shows the front, but they are also equipped in the rear.

For safety and security**1****1-1. For safe use**

- Before driving **36**
- For safe driving **37**
- Seat belts **38**
- SRS airbags **43**
- Exhaust gas precautions **52**

1-2. Child safety

- Riding with children **53**
- Child restraint systems (except for India) **54**
- Child restraint systems (for India) **85**

1-3. Emergency assistance

- eCall **102**
- ERA-GLONASS/EVAK **105**

1-4. Theft deterrent system

- Engine immobilizer system **109**
- Double locking system **110**
- Alarm **111**
- Fingerprint Authentication System **115**

1

For safety and security


Before driving

Observe the following before starting off in the vehicle to ensure safety of driving.


Installing floor mats

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

- 1 Insert the retaining hooks (clips) into the floor mat eyelets.

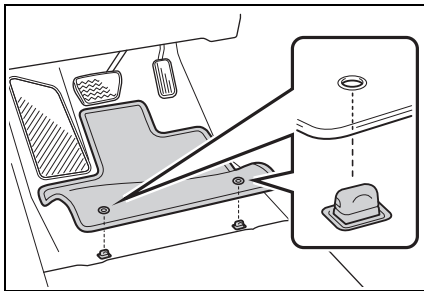

- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

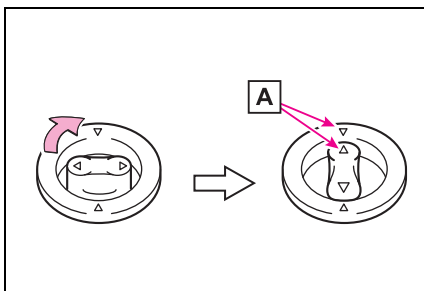

Always align the \triangle marks **A**.

The shape of the retaining hooks (clips) may differ from that shown in the illus-

tration.

WARNING


Observe the following precautions. Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle. This could lead to an accident, resulting in death or serious injury.

When installing the driver's floor mat

- Do not use floor mats designed for other models or different model year vehicles, even if they are Toyota Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

Before driving


- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.

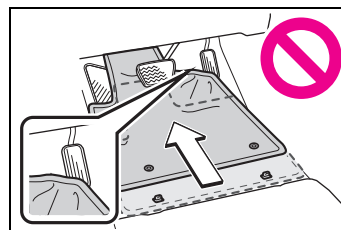

- With the engine stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

For safe driving

For safe driving, adjust the seat and mirror to an appropriate position before driving.

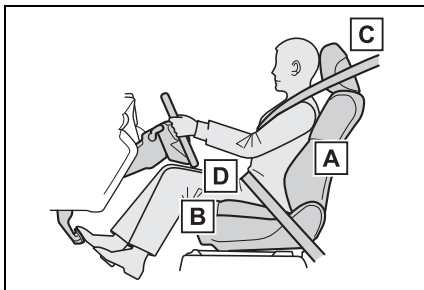Correct driving posture

- A** Adjust the angle of the seatback so that you are sitting straight up and so that you do not have to lean forward to steer. (→P.195)
- B** Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P.195)
- C** Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P.205)
- D** Wear the seat belt correctly. (→P.39)

! WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not adjust the position of the driver's seat while driving. Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback. A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- Do not place anything under the front seats. Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- Always observe the legal speed limit when driving on public roads.
- When driving over long distances, take regular breaks before you start to feel tired. Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. (→P.39)

Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt. (→P.54, 85)

Adjusting the mirrors

Make sure that you can see backward clearly by adjusting the inside rear view mirror and outside rear view mirrors properly. (→P.210, 211)

Seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle.

WARNING

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.

Failure to do so may cause death or serious injury.

■ Wearing a seat belt

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Toyota recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.
- Make sure that the seat belts are removed from the hangers (→P.197, 201, 203) when using the seat belts for the second outboard seats or third seats*.


*: If equipped

⚠ WARNING**■ Pregnant women**

Obtain medical advice and wear the seat belt in the proper way. (→P.39)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

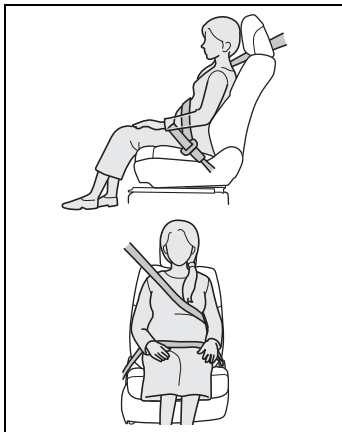**■ People suffering illness**

Obtain medical advice and wear the seat belt in the proper way. (→P.39)


■ When children are in the vehicle

→P.53

■ Seat belt damage and wear

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.

- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belt cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact your Toyota dealer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Toyota dealer. Inappropriate handling may lead to incorrect operation.

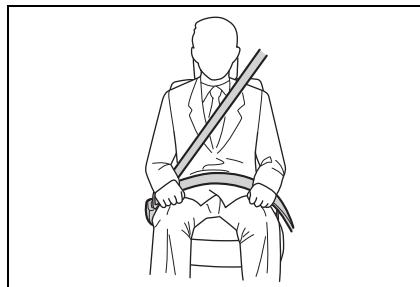Correct use of the seat belts

- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seat-back.

Sit up straight and well back in the seat.

- Do not twist the seat belt.

■ Child seat belt usage


The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P.54, 85)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage. (→P.38)

■ Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact your Toyota dealer for seat belt replacement or installation.

Fastening and releasing the seat belt

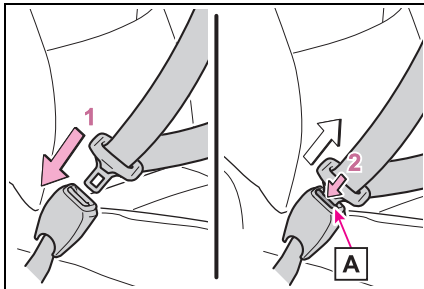


- 1 To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- 2 To release the seat belt, press the release button **A**.

■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

Adjusting the seat belt shoulder anchor height (front seats)

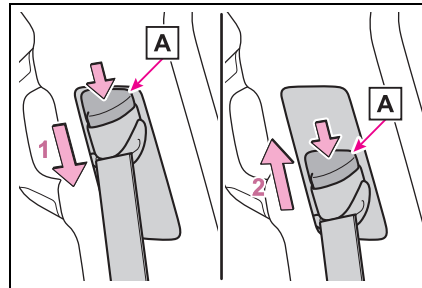

- 1 Push the seat belt shoulder anchor down while pressing the release button **A**.
- 2 Push the seat belt shoulder anchor up while pressing the release button **A**.

Move the height adjuster up and down as needed until you hear a click.

⚠ WARNING

■ Adjustable shoulder anchor

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident.

Seat belt pretensioners


■ **Front seats*1**

- *1: For vehicles with model code*2 that has "V" and "W" as the last letter.
- *2: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P.744)

- ▶ Vehicles without SRS side and curtain shield airbags (without ERA-GLONASS/EVAK)

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal collision.

The pretensioners do not activate in the event of a minor frontal impact, a side impact, a rear impact or a vehicle rollover.

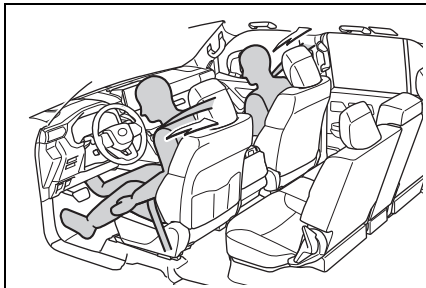


- ▶ Vehicles without SRS side and curtain shield airbags (with ERA-GLONASS/EVAK)

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal collision or a vehicle rollover.

sion or a vehicle rollover.


The pretensioners do not activate in the event of a minor frontal impact, a side impact or a rear impact.

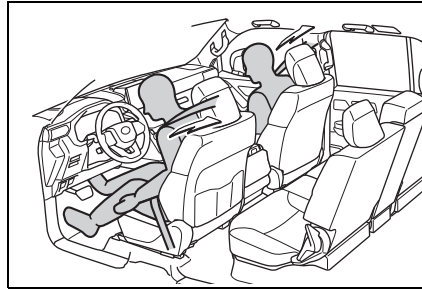

- ▶ Vehicles with SRS side and curtain shield airbags (without ERA-GLONASS/EVAK)

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal or side collision.

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

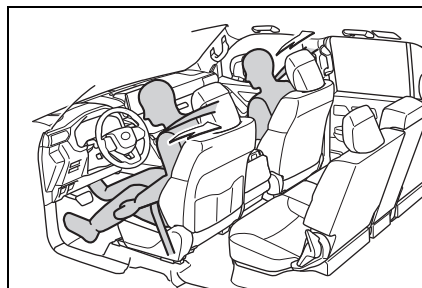


- ▶ Vehicles with SRS side and curtain shield airbags (with ERA-GLONASS/EVAK)

The pretensioners help the seat

belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal or side collision or a vehicle rollover.

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact or a rear impact.

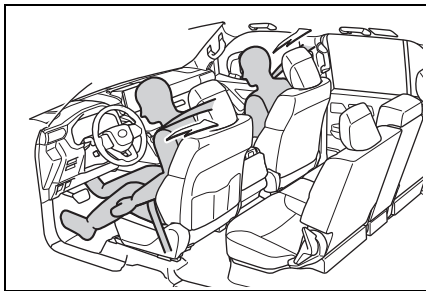


■ **Front and second outboard seats** ^{*1}

^{*1}: Except for vehicles with model code ^{*2} that has "V" and "W" as the last letter.

^{*2}: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P.744)

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal or side collision.

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

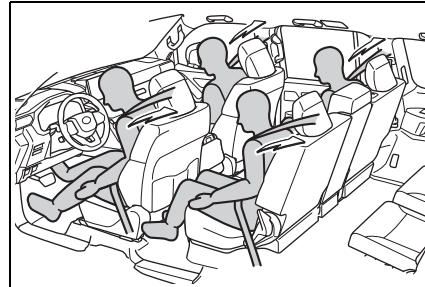

■ **Replacing the belt after the pretensioner has been activated**

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

■ **PCS-linked seat belt pretensioner control (vehicles with Toyota Safety Sense)**

If the PCS (pre-collision system) determines that the possibility of a collision with a vehicle is high, the seat belt pretensioners will be prepared to operate.

WARNING

■ **Seat belt pretensioners**

If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at your Toyota dealer.


Failure to do so may cause death or serious injury.

SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

SRS airbag system

■ Location of the SRS airbags

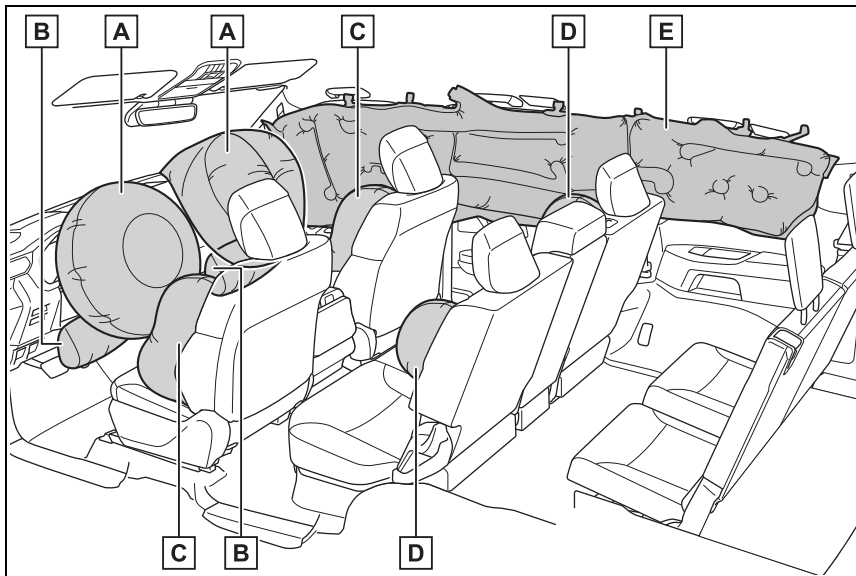

► SRS front airbags

A SRS driver airbag/front passenger airbag

Can help protect the head and chest of the driver and front passenger from impact with interior components

B SRS knee airbags

Can help provide driver and front passenger protection

► SRS side and curtain shield airbags

C SRS front side airbags (if equipped)

Can help protect the torso of the front seat occupants


D SRS rear side airbags (if equipped)

Can help protect the torso of occupants in the second outer seats

E SRS curtain shield airbags (if equipped)

Can help protect primarily the head of occupants in the outer seats

■ **SRS airbag system components**

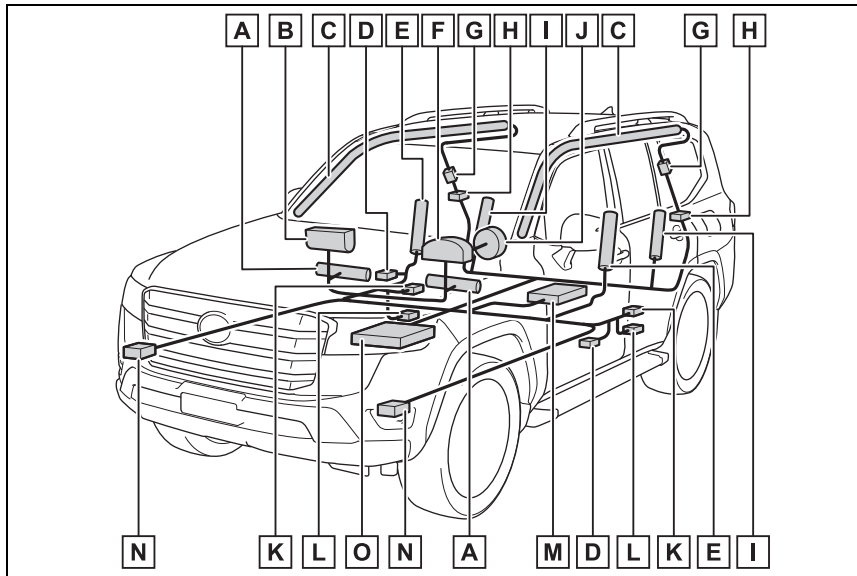

- A** Knee airbags
- B** Front passenger airbag
- C** Curtain shield airbags (if equipped)
- D** Side impact sensors (front door) (if equipped)
- E** Front side airbags (if equipped)
- F** SRS warning light
- G** Seat belt pretensioners (second outboard seats) (if equipped)
- H** Side impact sensors (rear) (if equipped)
- I** Rear side airbags (second outboard seat) (if equipped)
- J** Driver airbag
- K** Seat belt pretensioners and force limiters (front seats)
- L** Side impact sensors (front) (if equipped)

M Safing sensor (rear) (if equipped)

N Front impact sensors

O Airbag sensor assembly

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

■ If the SRS airbags deploy (inflate)

- Slight abrasions, burns, bruising etc., may be sustained from SRS airbags, due to the extremely high speed deployment (inflation) by hot gases.
- A loud noise and white powder will be emitted.
- Vehicles without SRS curtain shield airbags: Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats may be hot for several minutes. The airbag itself may also be hot.
- Vehicles with SRS curtain shield airbags: Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats, parts of the front and rear pillars, and roof side rails, may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.
- All of the doors will be unlocked. (→P.170)
- Vehicles with Secondary Collision Brake: The brakes and stop lights will be controlled automatically. (→P.496)
- The interior lights will turn on automatically. (→P.592)
- The emergency flashers will turn on automatically. (→P.690)
- Fuel supply to the engine will be stopped. (gasoline engine) (→P.697)
- Vehicles with eCall: If any of the following situations occur, the system is

designed to send an emergency call* to the eCall control center, notifying them of the vehicle's location (without needing to push the "SOS" button) and an agent will attempt to speak with the occupants to ascertain the level of emergency and assistance required. If the occupants are unable to communicate, the agent automatically treats the call as an emergency and helps to dispatch the necessary emergency services. (→P.102)

- An SRS airbag is deployed.
- A seat belt pretensioner is activated.
- The vehicle is involved in a severe rear-end collision.

*: In some cases, the call cannot be made. (→P.103)

- Vehicle with ERA-GLONASS/EVAK: If any of the following situations occur, the system is designed to send an emergency call* to the ERA-GLONASS/EVAK control center, notifying them of the vehicle's location (without needing to push the "SOS" button) and an agent will attempt to speak with the occupants to ascertain the level of emergency and assistance required. If the occupants are unable to communicate, the agent automatically treats the call as an emergency and helps to dispatch the necessary emergency services. (→P.105)
- An SRS airbag is deployed.
- A seat belt pretensioner is activated.
- The vehicle is involved in a severe rear-end collision.
- The vehicle is involved in a rollover accident.

*: In some cases, the call cannot be made. (→P.107)

■ SRS airbag deployment conditions (SRS front airbags)

- The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20-30 km/h [12-18 mph] frontal collision with a fixed wall that does not move or deform).

However, this threshold velocity will be considerably higher in the following situations:

- If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
- If the vehicle is involved in an under-ride collision, such as a collision in which the front of the vehicle under-rides, or goes under, the bed of a truck
- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.

■ SRS airbag deployment conditions (SRS side and curtain shield airbags)


- The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 -30 km/h [12 -18 mph]).
- Both SRS curtain shield airbags may deploy in the event of a severe side collision.
- Both SRS curtain shield airbags may also deploy in the event of a severe frontal collision.

■ Conditions under which the SRS airbags may deploy (inflate), other than a collision

The SRS front airbags and SRS side

and curtain shield airbags (if equipped) may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.


- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

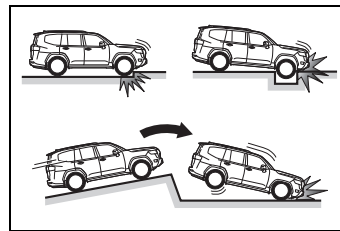

■ Types of collisions that may not deploy the SRS airbags (SRS front airbags)

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.

- Collision from the side
- Collision from the rear
- Vehicle rollover

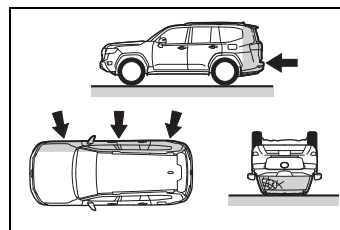


■ Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)

The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at cer-


tain angles, or a collision to the side of the vehicle body other than the passenger compartment.

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

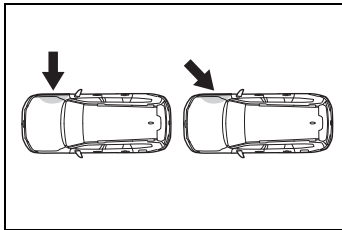


The SRS side airbags do not generally inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

- Collision from the front
- Collision from the rear
- Vehicle rollover

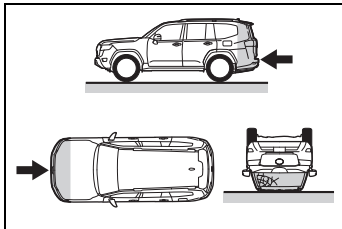

The SRS curtain shield airbags do not generally inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed side or low-speed frontal collision.


- Collision from the rear
- Vehicle rollover

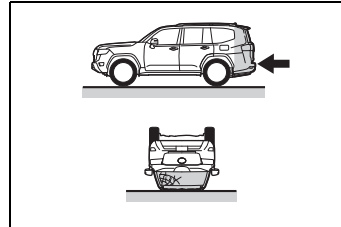


■ When to contact your Toyota dealer

In the following cases, the vehicle will require inspection and/or repair. Contact your Toyota dealer as soon as possible.


- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.

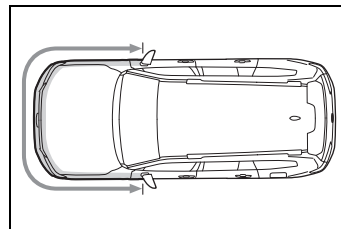


- Vehicles with SRS side and curtain shield airbags: A portion of a door or its surrounding area is damaged, deformed or has had a hole made in it, or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate.

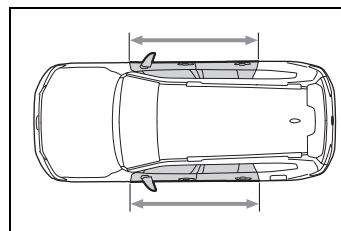


- The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.

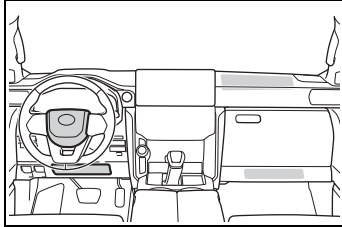

- Vehicles with SRS side airbags: The surface of the seats with the SRS side airbag is scratched, cracked or otherwise damaged.

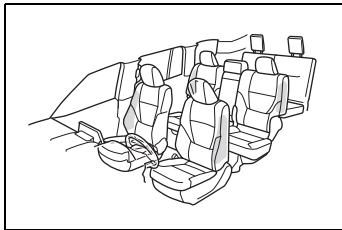

- Vehicles with SRS curtain shield airbags: The portion of the front, rear pillars or roof side rail garnishes (padding) containing the SRS curtain shield airbags inside is scratched, cracked or otherwise damaged.

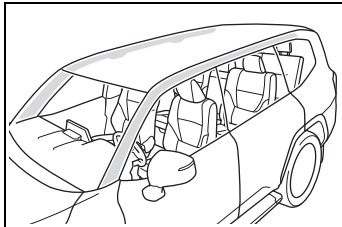

WARNING

■ SRS airbag precautions

Observe the following precautions regarding the SRS airbags. Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly. The SRS airbags are supplemental devices to be used with the seat belts.

- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

Since the risk zone for the driver's airbag is the first 50 - 75 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:

- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the seat. Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.


The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.


⚠ WARNING

- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Toyota strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P.54, 85)

- Do not sit on the edge of the seat or lean against the dashboard.

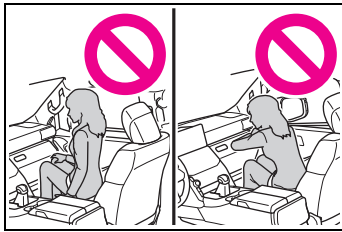

- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.

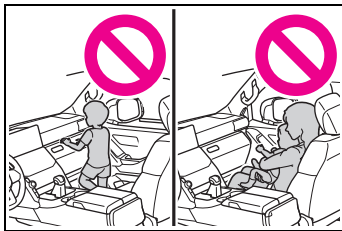


- Do not allow the front seat occupants to hold items on their knees.

- Vehicles with SRS curtain shield airbags: Do not lean against the door, the roof side rail or the front, side and rear pillars.



- Vehicles without SRS rear side airbags: Do not allow anyone to kneel on the passenger seat toward the door or put their head or hands outside the vehicle.


- Vehicles with SRS rear side airbags: Do not allow anyone to kneel on the passenger seats toward the door or put their head or hands outside the vehicle.

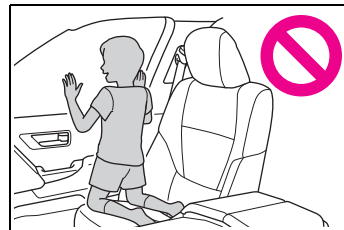


 **WARNING**

- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel.

These items can become projectiles when the SRS driver, front passenger and knee airbags deploy.

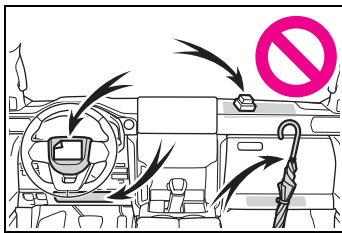

- Vehicles with SRS curtain shield airbags: Do not attach anything to areas such as a door, windshield, side window, front or rear pillar, roof side rail and assist grip.

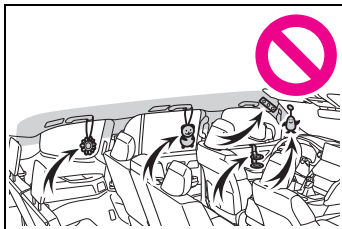

- Vehicles with SRS curtain shield airbags: Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- If a vinyl cover is put on the area where the SRS knee airbag will deploy, be sure to remove it.

- Vehicles with SRS side airbags: Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the SRS airbags. Such accessories may prevent the SRS side airbags from activating correctly, disable the system or cause the SRS side airbags to inflate accidentally, resulting in death or serious injury.

- Do not strike or apply significant levels of force to the area of the SRS airbag components or the front doors. Doing so can cause the SRS airbags to malfunction.

- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.

- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.

- Vehicles without SRS curtain shield airbags: If the areas where the SRS airbags are stored, such as the steering wheel pad, are damaged or cracked, have them replaced by your Toyota dealer.

- Vehicles with SRS curtain shield airbags: If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by your Toyota dealer.

**WARNING****■ Modification and disposal of SRS airbag system components**

Do not dispose of your vehicle or perform any of the following modifications without consulting your Toyota dealer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Vehicles without SRS curtain shield airbags: Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery
- Vehicles with SRS curtain shield airbags: Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars, roof side rails, front door panels, front door trims or front door speakers
- Modifications to the front door panel (such as making a hole in it)
- Vehicles without SRS curtain shield airbags: Repairs or modifications of the front fender or front bumper
- Vehicles with SRS curtain shield airbags: Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Vehicles without SRS curtain shield airbags: Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows or winches
- Vehicles with SRS curtain shield airbags: Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows, winches or roof luggage carrier
- Modifications to the vehicle's suspension system

- Installation of electronic devices such as mobile two-way radios (RF-transmitter) and CD players

Exhaust gas precautions

Harmful substance to the human body is included in exhaust gases if inhaled.

 **WARNING**

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.

Failure to do so may cause exhaust gases enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.

■ Important points while driving

- Keep the back door closed.
- If you smell exhaust gases in the vehicle even when the back door is closed, open the windows and have the vehicle inspected at your Toyota dealer as soon as possible.

■ When parking

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the engine.
- Do not leave the vehicle with the engine running for a long time. If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the engine running in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle.

■ Exhaust pipe

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Toyota dealer.

Riding with children

Observe the following precautions when children are in the vehicle.

Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally. (→P.172, 216)
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, back door, seats etc.



WARNING

■ When children are in the vehicle

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral.

There is also a danger that children may injure themselves by playing with the side windows, the moon roof (if equipped) or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

1

For safety and security

Child restraint systems (except for India)

Before installing a child restraint system in the vehicle, there are precautions that need to be observed, different types of child restraint systems, as well as installation methods, etc., written in this manual.

- Use a child restraint system when riding with a small child that cannot properly use a seat belt. For the child's safety, install the child restraint system to a rear seat. Be sure to follow the installation method that is in the operation manual enclosed with the restraint system.
- The use of a Toyota genuine child restraint system is recommended, as it is safer to use in this vehicle. Toyota genuine child restraint systems are made specifically for Toyota vehicles. They can be purchased at a Toyota dealer.

Table of contents

Points to remember: P.54

When using a child restraint system: P.55

Child restraint system compatibility for each seating position: P.58, 63, 68, 73

Child restraint system installation

method: P.79

- Fixed with a seat belt: P.79
- Fixed with an ISOFIX lower anchorage: P.81
- Using a top tether anchorage: P.83

Points to remember

- If child restraint system regulations exist in the country where you reside, please contact your Toyota dealer for the child restraint system installation.
- Prioritize and observe the warnings, as well as the laws and regulations for child restraint systems.
- Use a child restraint system until the child becomes large enough to properly wear the vehicle's seat belt.
- Choose a child restraint system appropriate to the age and size of the child.
- Note that not all child restraint systems can fit in all vehicles. Before using or purchasing a child restraint system, check the compatibility of the child restraint system with seat positions. (→P.58, 63, 68, 73)

**WARNING****■ When a child is riding**

Observe the following precautions. Failure to do so may result in death or serious injury.

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system which is correctly installed. For installation details, refer to the operation manual enclosed with the child restraint system. General installation instructions are provided in this manual.
- Toyota strongly urges the use of a proper child restraint system that conforms to the weight and size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Holding a child in your or someone else's arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield or between the holder and the interior of the vehicle.

■ Handling the child restraint system

If the child restraint system is not properly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving, or an accident.

- If the vehicle were to receive a strong impact from an accident, etc., it is possible that the child restraint system has damage that is not readily visible. In such cases, do not reuse the restraint system.

- Depending on the child restraint system, installation may be difficult or impossible. In those cases, check whether the child restraint system is suitable for installment in the vehicle (→P.58, 63, 68, 73). Be sure to install and observe the usage rules after carefully reading the child restraint system fixing method in this manual, as well as the operation manual enclosed with the child restraint system.
- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment.

When using a child restraint system**■ When installing a child restraint system to a front passenger seat**

For the safety of a child, install a child restraint system to a rear seat. When installing a child restraint system to the front passenger seat is unavoidable, adjust the seat as follows and install the child restraint system.


- Adjust the seatback angle to the most upright position.

If there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

- Move the front seat fully rearward. If the passenger seat

height can be adjusted, move it to the upper most position.

- If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

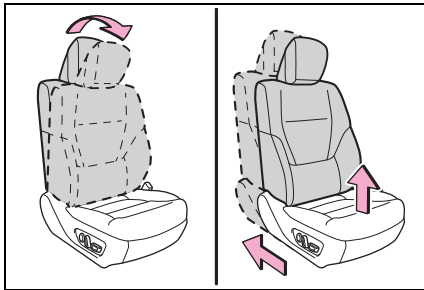


WARNING


■ When using a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- Never use a rear-facing child restraint system on the front passenger seat. The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

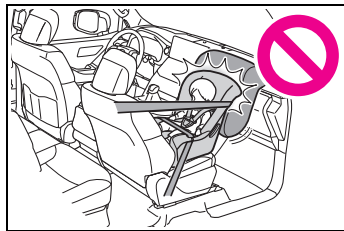

- There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat. Details of the label(s) are shown in the illustration below.

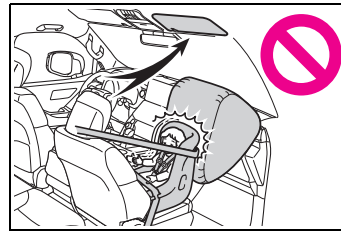


⚠ WARNING



⚠ WARNING

- Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible. Failing to do so may result in death or serious injury if the airbags deploy (inflate).

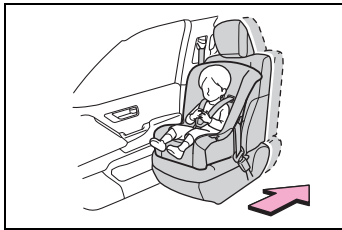


- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars, or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.



- When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.

WARNING

- Use a child restraint system suitable to the age and size of the child and install it to the rear seat.
- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat (left-hand drive vehicles) or the left-hand rear seat (right-hand drive vehicles).

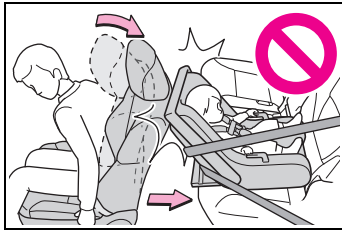

- Adjust the front passenger seat so that it does not interfere with the child restraint system.
- When installing a child restraint system on the second center seat, adjust both seat cushions to the same position and align both seatbacks at the same angle. The seatbacks must be adjusted to the same angle. Otherwise, the child restraint system cannot be securely restrained and this may cause death or serious injuries in the event of sudden braking, sudden swerving or an accident.
- Child restraint system installed on the third seat should not contact the second seatbacks.

Child restraint system compatibility for each seating position (except for ASEAN countries, Latin American and the Caribbean countries and EU countries)

■ Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (→P.59) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols.

Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

■ Before confirming the compatibility of each seating position with child restraint systems


- 1 Checking the child restraint system standards.

Use a child restraint system that conforms to UN(ECE) R44^{*1} or UN(ECE) R129^{*1, 2}.

The following approval mark is displayed on child restraint systems which are conformed.

Check for an approval mark

attached to the child restraint system.

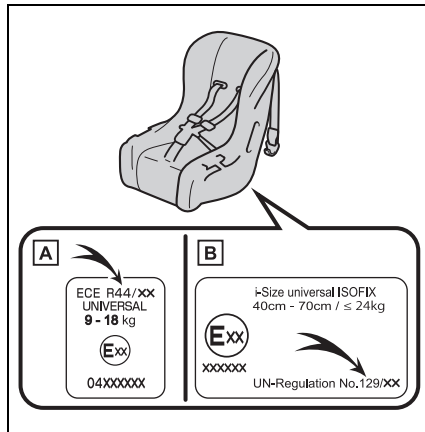

Example of the displayed regulation number

A UN(ECE) R44 approval mark^{*3}

The weight range of the child who is applicable for an UN(ECE) R44 approval mark is indicated.

B UN(ECE) R129 approval mark^{*3}


The height range of the child who is applicable as well as available weights for an UN(ECE) R129 approval mark is indicated.

2 Checking the category of the child restraint system.

Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable. Also, if there are any uncertainties, check the user's guide included with the child restraint system or contact the retailer of the child restraint system.

- “universal”

- “semi-universal”
- “restricted”
- “vehicle specific”

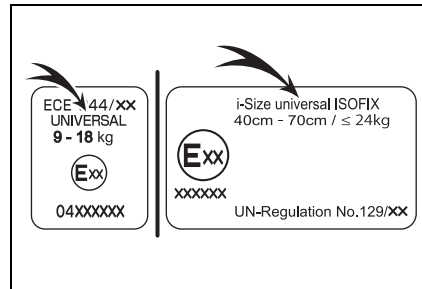


^{*1}: UN(ECE) R44 and UN(ECE) R129 are U.N. regulations for child restraint systems.

^{*2}: The child restraint systems mentioned in the table may not be available outside of the EU area.


^{*3}: The displayed mark may differ depending on the product.

■ **Compatibility of each seating position with child restraint systems:**


- ▶ Left-hand drive vehicles for 5-passenger models

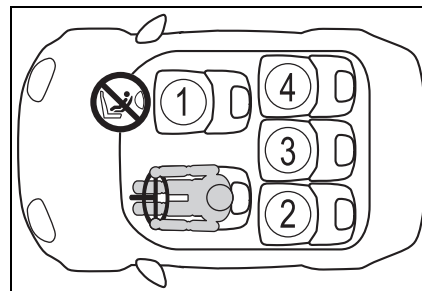
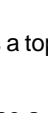
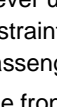
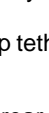


► Left-hand drive vehicles for 7-passenger models

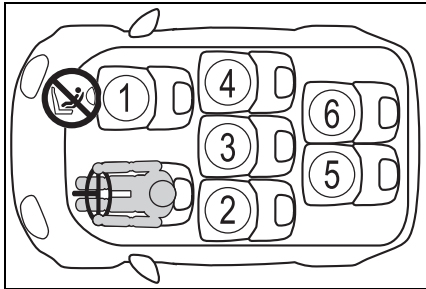


► Right-hand drive vehicles for 7-passenger models

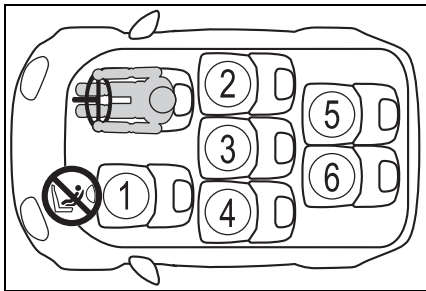



① *1, 2, 3	U*4
② *2, 3	U 
③ *2, 3	U 
④ *2, 3	U  

⑤ *2, 3	U
⑥ *2, 3	U

U Suitable for “universal” category child restraint system fixed with the seat belt.


 Suitable for i-Size and ISOFIX child restraint system.

 Includes a top tether anchorage point.

 Never use a rear-facing child restraint system on the front passenger seat.

*1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

*2: Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

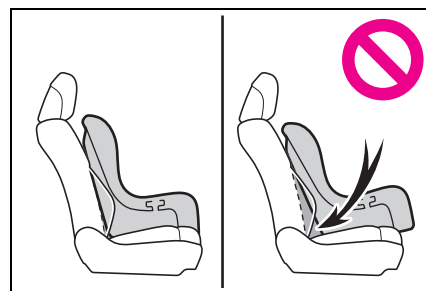

*3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in

the upper most position.

*4: Use only a front-facing child restraint system.

■ Detail information for child restraint systems installation

Seating position						
Seat position number	①	②	③	④	⑤	⑥
Seating position suitable for universal belted (Yes/No)	Yes Forward-facing only	Yes	Yes	Yes	Yes	Yes
i-Size seating position (Yes/No)	No	Yes	No	Yes	No	No
Seating position suitable for lateral fixture (L1/L2/No)	No	No	No	No	No	No
Suitable rearward facing fixture (R1/R2X/R2/R3/No)	No	R1, R2X, R2, R3	No	R1, R2X, R2, R3	No	No
Suitable forward facing fixture (F2X/F2/F3/No)	No	F2X, F2, F3	No	F2X, F2, F3	No	No
Suitable junior seat fixture (B2/B3/No)	No	B2,B3	No	B2,B3	No	No

ISOFIX child restraint systems are divided into different “fixture”. The child restraint system can be used in the seating positions for “fixture” mentioned in the table above. For kind of “fixture” relation, confirm the following table. If your child restraint system has no kind of “fixture” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.


Fixture	Description
F3	Full-height, forward-facing child restraint systems
F2	Reduced-height forward-facing child restraint systems
F2X	Reduced-height forward-facing child restraint systems

Fixture	Description
R3	Full-size, rearward-facing child restraint systems
R2	Reduced-size, rearward-facing child restraint systems
R2X	Reduced-size, rearward-facing child restraint systems
R1	Rearward-facing infant seat
L1	Left lateral-facing (carrycot) infant seat
L2	Right lateral-facing (carrycot) infant seat
B2	Junior seat
B3	Junior seat

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.
- If the seat belt shoulder anchor is ahead of the child seat belt

guide, move the seat cushion forward.

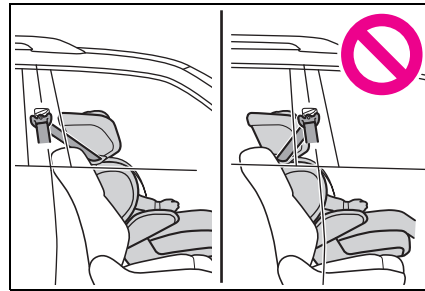

- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

Child restraint system compatibility for each seating position (for ASEAN countries)

■ Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (→P.64) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols. Also, the recommended child restraint system that is suitable for your child can be selected.

Otherwise, check [Recommended child restraint systems and Compatibility table] for recommended child restraint systems. (→P.67)

Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

■ Before confirming the compatibility of each seating position with child restraint systems


1 Checking the child restraint system standards.

Use a child restraint system that conforms to UN(ECE) R44^{*1} or UN(ECE) R129^{*1, 2}.

The following approval mark is displayed on child restraint systems which are conformed.

Check for an approval mark

attached to the child restraint system.

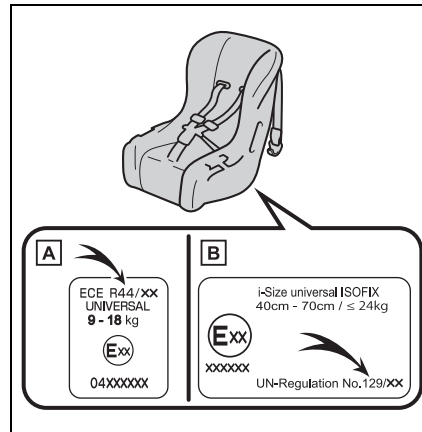

Example of the displayed regulation number


A UN(ECE) R44 approval mark^{*3}
The weight range of the child who is applicable for an UN(ECE) R44 approval mark is indicated.

B UN(ECE) R129 approval mark^{*3}
The height range of the child who is applicable as well as available weights for an UN(ECE) R129 approval mark is indicated.

2 Checking the category of the child restraint system.
Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable. Also, if there are any uncertainties, check the user's guide included with the child restraint

system or contact the retailer of the child restraint system.

- “universal”
- “semi-universal”
- “restricted”
- “vehicle specific”

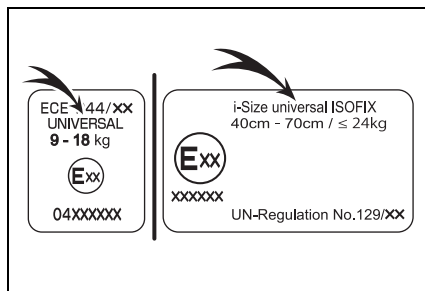


*1: UN(ECE) R44 and UN(ECE) R129 are U.N. regulations for child restraint systems.

*2: The child restraint systems mentioned in the table may not be available outside of the EU area.


*3: The displayed mark may differ depending on the product.

■ **Compatibility of each seating position with child restraint systems**


► Left-hand drive vehicles for 5-passenger models

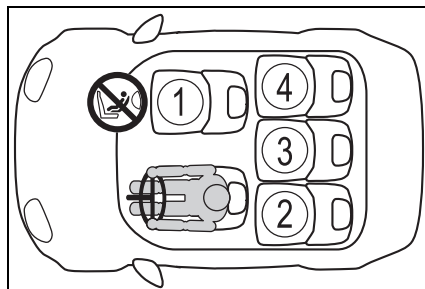

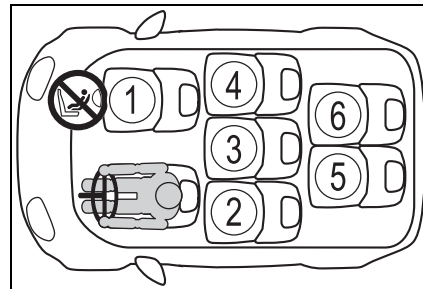

► Left-hand drive vehicles for 7-passenger models

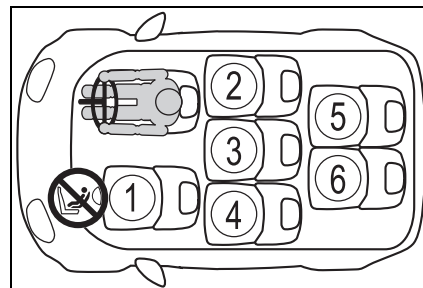

► Right-hand drive vehicles for 7-passenger models



① *1, 2, 3	U ^{*4}
② *2, 3	UL 
③ *2, 3	U
④ *2, 3	UL 

⑤ *2, 3	U
⑥ *2, 3	U



Suitable for “universal” category child restraint system fixed with the seat belt.



Suitable for child restraint systems given on recommended child restraint systems and compatibility table. (→P.67)



Suitable for i-Size and ISOFIX child restraint system.




Includes a top tether anchorage point.



Never use a rear-facing child restraint system on the front passenger seat.

*1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

*2: Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

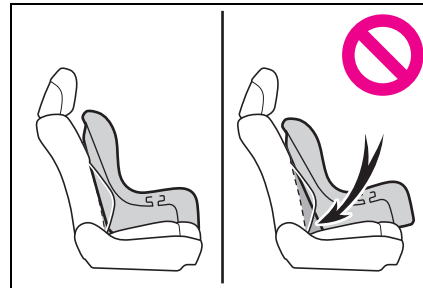

*3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

*4: Use only a front-facing child restraint system.

■ Detail information for child restraint systems installation

Seating position						
Seat position number	①	②	③	④	⑤	⑥
Seating position suitable for universal belted (Yes/No)	Yes Forward-facing only	Yes	Yes	Yes	Yes	Yes
i-Size seating position (Yes/No)	No	Yes	No	Yes	No	No
Seating position suitable for lateral fixture (L1/L2/No)	No	No	No	No	No	No

Seating position						
Seat position number	①	②	③	④	⑤	⑥
Suitable rearward facing fixture (R1/R2X/R2/R3/No)	No	R1, R2X, R2, R3	No	R1, R2X, R2, R3	No	No
Suitable forward facing fixture (F2X/F2/F3/No)	No	F2X, F2, F3	No	F2X, F2, F3	No	No
Suitable junior seat fixture (B2/B3/No)	No	B2, B3	No	B2, B3	No	No

ISOFIX child restraint systems are divided into different “fixture”. The child restraint system can be used in the seating positions for “fixture” mentioned in the table above. For kind of “fixture” relation, confirm the following table. If your child restraint system has no kind of “fixture” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

Fixture	Description
F3	Full-height, forward-facing child restraint systems
F2	Reduced-height forward-facing child restraint systems
F2X	Reduced-height forward-facing child restraint systems
R3	Full-size, rearward-facing child restraint systems
R2	Reduced-size, rearward-facing child restraint systems
R2X	Reduced-size, rearward-facing child restraint systems
R1	Rearward-facing infant seat
L1	Left lateral-facing (carrycot) infant seat
L2	Right lateral-facing (carrycot) infant seat
B2	Junior seat
B3	Junior seat

■ Recommended child restraint systems and Compatibility table


	Recommended Child Restraint System	Seating position					
		①	②	③	④	⑤	⑥
i-Size child Restraint systems	i-Size MIDI (Yes/No)	No	Yes	No	Yes	No	No

The child restraint systems mentioned in the table may not be available outside the ASEAN countries.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.
- If the seat belt shoulder anchor is

ahead of the child seat belt guide, move the seat cushion forward.

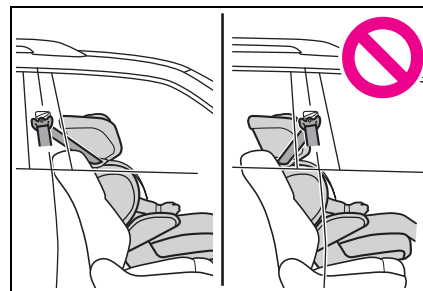

- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

Child restraint system compatibility for each seating position (for Latin American and the Caribbean countries)

■ Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (→P.69) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols. Also, the recommended child restraint system that is suitable for your child can be selected.

Otherwise, check [Recommended child restraint systems and Compatibility table] for recommended child restraint systems. (→P.72)

Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].


■ Before confirming the compatibility of each seating position with child restraint systems

1 Checking the child restraint system standards.

Use a child restraint system that conforms to UN(ECE) R44^{*1} or UN(ECE) R129^{*1, 2}.

The following approval mark is displayed on child restraint systems which are conformed.

Check for an approval mark attached to the child restraint system.

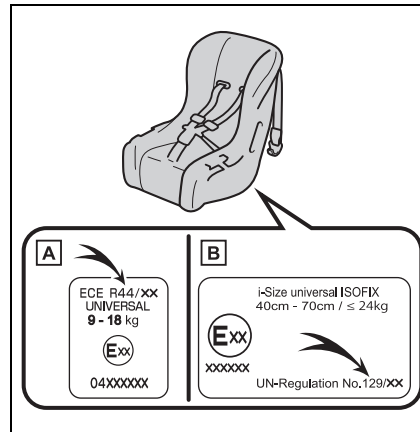


Example of the displayed regulation number

- A** UN(ECE) R44 approval mark^{*3}
The weight range of the child who is applicable for an UN(ECE) R44 approval mark is indicated.
- B** UN(ECE) R129 approval mark^{*3}
The height range of the child who is applicable as well as available weights for an UN(ECE) R129 approval mark is indicated.
- 2** Checking the category of the child restraint system.
Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable. Also, if there are any uncertainties, check the user's guide included with the child restraint

system or contact the retailer of the child restraint system.

- “universal”
- “semi-universal”
- “restricted”
- “vehicle specific”

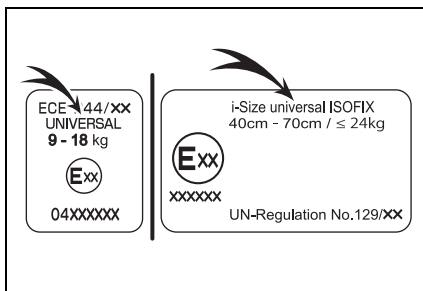


*1: UN(ECE) R44 and UN(ECE) R129 are U.N. regulations for child restraint systems.

*2: The child restraint systems mentioned in the table may not be available outside of the EU area.


*3: The displayed mark may differ depending on the product.

■ **Compatibility of each seating position with child restraint systems**


▶ Left-hand drive vehicles for 5-passenger models

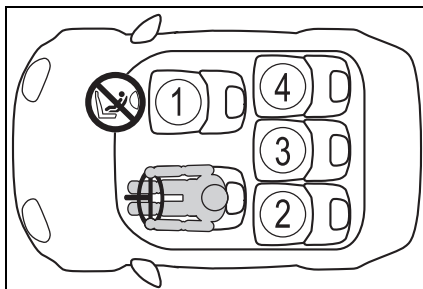

▶ Left-hand drive vehicles for 7-passenger models

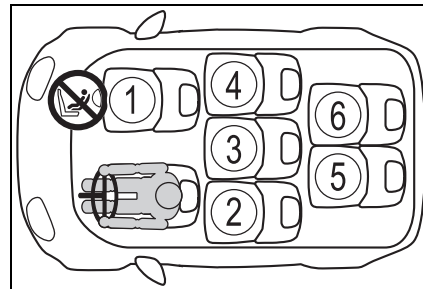

▶ Right-hand drive vehicles for 7-passenger models

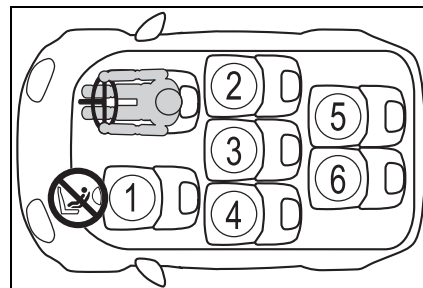

① *1, 2, 3	U*4
② *2, 3	UL
③ *2, 3	U
④ *2, 3	UL

⑤ *2, 3	U
⑥ *2, 3	U



Suitable for "universal" category child restraint system fixed with the seat belt.



Suitable for child restraint systems given on recommended child restraint systems and compatibility table. (→P.72)



Suitable for i-Size and ISOFIX child restraint system.




Includes a top tether anchorage point.



Never use a rear-facing child restraint system on the front passenger seat.

*1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

*2: Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

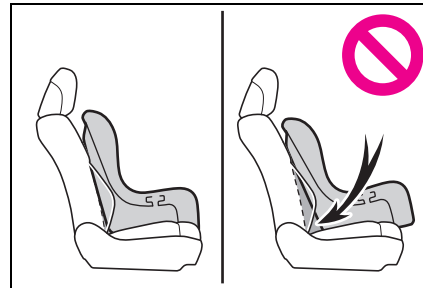

*3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

*4: Use only a front-facing child restraint system.

■ Detail information for child restraint systems installation

Seating position						
Seat position number	①	②	③	④	⑤	⑥
Seating position suitable for universal belted (Yes/No)	Yes Forward-facing only	Yes	Yes	Yes	Yes	Yes
i-Size seating position (Yes/No)	No	Yes	No	Yes	No	No
Seating position suitable for lateral fixture (L1/L2/No)	No	No	No	No	No	No

Seating position						
Seat position number	①	②	③	④	⑤	⑥
Suitable rearward facing fixture (R1/R2X/R2/R3/No)	No	R1, R2X, R2, R3	No	R1, R2X, R2, R3	No	No
Suitable forward facing fixture (F2X/F2/F3/No)	No	F2X, F2, F3	No	F2X, F2, F3	No	No
Suitable junior seat fixture (B2/B3/No)	No	B2, B3	No	B2, B3	No	No

ISOFIX child restraint systems are divided into different “fixture”. The child restraint system can be used in the seating positions for “fixture” mentioned in the table above. For kind of “fixture” relation, confirm the following table. If your child restraint system has no kind of “fixture” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

Fixture	Description
F3	Full-height, forward-facing child restraint systems
F2	Reduced-height forward-facing child restraint systems
F2X	Reduced-height forward-facing child restraint systems
R3	Full-size, rearward-facing child restraint systems
R2	Reduced-size, rearward-facing child restraint systems
R2X	Reduced-size, rearward-facing child restraint systems
R1	Rearward-facing infant seat
L1	Left lateral-facing (carrycot) infant seat
L2	Right lateral-facing (carrycot) infant seat
B2	Junior seat
B3	Junior seat

■ Recommended child restraint systems and Compatibility table

	Recommended Child Restraint System	Seating position					
		①	②	③	④	⑤	⑥
i-Size child Restraint systems	i-Size MIDI* (Yes/No)	No	Yes	No	Yes	No	No


*: However, this CRS name is become MIDI PLUS in only Brazil.

The child restraint systems mentioned in the table may not be available outside the Latin America and the Caribbean countries.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.

- If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

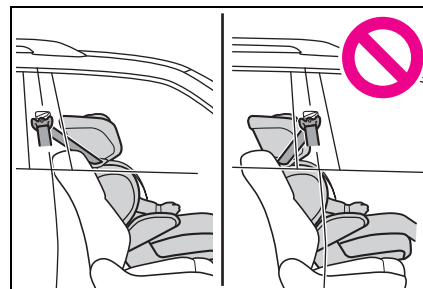

- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

Child restraint system compatibility for each seating position (for EU countries)

■ Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (→P.74) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols.

Also, the recommended child restraint system that is suitable for your child can be selected.

Otherwise, check [Recommended child restraint systems and Compatibility table] for recommended child restraint systems. (→P.78) Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

■ Before confirming the compatibility of each seating position with child restraint systems


1 Checking the child restraint system standards.

Use a child restraint system that conforms to UN(ECE) R44*¹ or UN(ECE) R129*^{1, 2}.

The following approval mark is displayed on child restraint systems which are conformed.

Check for an approval mark

attached to the child restraint system.

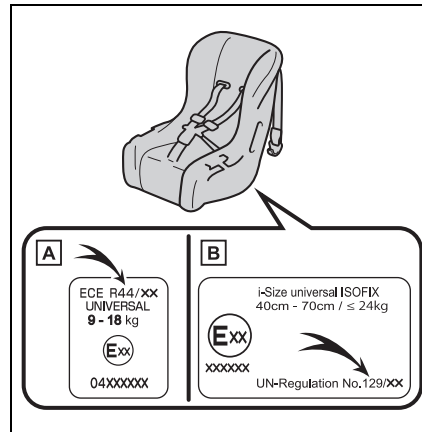


Example of the displayed regulation number

- A** UN(ECE) R44 approval mark*³
The weight range of the child who is applicable for an UN(ECE) R44 approval mark is indicated.
- B** UN(ECE) R129 approval mark*³
The height range of the child who is applicable as well as available weights for an UN(ECE) R129 approval mark is indicated.
- 2** Checking the category of the child restraint system.
Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable. Also, if there are any uncertainties, check the user's guide included with the child restraint

system or contact the retailer of the child restraint system.

- “universal”
- “semi-universal”
- “restricted”
- “vehicle specific”

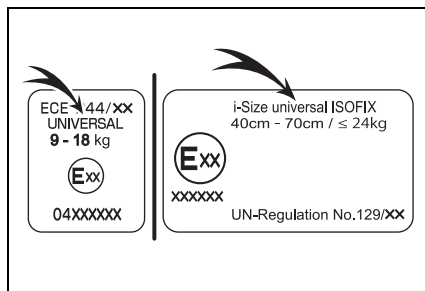


*1: UN(ECE) R44 and UN(ECE) R129 are U.N. regulations for child restraint systems.

*2: The child restraint systems mentioned in the table may not be available outside of the EU area.


*3: The displayed mark may differ depending on the product.

■ **Compatibility of each seating position with child restraint systems**

► 5-passenger models

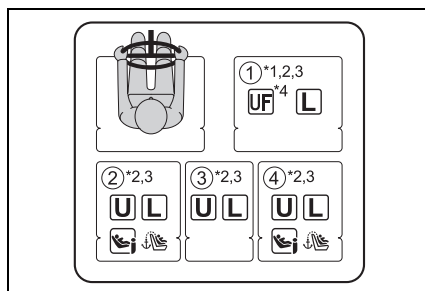


► 7-passenger models

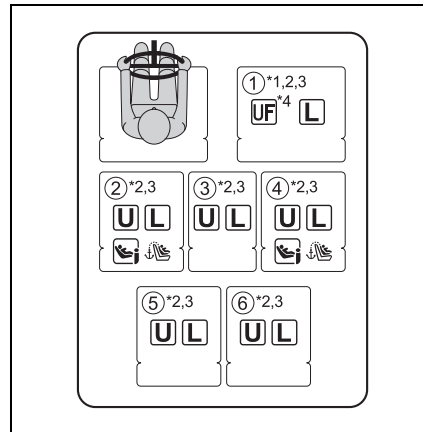


U Suitable for “universal” category child restraint system fixed with the seat belt.

UF Suitable for forward-facing “universal” category child restraint system fixed with the seat belt.


L Suitable for recommended child restraint systems given on recommended child restraint systems information. (→P.76)

 Suitable for i-Size and ISOFIX child restraint system.


 Includes a top tether anchorage point.

*1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

*2: Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

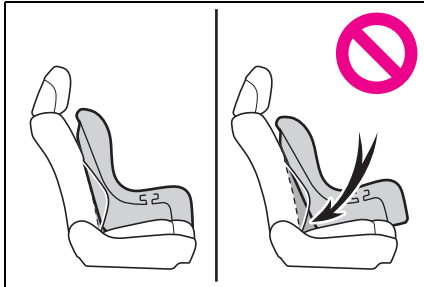

*3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

*4:  Activation of front passenger air-bag. Never use a rearward-facing child restraint system on the front passenger seat.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness.


Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position.

Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with


support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.

- If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

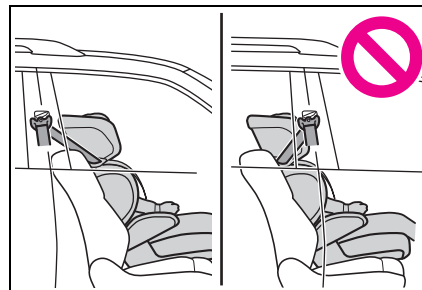

- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

■ Detail information for child restraint systems installation

Seating position						
Seat position number	①	②	③	④	⑤	⑥
						
Seating position suitable for universal belted (Yes/No)*	Yes Forward-facing only	Yes	Yes	Yes	Yes	Yes
i-Size seating position (Yes/No)	No	Yes	No	Yes	No	No
Seating position suitable for lateral fixture (L1/L2/No)	No	No	No	No	No	No
Suitable rearward facing fixture (R1/R2X/R2/R3/No)	No	R1, R2X, R2, R3	No	R1, R2X, R2, R3	No	No
Suitable forward facing fixture (F2X/F2/F3/No)	No	F2X, F2, F3	No	F2X, F2, F3	No	No
Suitable junior seat fixture (B2/B3/No)	No	B2, B3	No	B2, B3	No	No

*: All universal categories (group 0, 0+, I, II and III).

Toyota suggests the users to use ② and ④ seating positions.

ISOFIX child restraint systems are divided into different “fixture”. The child restraint system can be used in the seating positions for “fixture” mentioned in the table above. For kind of “fixture” relation, confirm the following table.

If your child restraint system has no kind of “fixture” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

Mass groups	Child weight	Class	ISO Fixture	Description
0	up to 10 kg (22 lb.)	E	R1	Rearward-facing infant seat
		F	L1	Left lateral-facing infant seat (Carycot)
		G	L2	Right lateral-facing infant seat (Carycot)
0+	up to 13 kg (28 lb.)	C	R3	Full-size, rearward-facing child restraint systems
		D	R2	Reduced-size, rearward-facing child restraint systems
		—	R2X	Reduced-size, rearward-facing child restraint systems
		E	R1	Rearward-facing infant seat
I	9 to 18 kg (20 to 39 lb.)	A	F3	Full-height, forward-facing child restraint systems
		B	F2	Reduced-height, forward-facing child restraint systems
		B1	F2X	Reduced-height, forward-facing child restraint systems
		C	R3	Full-size, rearward-facing child restraint systems
		D	R2	Reduced-size, rearward-facing child restraint systems
II	15 to 25 kg (34 to 55 lb.)	—	B2, B3	Junior seat
III	22 to 36 kg (48 to 79 lb.)			

■ Recommended child restraint systems lineup


Mass groups	Recommended child restraint system	Fixation	
		fixed with a seat belt	fixed with lower anchorages
Rearward-facing seat Group 0 or 0+ Up to 10 kg or 13 kg (Up to 22 lb. or 28 lb)	TOYOTA G0+, BABY SAFE PLUS	Yes	Not Applicable
Forward-facing seat Group I 9 to 18 kg (20 to 39 lb)	TOYOTA DUO PLUS	Yes	Yes
Booster seat Group II and III 15 to 25 kg and 22 to 36 kg (34 to 55 lb. and 49 to 79 lb.)	TOYOTA KIDFIX 2S ^{*1, 2}	Yes	Yes
	TOYOTA MAXI PLUS	Yes	Yes

*1: Adjust the restraint system headrest, so that it does not interfere with the vehicle interior.

*2: Be sure to attach the seat belt through the SecureGuard.


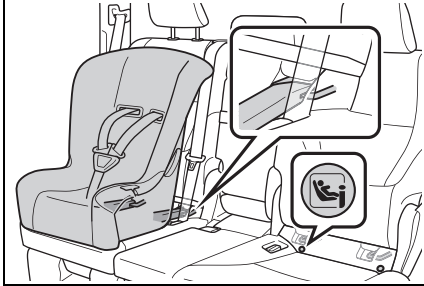
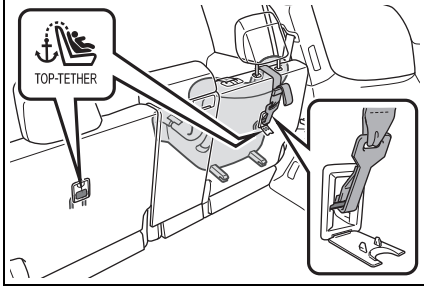
- When using the child restraint system with SecureGuard, be sure to guide the lap belt into SecureGuard **A** as shown in the illustration.

The child restraint systems mentioned in the table may not be available outside the EU countries.

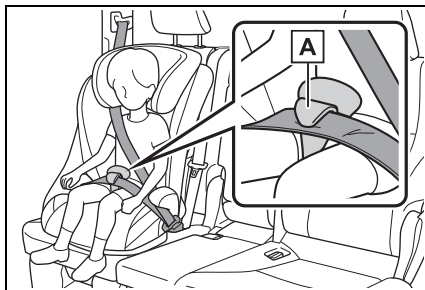

Child restraint system installation method

Confirm with the operation manual enclosed with the child restraint system about the installation of the child restraint system.

	Installation method	Page
Seat belt attachment		P.79
ISOFIX lower anchorage attachment		P.81
Top tether anchorage attachment		P.83

Child restraint system fixed with a seat belt

■ Installing child restraint system using a seat belt

Install the child restraint system in


accordance to the operation manual enclosed with the child restraint system.

If the child restraint system on hand is not within the “universal” category (or the necessary information


is not in the table), refer to the "Vehicle List" provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child restraint system. (→P.58, 63, 68, 73)

- 1 If installing the child restraint system to the front passenger seat is unavoidable, refer to P.55 for the front passenger seat adjustment.
- 2 Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.
- 3 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P.205)
- 4 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted. Securely fix the seat belt to the child restraint system in accor-

dance to the directions enclosed with the child restraint system.

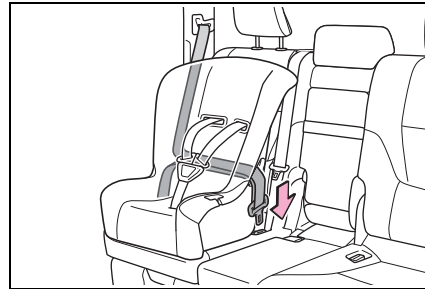

- 5 If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.

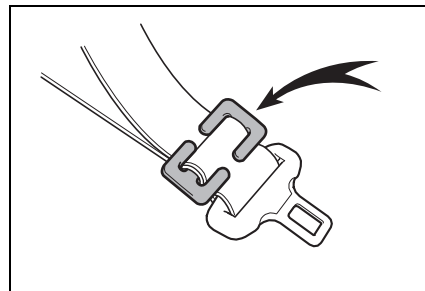

- 6 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.81)

■ Removing a child restraint system installed with a seat belt

Press the buckle release button and fully retract the seat belt.

When releasing the buckle, the child restraint system may spring up due to the rebound of the seat cushion. Release the buckle while holding down the child restraint system.

Since the seat belt automatically reels itself, slowly return it to the stowing position.

■ When installing a child restraint system

You may need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from your Toyota dealer: Locking clip for child restraint system (Part No. 73119-22010)



WARNING

■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.


- When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.

- Follow all installation instructions provided by the child restraint system manufacturer.

Child restraint system fixed with an ISOFIX lower anchorage

■ ISOFIX lower anchorages (ISOFIX child restraint system)

Lower anchorages are provided for the rear outboard seats. (Buttons displaying the location of the anchorages are attached to the seats.)

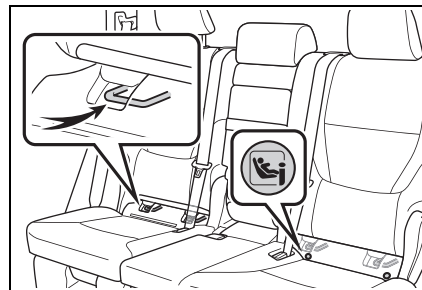

■ Installation with ISOFIX lower anchorage (ISOFIX child restraint system)

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.


If the child restraint system on hand is not within the "universal" cate-

gory (or the necessary information is not in the table), refer to the “Vehicle List” provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child restraint system. (→P.58, 63, 68, 73)

- 1 Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.
- 2 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P.205)


3 Open the cover.

Put the cover between the seat cushion and seatback.

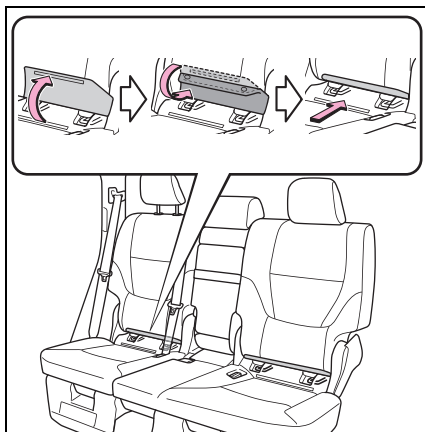

- 4 Check the positions of the exclusive fixing bars, and install the child restraint system to the seat.

The bars are installed in the clearance between the seat cushion and seatback.

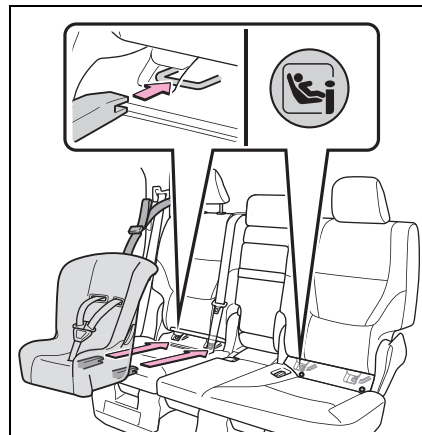

- 5 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.81)

⚠ WARNING

■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- When using the lower anchorages, be sure that there are no foreign objects around the anchorages and that the seat belt is not caught behind the child restraint system.


⚠ WARNING

- Follow all installation instructions provided by the child restraint system manufacturer.

■ **When using an “i-Size MIDI*” (for ASEAN countries and Latin America and the Caribbean countries)**

*: However, this CRS name is become MIDI PLUS in only Brazil.

Adjust the support leg and ISOFIX connectors as follows:

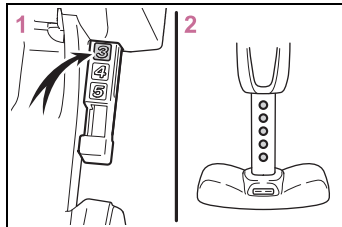


- 1 Lock the ISOFIX connectors where number 3 can be seen.
- 2 Lock the support leg where 5 holes can be seen.

Using a top tether anchorage

■ **Top tether anchorages**

Top tether anchorages are provided for the outboard rear seats.

Use top tether anchorages when fixing the top strap.

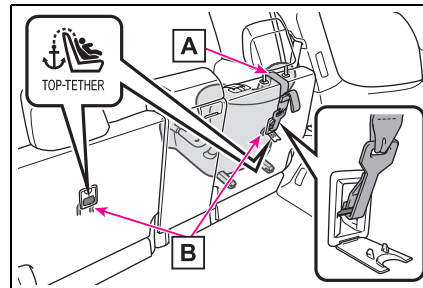

A Top strap


B Top tether anchorages

■ **Fixing the top strap to the top tether anchorages**

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

- 1 Adjust the head restraint to the utmost position.

If the head restraint interferes with the child restraint system or top strap installation and the head restraint can be removed, remove the head restraint. (→P.205)

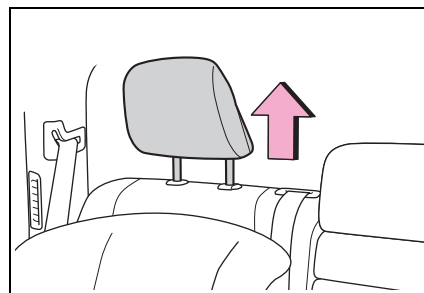


- 2 Open the anchor bracket cover, latch the hook onto the anchor bracket and tighten the top strap.

Make sure the top strap is securely latched. (→P.81)


When installing the child restraint sys-

tem with the head restraint being raised, be sure to have the top strap pass underneath the head restraint.

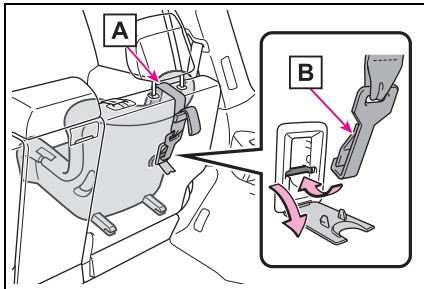

A Top strap

B Hook

 NOTICE

■ **Anchor brackets (for top strap)**

When not in use, make certain to close the lid. If it remains open, the lid may be damaged.

 **WARNING**

■ **When installing a child restraint system**

Observe the following precautions. Failure to do so may result in death or serious injury.

- Firmly attach the top strap and make sure that the belt is not twisted.
- Do not attach the top strap to anything other than the top tether anchorages.
- After securing a child restraint system, never adjust the seat.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the top tether anchorage has been fixed, do not lower the head restraint.

Child restraint systems (for India)

Before installing a child restraint system in the vehicle, there are precautions that need to be observed, different types of child restraint systems, as well as installation methods, etc., written in this manual.

Use a child restraint system when riding with a small child that cannot properly use a seat belt. For the child's safety, install the child restraint system to a rear seat. Be sure to follow the installation method that is in the operation manual enclosed with the restraint system.

Table of contents

Points to remember: P.85

Child restraint system: P.86

When using a child restraint system: P.88

Child restraint system installation method

- Fixed with a seat belt: P.91
- Fixed with an ISOFIX rigid anchor: P.96
- Using an anchor bracket (for top strap): P.100

Points to remember

- If child restraint system regulations exist in the country where

you reside, please contact your Toyota dealer for the child restraint system installation.

- Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt.
- Choose a child restraint system appropriate to the age and size of the child.
- Note that not all child restraint systems can fit in all vehicles.

Before using or purchasing a child restraint system, check the compatibility of the child restraint system with seat positions. (→P.86)

WARNING

■ When a child is riding

Observe the following precautions. Failure to do so may result in death or serious injury.

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on the age and size of the child.
- Toyota strongly urges the use of a proper child restraint system that conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Holding a child in your or someone else's arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield or between the holder and the interior of the vehicle.

⚠ WARNING**■ Handling the child restraint system**

If the child restraint system is not properly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving, or an accident.

- If the vehicle were to receive a strong impact from an accident, etc., it is possible that the child restraint system has damage that is not readily visible. In such cases, do not reuse the restraint system.
- Depending on the child restraint system, installation may be difficult or impossible. In those cases, check whether the child restraint system is suitable for installment in the vehicle. (→P.91, 96) Be sure to install and observe the usage rules after carefully reading the child restraint system fixing method in this manual, as well as the operation manual enclosed with the child restraint system.
- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment.


Child restraint system

Install the available child restraint system in vehicle upon confirming the following items.

■ Standards for child restraint systems

Use a child restraint system that

conforms to ECE R44*¹ or ECE R129*^{1, 2}.

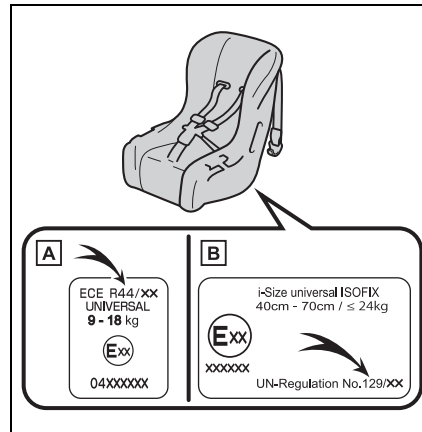**A** ECE R44 approval mark*³

The weight range of the child who is applicable for an ECE R44 approval mark is indicated.

B ECE R129 approval mark*³

The height range of the child who is applicable as well as available weights for an ECE R129 approval mark is indicated.

*¹: ECE R44 and ECE R129 are U.N. regulations for child restraint systems.

*²: The child restraint systems mentioned in the table may not be available outside of the EU area.

*³: The displayed mark may differ depending on the product.

■ Mass group (ECE R44 only)

This Mass group table is required when confirming the “Child restraint system suitability for various seating positions”. Confirm in accordance with the “Child restraint system suitability for various seating positions” (→P.92, 96)




The child restraint system which conforms to the standard of ECE R44 is categorized into 5 groups according to the weight of the child.

Mass group	Child weight	Reference age*
Group 0	until 10 kg (22 lb.)	about 9 months
Group 0+	until 13 kg (28 lb.)	about 1.5 years
Group I	9 - 18 kg (20 - 39 lb.)	from 9 months - about 4 years
Group II	15 - 25 kg (34 - 55 lb.)	from 3 years - about 7 years
Group III	22 - 36 kg (49 - 79 lb.)	from 6 years - about 12 years

*: The age range is a standard approximation. Choose according to the weight of the child.

■ Types of child restraint system installation methods

Confirm with the operation manual enclosed with the child restraint system about the installation of the child restraint system.

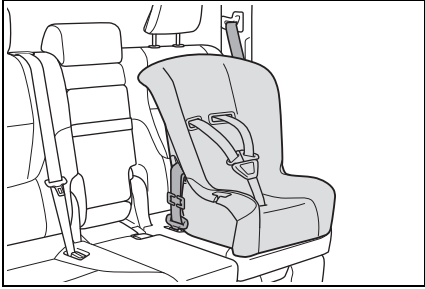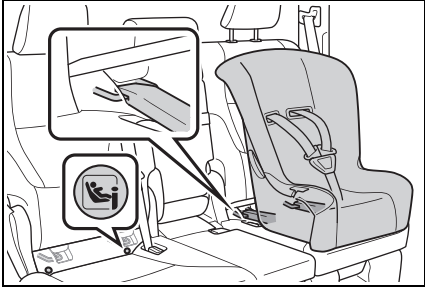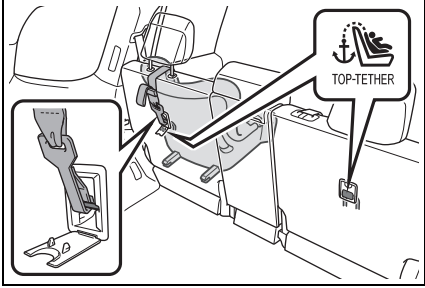	Installation method	Page
Seat belt attachment		P.91
ISOFIX rigid anchor attachment		P.96
Anchor brackets (for top strap) attachment		P.100

When using a child restraint system

■ When installing a child restraint system to a front passenger seat

For the safety of a child, install a child restraint system to a rear seat. When installing a child restraint system to the front passenger seat


is unavoidable, adjust the seat as follows and install the child restraint system.

- Move the front seat fully rearward.
- Adjust the seatback angle to the most upright position.

When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seat-

back angle until good contact is achieved.

- Adjust the front of the seat cushion to the uppermost position.
- Adjust the seat height to the uppermost position.
- If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

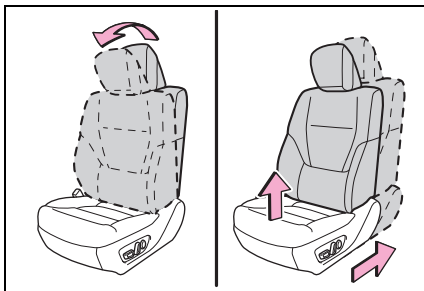

■ When installing a child restraint system to a rear seat


When using a child restraint system in an outer rear seat, adjust the seat as follows and install the child restraint system.

- Adjust the seatback angle to the most upright position.

When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

- If the head restraint interferes with the child restraint system installation and the head

restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

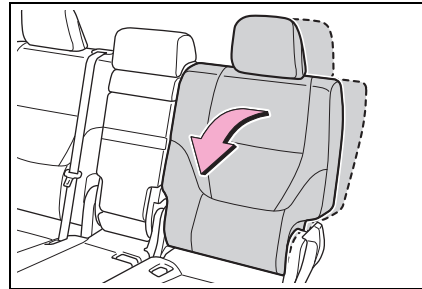


⚠ WARNING

■ When installing a child restraint system


Observe the following when installing child restraint system to the front passenger seat if it is unavoidable. The front passenger SRS airbag inflates with considerable speed and force that if not observed may lead to death or serious injury to the child.

- Never use a rear-facing child restraint system on the front passenger seat. The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

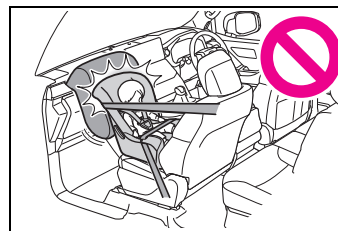

⚠ WARNING

- There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat. Details of the label(s) are shown in the illustration below.

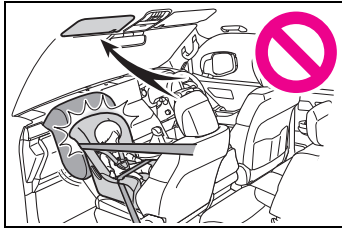**⚠ WARNING**

⚠ WARNING

- Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible. Failing to do so may result in death or serious injury if the airbags deploy (inflate).




- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.



- When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.

- Use child restraint system suitable to the age and size of the child and install it to the rear seat.
- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the left-hand rear seat.

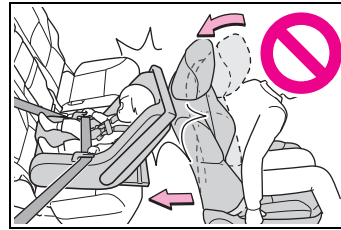

- Adjust the front passenger seat so that it does not interfere with the child restraint system.
- When installing a child restraint system on the second center seat, adjust both seat cushions to the same position and align both seat-backs at the same angle. The seat-backs must be adjusted to the same angle. Otherwise, the child restraint system cannot be securely restrained and this may cause death or serious injuries in the event of sudden braking, sudden swerving or an accident.

Child restraint system fixed with a seat belt**■ Child restraint system compatibility for various seating positions**

The child restraint system compatibility table (→P.92), with symbols, displays the types of usable child restraint systems and possible seating position installation for the child restraint system owned by the

customer. Confirm also in accordance with “Confirming the possible installation seating positions and the Mass Group for the seat belt installation type child restraint systems”.

■ **Confirming the possible installation seating positions and the Mass Group for the seat belt installation type child restraint systems**

- 1 Confirm the corresponding “Mass group” from the weight of the child (→P.87)

■ **Child restraint systems fastened with SEAT BELT - Compatibility table**

If your child restraint system is of “universal” category, you can install it on the positions mentioned by U or UF in the table below (UF is for forward-facing child restraint systems only). Child restraint systems category and mass group can be found in the child restraint system manual.

If your child restraint system is not of the “universal” category (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

(Ex. 1) When the weight is 12 kg, “Mass group 0+”

(Ex. 2) When the weight is 15 kg, “Mass group I”

- 2 Confirm and select the appropriate possible seating position for the child restraint system and the corresponding type of system from the “Child restraint system suitability for various seating positions”. (→P.92)

Mass groups	Seating position			Recommended Child Restraint Systems
	Front Passenger seat	Rear seat		
		Outboard*2	Center*2	
0 Up to 10 kg (22 lb.)	X	U	U	“G 0+, BABY SAFE PLUS”
0+ Up to 13 kg (28 lb.)	X	U	U	

Mass groups	Seating position			Recommended Child Restraint Systems
	Front Passenger seat	Rear seat		
		Outboard* ²	Center* ²	
I 9 to 18 kg (20 to 39 lb.)	Rearward-facing — X	U	U	“DUO PLUS”
	Forward-facing — UF* ^{1,2}			
II, III 15 to 36 kg (34 to 79 lb.)	UF* ^{1,2}	U	U	—

Key of letters inserted in the above table:

X: Not suitable seat position for children in this mass group.

U: Suitable for “universal” category child restraint systems approved for use in this mass group.

UF: Suitable for forward-facing “universal” category child restraint systems approved for use in this mass group.

*¹: Adjust the seatback angle to the most upright position. Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.

*²: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and


low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

The child restraint systems mentioned in the table may not be available outside the INDIA.


- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rear-

ward until there is no interference.

- When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

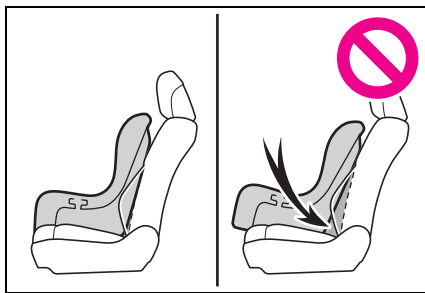

- If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

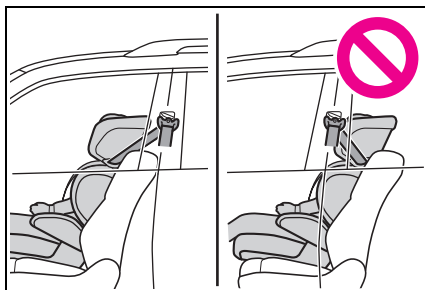

- When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

■ Installing child restraint system using a seat belt

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

1 Adjust the seat

- ▶ When using the front passenger seat

If installing the child restraint system to the front passenger seat is unavoidable, refer to P.88 for the front passenger seat adjustment.


- ▶ When using the rear seat

If there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved. (→P.89)


- 2 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P.205)

- 3 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted. Securely fix the seat belt to the child restraint system in accor-

dance to the directions enclosed with the child restraint system.

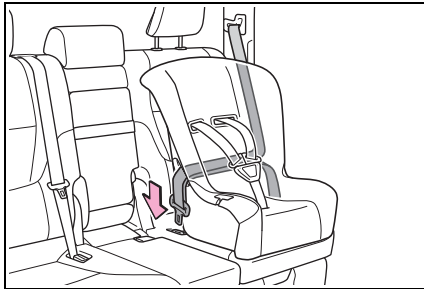

- 4** If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.

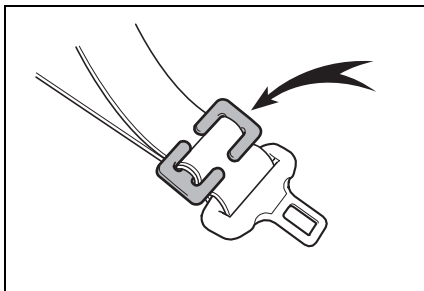

- 5** After installing the child restraint system, rock it back and forth to ensure that it is installed securely.

■ Removing a child restraint system installed with a seat belt

Press the buckle release button and fully retract the seat belt.

When releasing the buckle, the child restraint system may spring up due to the rebound of the seat cushion.

Release the buckle while holding down the child restraint system.

Since the seat belt automatically reels itself, slowly return it to the stowing position.

■ When installing a child restraint system

You may need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from your Toyota dealer: Locking clip for child restraint system (Part No. 73119-22010)

⚠ WARNING

■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.


**WARNING**

- When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Follow all installation instructions provided by the child restraint system manufacturer.

Child restraint system fixed with an ISOFIX rigid anchor

■ ISOFIX rigid anchors (ISOFIX child restraint system)

Lower anchors are provided for the outboard rear seats. (Marks displaying the location of the anchors are attached to the seats.)

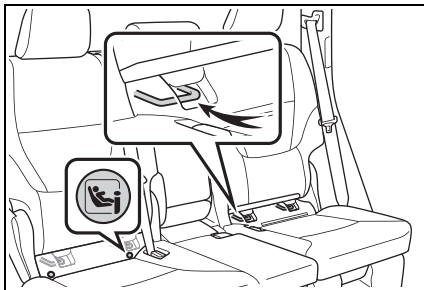

■ Child restraint system suitability for various seating positions

The child restraint system compatibility table (→P.96), with symbols, displays the types of usable child

■ Child restraint systems fastened with ISOFIX - Compatibility table

ISOFIX child restraint systems are divided in different "size class". According to this "size class", you will be allowed to use it in the vehicle seating position mentioned in the table below. To know your child restraint system

restraint systems and possible seating position installation for the child restraint system owned by the customer. Confirm in accordance with the listed Size class, Anchor, as well as "Confirming the Mass group and Size class for ECE R44 ISOFIX corresponding child restraint systems".

■ Confirming the Mass group and Size class for ECE R44 ISOFIX corresponding child restraint systems

- 1 Confirm the corresponding "Mass group" from the weight of the child (→P.87)

(Ex. 1) When the weight is 12 kg, "Mass group 0+"

(Ex. 2) When the weight is 15 kg, "Mass group I"

- 2 Confirming Size class

Select the Size class corresponding to "Mass group" confirmed in step 1 from the "Child restraint systems fastened with ISOFIX - Compatibility table" (→P.96)*.

(Ex. 1) When "Mass group 0+", the corresponding size class is "C", "D", "E".

(Ex. 2) When "Mass group I", the corresponding size class is "A", "B", "B1", "C", "D".

*: However, listings that are marked with "X" cannot be selected, despite having the corresponding size class in the suitability table of the "Seating position".

“size class” and “mass group”, please refer to the child restraint system manual.

If your child restraint system has no “size class” (or if you cannot find information in the table below), please refer to the child restraint system “vehicle list” for compatibility information or ask the retailer of your child seat.

Size class	Description
A	Full-height, forward-facing child restraint systems
B	Reduced-height forward-facing child restraint systems
B1	Reduced-height forward-facing child restraint systems
C	Full-size rearward-facing child restraint systems
D	Reduced-size rearward-facing child restraint systems
E	Rearward-facing infant seat
F	Left lateral-facing (carrycot) infant seat
G	Right lateral-facing (carrycot) infant seat

Mass groups	Size class	Seating position			Recommended Child Restraint System
		Front seat	Rear seat		
		Passenger seat	Outboard*	Center	
Carrycot	F	×	×	×	—
	G	×	×	×	
0 Up to 10 kg (22 lb.)	E	×	IL	×	—
0+ Up to 13 kg (28 lb.)	E	×	IL	×	
	D	×	IL	×	
	C	×	IL	×	
I 9 to 18 kg (20 to 39 lb.)	D	×	IL	×	—
	C	×	IL	×	
	B	×	IUF	×	
	B1	×	IUF	×	“DUO PLUS”
	A	×	IUF	×	—

Key of letters inserted in the above table:

X: Not suitable seat position for ISOFIX child restraint systems in this mass group and/or size class.

IUF: Suitable for ISOFIX forward-facing child restraint systems of “universal” category approved for use in this mass group.

IL: Suitable for ISOFIX child restraint systems of the categories for “specific vehicles”, “restricted”, or “semi-universal” approved for use in this mass group.

*: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

The child restraint systems mentioned in the table may not be available outside the INDIA.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.

■ **i-Size child restraint systems fastened with ISOFIX (ECE R129) - Compatibility table**

If your child restraint system is of “i-Size” category, you can install it on the positions mentioned by i-U in the table below.

Child restraint system category can be found in the child restraint system manual.

	Seating position		
	Front passenger seat	Rear seat	
		Outboard*	Center
i-Size child restraint systems	X	i-U	X

Key of letters inserted in the above table:

X: Not suitable for use with i-Size child restraint systems.

i-U: Suitable for i-Size “universal” child restraint systems forward and rearward facing.

*: If the head restraint interferes with your child restraint system, and the head

restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.

■ Installation with ISOFIX rigid anchor (ISOFIX child restraint system)


Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

- 1 Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.
- 2 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P.205)

- 3 Open the cover.

Put the cover between the seat cushion


and seatback.

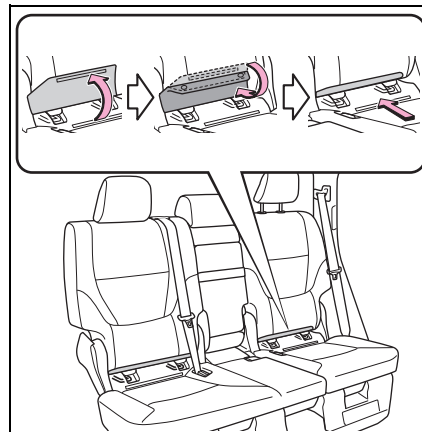

- 4 Check the positions of the exclusive fixing bars, and install the child restraint system to the seat.

The bars are installed in the clearance between the seat cushion and seat-

back.

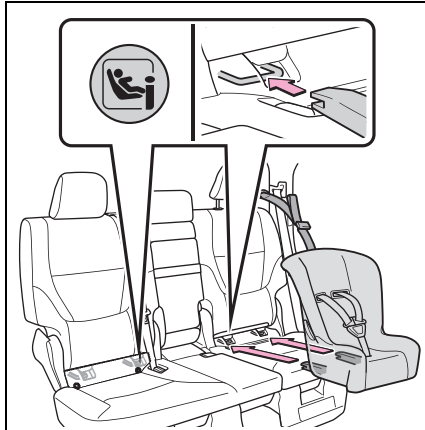

5 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.95)

■ When using a “DUO PLUS”

Adjust the seatback angle to the most upright position.

If there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

WARNING

■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.

- When using the lower anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint system.


- Follow all installation instructions provided by the child restraint system manufacturer.

Using an anchor bracket (for top strap)

■ Anchor brackets (for top strap)

Anchor brackets are provided for the outboard rear seat.

Use anchor brackets when fixing the top strap.

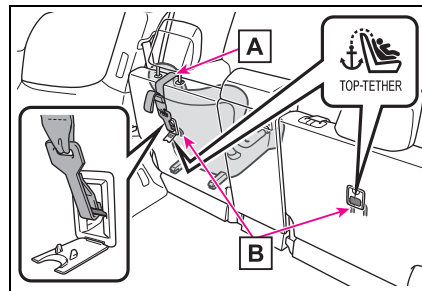

A Top strap

B Top tether anchorages


■ Fixing the top strap to the anchor bracket

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

- 1 Adjust the head restraint to the upmost position.

If the head restraint interferes with the child restraint system or top strap


installation and the head restraint can be removed, remove the head restraint. (→P.205)

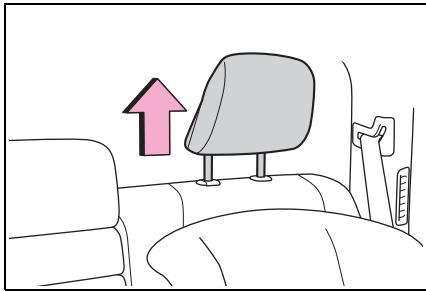

- 2** Open the anchor bracket cover, latch the hook onto the anchor bracket and tighten the top strap.

Make sure the top strap is securely latched. (→P.95)

When installing the child restraint system with the head restraint being raised, be sure to have the top strap pass underneath the head restraint.

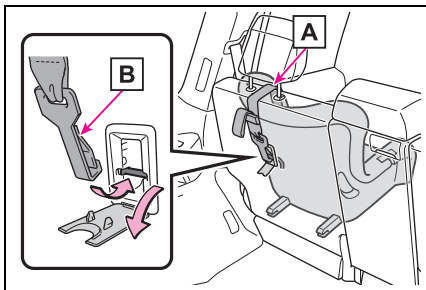

A Top strap

B Hook

⚠ WARNING

■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- Firmly attach the top strap and make sure that the belt is not twisted.
- Do not attach the top strap to anything other than the anchor bracket.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the top tether anchorage has been fixed, do not lower the head restraint.

⚠ NOTICE

■ Anchor brackets (for top strap)

When not in use, make certain to close the lid. If it remains open, the lid may be damaged.


eCall^{*1, 2}

^{*1}: If equipped

^{*2}: Operates within the eCall coverage.

eCall is a telematics service that uses Global Navigation Satellite System (GNSS) data and embedded cellular technology to enable the following emergency calls to be made: Automatic emergency calls (Automatic Collision Notification) and manual emergency calls (by pressing the “SOS” button). This service is required by United Arab Emirates Regulations.

System components

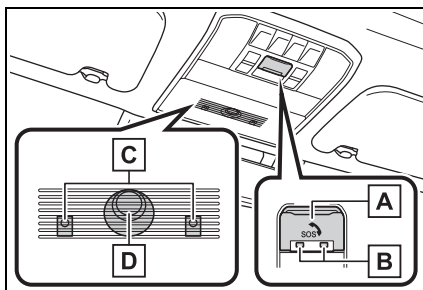

A “SOS” button^{*}

B Indicator lights

C Microphone

D Speaker

^{*}: This button is intended for communication with the eCall system operator. Other SOS buttons available in other systems of a motor vehicle do not relate to the device and are not

intended for communication with the eCall system operator.

Emergency Notification Services

■ **Automatic Emergency Calls**


If any airbag deploys, the system is designed to automatically call the eCall control center.^{*} The answering operator receives the vehicle’s location, the time of the incident and the vehicle VIN, and attempts to speak with the vehicle occupants to assess the situation. If the occupants are unable to communicate, the operator automatically treats the call as an emergency and contacts the nearest emergency services provider (999 system etc.) to describe the situation and request that assistance be sent to the location.

^{*}: In some cases, the call cannot be made. (→P.103)

■ **Manual Emergency Calls**

In the event of an emergency, press the “SOS” button to call the eCall control center.^{*} The answering operator will determine your vehicle’s location, assess the situation, and dispatch the necessary assistance required.

Make sure to open the cover before pressing the “SOS” button.

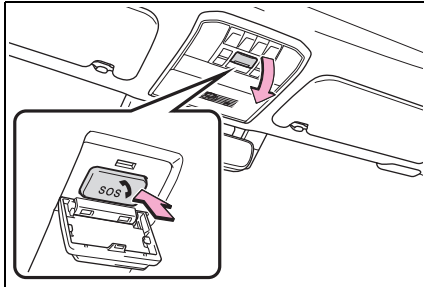

If you accidentally press the “SOS” button, tell the operator that you are not experiencing an emergency.

*: In some cases, the call cannot be made. (→P.103)

Indicator lights

When the engine switch is turned to ON, the red indicator light will illuminate for 10 seconds and then the green indicator light will illuminate, indicating that the system is enabled. The indicator lights indicate the following:

- If the green indicator light illuminates and stays on, the system is enabled.
- If the green indicator light flashes twice per second, an automatic or manual Emergency Call is being made.
- If no indicator lights illuminate, the system is not enabled.
- If the red indicator light illuminates at any time other than immediately after the engine switch is turned to ON, the system may be malfunctioning or the backup battery may be

depleted.

- If the red indicator light blinks for approximately 30 seconds during an Emergency Call, the call has been disconnected or the cellular network signal is weak.

The service life of the backup battery does not exceed 3 years.

Free/Open Source Software Information

This product contains Free/Open Source Software (FOSS).

The license information and/or the source code of such FOSS can be found at the following URL.

<http://opensource.lge.com/>

⚠ WARNING

■ When the Emergency Call may not be made

- It may not be possible to make Emergency Calls in any of the following situations. In such cases, report to emergency services provider (999 system etc.) by other means such as nearby public phones.
- Even when the vehicle is in the cellular phone service area, it may be difficult to connect to the eCall control center if the reception is poor or the line is busy. In such cases, even though the system attempts to connect to the eCall control center, you may not be able to connect to the eCall control center to make Emergency Calls and contact emergency services.
- When the vehicle is out of the cellular phone service area, the Emergency Calls cannot be made.

 **WARNING**

- When any related equipment (such as the “SOS” button panel, indicator lights, microphone, speaker, DCM, antenna, or any wires connecting the equipment) is malfunctioning, damaged or broken, the Emergency Call cannot be made.
- During an Emergency Call, the system makes repeated attempts to connect to the eCall control center. However, if it cannot connect to the eCall control center due to poor radio wave reception, the system may not be able to connect to the cellular network and the call may finish without connecting. The red indicator light will blink for approximately 30 seconds to indicate this disconnection.
- If the battery’s voltage decreases or there is a disconnection, the system may not be able to connect to the eCall control center.


■ **When the Emergency Call system is replaced with a new one**

The Emergency Call system should be registered. Contact your Toyota dealer.

■ **For your safety**

- Please drive safely.
The function of this system is to assist you in making the Emergency Call in case of accidents such as traffic accidents or sudden medical emergencies, and it does not protect the driver or passengers in any way. Please drive safely and fasten your seatbelts at all times for your safety.
- In case of an emergency, make lives the top priority.
- If you smell anything burning or other unusual smells, leave the vehicle and evacuate to a safe area immediately.

- If the airbags deploy when the system is operating normally, the system makes emergency call. The system also makes emergency call when the vehicle is struck from the rear or rolls over, even if the airbags do not deploy.
- For safety, do not make the Emergency Call while driving.
Making calls during driving may cause mishandling of the steering wheel, which may lead to unexpected accidents.
Stop the vehicle and confirm the safety of your surroundings before making the Emergency Call.
- When changing fuses, please use the specified fuses. Using other fuses may cause ignition or smoke in the circuit and lead to a fire.
- Using the system while there is smoke or an unusual smell may cause a fire. Stop using the system immediately and consult your Toyota dealer.

 **NOTICE**

■ **To prevent damage**

Do not pour any liquids onto the “SOS” button panel, etc. and do not impact it.

■ **If the “SOS” button panel, speaker or microphone malfunctions during an Emergency Call or manual maintenance check**

It may not be possible to make Emergency Calls, confirm the system status, or communicate with the eCall control center operator. If any of the above equipment is damaged, please consult your Toyota dealer.

**ERA-GLONASS/EVAK^{*1},
2, 3**

^{*1}: If equipped


^{*2}: Operates within regions offering emergency notification services. Ask your Toyota dealer for details.

^{*3}: The system name differs depending on the country.

The Emergency Call system is a device installed on a vehicle to determine its location and movement direction (using GLONASS [Global Navigation Satellite System] and GPS [Global Positioning System] signals), and ensure the generation and transmission of vehicle information (in a nonadjustable form) in case of traffic accidents or other incidents on motor roads in the countries offering emergency notification services. In addition, it ensures two-way voice communication between the vehicle and an ERA-GLONASS/EVAK system operator through cellular networks (GSM).

Automatic Emergency Calls (via Automatic Collision Notification) and manual Emergency Calls (by pressing the “SOS” button) can be made to the ERA-GLONASS/EVAK control center.

This service is mandatory according to the technical regulations of the Customs Union.

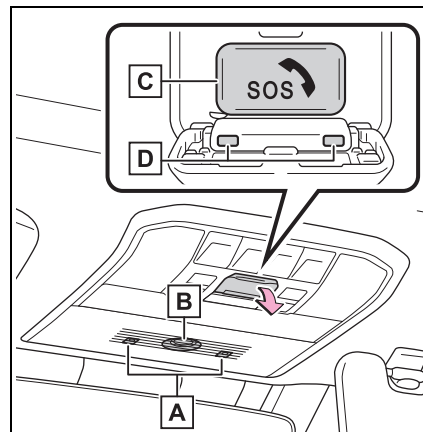System components

A Microphone

B Speaker

C “SOS” button^{*}

D Indicator lights

^{*}: This button is intended for communication with the ERA-GLONASS/EVAK system operator. Other SOS buttons available in other systems of a motor vehicle do not relate to the device and are not intended for communication with the ERA-GLONASS/EVAK system operator.

Emergency Notification Services**■ Automatic Emergency Calls**

If any airbag deploys, the system is

designed to automatically call the ERA-GLONASS/EVAK control center.* The answering operator receives the vehicle's location, the time of the incident and the vehicle VIN, and attempts to speak with the vehicle occupants to assess the situation. If the occupants are unable to communicate, the operator automatically treats the call as an emergency and contacts the nearest emergency services provider (112 system etc.) to describe the situation and request that assistance be sent to the location.

*: In some cases, the call cannot be made. (→P.107)

■ Manual Emergency Calls

In the event of an emergency, press the "SOS" button to call the ERA-GLONASS/EVAK control center.* The answering operator will determine your vehicle's location, assess the situation, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the operator that you are not experiencing an emergency.

*: In some cases, the call cannot be made. (→P.107)

Indicator lights

When the engine switch is turned to ON, the red indicator light will illuminate for 10 seconds and then the green indicator light will illuminate, indicating that the system is

enabled. The indicator lights indicate the following:

- If the green indicator light illuminates and stays on, the system is enabled.
- If the green indicator light flashes twice per second, an automatic or manual Emergency Call is being made.
- If no indicator lights illuminate, the system is not enabled.
- If the red indicator light illuminates at any time other than immediately after the engine switch is turned to ON, the system may be malfunctioning or the backup battery may be depleted.
- If the red indicator light blinks for approximately 30 seconds during an Emergency Call, the call has been disconnected or the cellular network signal is weak.

The service life of the backup battery does not exceed 3 years.

Device test mode

A test mode is provided for to check the performance of the Emergency Call system. To test the device, contact your Toyota dealer.

**WARNING****■ When the Emergency Call may not be made**

- It may not be possible to make Emergency Calls in any of the following situations. In such cases, report to emergency services provider (112 system etc.) by other means such as nearby public phones.
- Even when the vehicle is in the cellular phone service area, it may be difficult to connect to the ERA-GLONASS/EVAK control center if the reception is poor or the line is busy. In such cases, even though the system attempts to connect to the ERA-GLONASS/EVAK control center, you may not be able to connect to the ERA-GLONASS/EVAK control center to make Emergency Calls and contact emergency services.
- When the vehicle is out of the cellular phone service area, the Emergency Calls cannot be made.
- When any related equipment (such as the "SOS" button panel, indicator lights, microphone, speaker, DCM, antenna, or any wires connecting the equipment) is malfunctioning, damaged or broken, the Emergency Call cannot be made.
- During an Emergency Call, the system makes repeated attempts to connect to the ERA-GLONASS/EVAK control center. However, if it cannot connect to the ERA-GLONASS/EVAK control center due to poor radio wave reception, the system may not be able to connect to the cellular network and the call may finish without connecting. The red indicator light will blink for approximately 30 seconds to indicate this disconnection.

- This device may not function if a shock is applied to it.

- If the battery's voltage decreases or there is a disconnection, the system may not be able to connect to the ERA-GLONASS/EVAK control center.

■ When the Emergency Call system is replaced with a new one

The Emergency Call system should be registered. Contact your Toyota dealer.

■ For your safety

- Please drive safely.
The function of this system is to assist you in making the Emergency Call in case of accidents such as traffic accidents or sudden medical emergencies, and it does not protect the driver or passengers in any way. Please drive safely and fasten your seatbelts at all times for your safety.
- In case of an emergency, make lives the top priority.
- If you smell anything burning or other unusual smells, leave the vehicle and evacuate to a safe area immediately.
- Since the system detects shocks, the automatic reporting may not always occur synchronized with the operation of the airbag system. (If the vehicle is struck from behind, etc.)
- For safety, do not make the Emergency Call while driving.
Making calls during driving may cause mishandling of the steering wheel, which may lead to unexpected accidents.
Stop the vehicle and confirm the safety of your surroundings before making the Emergency Call.



WARNING

- When changing fuses, please use the specified fuses. Using other fuses may cause ignition or smoke in the circuit and lead to a fire.
- Using the system while there is smoke or an unusual smell may cause a fire. Stop using the system immediately and consult your Toyota dealer.



NOTICE

■ **To prevent damage**

Do not pour any liquids onto the “SOS” button panel, etc. and do not impact it.

■ **If the “SOS” button panel, speaker or microphone malfunctions during an Emergency Call or manual maintenance check**

It may not be possible to make Emergency Calls, confirm the system status, or communicate with the ERA-GLONASS/EVAK control center operator. If any of the above equipment is damaged, please consult your Toyota dealer.

Engine immobilizer system

The vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously registered in the vehicle's on-board computer.


Never leave the keys inside the vehicle when you leave the vehicle.

This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

Operating the system

The indicator light flashes after the engine switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the engine switch has been turned to ACC or ON to indicate that the system has been canceled.

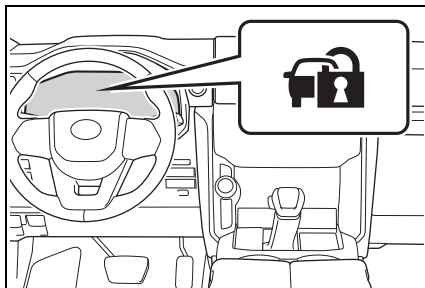

System maintenance

The vehicle has a maintenance-free

type engine immobilizer system.

Conditions that may cause the system to malfunction

- If the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

 NOTICE

To ensure the system operates correctly


Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Double locking system*

*: If equipped

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.

Vehicles employing this system have labels on the window glass of both front doors.

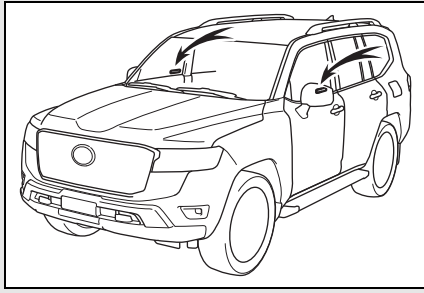

Setting/canceling the double locking system


■ Setting

Turn the engine switch off, have all the passengers exit the vehicle and ensure that all the doors are closed.

Using the entry function:

Touch the sensor area on the outside door handle twice within 5 seconds.

Using the wireless remote control:


Press  twice within 5 seconds.

■ Canceling

Using the entry function: Hold the

outside door handle on the driver's side.

Using the wireless remote control:

Press  .

WARNING

■ Double locking system precaution

Never activate the double locking system when there are people in the vehicle because all the doors cannot be opened from inside the vehicle.

Alarm*

*: If equipped

The alarm uses light and sound to give an alert when an intrusion is detected.

The alarm is triggered in the following situations when the alarm is set:

- A locked door is unlocked or opened in any way other than using the entry function or wireless remote control. (The doors will lock again automatically.)
- The hood is opened.
- Vehicles with intrusion sensor: The intrusion sensor detects something moving inside the vehicle. (An intruder gets in the vehicle.)
- Vehicles with tilt sensor: The tilt sensor detects a change of vehicle inclination.
- Vehicles with glass breakage sensor: Any of the windows are broken.
- The battery is disconnected. (if equipped)
- The battery is reconnected.

Setting/canceling/stopping the alarm system**■ Items to check before locking the vehicle**


To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:

- Nobody is in the vehicle.
- The windows and moon roof (if equipped) are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.

■ Setting

Close the doors and hood, and lock all the doors using the entry function or wireless remote control. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

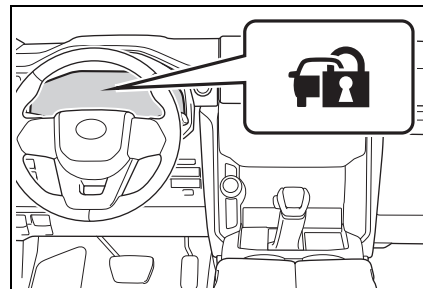**■ Canceling or stopping**

Do one of the following to deactivate or stop the alarm.

- Unlock the doors using the entry function or wireless remote control.

- Start the engine. (The alarm will be deactivated or stopped after a few seconds.)


■ **System maintenance**

The vehicle has a maintenance-free type alarm system.

■ **Triggering of the alarm**

The alarm may be triggered in the following situations:
(Stopping the alarm deactivates the alarm system.)


- The doors are unlocked using the mechanical key.

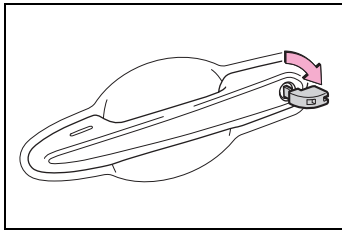

- A person inside the vehicle opens a door or hood, or unlocks the vehicle using an inside lock button.



- The battery is recharged or replaced when the vehicle is locked. (→P.729)

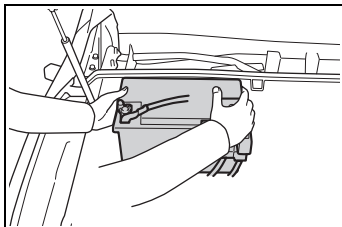

- Vehicles with intrusion sensor and tilt sensor: The battery is disconnected

when the vehicle is locked.


■ **Alarm-operated door lock**

In the following cases, depending on the situation, the door may automatically lock to prevent improper entry into the vehicle:

- When a person remaining in the vehicle unlocks the door and the alarm is activated.
- While the alarm is activated, a person remaining in the vehicle unlocks the door.
- When recharging or replacing the battery.

■ **Customization**

The alarm can be set to deactivate when the mechanical key is used to unlock. (Customizable features: →P.762)

 NOTICE

■ **To ensure the system operates correctly**

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Intrusion sensor and tilt sensor (if equipped)

■ **The intrusion sensor and tilt sensor detection**

- The intrusion sensor detects an intruder or movement in the vehicle.
- The tilt sensor detects changes in vehicle inclination, such as when the vehicle is towed away.

This system is designed to deter and prevent vehicle theft but does not guarantee absolute security against all intrusions.


■ Canceling the intrusion sensor and tilt sensor

If you are leaving pets or other moving things inside the vehicle, make sure to disable the intrusion sensor and tilt sensor before setting the alarm, as they will respond to movement inside the vehicle.

- 1 Turn the engine switch off.
- 2 Press the intrusion sensor and tilt sensor cancel switch.

A message will be shown on the multi-information display in the instrument cluster.

The intrusion sensor and tilt sensor will revert to on each time the engine switch is turned to ON.

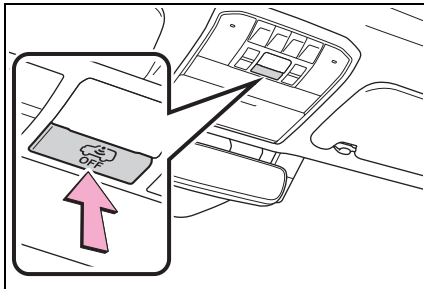


■ Canceling and automatic re-enabling of the intrusion sensor and tilt sensor

- The alarm will still be set even when the intrusion sensor and tilt sensor are canceled.
- After the intrusion sensor and tilt sensor are canceled, pressing the engine switch or unlocking the doors using the entry function or wireless remote control will re-enable the intrusion sensor and tilt sensor.
- The intrusion sensor and tilt sensor will automatically be re-enabled when the alarm system is reactivated.

■ Intrusion sensor considerations

The sensor may trigger the alarm in the following situations:


- People or pets are in the vehicle.

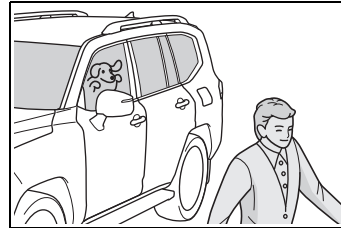


- A window or the moon roof (if equipped) is open.

In this case, the sensor may detect the following:


- Wind or the movement of objects such as leaves and insects inside the vehicle
- Ultrasonic waves emitted from devices such as the intrusion sensors of other vehicles
- The movement of people outside the vehicle

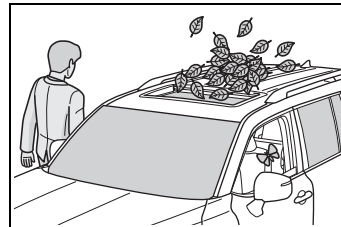


- Unstable items, such as dangling accessories or clothes hanging on the coat hooks, are in the vehicle.

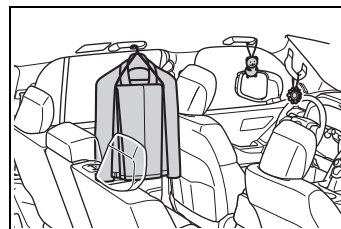

- The vehicle is parked in a place where extreme vibrations or noises occur, such as in a parking garage.

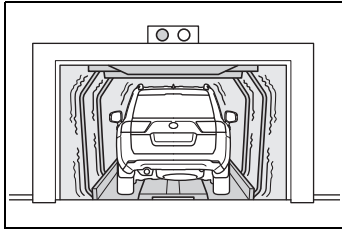

- Ice or snow is removed from the vehicle, causing the vehicle to receive repeated impacts or vibrations.

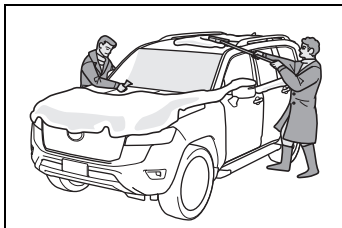

- The vehicle is inside an automatic or high-pressure car wash.
- The vehicle experiences impacts, such as hail, lightning strikes, and other kinds of repeated impacts or vibrations.

■ **Tilt sensor detection considerations**


The sensor may trigger the alarm in the following situations:

- The vehicle is transported by a ferry, trailer, train, etc.
- The vehicle is parked in a parking garage.
- The vehicle is inside a car wash that moves the vehicle.
- Any of the tires loses air pressure.
- The vehicle is jacked up.
- An earthquake occurs or the road caves in.
- Cargo is loaded onto or unloaded from the roof luggage carrier.


⚠ NOTICE

■ **To ensure the intrusion sensor functions correctly**

- To ensure that the sensors operate properly, do not touch or cover them.

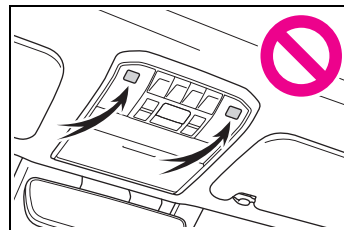

- Do not spray air fresheners or other products directly into the sensor holes.

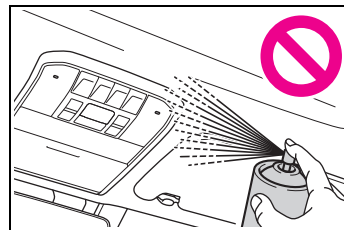


- Installing accessories other than genuine Toyota parts or leaving objects between the driver's seat and front passenger's seat may reduce the detection performance.
- The intrusion sensor may be canceled when the electronic key is near the vehicle.

Fingerprint Authentication System*

*: If equipped

The fingerprint authentication system performs fingerprint authentication by authenticating the finger used to touch the fingerprint sensor on the engine switch, against fingerprint information registered to the vehicle. If authentication is not successful, it prevents the engine from starting.

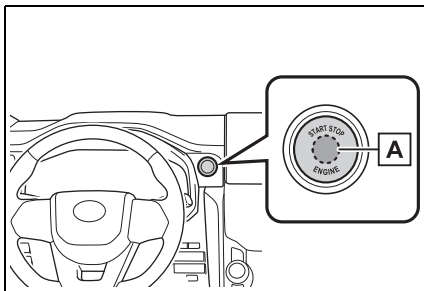

A Fingerprint sensor




■ Fingerprint authentication system

- The vehicle is delivered with no fingerprint information registered. The engine can be started as the smart entry & start system even if no information is registered.
- Successful fingerprint authentication alone is not enough to switch the engine switch mode or start the engine. The electronic key must also be held.
- Fingerprint authentication is used as an authentication device for My Settings functions. (→P.224)

Registering/deleting fingerprint information

Fingerprint information can be registered or deleted on the multi-information display. (→P.141, 151)

■ Registering fingerprint information to the vehicle for the first time

- 1 Turn the engine switch on.
- 2 Select “ Fingerprint” in  screen -  / “Vehicle Settings” screen on the multi-information display, and then press OK .
- 3 Select “Registration” and then press OK .
- 4 Select “Add” and then press OK .
- 5 Select the driver to register, and then press OK .
- 6 Select either “Finger1” or “Finger2” (if “Guest” was selected, select from “Finger1” to “Finger4”), and then press OK .
- 7 When the screen asks you to “Read Owner’s Manual “Agreement on Fingerprint System” Section”, select “Agree” and then press OK .

Selecting “Agree” means that you agree with the “Agreement on Fingerprint System” on P.118. After agreeing with how personal information will be

handled, the system may be used.



- 8 Using the finger to register fingerprint information, touch the fingerprint sensor multiple times while slightly changing the position of the finger.

Once fingerprint information has been registered, a message is displayed on the multi-information display.

■ **Registering fingerprint information for subsequent fingerprints**

- 1 Turn the engine switch on.
- 2 Select "Fingerprint" in screen - / "Vehicle Settings" screen on the multi-information display, and then press OK .
- 3 Select "Registration" and then press OK .

If "Registration" cannot be selected, have someone with registered fingerprint information touch the fingerprint sensor.

- 4 When "Touch Sensor with Already Registered Finger" is displayed, have someone with registered fingerprint information touch the fingerprint sensor

to perform fingerprint authentication.

The buzzer will sound (a short beep) when fingerprint authentication is successful.

- 5 Select "Add" and then press OK .
- 6 Select the driver to register, and then press OK .
- 7 Select either "Finger1" or "Finger2" (if "Guest" was selected, select from "Finger1" to "Finger4"), and then press OK .

This cannot be selected if fingerprint information has already been registered.

- 8 When the screen asks you to "Read Owner's Manual "Agreement on Fingerprint System" Section", select "Agree" and then press OK .

Selecting "Agree" means that you agree with the "Agreement on Fingerprint System" on P.118. After agreeing with how personal information will be handled, the system may be used.






- 9 Using the finger to register fingerprint information, touch the fingerprint sensor multiple times

while slightly changing the position of the finger.


Once fingerprint information has been registered, a message is displayed on the multi-information display.

■ Deleting fingerprint information for a single fingerprint

- 1 Turn the engine switch on.
- 2 Select “ Fingerprint” in  screen -  / “Vehicle Settings” screen on the multi-information display, and then press OK .

- 3 Select “Registration” and then press OK .

If “Registration” cannot be selected, have someone with registered fingerprint information touch the fingerprint sensor.

- 4 When “Touch  Sensor with Already Registered Finger” is displayed, have someone with registered fingerprint information touch the fingerprint sensor to perform fingerprint authentication.

The buzzer will sound (a short beep) when fingerprint authentication is successful.

- 5 Select “Delete” and then press OK .
- 6 Select the driver to delete, and then press OK .
- 7 Select either “Finger1” or “Finger2” (if “Guest” was selected,

select from “Finger1” to “Finger4”), and then press OK .




This cannot be selected if fingerprint information has not been registered yet.

- 8 “Authentication by Finger will be impossible Continue?” is displayed. Select “Yes” and then press OK .


Once fingerprint information has been deleted, a message is displayed on the multi-information display.

After agreeing with how personal information will be handled, the system may be used. (→P.118)



■ Deleting all fingerprint information

- 1 Turn the engine switch on.
- 2 Select “ Fingerprint” in  screen -  / “Vehicle Settings” screen on the multi-information display, and then press OK .
- 3 Select “Registration” and then press OK .

If “Registration” cannot be selected, have someone with registered fingerprint information touch the fingerprint sensor.

- 4 When “Touch  Sensor with Already Registered Finger” is displayed, have someone with registered fingerprint information touch the fingerprint sensor to perform fingerprint authentication.

The buzzer will sound (a short beep) when fingerprint authentication is successful.

- 5 Select "Delete ALL" and then press OK .
- 6 "Delete ALL  and Turn OFF  Function?" is displayed. Select "Yes" and then press OK .

Once all fingerprint information has been deleted, a message is displayed on the multi-information display.

When all fingerprint information is deleted, the fingerprint authentication system will automatically turn off.

After agreeing with how personal information will be handled, the system may be used. (→P.118)

■ Fingerprint registration

- Fingerprint information for up to a total of 10 fingerprints can be registered: 2 for each driver and 4 for the "Guest".
- When registering fingerprint information, repeatedly touch the fingerprint sensor seated in the posture you would use when starting the engine.
- When registering fingerprint information, you may need to touch the sensor multiple times with the finger that will be used to start the engine. Slightly change the position of your finger when touching to touch a wider area.
- When fingerprint information is registered for the first time, the fingerprint authentication system will automatically turn on. Check the multi-information display to see whether the fingerprint authentication system is on or off. (→P.141, 151)
- When touching the fingerprint sensor, ensure that your finger covers the entire surface of the sensor. Touching the sensor with your fingertip or the side of your finger may prevent authentication.
- Touch the sensor slowly. Touching too quickly or strongly, or sliding your finger along the sensor while touching may prevent normal recognition.
- When repeatedly touching the fingerprint sensor, wait approximately 1 second in between each touch. Repeatedly touching the sensor too quickly may cause authentication to fail.

■ Agreement on Fingerprint System

Fingerprint information is used by this system for security functions and Personal Settings functions. Fingerprint information is encrypted and stored only in the engine switch, and is used only to perform fingerprint authentication to start the engine and perform other vehicle functions (such as automatically adjusting the seat and mirror positions). Fingerprint information will not be disclosed or provided to any third parties. Users are allowed to delete their stored fingerprint information based on their intention.

Use the system after agreeing with the following items on how fingerprint information is handled.

- The fingerprint authentication system does not completely guarantee the authentication, verification or identification of the individual. Please be advised in advance that Toyota does not accept any liability for loss or damage resulting from the use of fingerprint authentication or from being unable to use fingerprint authentication.
- This system uses identifying fingerprint characteristics for authentication. Therefore, users with few identifying fingerprint characteristics may be unable to register fingerprint information, or may have difficulty authenticating even if fingerprint information has been successfully registered. In this situation, turn the fingerprint authentication system off.
- Fingerprint authentication system performance may vary depending on the

conditions of use. The condition of the finger (if it is dirty, wet, dry, injured, etc.) may make it difficult to scan the fingerprint or reduce authentication performance.

- If fingerprint information registration or fingerprint authentication fails frequently, clean the surface of the fingerprint sensor and try registering fingerprint information again.
- Fingerprint information registered in the engine switch cannot be migrating to another device. If fingerprint information is deleted or any system part is replaced, the fingerprint information will need to be registered again.
- If a user with registered fingerprint information cannot be identified when diagnosing a fingerprint authentication system malfunction, the fingerprint information may be deleted by a Toyota dealer.
- Fingerprint information once deleted cannot be restored. The fingerprint information will need to be registered again.
- Fingerprint information will generally be deleted when replacing the engine switch. Please note that if fingerprint information cannot be deleted due to a malfunction, etc., the part containing fingerprint information may be recalled or returned to the user.
- If the part is recalled, it will be used only to analyze the malfunction.
- If it is returned to the user, the user's personal information will be stored in the engine switch. Be especially carefully managing it.
- Be sure to delete fingerprint information if the vehicle will be sold, transferred, scrapped, etc. Please be advised in advance that Toyota does not accept any liability for loss or damage resulting from a vehicle being sold, transferred, scrapped, etc. with fingerprint information stored.
- Fingerprint information is encrypted and stored only in the engine switch,

and will not be disclosed or provided to any third parties.

■ Taking care of the fingerprint sensor

When cleaning the surface of the fingerprint sensor, wipe clean with a soft cloth without any cloth fibers.

■ Customization

The meter control switches can be used to turn the fingerprint authentication system on and off. (→P.776)

Observe the following precautions when turning the fingerprint authentication system on and off.

- Fingerprint information for at least one fingerprint must be registered.
- A user with registered fingerprint information must successfully perform fingerprint authentication and the engine switch must be turned on.
- The fingerprint authentication system can be turned on and off even if fingerprint authentication fails, by touching the electronic key to the engine switch and turning the engine switch on. (→P.728)
- If the fingerprint authentication system is turned off, a message indicating that the fingerprint authentication system is off will be displayed on the multi-information display when the engine switch is turned off. This message will be displayed for 10 days.



NOTICE

To protect the engine switch from damage, make sure to observe the following precautions.

- Do not subject the part to strong impacts. Do not remove, disassemble or modify the part. Doing so could result in a malfunction or damage.



NOTICE

- Do not poke or scratch the surface of the fingerprint sensor with a pen or other sharp object. Doing so could damage the surface of the fingerprint sensor.
- The part may become dirty with prolonged use. Do not use a sharp object to clean away any dirt.
- Fingerprint authentication may fail if the surface of the fingerprint sensor or the finger being used is wet or dirty.
- Do not attach stickers or apply ink to the surface of the fingerprint sensor.
- Clean the surface of the fingerprint sensor periodically. Dust, finger grease, sweat, etc. or condensation on the surface of the fingerprint sensor could cause a malfunction.
- If any substance that could cause a malfunction or damage (dust, sand, dye, ink, soap, detergent, acid or acidic food, oil, lotion, etc.) becomes attached to the fingerprint sensor, clean it off immediately.
- Avoid using detergents (such as glass cleaner, spray liquid cleaner, solvents, and ammonia) or abrasives (such as wax or sandpaper). Doing so could result in a malfunction or damage.

Vehicle status information and indicators

2

2-1. Instrument cluster


- Warning lights and indicators**122**
- Gauges and meters (with 4.2-inch display).....**129**
- Gauges and meters (with 7-inch display).....**133**
- Multi-information display (4.2-inch display).....**137**
- Multi-information display (7-inch display).....**146**
- Head-up display.....**157**
- Fuel consumption screen .**161**

Warning lights and indicators

The warning lights and indicators on the instrument cluster and outside rear view mirrors inform the driver of the status of the vehicle's various systems.

Warning lights and indicators displayed on the instrument cluster


■ With 4.2-inch display

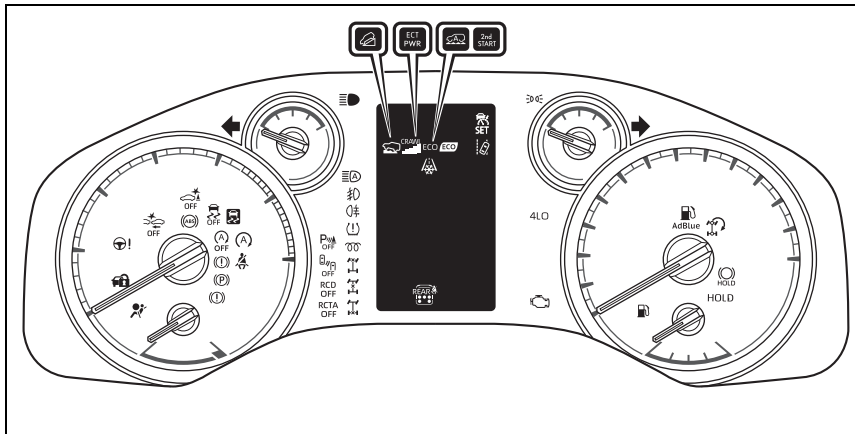

The units used on the meters and some indicators may differ depending on the target region.

The image may differ from the actual condition.

■ With 7-inch display

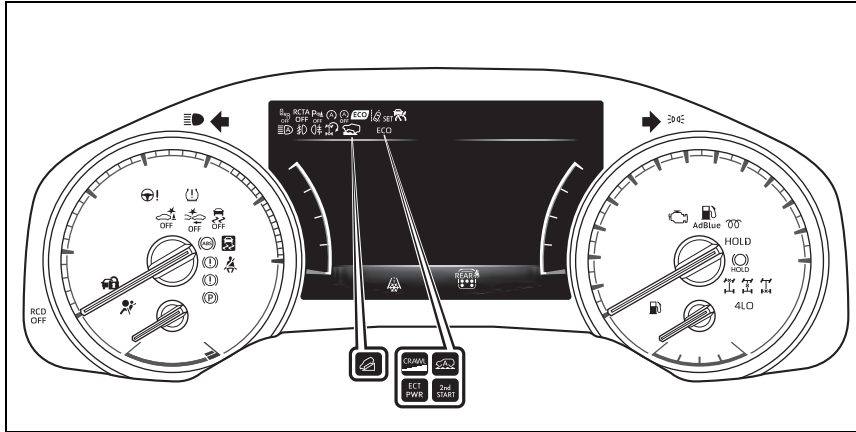

The units used on the meters and some indicators may differ depending on the target region.



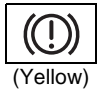










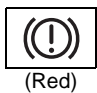




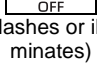
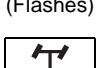






The image may differ from the actual condition.




2

Vehicle status information and indicators

Warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.

	Brake system warning light* ¹ (→P.698)		RCD OFF indicator* ¹ (if equipped) (→P.702)
	Brake system warning light* ¹ (→P.698)		Toyota parking assist sensor OFF indicator* ^{3, 4} (if equipped) (→P.702)
	Charging system warning light* ² (→P.698)		PKSB OFF indicator* ¹ (if equipped) (→P.702)
	Low engine oil pressure warning light* ² (→P.699)		Inappropriate pedal operation warning light* ² (→P.703)
	High coolant temperature warning light* ² (→P.699)		Stop & Start cancel indicator* ^{1, 3} (if equipped) (→P.703)
	Malfunction indicator lamp* ¹ (→P.699)		Slip indicator light* ¹ (→P.704)
	SRS warning light* ¹ (→P.699)		Low speed four-wheel drive indicator light (→P.704)
	ABS warning light* ¹ (→P.700)		Center differential lock indicator (→P.704)
	Power steering system warning light* ¹ (if equipped) (→P.700)		Front differential lock indicator (if equipped) (→P.704)
	PCS warning light* ¹ (if equipped) (→P.700)		Rear differential lock indicator (if equipped) (→P.705)
(Flashes or illuminates)	LTA indicator (if equipped) (→P.701)		Parking brake indicator (→P.705)
	LDA indicator (if equipped) (→P.701)		Brake hold operated indicator* ¹ (→P.705)
(Orange)	BSM OFF indicator* ^{1, 3} (if equipped) (→P.701)		Low fuel level warning light (→P.705)
	RCTA OFF indicator* ^{1, 3} (if equipped) (→P.701)		Low AdBlue™ level warning light (if equipped) (→P.705)

-  Tire pressure warning light*¹ (if equipped) (→P.706)
-  Driver's and front passenger's seat belt reminder light (→P.706)
-  Rear passengers' seat belt reminder light (if equipped) (→P.707)

*¹: These lights turn on when the engine switch is turned on to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if the light does not come on, or turn off. Have the vehicle inspected by your Toyota dealer.

*²: This light illuminates on the multi-information display with a message.

*³: Vehicles with 7-inch display: This light illuminates on the multi-information display.

*⁴: Toyota parking assist-sensor OFF indicator turns on when the engine switch is turned to ON while the Toyota parking assist-sensor function is on. It will turn off after a few seconds.


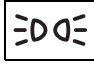











 **WARNING**





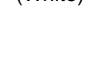




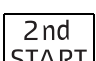





















■ If a safety system warning light does not come on





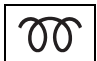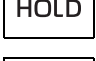







Should a safety system light such as the ABS and SRS warning light not come on when you start the engine, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Toyota dealer immediately if this occurs.

Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.

-  Turn signal indicator (→P.268)
-  Tail light indicator (→P.275)
-  Headlight high beam indicator (→P.277, 283, 286)
Adaptive High-beam System indicator*⁶ (if equipped) (→P.280)
-  Automatic High Beam indicator*⁶ (if equipped) (→P.284)
-  Front fog light indicator*⁶ (if equipped) (→P.287)
-  Rear fog light indicator*⁶ (if equipped) (→P.287)
-  PCS warning light*^{2, 4} (if equipped) (→P.306)
-  LTA indicator*³ (if equipped) (→P.319)
-  LDA indicator*³ (if equipped) (→P.328)
-  LTA indicator*³ (if equipped) (→P.304, 319)
-  LDA indicator*³ (if equipped) (→P.328)
-  LTA indicator*³ (if equipped) (→P.319)
-  LDA indicator*³ (if equipped) (→P.328)

	Dynamic radar cruise control indicator (if equipped) (→P.335, 348)		Downhill assist control system indicator* ² (if equipped) (→P.489)
	Cruise control indicator (if equipped) (→P.335, 348, 358)		Turn Assist indicator* ⁶ (if equipped) (→P.481)
	Cruise control "SET" indicator (if equipped) (→P.335, 348, 358)		Crawl Control indicator* ² (if equipped) (→P.481)
	BSM outside rear view mirror indicators* ^{2, 7} (if equipped) (→P.368)		Crawl Control mode display (if equipped) (→P.481)
	BSM OFF indicator* ^{4, 6} (if equipped) (→P.368)		Second start mode indicator (if equipped) (→P.263, 267)
	RCTA OFF indicator* ^{2, 4, 6} (if equipped) (→P.380)		Power mode indicator (if equipped) (→P.267)
	RCD OFF indicator* ⁴ (if equipped) (→P.385)		Low speed four-wheel drive indicator light (→P.475)
	Toyota parking assist-sensor OFF indicator* ^{4, 5, 6} (if equipped) (→P.373)		Center differential lock indicator (→P.476)
	PKSB OFF indicator* ^{2, 4} (if equipped) (→P.390)		Front differential lock indicator (if equipped) (→P.478)
	Eco Driving Indicator Light* ² (→P.139, 149)		Rear differential lock indicator (if equipped) (→P.480)
	Stop & Start indicator* ² (if equipped) (→P.361)		Parking brake indicator (→P.269)
	Stop & Start cancel indicator* ^{2, 4} (if equipped) (→P.362)		Brake hold standby indicator* ² (→P.272)
	Engine preheating indicator (diesel engine) (→P.256)		Brake hold operated indicator* ² (→P.272)
	Slip indicator light* ² (→P.496)		Security indicator (→P.109, 111)
	VSC OFF indicator* ^{2, 4} (→P.496)		Smart entry & start system indicator* ¹ (→P.256)
			Low outside temperature indicator* ⁸ (→P.130, 134)

	Eco drive mode indicator (if equipped) (→P.473)
	Sport mode indicator* ⁹ (if equipped) (→P.473)
	Comfort mode indicator* ¹⁰ (if equipped) (→P.473)
	Sport S mode indicator* ¹⁰ (if equipped) (→P.473)
	Sport S+ mode indicator* ¹⁰ (if equipped) (→P.473)
	Custom mode indicator* ¹⁰ (if equipped) (→P.473)
	AUTO mode indicator (if equipped) (→P.486)
	DIRT mode indicator (if equipped) (→P.486)
	SAND mode indicator (if equipped) (→P.486)
	MUD mode indicator (if equipped) (→P.486)
	DEEP SNOW mode indicator (if equipped) (→P.486)
	ROCK mode indicator (if equipped) (→P.486)



*¹: This light illuminates on the multi-information display with a message.
 *²: These lights turn on when the engine switch is turned to ON to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if the lights do not turn on, or turn off. Have the vehicle inspected by your Toyota dealer.
 *³: Depending on the operating condi-

tion, the color and illuminating/flash-
 ing state of the light change.

*⁴: The light comes on when the system is turned off.
 *⁵: Toyota parking assist-sensor OFF indicator turns on when the engine switch is turned to ON while the Toyota parking assist-sensor function is on. It will turn off after a few seconds.
 *⁶: Vehicles with 7-inch display: This light illuminates on the multi-information display.
 *⁷: This light illuminates on the outside rear view mirrors.
 *⁸: When the outside temperature is approximately 3°C (37°F) or lower, the indicator will flash for approximately 10 seconds, then stay on.
 *⁹: Vehicles without Adaptive Variable Suspension system
 *¹⁰: Vehicles with Adaptive Variable Suspension system

■ BSM (Blind Spot Monitor) outside rear view mirror indicators (if equipped)

In order to confirm operation, the BSM outside rear view mirror indicators illuminate in the following situations:

- When the engine switch is turned to ON while the BSM function is enabled on the  screen of the multi-information display.
- When the BSM function is enabled on the  screen of the multi-information display while the engine switch is in ON.

If the system is functioning correctly, the BSM outside rear view mirror indicators will turn off after a few seconds. If the BSM outside rear view mirror indicators do not illuminate or do not turn


128 **2-1. Instrument cluster**

off, there may be a malfunction in the system.
If this occurs, have the vehicle inspected by your Toyota dealer.

Gauges and meters (with 4.2-inch display)

Meter display

■ Locations of gauges and meters

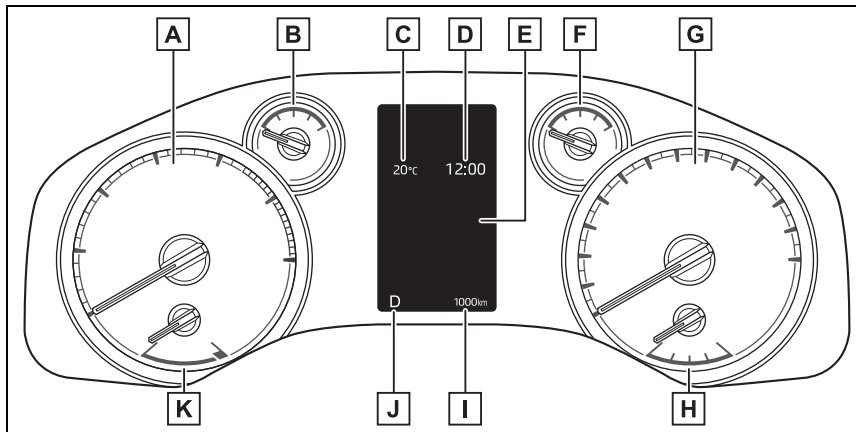

The units used on the meter and display may differ depending on the target region.

A Tachometer

Displays the engine speed in revolutions per minute

B Engine oil pressure gauge

Displays the engine oil pressure

C Outside temperature (→P.130)

D Clock (→P.131)

E Multi-information display

Presents the driver with a variety of driving-related data (→P.137)

Displays warning messages if a malfunction occurs (→P.709)

F Voltmeter

Displays the charge state

G Speedometer

Displays the vehicle speed

H Fuel gauge

Displays the quantity of fuel remaining in the tank

I Odometer, trip meter and oil maintenance

Odometer:

Displays the total distance that the vehicle has been driven

Trip meter:

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters "A" and "B" can be used to record and display different distances independently.

Oil maintenance (except for 1GR-FE engine):

Displays the distance until the next engine oil change.

J Shift position and shift range/gear position

Displays the selected shift position or selected shift range/gear position (→P.261, 264)

K Engine coolant temperature gauge

Displays the engine coolant temperature

■ The meters and display illuminate when

The engine switch is in ON.


■ Outside temperature display

● In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- When stopped, or driving at low speeds (less than 20 km/h [12 mph])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

● When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to your Toyota dealer.

● Displays the outside temperature within the range of -40°C (-40°F) to 60°C (140°F).

● When the outside temperature is approximately 3°C (37°F) or lower, the indicator  will flash for approximately 10 seconds, then stay on.

■ Liquid crystal display

→P.137

 **WARNING**

■ The information display at low temperatures


Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

 **NOTICE**

■ To prevent damage to the engine and its components

- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.

 NOTICE

● The engine may be overheating if the engine coolant temperature gauge is in the red zone (“H”). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P.736)

■ Voltmeter

When the voltmeter indicates 19 V or higher or 9 V or lower while the engine is running, there may be a battery or charging system malfunction. Have the vehicle inspected at your Toyota dealer.


■ Engine oil pressure gauge

When the value of the engine oil pressure gauge drops while the engine is running, stop the vehicle in a safe place immediately and check the amount of engine oil. (→P.645)

When the oil pressure drops even though the engine oil amount has not decreased, or if the oil pressure does not increase when engine oil is added, contact your Toyota dealer, as there may be a problem with the lubrication system.

Using the “ODO TRIP” switch


Switches the items of the odometer, trip meter A, trip meter B and

 (oil maintenance)* by

pressing the “ODO TRIP” switch.

When the trip meter is displayed, pressing and holding the switch will reset the trip meter.

*: Except for 1GR-FE engine

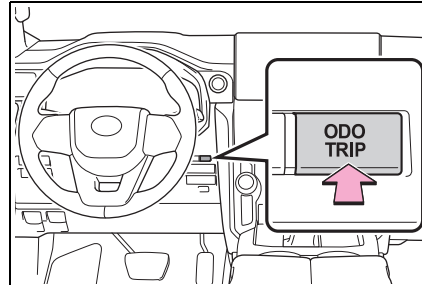

■ Pop-up display (except for 1GR-FE engine)


Distance until the next engine oil change will be displayed when a warning message indicating that oil maintenance is required or should be performed soon is displayed.

Adjusting the clock

The clocks can be adjusted on either the multi-information display or the navigation/multimedia system.


▶ Vehicles without navigation system or multimedia system

By displaying the “Clock :00”

screen from the  screen of the multi-information display, you can change the following settings related to the clock.

- Resetting the minutes display
- Changing the clock between 12-hour display and 24-hour display.
- Adjusting the time

■ **To reset the minutes display**

- 1 Press **<** or **>** of the meter control switches on the steering wheel and select .
- 2 Press **^** or **v** of the meter control switches on the steering wheel and select "Clock :00".

By pressing **OK** of the meter control switches on the "Clock :00" screen, you can set "Minutes" to 00.


- Minutes from 0 to 29 are rounded down.

(For example, from 1:00 to 1:29 are displayed as 1:00)


- From 30 to 59 minutes are rounded up.

(For example, from 1:30 to 1:59 are displayed as 2:00)

■ **To adjust the time**

- 1 Press **<** or **>** of the meter control switches on the steering wheel and select .
- 2 Press **^** or **v** of the meter control switches on the steering wheel and select "Clock :00".
- 3 On the "Clock :00" screen, press and hold **OK** of the meter control switches.
- 4 Select the "12H/24H", "Time" or "Minutes" by operating **<** or **>** of the meter control switches.

- 5 Press the **^** or **v** of the meter control switches to change the display contents.

When the setting is completed, press  to return to the previous screen.


- ▶ Vehicles with navigation system or multimedia system

Refer to "Navigation and Multimedia System Owner's Manual".

Gauges and meters (with 7-inch display)

Meter display

■ Locations of gauges and meters

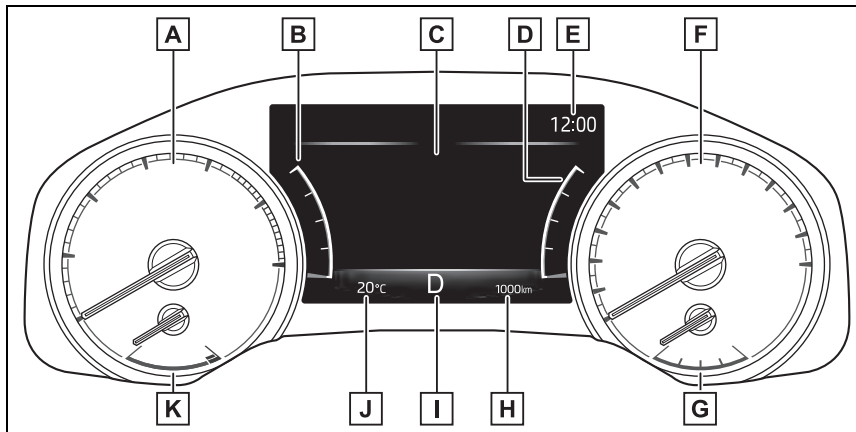

The units used on the meter and display may differ depending on the target region.

A Tachometer

Displays the engine speed in revolutions per minute

B Engine oil pressure gauge

Displays the engine oil pressure

C Multi-information display

Presents the driver with a variety of driving-related data (→P.146)

Displays warning messages if a malfunction occurs (→P.709)

D Voltmeter

Displays the charge state

E Clock (→P.135)

F Speedometer

Displays the vehicle speed

G Fuel gauge

Displays the quantity of fuel remaining in the tank

H Odometer, trip meter and oil maintenance

Odometer:

Displays the total distance that the vehicle has been driven

Trip meter:

Displays the distance the vehicle has been driven since the meter was last reset.

Trip meters "A" and "B" can be used to record and display different distances independently.

Oil maintenance (except for 1GR-FE engine):

Displays the distance until the next engine oil change.

I Shift position and shift range/gear position

Displays the selected shift position or selected shift range/gear position (→P.261, 264)

J Outside temperature (→P.134)


K Engine coolant temperature gauge

Displays the engine coolant temperature

■ The meters and display illuminate when

The engine switch is in ON.

■ Outside temperature display

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.
 - When stopped, or driving at low speeds (less than 20 km/h [12 mph])
 - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to your Toyota dealer.
- Displays the outside temperature within the range of -40°C (-40°F) to 60°C (140°F).
- When the outside temperature is approximately 3°C (37°F) or lower, the indicator  will flash for approximately 10 seconds, then stay on.

■ Liquid crystal display

→P.147



WARNING

■ The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the display monitor may respond slowly, and display changes may be delayed.


For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.



NOTICE

■ To prevent damage to the engine and its components

- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.

 NOTICE

● The engine may be overheating if the engine coolant temperature gauge is in the red zone (“H”). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P.736)

■ **Voltmeter**

When the voltmeter indicates 19 V or higher or 9 V or lower while the engine is running, there may be a battery or charging system malfunction. Have the vehicle inspected at your Toyota dealer.

■ **Engine oil pressure gauge**

When the value of the engine oil pressure gauge drops while the engine is running, stop the vehicle in a safe place immediately and check the amount of engine oil. (→P.645)

When the oil pressure drops even though the engine oil amount has not decreased, or if the oil pressure does not increase when engine oil is added, contact your Toyota dealer, as there may be a problem with the lubrication system.

Using the “ODO TRIP” switch


Switches the items of the odometer, trip meter A, trip meter B and

 (oil maintenance)* by

pressing the “ODO TRIP” switch.

When the trip meter is displayed, pressing and holding the switch will reset the trip meter.

*: Except for 1GR-FE engine

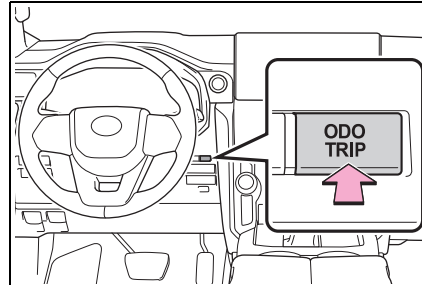

■ **Pop-up display (except for 1GR-FE engine)**

Distance until the next engine oil change will be displayed when a warning message indicating that oil maintenance is required or should be performed soon is displayed.

Adjusting the clock



The clocks can be adjusted on either the multi-information display or the navigation/multimedia system.


▶ Vehicles without navigation system or multimedia system

By displaying the  screen from the  screen of the multi-information display, you can change the following settings related to the clock.

- Resetting the minutes display
- Changing the clock between 12-hour display and 24-hour format.
- Adjusting the time

■ **To reset the minutes display**

- 1 Press < or > of the meter control switches on the steering wheel and select .
- 2 Press ^ or v of the meter control switches on the steering wheel and select .

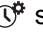By pressing OK of the meter control switches on the  screen, you can set "Minutes" to 00.




- Minutes from 0 to 29 are rounded down.

(For example, from 1:00 to 1:29 are displayed as 1:00)


- From 30 to 59 minutes are rounded up.

(For example, from 1:30 to 1:59 are displayed as 2:00)

■ **To adjust the time**

- 1 Press < or > of the meter control switches on the steering wheel and select .
- 2 Press ^ or v of the meter control switches on the steering wheel and select .
- 3 On the  screen, press and hold OK of the meter control switches.
- 4 Select the "12H/24H", "Time" or "Minutes" by operating < or > of the meter control switches.

- 5 Press the ^ or v of the meter control switches to change the display contents.


When the setting is completed, press  to return to the previous screen.

- ▶ Vehicles with navigation system or multimedia system


Refer to "Navigation and Multimedia System Owner's Manual".

Multi-information display (4.2-inch display)**Display contents**

Following information is displayed on the multi-information display.

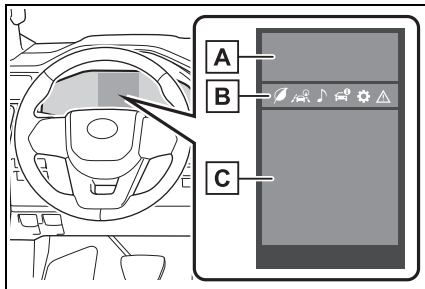**A** Driving support system information

Displays recognized signs while the RSA (Road Sign Assist) (if equipped) is operating. (→P.331)

Displays an image when the following systems are operating and a menu icon other than  is selected:

- LDA (Lane Departure Alert with Yaw Assist Function) (if equipped) (→P.324)
- Dynamic radar cruise control with full-speed range (if equipped) (→P.335)
- Dynamic radar cruise control (if equipped) (→P.348)
- Cruise control (if equipped) (→P.358)

B Menu icons (→P.138)**C** Information display area

A variety of information can be displayed by selecting a menu icon.

Additionally, warning or suggestion/advice pop-up displays will be displayed in some situations.

The multi-information display is displayed when

The engine switch is in ON.

When changing driving mode


Background color of the multi-information display is changed following the Multi-terrain Select mode. (→P.486)

Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

Changing the display

The multi-information display is operated using the meter control switches.

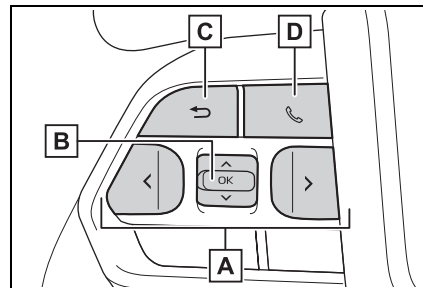

A Scroll the screen*/switch the display*/move the cursor

B Press: Enter/Set
Press and hold: Reset/Display customizable items

C Return to the previous screen

D Call sending/receiving and history display (if equipped)
Linked with the hands-free system, sending or receiving call is displayed. For details regarding

the hands-free system, refer to “Navigation and Multimedia System Owner’s Manual”.

*: On screens where the screen can be scrolled and the display can be switched, a scroll bar or a round icon that shows the number of registered screens is displayed.

WARNING





Caution for use while driving



For safety, avoid operating the meter control switch while driving as much as possible, and do not look continuously at the multi-information display while driving. Stop the vehicle and operate the meter control switch. Failure to do so may cause a steering wheel operation error, resulting in an unexpected accident.

Menu icons

Information related to each icon can be displayed by selecting the icon with the meter control switches.

Some of the information may be displayed automatically depending on the situation.


Icon	Display
	Driving information display (→P.138)
	Driving support system information display (if equipped) (→P.140)
	Audio system-linked display (if equipped) (→P.140)
	Vehicle information display (→P.140)

Icon	Display
	Settings display (→P.141)
	Warning message display (→P.145)

Driving information display

Select to display fuel consumption data in various forms.

Speedometer display/Distance to empty

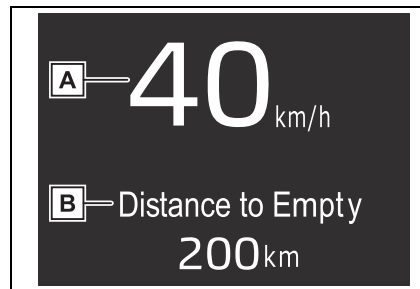

A Speedometer display


Displays the vehicle speed.

B Distance to empty

Displays the driving range with remaining fuel. (→P.139)


Fuel Economy

Following information is displayed.

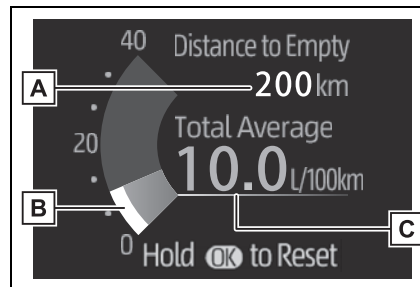

A Distance to empty
 Displays the driving range with remaining fuel. (→P.139)

B Current fuel economy
 Displays the instantaneous current fuel Economy.

C Average fuel economy
 Displays the average fuel economy since the function was reset or the average fuel economy after starting or refueling.*1, 2, 3
 The average fuel economy selected by “Fuel Economy” on the  screen is displayed. (→P.141)


*1: Use the displayed fuel consumption as a reference only.

*2: Average fuel economy since the function was reset can be reset by pressing and holding OK .

*3: Average fuel economy after starting is reset each time the engine stops.

■ **Eco Driving Indicator/Distance to empty**


► Display contents

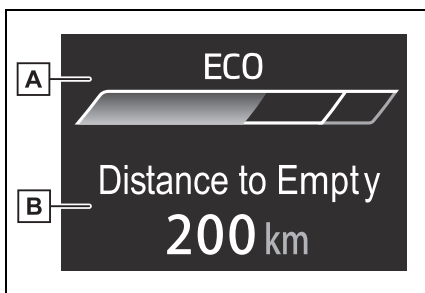

A Eco Driving Indicator
B Distance to empty
 Displays the driving range with remain-

ing fuel. (→P.139)

► Eco Driving Indicator

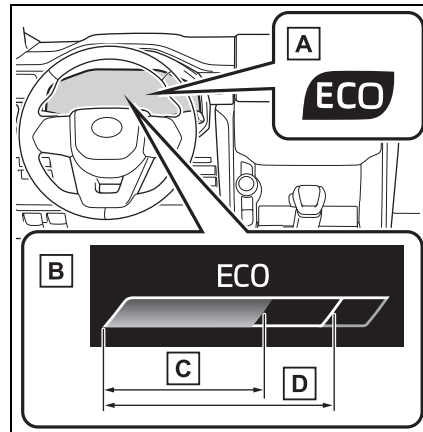

A Eco Driving Indicator Light
 During Eco-friendly acceleration operation (Eco driving), the Eco Driving Indicator Light will turn on. When the acceleration exceeds Zone of Eco driving, or when the vehicle is stopped, the light turns off.

B Eco Driving Indicator Zone Display
 Suggests the Zone of Eco driving with current Eco driving ratio based on acceleration.

Suggests the Zone of Eco driving with current Eco driving ratio based on acceleration.

C Eco driving ratio based on acceleration
 If the acceleration exceeds Zone of Eco driving, the right side of Eco Driving Indicator Zone Display will illuminate. At this time, the Eco Driving Indicator Light will turn off.

D Zone of Eco driving

■ **Distance to empty**

● This distance is computed based on your average fuel consumption. As a

result, the actual distance that can be driven may differ from that displayed.

- When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.
- When “Refuel” is displayed, the remaining fuel amount is low and the distance that can be driven with the remaining fuel cannot be calculated. Refuel immediately.

■ **The ECO Driving indicator will not operate when**

Eco Driving Indicator will not operate in the following conditions:

- The shift lever is in any position other than D.
- Neither normal mode nor Eco drive mode is selected.
- The vehicle speed is approximately 130 km/h (80 mph) or higher.

Driving support system information display (if equipped)

■ **Driving support system information display**

Select to display the operational status of the following systems:

- LDA (Lane Departure Alert with Yaw Assist Function) (if equipped) (→P.324)
- Dynamic radar cruise control with full-speed range (if equipped) (→P.335)
- Dynamic radar cruise control (if equipped) (→P.348)
- Cruise control (if equipped) (→P.358)

■ **Navigation system-linked display (if equipped)**

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)

Audio system-linked display (if equipped)

Select to enable selection of an audio source or track on the display.

Vehicle information display

■ **Drive information**

2 items that are selected using the “Drive Info Items” setting (average speed, distance and total time) can be displayed vertically.

The displayed information changes according to the “Drive Info Type” setting (since the system was started or between resets).

(→P.141)

Use the displayed information as a reference only.

Following items will be displayed.

- “Trip”
 - “Average Speed”: Displays the average vehicle speed since engine start*
 - “Distance Travelled”: Displays the distance driven since engine start*
 - “Total Time”: Displays the elapsed time since engine start*

*: These items are reset each time the engine stops.

- “Total”
- “Average Speed”: Displays the average vehicle speed since the display was reset*
- “Distance Travelled”: Displays the distance driven since the display was reset*
- “Total Time”: Displays the elapsed time since the display was reset*

*: To reset, display the desired item and press and hold OK .

■ Tire inflation pressure (if equipped)

Displays inflation pressure of each tire.


■ Front tire direction display

Displays the operation amount and direction of the steering wheel via changes to the front tires on the display.

Settings display


Vehicle settings and the content displayed on the screen can be changed by using the meter control switches.

■ Setting procedure

- 1 Operate < or > of the meter control switches and select .
 - 2 Operate ^ or v of the meter control switches and select the desired item.
- If the function is turned on and

off or the volume, etc. is changed on the setting screen, the setting is changed each time OK is pressed.

- For functions that allow operation contents, display contents, etc., of function to be selected, the setting screen is displayed by pressing and holding OK . When the setting screen is displayed, select the setting or desired value (time, etc.) with OK .

- 3 After changing the settings, press  of the meter control switches.

■ Instrument cluster brightness

Select to adjust the brightness of the Instrument cluster lights.

■ “Clock: 00” (if equipped) (→P.131)

Select to set up the clock setting.

■ LDA (Lane Departure Alert with Yaw Assist Function) (if equipped) (→P.324)

Select to set up the following items.

- “Alert”
Select to change the alert types.
- “Sensitivity”
Select to set the warning sensitivity.
- “Sway Warning”
Select to enable/disable the vehicle sway warning.
- “Sway Sensitivity”
Select to set the vehicle sway warning

sensitivity.

■  **PCS (Pre-Collision System) (if equipped) (→P.302)**


Select to set up the following items.

- PCS on/off

Select to enable/disable the pre-collision system.

- “Sensitivity”

Select to change the pre-collision warning timing.

■  **BSM (Blind Spot Monitor) (if equipped) (→P.367)**

Select to set up the following items.

- BSM (Blind Spot Monitor) on/off


Select to enable/disable the BSM system.

- “Brightness”

Select to switch the brightness of the outside rear view mirror indicators. (→P.368)

- “Sensitivity”

Select to change the alert timing for an approaching vehicle.

■  **(Toyota parking assist-sensor) (if equipped) (→P.372)**

Select to set up the following items.

- Toyota parking assist-sensor on/off

Select to enable/disable the Toyota parking assist-sensor.

- “Volume”

Select to set the volume of the buzzer which sounds when the Toyota parking assist-sensor is operated.

■ **RCTA (Rear Cross Traffic Alert) (if equipped) (→P.367, 379)**

- RCTA (Rear Cross Traffic Alert) on/off

Select to enable/disable the RCTA system.

- “Volume”

Select to change the RCTA buzzer volume.


■ **RCD (Rear Camera Detection) (if equipped) (→P.384)**

- RCD (Rear Camera Detection) on/off

Select to enable/disable the RCD system.

- “Volume”

Select to change the RCD buzzer volume.

■  **RSA (Road Sign Assist) (if equipped) (→P.331)**

Select to set up the following items.

- Road Sign Assist on/off


Select to enable/disable the RSA system.

- “Notification Method”

Select to change each notification method used to notify the driver when the system recognizes excess speed, no overtaking and no-entry sign.

- “Notification Level”

Select to change each notification level used to notify the driver when the system recognizes a speed limit sign.

■  **Dynamic radar cruise control with full-speed range (if equipped) (→P.335)**

- Dynamic Radar Cruise Control with Road Sign Assist (if equipped)

Select to enable/disable the Dynamic Radar Cruise Control with Road Sign Assist

- Curve speed reduction function


Select to change the deceleration quantity of curve speed reduction function.

■  **Dynamic radar cruise control (if equipped) (→P.348)**

- Curve speed reduction function

Select to change the deceleration quantity of curve speed reduction function.

■ **Vehicle Settings**

-  PBD (Power Back Door) (if equipped) (→P.173)

Select to set up the following items.

- System settings


Select to enable/disable the power back door system.

- “Opening Adjustment”

Select the open position when power back door is fully open.

- “Volume”

Select to set the volume of the buzzer which sounds when the power back door system operates.

-  (Stop & Start system) (if equipped) (→P.361)

Select to set the length of time the Stop

& Start system will operate when the “A/C” switch of the air conditioning system is on.

- “TPWS” (Tire Pressure Warning System) (if equipped) (→P.663)

- “Setting Pressure”

Select to initialize the tire pressure warning system.

- “Identifying Each Wheel & Position”

Select to register the ID codes of the tire pressure sensors to the tire pressure warning system.

- “Setting Unit”

Select to change the units of measure displayed.

- Rear Seat Reminder (→P.766)

Select to enable/disable the rear seat reminder function.


- My Settings (→P.224)

- “Setting”

Select to set up My Settings.

- My Settings on/off

Select to enable/disable My Settings function.

-  Fingerprint Authentication System (if equipped)(→P.115)

- “Registration”

Select to register fingerprint information to the vehicle.

- Fingerprint Authentication System on/off

Select to enable/disable the Fingerprint Authentication System.

- Oil Maintenance (if equipped) (→P.647)

Select to reset the Oil maintenance.


■  **Settings**

- “Language”


Select to change the language on the multi-information display.

- “Units”

Select to change the unit of measure for fuel consumption.

-  (Eco Driving Indicator Light) (if equipped) (→P.139)


Select to activate/deactivate the Eco Driving Indicator Light.

-  (Driving information display settings)

Select to change the display on Fuel Economy (→P.138).

-  (Audio settings) (if equipped)

Select to enable/disable  screen.

-  (Vehicle information display settings)

- “Drive Info Type”

Select to change the drive information type display between trip and total. (→P.140).

- “Drive Info Items”

Select to set the items on the upper and lower side of the drive information screen. from three items, average speed, distance and total time.

- “Pop-Up Display” (if equipped)

Select to enable/disable the following pop-up displays, which may appear in some situations.

- Intersection guidance display of the navigation system-linked system (if equipped)
- Incoming call display of the hands-

free phone system (if equipped)

- Audio operation (if equipped)
- Volume operation (if equipped)
- Voice control (if equipped)
- Stop & Start system duration (if equipped)
- Stop & Start system status (if equipped)
- “MID OFF”

A blank screen is displayed

- “Default Settings”

Select to reset the meter display settings.

■ **Suspension of the settings display**

- Some settings cannot be changed while driving. When changing settings, park the vehicle in a safe place.
- If a warning message is displayed, operation of the settings display will be suspended.
- Settings for functions not equipped to the vehicle are not displayed.
- When a function is turned off, the related settings for that function are not selectable.

 **WARNING**

■ **Cautions during setting up the display**

As the engine needs to be running during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

**NOTICE****■ During setting up the display**

To prevent battery discharge, ensure that the engine is running while setting up the display features.


Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected. (→P.709)

Suggestion function

Displays suggestions to the driver in the following situations. To select a response to a displayed suggestion, use the meter control switches.

■ Suggestion to turn on the headlights

If the headlight switch is in other than  or AUTO, and the vehicle speed is 5 km/h (3 mph) or higher for a certain amount of time when the surroundings are dark, a suggestion message will be displayed.

■ Suggestion to turn off the headlights

If the headlights are left on for a certain amount of time after the engine switch has been turned off, a suggestion message will be displayed.

When the headlight switch is in the AUTO position:

The message asking if you wish to

turn the headlights off is displayed. To turn the headlights off, select “Yes”.

If the driver’s door is opened after the engine switch is turned off, this suggestion message will not be displayed.

■ Suggestion to close the power windows (linked to windshield wiper operation)

If the windshield wipers are operated with a power window open, a suggestion message will be displayed asking if you wish to close the power windows. To close all of the power windows, select “Yes”.

■ Suggestion to close the power windows (Driving at high speeds)

If the vehicle speed exceeds a certain speed with a power window open, a suggestion message will be displayed asking if you wish to close the power windows. To close all of the power windows, select “Yes”.

■ Customization

The suggestion function can be turned on/off. (Customizable features: →P.762)

Stop & Start system information pop-up display (if equipped)


A pop-up display for the current amount of time the engine has been stopped due to the operation of the Stop & Start system or the status of the Stop & Start system is

displayed depending on the situation. (→P.365)

Multi-information display (7-inch display)

Display contents

Following information is displayed on the multi-information display.

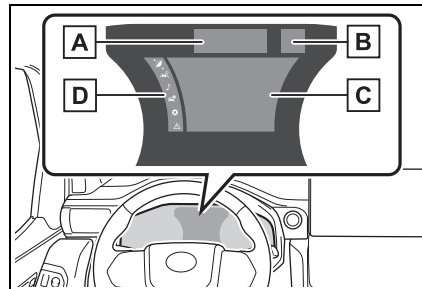

A Driving support system information

Display the operational status of the following systems:

- LTA (Lane Tracing Assist) (if equipped) (→P.314)
- LDA (Lane Departure Alert with Yaw Assist Function) (if equipped) (→P.324)
- Dynamic radar cruise control with full-speed range (if equipped) (→P.335)
- Dynamic radar cruise control (if equipped) (→P.348)
- Cruise control (if equipped) (→P.358)

B RSA (Road Sign Assist) display area

C Information display area

A variety of information can be displayed by selecting a menu icon.

Additionally, warning or suggestion/advice pop-up displays will be displayed in some situations.

D Menu icons (→P.147)

■ **The multi-information display is displayed when**

The engine switch is in ON.

■ **When changing driving mode**


Background color of the multi-information display is changed following the selected driving mode or Multi-terrain Select mode. (→P.473, 486)

■ **Liquid crystal display**

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

Changing the display

The multi-information display is operated using the meter control switches.

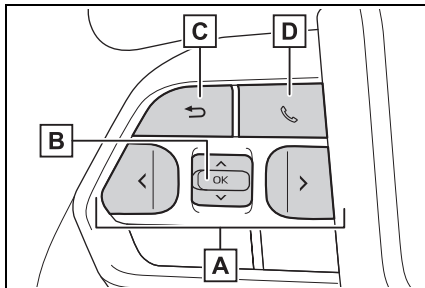

- A** Scroll the screen*/switch the display*/move the cursor
- B** Press: Enter/Set
Press and hold: Reset/Display customizable items
- C** Return to the previous screen
- D** Call sending/receiving and history display (if equipped)
Linked with the hands-free system, sending or receiving call is

displayed. For details regarding the hands-free system, refer to “Navigation and Multimedia System Owner’s Manual”.

*: On screens where the screen can be scrolled and the display can be switched, a scroll bar or a round icon that shows the number of registered screens is displayed.

! WARNING

■ **Caution for use while driving**

For safety, avoid operating the meter control switch while driving as much as possible, and do not look continuously at the multi-information display while driving. Stop the vehicle and operate the meter control switch. Failure to do so may cause a steering wheel operation error, resulting in an unexpected accident.

Menu icons

Information related to each icon can be displayed by selecting the icon with the meter control switches.

Some of the information may be displayed automatically depending on the situation.


Icon	Display
	Driving information display (→P.148)
	Driving support system information display (if equipped) (→P.150)
	Audio system-linked display (if equipped) (→P.150)

Icon	Display
	Vehicle information display (→P.150)
	Settings display (→P.151)
	Warning message display (→P.155)

Driving information display

Select to display fuel consumption data in various forms.

■ Fuel Economy

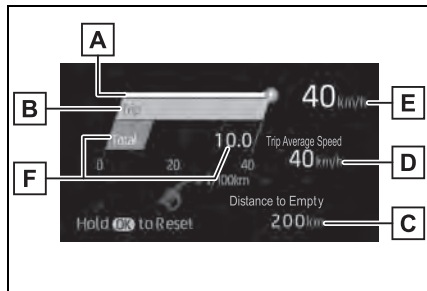

A Current fuel consumption
Displays the instantaneous current fuel consumption.

B Average fuel economy (after start)
Displays the average fuel consumption since engine start.^{*1}

C Driving range
Displays the driving range with remaining fuel. (→P.150)

D Gadget^{*2}
On the screen, “Gadget Content” provides the selection of the items displayed in the gadget, and “Drive Info

Type” also provides the selection of the gadget display type between “Total” and “Trip”. (→P.154)

- No Display:

No item

- Average speed

After start: Displays average vehicle speed since the engine start.

After reset: Displays average vehicle speed since the display was reset^{*3}.

- Distance

After start: Displays the distance driven since vehicle start.

After reset: Displays the distance driven since the display was reset^{*3}.

- Total time

After start: Displays elapsed time since the engine start.

After reset: Displays elapsed time since the display was reset^{*3}.

E Speedometer display

Displays the vehicle speed.

F Average fuel economy

Displayed item (listed below) can be changed on the drive information type screen of . (→P.154)

- Total (after reset)

Displays the average fuel consumption since the display was reset.^{*1, 3}

- Tank (after refuel)

Displays the average fuel consumption since the vehicle was refueled.^{*1}

When only a small amount of fuel is added to the tank, the display may not be updated.

When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the dis-

play may not be updated.


*1: Use the displayed fuel consumption as a reference only.

*2: The default setting is no display.

*3: This display can be reset by pressing and holding OK while it is displayed.

■ **Eco Driving Indicator/Distance to empty**

► Display contents

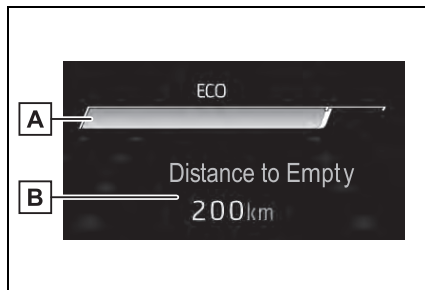


A Eco Driving Indicator

B Distance to empty

Displays the driving range with remaining fuel. (→P.150)

► Eco Driving Indicator

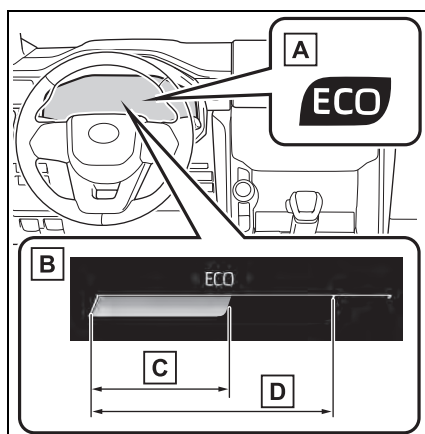

A Eco Driving Indicator Light

During Eco-friendly acceleration operation (Eco driving), the Eco Driving Indicator Light will turn on. When the acceleration exceeds Zone of Eco driving, or when the vehicle is stopped, the light turns off.

B Eco Driving Indicator Zone Display


Suggests the Zone of Eco driving with current Eco driving ratio based on acceleration.

C Eco driving ratio based on acceleration

If the acceleration exceeds Zone of Eco driving, the right side of Eco Driving Indicator Zone Display will illuminate. At this time, the Eco Driving Indicator Light will turn off.

D Zone of Eco driving

■ **Speedometer display/Distance to empty**

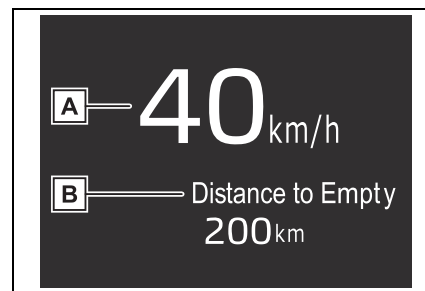

A Speedometer display

Displays the vehicle speed.

B Distance to empty

Displays the driving range with remaining fuel. (→P.150)

2

Vehicle status information and indicators

■ **Distance to empty**

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.
- When "Refuel" is displayed, the remaining fuel amount is low and the distance that can be driven with the remaining fuel cannot be calculated. Refuel immediately.

■ **The ECO Driving indicator will not operate when**

Eco Driving Indicator will not operate in the following conditions:

- The shift lever is in any position other than D.
- Neither normal mode nor Eco drive mode is selected.
- The vehicle speed is approximately 130 km/h (80 mph) or higher.

Driving support system information display (if equipped)

■ **Driving support system information display**

Select to display the operational status of the following systems:

- LTA (Lane Tracing Assist) (if equipped) (→P.314)
- LDA (Lane Departure Alert with Yaw Assist Function) (if equipped) (→P.324)
- Dynamic radar cruise control with full-speed range (if

equipped) (→P.335)

- Dynamic radar cruise control (if equipped) (→P.348)
- Cruise control (if equipped) (→P.358)

■ **Navigation system-linked display (if equipped)**

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)

Audio system-linked display (if equipped)

Select to enable selection of an audio source or track on the display.

Vehicle information display

■ **Tire inflation pressure (if equipped)**

Displays inflation pressure of each tire. (→P.663)

■ **Front tire direction display**

Displays the operation amount and direction of the steering wheel via changes to the front tires on the display.

■ **Safety system status**


Select to display the operational status of the following systems:

- PCS (Pre-Collision System) (if equipped) (→P.302)

- Toyota parking assist-sensor (if equipped) (→P.372)
- BSM (Blind Spot Monitor) (if equipped) (→P.367)
- RCTA (Rear Cross Traffic Alert) (if equipped) (→P.379)

■ **AdBlue™ gauge (if equipped)**

Displays the quantity of AdBlue™ remaining in the tank. (→P.657)

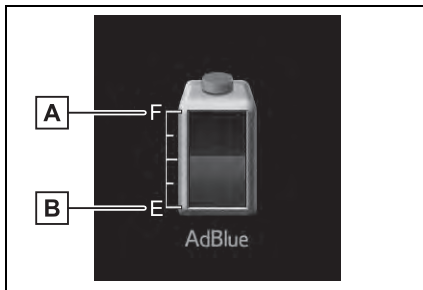

- A** Full
- B** Empty

Settings display

Vehicle settings and the content displayed on the screen can be changed by using the meter control switches.

■ **Setting procedure**

- 1 Operate **▲** or **▼** of the meter control switches and select **⚙**.
- 2 Operate **◀** or **▶** of the meter control switches and select the desired item.
 - If the function is turned on and off or the volume, etc. is changed on the setting screen, the setting

is changed each time OK is pressed.

- For functions that allow operation contents, display contents, etc., of function to be selected, the setting screen is displayed by pressing and holding OK. When the setting screen is displayed, select the setting or desired value (time, etc.) with OK.

- 3 After changing the settings, press **↩** of the meter control switches.

■ **⚙ Instrument cluster brightness**

Select to adjust the brightness of the Instrument cluster lights.

■ **🕒 Clock setting (if equipped) (→P.135)**

Select to set up the clock setting.

■ **🚗 LTA (Lane Tracing Assist) (if equipped) (→P.314)**

Select to set up the following items.

- “Lane Center”

Select to enable/disable the lane centering function.

- “Alert”

Select to change the alert types.

- “Sensitivity”

Select to set the lane departure alert sensitivity.


- “Sway Warning”

Select to enable/disable the vehicle

sway warning.

- "Sway Sensitivity"

Select to set the vehicle sway warning sensitivity.

■  **LDA (Lane Departure Alert with Yaw Assist Function) (if equipped) (→P.324)**

Select to set up the following items.

- "Alert"

Select to change the alert types.

- "Sensitivity"

Select to set the warning sensitivity.

- "Sway Warning"

Select to enable/disable the vehicle sway warning.

- "Sway Sensitivity"

Select to set the vehicle sway warning sensitivity.

■  **PCS (Pre-Collision System) (if equipped) (→P.302)**


Select to set up the following items.

- PCS on/off

Select to enable/disable the pre-collision system.

- "Sensitivity"

Select to change the pre-collision warning timing.

■  **BSM (Blind Spot Monitor) (if equipped) (→P.367)**

Select to set up the following items.

- BSM (Blind Spot Monitor) on/off


Select to enable/disable the BSM system.

- "Brightness"

Select to switch the brightness of the outside rear view mirror indicators. (→P.368)

- "Sensitivity"

Select to change the alert timing for an approaching vehicle.

■  **Toyota parking assist-sensor (if equipped) (→P.372)**

Select to set up the following items.

- Toyota parking assist-sensor on/off

Select to enable/disable the Toyota parking assist-sensor.

- "Volume"

Select to set the volume of the buzzer which sounds when the Toyota parking assist-sensor is operated.

■ **RCTA (Rear Cross Traffic Alert) (if equipped) (→P.379)**

- RCTA (Rear Cross Traffic Alert) on/off

Select to enable/disable the RCTA system.

- "Volume"

Select to change the RCTA buzzer volume.


■ **RCD (Rear Camera Detection) (if equipped) (→P.384)**

- RCD (Rear Camera Detection) on/off


Select to enable/disable the RCD system.

- "Volume"

Select to change the RCD buzzer volume.

■  **HUD (Head-up display)**
(→P.158)

Select to change the head-up display setting.

■  **RSA (Road Sign Assist)**
(if equipped) (→P.331)

Select to set up the following items.

- Road Sign Assist on/off


Select to enable/disable the RSA system.

- “Notification Method”

Select to change each notification method used to notify the driver when the system recognizes excess speed, no overtaking and no-entry sign.

- “Notification Level”

Select to change each notification level used to notify the driver when the system recognizes a speed limit sign.

■  **Dynamic radar cruise control with full-speed range**
(if equipped) (→P.335)

- Dynamic Radar Cruise Control with Road Sign Assist (if equipped)

Select to enable/disable the Dynamic Radar Cruise Control with Road Sign Assist

- Curve speed reduction function

Select to change the deceleration quantity of curve speed reduction function.


■  **Dynamic radar cruise control (if equipped)** (→P.348)

- Curve speed reduction function

Select to change the deceleration

quantity of curve speed reduction function.

■  **Vehicle Settings**

-  PBD (Power Back Door) (if equipped) (→P.173)

Select to set up the following items.

- System settings

Select to enable/disable the power back door system.

- “Hands Free”*

Select to enable/disable the Hands Free Power Back Door.


- “Opening Adjustment”

Select the open position when power back door is fully open.

- “Volume”

Select to set the volume of the buzzer which sounds when the power back door system operates.

*: Vehicles with Hands Free Power Back Door.

-  (Stop & Start system) (if equipped) (→P.361)

Select to set the length of time the Stop & Start system will operate when the “A/C” switch of the air conditioning system is on.

- “TPWS” (Tire Pressure Warning System) (if equipped) (→P.663)

- “Setting Pressure”

Select to initialize the tire pressure warning system.

- “Identifying Each Wheel & Position”

Select to register the ID codes of the tire pressure sensors to the tire pressure warning system.

- “Setting Unit”

Select to change the units of measure displayed.

- Rear Seat Reminder (→P.766)

Select to enable/disable the rear seat reminder function.


- My Settings (→P.224)

- “Setting”

Select to set up My Settings.

- My Settings on/off

Select to enable/disable My Settings function.

-  Fingerprint Authentication System (if equipped)(→P.115)

- “Registration”

Select to register fingerprint information to the vehicle.

- Fingerprint Authentication System on/off

Select to enable/disable the Fingerprint Authentication System.

- Oil Maintenance (if equipped) (→P.647)

Select to reset the Oil maintenance.

■ Settings

- “Language”

Select to change the language on the multi-information display.

- “Units”

Select to change the unit of measure for fuel consumption.

-  (Eco Driving Indicator Light) (if equipped) (→P.149)

Select to activate/deactivate the Eco Driving Indicator Light.

- Digital Speed (→P.149)

Select to enable/disable the Digital

Speed.

- Select Gadget

Select to change the Gadget setting.

- Drive information type (→P.148)

Select to change the drive information and Gadget type display between “Trip”, “Total”^{*1} and “Tank”^{*2}.

^{*1}: Even if “Trip” is selected, the display of the average fuel consumption will not change.

^{*2}: If “Tank” is selected, the gadget will be hidden.

■ (Vehicle information display settings)

- “Pop-Up Display” (if equipped)

Select to enable/disable the following pop-up displays, which may appear in some situations.

- Intersection guidance display of the navigation system-linked system (if equipped)
- Incoming call display of the hands-free phone system (if equipped)
- Audio operation (if equipped)
- Volume operation (if equipped)
- Voice control (if equipped)
- Stop & Start system duration (if equipped)
- Stop & Start system status (if equipped)

- “MID OFF”

A blank screen is displayed

- “Default Settings”

Select to reset the meter display settings.

■ Suspension of the settings display

- Some settings cannot be changed

while driving. When changing settings, park the vehicle in a safe place.

- If a warning message is displayed, operation of the settings display will be suspended.
- Settings for functions not equipped to the vehicle are not displayed.
- When a function is turned off, the related settings for that function are not selectable.

⚠ WARNING

■ **Cautions during setting up the display**

As the engine needs to be running during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

⚠ NOTICE

■ **During setting up the display**

To prevent battery discharge, ensure that the engine is running while setting up the display features.

Warning message display


Select to display warning messages and measures to be taken if a malfunction is detected. (→P.709)

Suggestion function

Displays suggestions to the driver in the following situations. To select a response to a displayed suggestion, use the meter control

switches.

■ **Suggestion to turn on the headlights**

If the headlight switch is in other than  or AUTO, and the vehicle speed is 5 km/h (3 mph) or higher for a certain amount of time when the surroundings are dark, a suggestion message will be displayed.

■ **Suggestion to turn off the headlights**

If the headlights are left on for a certain amount of time after the engine switch has been turned off, a suggestion message will be displayed.

When the headlight switch is in the AUTO position:

The message asking if you wish to turn the headlights off is displayed. To turn the headlights off, select “Yes”.

If the driver’s door is opened after the engine switch is turned off, this suggestion message will not be displayed.

■ **Suggestion to close the power windows (linked to windshield wiper operation)**

If the windshield wipers are operated with a power window open, a suggestion message will be displayed asking if you wish to close the power windows. To close all of the power windows, select “Yes”.

■ **Suggestion to close the power windows (Driving at high speeds)**

If the vehicle speed exceeds a certain speed with a power window open, a suggestion message will be displayed asking if you wish to close the power windows. To close all of the power windows, select "Yes".

■ **Customization**

The suggestion function can be turned on/off. (Customizable features: →P.762)


Stop & Start system information pop-up display (if equipped)

A pop-up display for the current amount of time the engine has been stopped due to the operation of the Stop & Start system or the status of the Stop & Start system is displayed depending on the situation. (→P.365)

Head-up display*

*: If equipped

The head-up display projects a variety of driving-related information and the operating state of the driving support systems on the windshield.

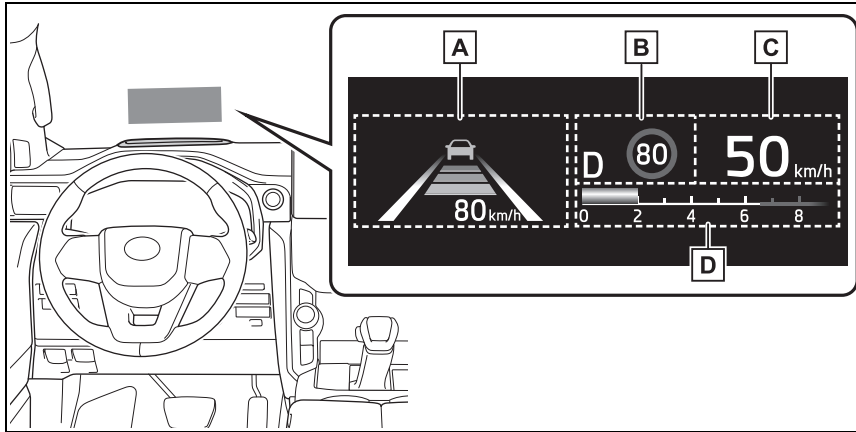System components

Illustrations used in this text are intended as examples, and may differ from the image that is actually displayed by the head-up display.

A Driving support system display area (→P.159)/Navigation system-linked display area (if equipped)

Displays the following items which are linked to the navigation system:

- Route guidance to destination
- Street name
- Compass (heading-up display)

B Shift position/RSA (Road Sign Assist) display (if equipped) area (→P.261, 331)

C Speedometer

D Eco Driving Indicator/Tachometer/Outside temperature display area (→P.160)

■ **Head-up display will operate when**
The engine switch is in ON.

■ **When using the head-up display**
The head-up display may seem dark or hard to see when viewed through sun-

glasses, especially polarized sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

■ **Street name display (vehicles with navigation system)**

Only street names which are included in the map data will be displayed.

WARNING


■ **When using the head-up display**

- Check that the position and brightness of the head-up display image does not interfere with safe driving. Incorrect adjustment of the image's position or brightness may obstruct the driver's view and lead to an accident, resulting in death or serious injury.
- Do not continuously look at the head-up display while driving as you may fail to see pedestrians, objects on the road, etc. ahead of the vehicle.

NOTICE

■ **Head-up display projector**


- Do not place any drinks near the head-up display projector. If the projector gets wet, electrical malfunctions may result.

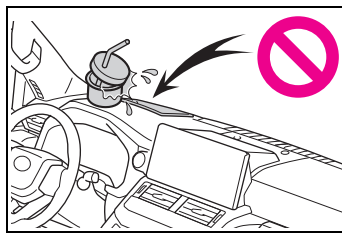

- Do not place anything on or put stickers onto the head-up display projector. Doing so could interrupt head-up display indications.

- Do not touch the inside of the head-up display projector or thrust sharp edges or the like into the projector. Doing so could cause mechanical malfunctions.

Using the head-up display

Select the "HUD Main" on the  screen of the multi-information display. (→P.151)

■ **Enabling/disabling the head-up display**

The head-up display enabled and disabled with each press of the OK of the meter control switches.

■ **Changing settings of the head-up display**

The following settings can be changed pressing and hold of the OK of the meter control switches.

- Brightness and vertical position of the head-up display

Select to adjust the brightness or vertical position of the head-up display.

- Tachometer Settings

Select to display the blank, Eco Driving Indicator or tachometer.

- Display content

Select to enable/disable the following items:

- Navigation display (if equipped)
- Driving Assist display*
- Compass (heading-up display) (if equipped)
- Audio system operation status (if equipped)

*: Make sure to enable this display when using the driving support systems


● **Display angle**

Select to adjust the angle of the head-up display.

■ **Enabling/disabling of the head-up display**

If the head-up display is disabled, it will remain disabled when the engine switch is turned off then back to ON.

■ **Display brightness**

The brightness of the head-up display can be adjusted on the  screen of the multi-information display. Also, it is automatically adjusted according to the ambient brightness.

■ **Head-up display automatic position adjustment (if equipped)**

If the display position is recorded into memory, the head-up display will be automatically adjusted to the desired position. (→P.220)


■ **When the battery is disconnected**

The customize settings of the head-up display will be reset.

 **WARNING**

■ **Caution for changing settings of the head-up display**

As the engine needs to be running while changing the settings of the head-up display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

 **NOTICE**

■ **When changing the settings of the head-up display**

To prevent battery discharge, ensure that the engine is running while changing the settings of the head-up display.

Driving support system display area

Displays the operational status of the following systems:

- LTA (Lane Tracing Assist) (if equipped) (→P.314)
- Dynamic radar cruise control with full-speed range (if equipped) (→P.335)
- Dynamic radar cruise control (if equipped) (→P.348)

Details of content displayed on the head-up display may differ from that displayed on the multi-information display. For details, refer to the explanation of each system.

Pop-up display

Pop-up displays for the following systems will be displayed when necessary.

■ **Driving support systems**

Displays a warning/suggestion/advice message or the operating state of a relevant system.


- PCS (Pre-Collision System) (if equipped) (→P.302)
- PKSB (Parking Support Brake) (if equipped) (→P.388)

- Brake Override System (→P.232)
- Drive-Start Control (→P.237)


Details of content displayed on the head-up display may differ from that displayed on the multi-information display. For details, refer to the explanation of each system.

■  /  icons

Displays the following multi-information display linked icons:

: Master warning icon

Displayed when a warning message is displayed on the multi-information display.

: Information icon

Displayed when a suggestion / advice pop-up display is displayed on the multi-information display.

■ **Warning message**

Some warning messages are displayed when necessary, according to certain conditions.

Details of content displayed on the head-up display may differ from that displayed on the multi-information display.

■ **Audio system operation status (if equipped)**

Displayed when an audio remote control switch on the steering wheel is operated.

■ **Hands-free system status (if equipped)**


Displayed when the hands-free system is operated.

■ **When a pop-up display is displayed**

When a pop-up display is displayed, a current display may no longer be displayed. In this case, the display will return after the pop-up display disappears.

Eco Driving Indicator/Tachometer/Outside temperature display area

■ **Eco Driving Indicator**

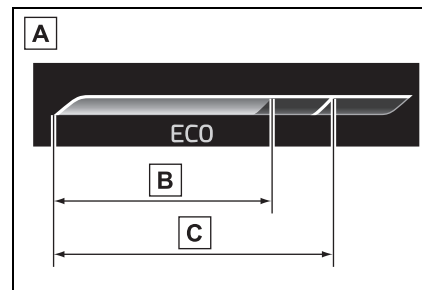

A Eco Driving Indicator Zone Display

B Eco driving ratio based on acceleration

C Zone of Eco driving

Displayed content is the same as that displayed on the multi-information display (Eco Driving Indicator). For details, refer to P.149.

■ **Tachometer**

Displays the engine speed in revolutions per minute.

■ **Outside temperature display**

This is displayed when the engine switch is turned on or the low outside temperature indicator flashes.

■ **Outside temperature display**

- When the ambient temperature is approximately 3°C (37°F) or lower, the low outside temperature indicator will flash for approximately 10 seconds and the outside temperature display will turn off. In this case, the display will be displayed again when the outside temperature becomes approximately 5°C (41°F) or higher.
- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:
 - When stopped, or driving at low speeds (less than 20 km/h [12 mph])
 - When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to your Toyota dealer.

Fuel consumption screen*


*: If equipped

The fuel consumption information can be displayed on the multimedia system screen.

Fuel consumption screen can be displayed on the "Home" screen of the multimedia display (vehicles with 7-inch or 9-inch display only).

System components


- ▶ Vehicles with 7-inch or 9-inch display

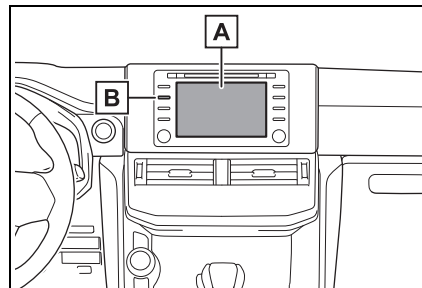

A Multimedia system screen

B "MENU" button

- ▶ Vehicles with 12.3-inch display

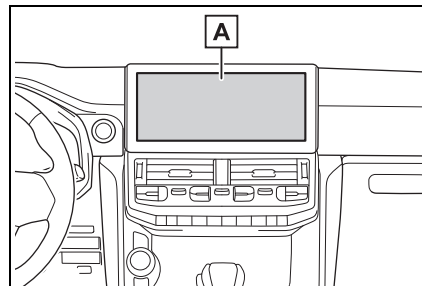

A Multimedia system screen

Trip information screen


■ Display procedure


▶ Vehicles with 7-inch or 9-inch display

- 1 Press the “MENU” button.
- 2 Select “Info” on the “Menu” screen.

If a screen other than “Trip Information” is displayed, select “Trip Information”.


▶ Vehicles with 12.3-inch display

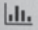- 1 Select  on the Toyota multi-operation touch (→P.602).
- 2 Select “Trip Info” from split-screen.

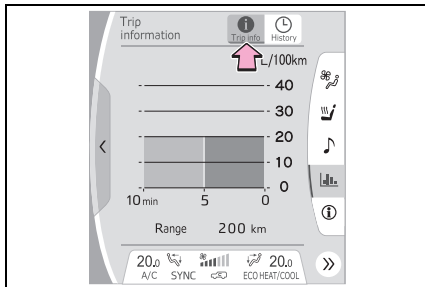

Displaying a screen in full screen(→P.603)

■ Display

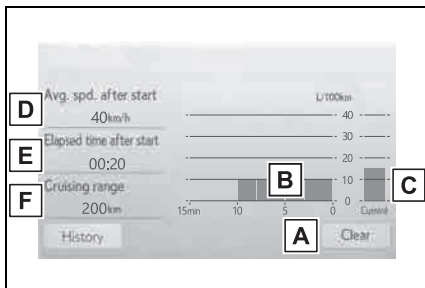

A Resetting the consumption data

B Fuel consumption in the past 15 minutes

C Current fuel consumption

D Average vehicle speed since the engine was started.

E Elapsed time since the engine was started.

F Cruising range

The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last updated.

Use the displayed average fuel consumption as a reference.

The image is an example only, and may vary slightly from actual conditions.

History screen


■ Display procedure

▶ Vehicles with 7-inch or 9-inch display


- 1 Press the “MENU” button.
- 2 Select “Info” on the “Menu” screen.

If a screen other than “History” is displayed, select “History”.

▶ Vehicles with 12.3-inch display

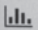
- 1 Select  on the Toyota multi-operation touch (→P.602).

2 Select “History” on the split-screen.

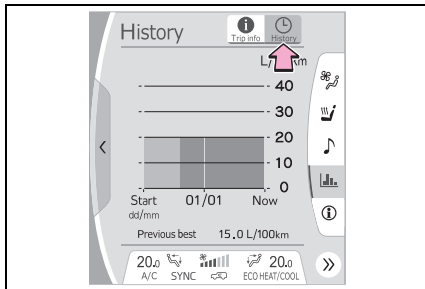

Displaying a screen in full screen (→P.603)

■ **Display**

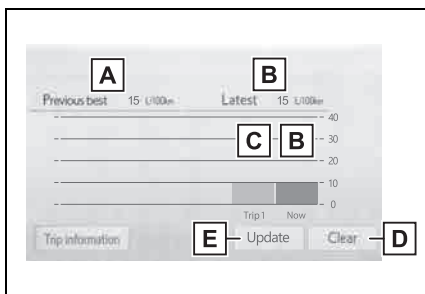

- A** Best recorded fuel consumption
- B** Latest fuel consumption
- C** Previous fuel consumption record
- D** Resetting the history data
- E** Updating the latest fuel consumption data

The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last updated.

Use the displayed average fuel consumption as a reference.

The image is an example only, and may

vary slightly from actual conditions.

■ **Updating the history data**

Update the latest fuel consumption by selecting “Update” to measure the current fuel consumption again.

■ **Resetting the data**

The fuel consumption data can be deleted by selecting “Clear”.

■ **Cruising range**

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.

■ **“Home” screen (vehicles with 7-inch or 9-inch display only)**

The average fuel consumption and distance to empty can be displayed on the “Home” screen of the multimedia display.

For details of the “Home” screen, refer to the separate “Navigation and Multimedia System Owner’s Manual”.

2


Vehicle status information and indicators

- 3-1. Key information**
 - Keys.....**166**
- 3-2. Opening, closing and locking the doors**
 - Side doors**169**
 - Back door**173**
 - Smart entry & start system**190**
- 3-3. Adjusting the seats**
 - Front seats.....**195**
 - Rear seats**196**
 - Head restraints**205**
- 3-4. Adjusting the steering wheel and mirrors**
 - Steering wheel.....**208**
 - Inside rear view mirror**210**
 - Outside rear view mirrors .**211**
- 3-5. Opening, closing the windows and moon roof**
 - Power windows.....**214**
 - Moon roof**217**
- 3-6. Favorite settings**
 - Driving position memory ...**220**
 - My Settings.....**224**

Keys

Key types

The following keys are provided with the vehicle.

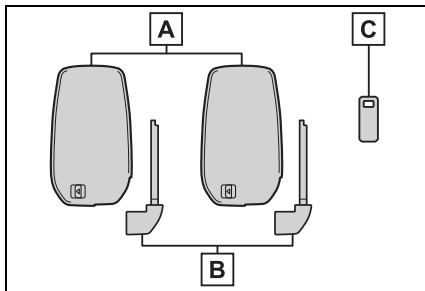

A Electronic keys

- Operating the smart entry & start system (→P.190)
- Operating the wireless remote control function (→P.167)

B Mechanical keys

C Key number plate

■ When riding in an aircraft

When bringing a key with wireless remote control function onto an aircraft, make sure you do not press any buttons on the key while inside the aircraft cabin. If you are carrying the key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the key to emit radio waves that could interfere with the operation of the aircraft.

■ Key battery depletion

- The standard battery life is 1 to 2 years.
- If the battery becomes low, an alarm will sound in the cabin when the engine stops.
- To reduce key battery depletion when the electronic key is to not be used for

long periods of time, set the electronic key to the battery-saving mode.(→P.192)

- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary.
 - The smart entry & start system or the wireless remote control does not operate.
 - The detection area becomes smaller.
 - The LED indicator on the key surface does not turn on.
- You can replace the battery by yourself (→P.679). However, as there is a danger that the electronic key may be damaged, it is recommended that replacement is carried out by your Toyota dealer.
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
 - TVs
 - Personal computers
 - Recharging cellular phones or cordless phones
 - Table lamps
 - Induction cookers
- If the electronic key is near the vehicle for longer than necessary, even if the smart key system is not used, the key battery may become depleted faster than normal. When not using the smart key system, it is recommended not to stay with the electronic key near the vehicle longer than necessary.

■ Replacing the key battery


→P.679

■ Confirmation of the registered key number

The number of keys already registered to the vehicle can be confirmed. Ask your Toyota dealer.

■ If “A New Key has been Registered Contact Your Dealer for Details” is shown on the multi-information display

This message will be displayed each time the driver's door is opened when the doors are unlocked from the outside for approximately 10 days after a new electronic key has been registered. If this message is displayed but you have not had a new electronic key registered, ask your Toyota dealer to check if an unknown electronic key (other than those in your possession) has been registered.

 NOTICE

■ **To prevent key damage**

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for long periods of time.
- Do not get the keys wet or wash them in an ultrasonic washer, etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the electronic key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers.
- Do not place the keys near medical electrical equipment such as low-frequency therapy equipment or microwave therapy equipment, and do not receive medical attention with the keys on your person.

■ **Carrying the electronic key on your person**

Carry the electronic key 10 cm (3.9 in.) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

■ **In case of a smart entry & start system malfunction or other key-related problems**


→P.728

■ **When an electronic key is lost**

→P.727

Wireless remote control

The keys are equipped with the following wireless remote control:

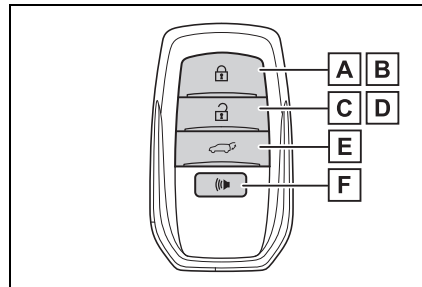


- A** Locks the doors (→P.169)
- B** Closes the windows and the moon roof*^{1, 2} (→P.169)
- C** Unlocks the doors (→P.169)
- D** Opens the windows and the moon roof*^{1, 2} (→P.169)
- E** Opens and closes the power back door*² (→P.176)

F Sounds the alarm*² (→P.168)


*¹: These settings must be customized at your Toyota dealer.

*²: If equipped

■ Panic mode (if equipped)

When  is pressed for longer than about one second, an alarm will sound intermittently and the vehicle lights will flash to deter any person from trying to break into or damage your vehicle.

To stop the alarm, press any button on the wireless remote control.

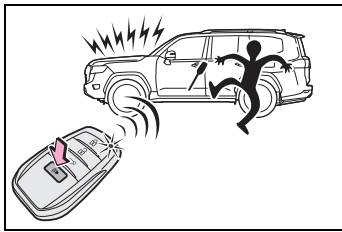


Using the mechanical key

To take out the mechanical key, slide the release lever **A** and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P.727)

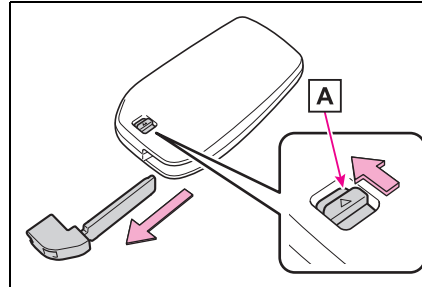

■ When required to leave the vehicle's key with a parking attendant

▶ Vehicles with fingerprint authentication system

Lock the glove box (→P.594) as necessary. Remove the mechanical key and hand over the electronic key only. To start the engine when the fingerprint authentication system is on, touch the key to the engine switch while depressing the brake pedal, and then press the engine switch. (→P.728)

▶ Vehicles without fingerprint authentication system

Lock the glove box as circumstances demand. (→P.594)

Remove the mechanical key for your own use and provide the attendant with the electronic key only.

■ If you lose your keys


→P.727

Side doors

Unlocking and locking the doors from the outside

■ Using the entry function

Carry the electronic key to enable this function.

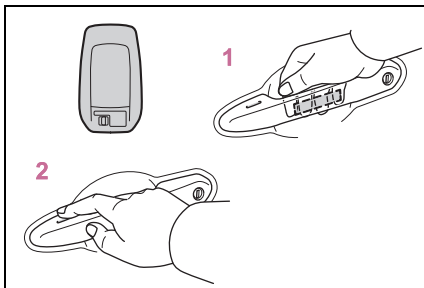

- 1** Grip the driver's door handle to unlock the door. Grip the passenger's door handle with the sensor (if equipped) to unlock all the doors.*

Make sure to touch the sensor on the back of the handle.


The doors cannot be unlocked for 3 seconds after the doors are locked.

*: The door unlock settings can be changed.

- 2** Touch the lock sensor (the indentation on the upper part or lower part of the handle) to lock the doors.

Check that the door is securely locked.

■ Using the wireless remote control

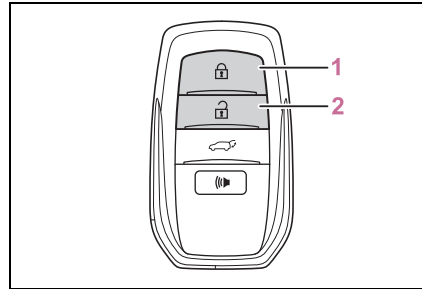

1 Locks all the doors

Check that the door is securely locked. Press and hold to close the windows and moon roof*^{1, 2}

2 Unlocks all the doors





Press and hold to open the windows and moon roof*^{1, 2}

*¹: These settings must be customized at your Toyota dealer.

*²: If equipped




■ Switching the door unlock function


It is possible to set which doors the entry function unlocks using the wireless remote control.

- 1** Turn the engine switch off.
- 2** For vehicles with an intrusion sensor: Cancel the intrusion sensor and tilt sensor of the alarm system to prevent unintended triggering of the alarm while changing the settings. (→P.113)
- 3** When the indicator light on the key surface is not on, press and hold  ,  or  for approximately 5 seconds while pressing and holding  .

The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at

least 5 seconds, and repeat step 3.)

Multi-information display/Beep	Unlocking function
 <p>(Left-hand drive vehicles)</p>	Holding the driver's door handle unlocks only the driver's door.
 <p>(Right-hand drive vehicles) Exterior: Beeps 3 times</p>	Holding a passenger's door handle unlocks all the doors.
 <p>Exterior: Beeps twice</p>	Holding a door handle unlocks all the doors.

For vehicles with alarm: To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed. (If a door is not opened within 30 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set.)

In case that the alarm is triggered, immediately stop the alarm. (→P.111)

Impact detection door lock release system (if equipped)

In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

Operation signals

Doors: A buzzer (if equipped) sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked (Locked: Once; Unlocked: Twice)

Windows and moon roof (if equipped): A buzzer sounds to indicate that the win-

dows and moon roof are operating.


Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

When the door cannot be locked by the lock sensor on the upper part of the door handle

If the door will not lock even when the topside sensor area is touched, try touching both the topside and underside sensor areas at the same time.

When gloves are being worn, remove the gloves.

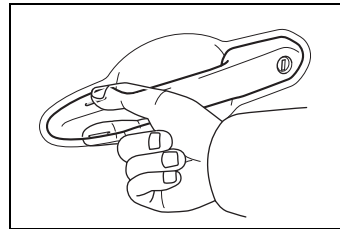

Door lock buzzer

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously for 5 seconds. Fully close the door to stop the buzzer, and lock the vehicle once more.

Setting the alarm (if equipped)

Locking the doors will set the alarm system. (→P.111)

Conditions affecting the operation of the smart entry & start system or wireless remote control

→P.192

If the smart entry & start system or the wireless remote control does not operate properly

- Use the mechanical key to lock and unlock the doors. (→P.728)
- Replace the battery with a new one if it is depleted. (→P.679)

Rear seat reminder function

- In order to remind you not to forget

luggage, etc. in the rear seat, when the engine switch is turned to OFF after any of the following conditions are met, a buzzer will sound and a message will be displayed on the multi-information display for approximately 6 seconds.

- The engine is started within 10 minutes after opening and closing a rear door.
- A rear door has been opened and closed after the engine was started.

However, if a rear door is opened and then closed within approximately 2 seconds, the rear seat reminder function may not operate.

- The rear seat reminder function determines that luggage, etc. has been placed in a rear seat based on opening and closing of a rear door. Therefore, depending on the situation, the rear seat reminder function may not operate and you may still forget luggage, etc. in the rear seat, or it may operate unnecessarily.
- The rear seat reminder function can be enabled/disabled. (→P.766)

■ Customization

Settings (e.g. unlocking function using a key) can be changed.
(Customizable features: →P.764)



WARNING

■ To prevent an accident

Observe the following precautions while driving the vehicle. Failure to do so may result in a door opening and an occupant falling out, resulting in death or serious injury.

- Ensure that all doors are properly closed and locked.

- Do not pull the inside handle of the doors while driving. Be especially careful for the driver's door and front passenger's door (for some models only), as the doors may be opened even if the inside lock button is in locked position.

- Set the rear door child-protector locks when children are seated in the second seat.


■ When using the wireless remote control and operating the power windows or moon roof*

*: If equipped

Operate the power window or moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window or moon roof. Also, do not allow children to operate the wireless remote control. It is possible for children and other passengers to get caught in the power window or moon roof.


Unlocking and locking the doors from the inside

■ Using the door lock switch

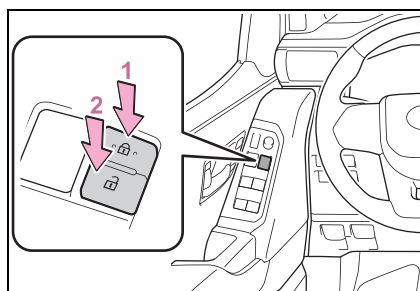

- 1 Locks all the doors
- 2 Unlocks all the doors

■ Using the inside lock buttons

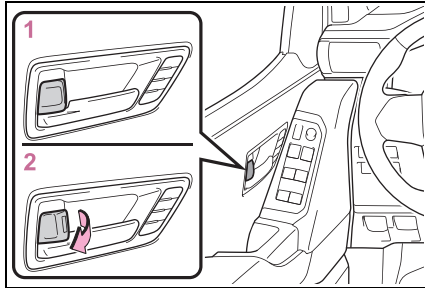

- 1 Locks the door
- 2 Unlocks the door

The driver's door and front passenger's door (for some models only) can be opened by pulling the inside door handle even if the lock button is in the lock position.

■ Locking the front doors from the outside without a key

- 1 Move the inside lock button to the lock position.
- 2 Close the door while pulling the door handle.

The door cannot be locked if the engine switch is in ACC or ON, or the electronic key is left inside the vehicle.


However, the key may not be detected correctly and the door may be locked.

■ If a symbol indicating one or more doors are open is shown on the multi-information display

The hood or one or more of the doors are not fully closed. The system also indicates which doors are not fully closed. If the vehicle reaches a speed of 5 km/h (3 mph), a buzzer sounds to indicate that the door(s) are not yet fully closed. Make sure that the hood and all the doors are closed.

Rear door child-protector lock

The door cannot be opened from inside the vehicle when the lock is set.

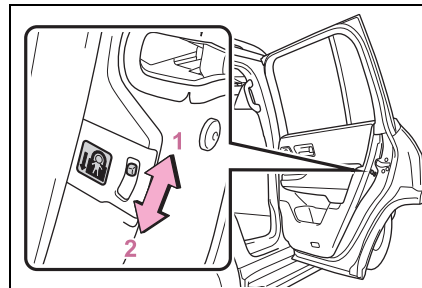

- 1 Unlock
- 2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Automatic door locking and unlocking systems (if equipped)

The following functions can be set or canceled:

For instructions on customizing, refer to P.764.

Function	Operation
Speed linked door locking function	All doors are locked when the vehicle speed is approximately 20 km/h (12mph) or higher.
Shift position linked door locking function	Shifting the shift lever out of P locks all the doors.
Shift position linked door unlocking function	Shifting the shift lever to P unlocks all the doors.
Driver's door linked door unlocking function	All the doors are unlocked when the driver's door is opened within approximately 45 seconds after turning the engine switch off.

Back door

The back door can be locked/unlocked and opened/closed by the following procedures.

WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

■ Before driving

- Make sure that the back door is fully closed.
If the back door is not fully closed, it may open unexpectedly while driving and hit near-by objects or luggage in the luggage compartment may be thrown out, causing an accident.
- Do not allow children to play in the luggage compartment.
If a child is accidentally locked in the luggage compartment, they could get heat exhaustion or other injuries.
- Do not allow a child to open or close the back door.
Doing so may cause the back door to operate unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door.

■ Important points while driving


- Keep the back door closed while driving.
If the back door is left open, it may hit near-by objects or luggage in the luggage compartment may be thrown out, causing an accident.
- Never let anyone sit in the luggage compartment.
In the event of sudden braking, sudden swerving or a collision, they are susceptible to death or serious injury.

⚠ WARNING

■ Operating the back door


Observe the following precautions. Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.

- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door to suddenly shut again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.
- Vehicles without power back door: The back door may suddenly shut if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.

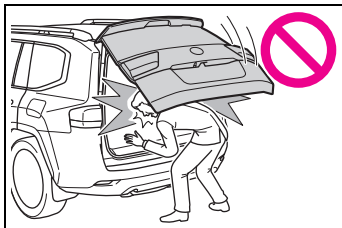

- Vehicles with power back door: The back door may suddenly shut if it is not opened fully, while on a steep incline. Make sure that the back door is secured before using the luggage compartment.

- When closing the back door, take extra care to prevent your fingers etc. from being caught.

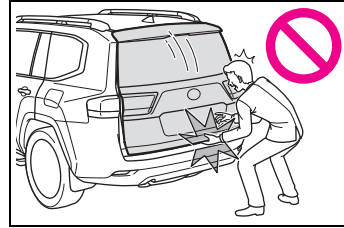


- Vehicles without power back door: When closing the back door, make sure to press it lightly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.
- Do not pull on the back door damper stay (vehicles without power back door) (→P.176) or back door spindle (vehicles with power back door) (→P.187) to close the back door, and do not hang on the back door damper stay (vehicles without power back door) or back door spindle (vehicles with power back door). Doing so may cause hands to be caught or the back door damper stay (vehicles without power back door) or back door spindle (vehicles with power back door) to break, causing an accident.
- Do not attach a heavy accessory part to the back door. If a bicycle carrier or similar heavy object is attached to the back door, it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured.

Unlocking and locking the back door from the outside

■ Using the entry function

Carry the electronic key to enable this function.

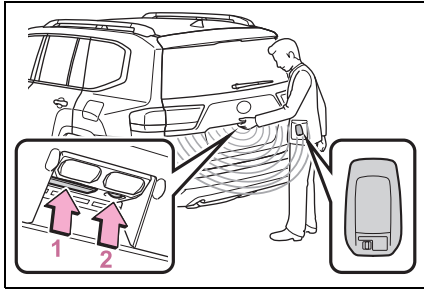

1 Unlocks all the doors

The doors cannot be unlocked for 3 seconds after the doors are locked.

2 Locks all the doors

Check that the door is securely locked.

■ Using the wireless remote control

→P.167

■ Operation signals

→P.170

■ Security feature

→P.170

Unlocking and locking the back door from the inside


■ Using the door lock switches

→P.171

Opening/closing the back door (vehicles without power back door)


■ Open

Raise the back door while pressing up the back door opener to release the lock to open the back door.

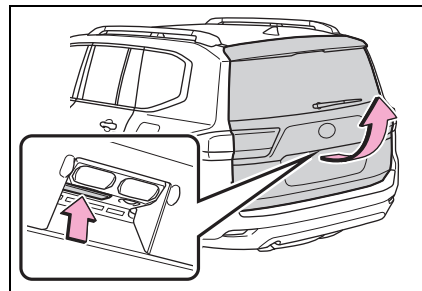

■ Close

Lower the back door using the back door handle **A**, and make sure to push the back door down from the outside to close it.

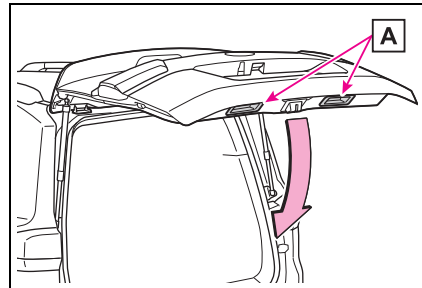

■ Luggage compartment light


- The luggage compartment light turns on when the back door is opened.
- When the engine switch is turned to OFF, the light will go off automatically after 20 minutes.

■ **If the back door opener is inoperative**


The back door can be unlocked from the inside.

1 Remove the cover.


To prevent damage, cover the tip of the screwdriver with a rag.

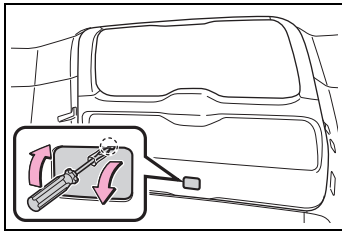


2 Loosen the screw.

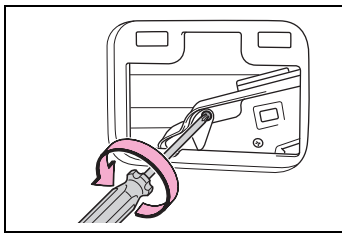


3 Turn the cover.

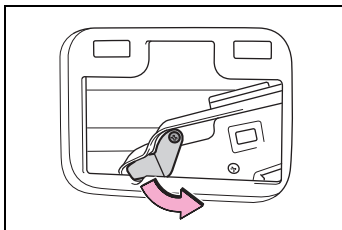

4 Move the lever.

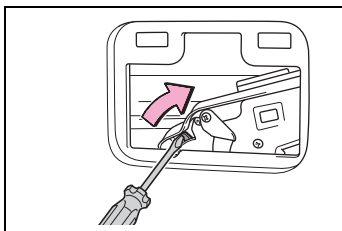


5 When installing, reverse the steps listed.

 NOTICE

■ **Back door damper stays**

The back door is equipped with damper stays that hold the back door in place.

Observe the following precautions. Failure to do so may cause damage to the back door damper stay, resulting in malfunction.

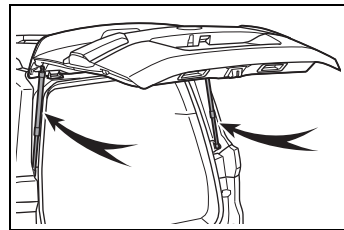

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.
- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Toyota parts to the back door.
- Do not place your hand on the damper stay or apply lateral forces to it.

Opening/closing the back door (vehicles with power back door)

■ **Using the wireless remote control**


Press and hold the switch.

The power back door automatically opens/closes.

Unlock the back door before operating.

Pressing the switch while the power back door is opening/closing stops the operation. When the switch is pressed

again during the halted operation, the back door will perform the reverse operation.

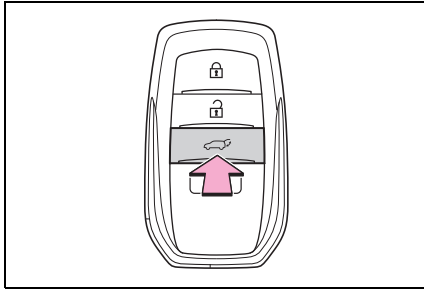


■ **Using the power back door switch on the instrument panel**

Press and hold the switch.

The power back door automatically opens/closes.

Unlock the back door before operating.

Pressing the switch while the power back door is opening/closing stops the operation. When the switch is pressed and held again during the halted operation, the back door will perform the reverse operation.

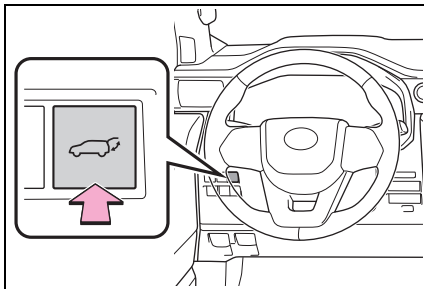

■ **Using the switches on the back door**


● **Open**

When the back door is unlocked: Press the back door opener switch.

When the back door is locked: While carrying the electronic key on your person, press and hold the back door opener switch.

The power back door automatically opens.

Pressing the switch while the power back door is opening/closing stops the operation.

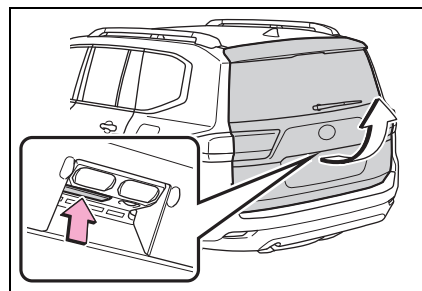


● **Close**


Press the switch on the lower part of the back door.

The power back door automatically closes.


Pressing the switch while the power back door is operating will stop the operation. When the switch is pressed again during the halted operation, the back door will perform the reverse operation.

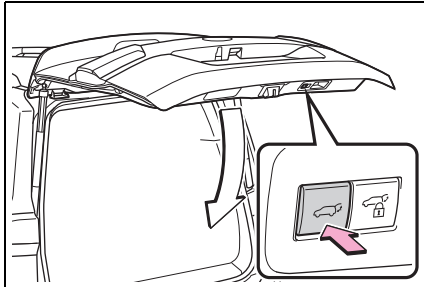

- Close the back door and lock all doors after moving away from the back door (close & lock [Walk-Away] function)

- 1 Close all of the doors except the back door, carrying an electronic key and press the  switch on the lower part of the back door.

A different buzzer than the normal one will sound and the close & lock (Walk-Away) function will go into standby.

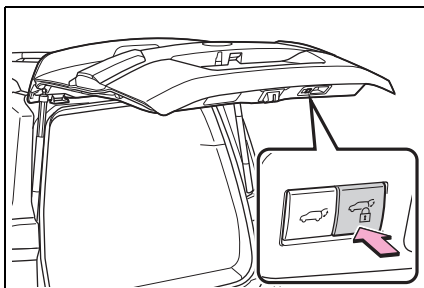

- 2 While the buzzer is sounding, move away from the back door.


When the sensor detects that you are away from the back door, the buzzer will sound and the emergency flashers (if equipped) will flash. Depending on the direction of moving away from the back door, the location and how to hold the electronic key or circumstances, it may not be detected properly.

All the doors other than the back door

will be locked, and after the back door is closed, the back door will also be locked. When all the doors have been closed and locked, the buzzer (if equipped) will sound and the emergency flashers will flash. (→P.170)

The standby state is canceled if you do not move away from the back door for 30 minutes. To operate the function again, perform the procedure again from the beginning.


If you approach the back door carrying the electronic key, the back door operation will stop, all the doors will be unlocked, and the buzzer (if equipped) will sound and the emergency flashers will flash. (→P.170)

If the  switch is pressed after the back door operation has stopped, the close & lock (Walk-Away) function will go into standby again.


- Close the back door and lock all doors (close & lock function)*

*: These settings must be customized at your Toyota dealer.


Close all of the doors except the back door, carrying an electronic key and

press the  switch on the lower part of the back door.

A different buzzer than the normal one will sound and the back door will begin closing automatically. All the doors except the back door are locked and then back door will also be locked at the same time it is closed. Operation signals will indicate that all the doors have been closed and locked. (→P.170)

Pressing the  switch while the back door is operating will stop the operation. When the switch is pressed


again during the halted operation, the back door will be closed.

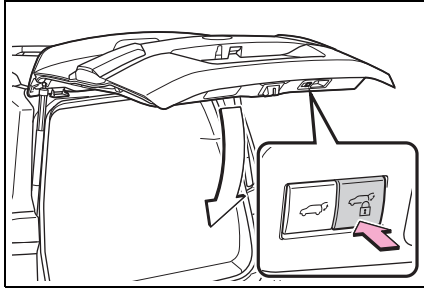

■ **Using the back door handle**

Lower the back door using the back door handle **A**.

The back door closing assist (→P.182) will be activated, and the power back door will fully close automatically.

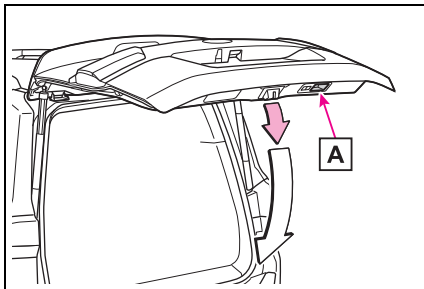


■ **Using the kick sensor (vehicles with Hands Free Power Back Door)**

The Hands Free Power Back Door enables automatic opening and closing of the power back door by putting your foot near the right lower part of the rear bumper and moving it away from the rear bumper. When operating the Hands Free Power Back Door, make sure that all of the following conditions are met.

- The engine switch is in OFF, or ON with the shift lever in P.
- The kick sensor operation is enabled (→P.153).
- You are carrying an electronic key.

- 1 While carrying an electronic key, stand within the smart entry & start system operation range, approximately 30 to 50 cm (11.8 to 19.7 in.) from the rear bumper.

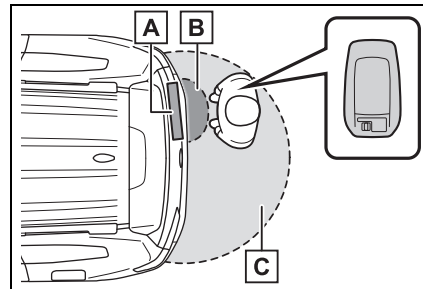

- A** Kick sensor
- B** Hands Free Power Back Door operation detection area
- C** Smart entry & start system operation detection area (→P.191)


- 2 Perform a kick operation by moving your foot to within approximately 10 cm (3.9 in.) of the rear bumper and then pulling it back.

Perform the entire kick operation within 1 second.

The back door will not start operating while a foot is detected under the rear bumper.

Operate the Hands Free Power Back Door without contacting the rear bumper with your foot.

If another electronic key is in the cabin or luggage compartment, it may take slightly longer than normal for the operation to occur.

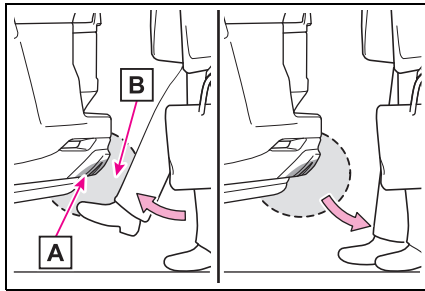

- A** Kick sensor
- B** Hands Free Power Back Door operation detection area

3 When the kick sensor detects that your foot is pulled back, a buzzer will sound and the back door will automatically fully open/close.

If a foot is moved under the rear bumper while the back door is opening/closing, the back door will stop moving.

If a foot is moved under the rear bumper again during the halted operation, the back door will perform the reverse operation.

■ **Closing and locking the back door after moving away from the back door using the kick sensor (Hands Free close & lock [Walk-Away] function) ^{*1, 2}**


^{*1}: If equipped

^{*2}: These settings must be customized at your Toyota dealer.

The Hands Free Power Back Door enables automatic closing and locking of the power back door by put-

ting your foot near the right lower part of the rear bumper, moving it away from the rear bumper, and moving away from the back door. When operating the Hands Free Power Back Door, make sure that the engine switch is in OFF, the kick sensor operation is enabled (→P.153) and you are carrying an electronic key.

- 1** While carrying an electronic key, stand within the smart entry & start system operation range, approximately 30 to 50 cm (11.8 to 19.7 in.) from the rear bumper.

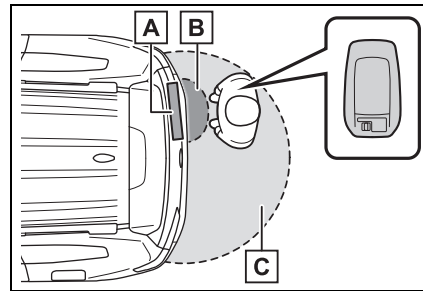

- A** Kick sensor
- B** Hands Free Power Back Door operation detection area
- C** Smart entry & start system operation detection area (→P.191)

- 2** Perform a kick operation by moving your foot to within approximately 10 cm (3.9 in.) of the rear bumper and then pulling it back.


Perform the entire kick operation within 1 second.

The back door will not start operating

while a foot is detected under the rear bumper.

Operate the Hands Free Power Back Door without contacting the rear bumper with your foot.

If another electronic key is in the cabin or luggage compartment, it may take slightly longer than normal for the operation to occur.

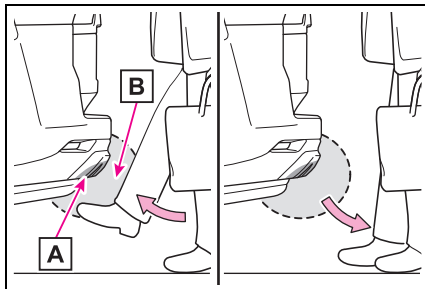

A Kick sensor

B Hands Free Power Back Door operation detection area

3 When the kick sensor detects that your foot is pulled back, a different buzzer than the normal one will sound and the Hands Free close & lock (Walk-Away) function will go into standby.

4 While the buzzer is sounding, move away from the back door.

When the sensor detects that you are away from the back door, the buzzer will sound and the emergency flashers (if equipped) will flash. Depending on the direction of moving away from the back door, the location and how to hold the electronic key or circumstances, it may not be detected properly.

All the doors other than the back door will be locked, and after the back door is closed, the back door will also be locked. When all the doors have been closed and locked, the buzzer (if equipped) will sound and the emer-

gency flashers will flash. (→P.170)

The standby state is canceled if you do not move away from the back door in 30 minutes. To operate the function again, perform the procedure again from the beginning.

If you approach the back door carrying the electronic key, the back door operation will stop, all the doors will be unlocked, and the buzzer (if equipped) will sound and the emergency flashers will flash. (→P.170)

If the power back door is operated after the back door operation has stopped, the Hands Free close & lock (Walk-Away) function will go into standby again.

■ Luggage compartment light

- The luggage compartment light turns on when the back door is opened.
- When the engine switch is turned to OFF, the light will go off automatically after 20 minutes.

■ Back door closer

In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position.

Whatever the state of the engine switch, the back door closer operates.

■ Power back door operating conditions

The power back door can automatically open and close under the following conditions:

- When the power back door system is enabled. (→P.143, 153)
- When the back door is unlocked.

However, if the back door opener switch is pressed and held while carrying the electronic key on your person, the power back door will be operated even if the back door is locked. (→P.177)

- When the engine switch is in ON, in addition to the above for the opening

operations, the back door operates for any of the following conditions:


- Parking brake is engaged
- The brake pedal is depressed
- The shift lever is in P.

■ **Operation of the power back door**

- A buzzer sounds to indicate that the back door is opening/closing.
- When the power back door system is disabled, the power back door does not operate but it can be opened and closed by hand.
- When the power back door automatically opens, if an abnormality due to people or objects is detected, operation will stop.

■ **Jam protection function**

Sensors are equipped on both sides of the power back door. If anything obstructs the power back door while it is closing, the back door will automatically operate in the opposite direction or stop.

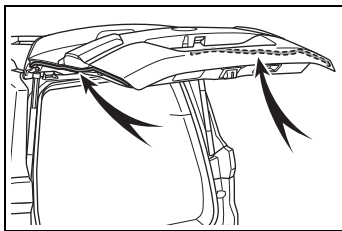

■ **Fall-down protection function**

While the power back door is opening automatically, applying excessive force to it will stop the opening operation to prevent the power back door from suddenly shutting.

■ **Back door closing assist**

If the back door is lowered manually when the back door is stopped at an open position, the back door will fully close automatically.

■ **Back door reserve lock function**

This function is a function which reserves locking of all doors, beforehand, when the power back door is open.

When the following procedure is performed, all the doors except the power back door are locked and then power back door will also be locked at the same time it is closed.

- 1 Close all doors, except the back door.
- 2 During the power back door closing operation, lock the doors using the smart entry & start system (→P.169) or the wireless remote control. (→P.169)

Operation signals will indicate that all the doors have been closed and locked. (→P.170)

- If the electronic key is placed inside the vehicle after starting a close operation via the door reserve lock function, the electronic key may become locked inside the vehicle.
- If the power back door does not fully close due to the operation of the jam protection function, etc., while the back door is automatically closing after a door reserve lock operation is performed, the door reserve lock function is canceled and all the doors will unlock.
- Before leaving the vehicle, make sure that all the doors are closed and locked.

■ **Close & lock (Walk-Away) function operating conditions**

This function can be operated when all of the following conditions are met:

- Close & lock (Walk-Away) function is enabled.
- An electronic key is not detected within the vehicle.
- All of the doors other than the back door are closed.
- The engine switch is in OFF.
- The electronic key is within the effective range (detection areas).

■ Situations in which the close & lock (Walk-Away) function may not operate properly

In the following situations, the function may not operate properly:

- When the smart entry & start system does not operate properly.
- When the close & lock function does not operate properly.
- When moving away from the back door while the close & lock (Walk-Away) function is in the standby state.
- When the number of electronic keys registered in the vehicle increases.

■ Close & lock function* operating conditions




This function can be operated when all of the following conditions are met:

- An electronic key is not detected within the vehicle.
- All of the doors other than the power back door are closed.
- The engine switch is in OFF.

*: These settings must be customized at your Toyota dealer.

■ Situations in which the close & lock function* may not operate properly

In the following situations, the close & lock function may not operate properly:

- If the  switch on the lower part of the power back door is pressed by a hand which is holding an electronic key
- If the  switch on the lower part of the power back door is pressed when the electronic key is in a bag, etc. that is placed on the ground
- If the  switch on the lower part of the power back door is pressed with the electronic key not near the vehicle

*: These settings must be customized at

your Toyota dealer.

■ Kick sensor operating conditions (vehicles with Hands Free Power Back Door)

The Hands Free Power Back Door will open/close automatically when the following conditions are met:

- The kick sensor operation is enabled (→P.151)
- The engine switch is in OFF, or ON with the shift lever in P.
- The electronic key is within the operational range. (→P.191)
- A foot is put near the right lower part of the rear bumper and moved away from the rear bumper.
The power back door may also be operated by putting a hand, an elbow, a knee, etc. near the right lower part of the rear bumper and moving it away from the rear bumper. Make sure to put it close enough to the right lower part of the rear bumper.

■ Situations in which the Hands Free Power Back Door may not operate properly (vehicles with Hands Free Power Back Door)

In the following situations, the Hands Free Power Back Door may not operate properly:

- When a foot remains under the rear bumper
- If the rear bumper is strongly hit with a foot or is touched for a while

If the rear bumper has been touched for a while, wait for a short time before attempting to operate the Hands Free Power Back Door again.

- When operated while a person is too close to the rear bumper
- When an external radio wave source interferes with the communication between the electronic key and the vehicle (→P.192)
- When the vehicle is parked near an electrical noise source which affects

the sensitivity of the Hands Free Power Back Door, such as a pay parking spot, gas station, electrically heated road, or fluorescent light

- When the vehicle is near a TV tower, electric power plant, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When a large amount of water is applied to the rear bumper, such as when the vehicle is being washed or in heavy rain
- When mud, snow, ice, etc. is attached to the rear bumper
- When the vehicle has been parked for a while near objects that may move and contact the rear bumper, such as plants
- When an accessory is installed to the rear bumper

If an accessory has been installed, turn the Hands Free Power Back Door (kick sensor) operation setting off.

■ **Preventing unintentional operation of the Hands Free Power Back Door (vehicles with Hands Free Power Back Door)**

When an electronic key is in the operation range, the Hands Free Power Back Door may operate unintentionally, so be careful in the following situations.

To prevent unintentional operation, turn the Hands Free Power Back Door (kick sensor) operation setting off. (→P.151)

- When a large amount of water is applied to the rear bumper, such as when the vehicle is being washed or in heavy rain
- When dirt is wiped off the rear bumper
- When a small animal or small object, such as a ball, moves under the rear bumper
- When an object is moved from under the rear bumper
- If someone is swinging their legs while sitting on the rear bumper

- If the legs or another part of someone's body contacts the rear bumper while passing by the vehicle
- When the vehicle is parked near an electrical noise source which affects the sensitivity of the Hands Free Power Back Door, such as a pay parking spot, gas station, electrically heated road, or fluorescent light
- When the vehicle is near a TV tower, electric power plant, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the vehicle is parked in a place where objects such as plants are near the rear bumper
- If luggage, etc. is set near the rear bumper
- If accessories or a vehicle cover is installed/removed near the rear bumper
- When the vehicle is being towed

■ **Hands Free close & lock (Walk-Away) function^{*1} operating conditions**

This function can be operated when all of the following conditions are met:

- Hands Free close & lock (Walk-Away) function is enabled^{*2}.
- Hands Free Power Back Door^{*1} is enabled.
- An electronic key is not detected within the vehicle.
- All of the doors other than the back door are closed.
- The engine switch is in OFF.
- The electronic key is within the effective range (detection areas).

^{*1}: If equipped

^{*2}: These settings must be customized at your Toyota dealer.

■ **Situations in which the Hands Free close & lock (Walk-Away) function^{*1, 2} may not operate properly**

In the following situations, the function may not operate properly:

- When the smart entry & start system does not operate properly.
- When the close & lock function does not operate properly.
- When moving away from the back door while the Hands Free close & lock (Walk-Away) function is in the standby state.
- When the number of electronic keys registered in the vehicle increases.
- When the Hands Free Power Back Door does not operate properly.^{*1}

^{*1}: If equipped

^{*2}: These settings must be customized at your Toyota dealer.

■ **When reconnecting the battery**


To enable the power back door to operate properly, close the back door manually.

■ **If the back door opener is inoperative**


The back door can be unlocked from the inside.

1 Remove the cover.


To prevent damage, cover the tip of the screwdriver with a rag.

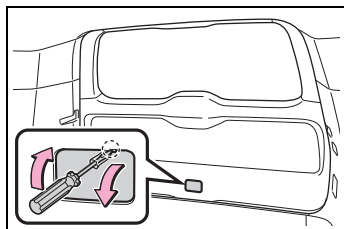


2 Loosen the screw.

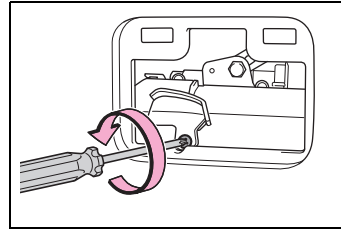

3 Turn the cover.

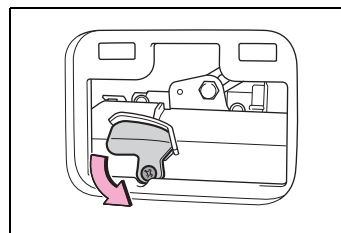

4 Move the lever.

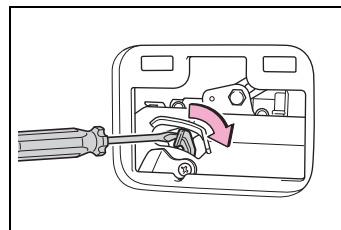

5 When installing, reverse the steps listed.


■ **Customization**

Settings (e.g. power back door opening angle) can be changed. (Customizable features: →P.766)

⚠ WARNING

■ **Back door closer**

- In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position. It takes several seconds before the back door closer begins to operate. Be careful not to catch fingers or anything else in the back door, as this may cause bone fractures or other serious injuries.

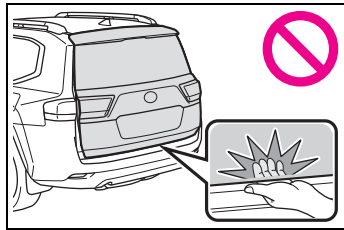

- Use caution when using the back door closer as it still operates when the power back door system is canceled.

■ **Power back door**

Observe the following precautions when operating the power back door. Failure to do so may cause death or serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- If the power back door system is turned off while the back door is operating automatically, the automatic operation is stopped. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close unexpectedly.

- If the operating conditions of the power back door are no longer met, a buzzer may sound and the back door may stop opening or closing. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.

- On an incline, the back door may suddenly shut after it opens. Make sure the back door is fully open and secure.

- In the following situations, the power back door may detect an abnormality and automatic operation may be stopped. In this case, the back door has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.

- When the back door contacts an obstacle
- When the battery voltage suddenly drops, such as when the engine switch is turned to ON or the engine is started during automatic operation

- If a bicycle carrier or similar heavy object is attached to the back door, the power back door may not operate, causing itself to malfunction, or the back door may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Toyota part is recommended.

■ **Jam protection function**

Observe the following precautions. Failure to do so may cause death or serious injury.

- Never use any part of your body to intentionally activate the jam protection function.

WARNING

- The jam protection function may not work if something gets caught just before the back door fully closes. Be careful not to catch fingers or anything else.
- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.

Hands Free Power Back Door (if equipped)

Observe the following precautions when operating the Hands Free Power Back Door.

Failure to do so may cause death or serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- When putting your foot under the rear bumper and moving it from the rear bumper, be careful not to touch the exhaust pipes until they have cooled down sufficiently, as touching hot exhaust pipes can cause burns.
- Do not leave the electronic key within the effective range (detection area) of the luggage compartment.

Close & lock (Walk-Away) function and Hands Free close & lock (Walk-Away) function^{*1, 2}


^{*1}: If equipped

^{*2}: These settings must be customized at your Toyota dealer.

The back door starts to close automatically when leaving the back door. Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.

NOTICE**Back door spindles**

The back door is equipped with spindles that hold the back door in place. Observe the following precautions. Failure to do so may cause damage to the back door spindle, resulting in malfunction.

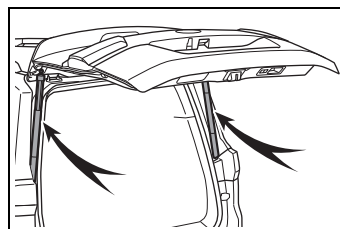

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the spindle rod.
 - Do not attach any accessories other than genuine Toyota parts to the back door.
 - Do not place your hand on the spindle or apply lateral forces to it.
- To prevent back door closer malfunction**
- Do not apply excessive force to the back door while the back door closer is operating. Applying excessive force may cause the back door closer to malfunction.

To prevent damage to the power back door

- Make sure that there is no ice between the back door and frame that would prevent movement of the back door. Operating the power back door when excessive load is present on the back door may cause a malfunction.
- Do not apply excessive force to the back door while the power back door is operating.



NOTICE

- Take care not to damage the sensors (installed on the right and left edges of the power back door) with a knife or other sharp object. If the sensor is disconnected, the power back door will not close automatically.

■ **Close & lock function***

When closing the power back door using the close & lock function, a different buzzer than the normal one will sound before the operation begins.

To check that the operation has started correctly, check that a different buzzer than the normal one has sounded.

Additionally, when the power back door is fully closed and locked, operation signals will indicate that all of the doors have been locked. (→P.170)

Before leaving the vehicle, make sure that the operational signals have operated and that all of the doors are locked.

*: These settings must be customized at your Toyota dealer.


■ **Hands Free Power Back Door precautions (if equipped)**


The kick sensor is located behind the right lower part of the rear bumper. Observe the following to ensure that the Hands Free Power Back Door function operates properly:

- Keep the right lower part of the rear bumper clean at all times. If the right lower part of the rear bumper is dirty or covered with snow, the kick sensor may not operate. In this situation, clean off the dirt or snow, move the vehicle from the current position and then check if the kick sensor operates. If it does not operate, have the vehicle inspected by your Toyota dealer.

- Do not apply coatings that have a rain clearing (hydrophilic) effect, or other coatings, to the right lower part of the rear bumper.
- Do not park the vehicle near objects that may move and contact the right lower part of the rear bumper, such as grass or trees. If the vehicle has been parked for a while near objects that may move and contact the right lower part of the rear bumper, such as grass or trees, the kick sensor may not operate. In this situation, move the vehicle from the current position and then check if the kick sensor operates. If it does not operate, have the vehicle inspected by your Toyota dealer.
- Do not subject the kick sensor or its surrounding area to a strong impact. If the kick sensor or its surrounding area has been subjected to a strong impact, the kick sensor may not operate properly. If the kick sensor does not operate in the following situations, have the vehicle inspected by your Toyota dealer.
 - The kick sensor or its surrounding area has been subjected to a strong impact.
 - The right lower part of the rear bumper is scratched or damaged.
- Do not disassemble the rear bumper.
- Do not attach stickers to the rear bumper.
- Do not paint the rear bumper.
- If a bicycle carrier or similar heavy object is attached to the power back door, disable the kick sensor. (→P.143, 153)


Changing settings of the power back door system (vehicles with power back door)

The settings of the power back door system can be changed by displaying the "Vehicle Settings" - "PBD" screen from the  screen of the multi-information display. (→P.143, 153)

The changed power back door settings are not reset by turning the engine switch to OFF. In order to restore the original settings, they need to be changed back on the  screen of the multi-information display.

Adjusting the open position of the back door (vehicles with power back door)


The open position of the power back door can be adjusted.

- 1 Stop the back door in the desirable position. (→P.176)
- 2 Press and hold the  switch on the lower part of the back door for approximately 2 seconds.


When the settings are completed, the buzzer sounds 4 times.

When opening the back door the next time, the back door will stop at that


position.

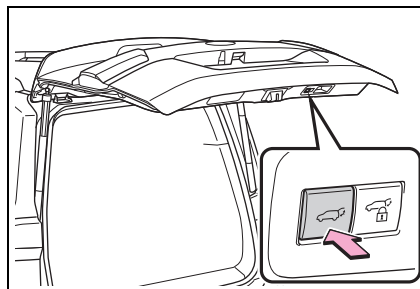

■ Canceling the adjusted open position of the back door

Press and hold the  switch on the lower part of the back door for approximately 7 seconds.


After the buzzer sounds 4 times, it sounds twice more. When the power back door does the opening operation the next time, the door will open to the initial settings position.

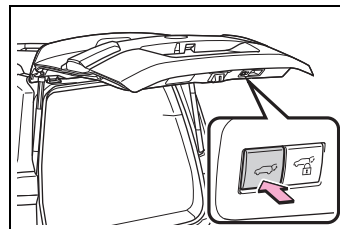

■ Customization

The opening position can be set with the multi-information display. (→P.143, 153)


Priority for the stop position is given to

the last position set by either the  switch on the lower part of the back door or multi-information display.

Rear step bumper (if equipped)

The rear step bumper is for rear end protection and easier step-up

loading.

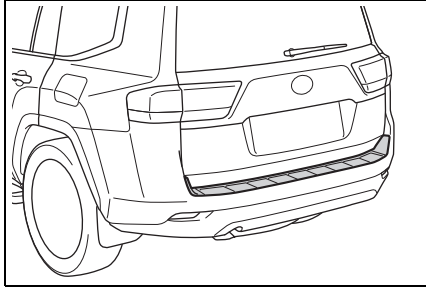


Smart entry & start system

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key.

- Locks and unlocks the doors (→P.169)
- Locks and unlocks the back door (→P.175)
- Starts the engine (→P.256)


■ Antenna location

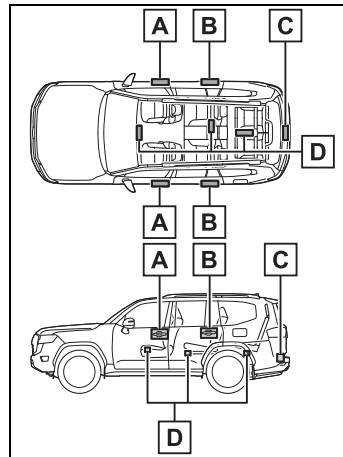

- A** Antennas outside the cabin (front)
- B** Antennas outside the cabin (rear) (if equipped)
- C** Antenna outside the luggage compartment

D Antennas inside the cabin

Effective range (areas within which the electronic key is detected)

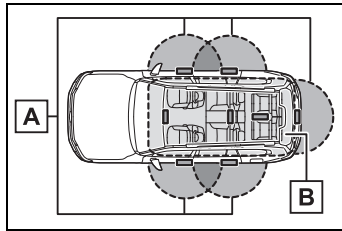

A When locking or unlocking the doors

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of the front door handles, rear door handles (if equipped) and back door opener switch. (Only the doors detecting the key can be operated.)

B When starting the engine or changing engine switch modes

The system can be operated when the electronic key is inside the vehicle.

If an alarm sounds or a warning message is displayed

An alarm sounds and warning message displays shown on the multi-information display are used to protect against unexpected accidents or theft of the vehicle resulting from erroneous operation. When a warning message is displayed, take appropriate measures based on the displayed message.

When only an alarm sounds, circumstances and correction procedures are as follows.

- When an exterior alarm sounds once for 5 seconds

Situation	Correction procedure
An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.

- When an interior alarm pings continuously

Situation	Correction procedure
The engine switch was turned to ACC while the driver's door was open (or the driver's door was opened while the engine switch was in ACC).	Turn the engine switch to OFF and close the driver's door.



Battery-saving function

The battery-saving function will be activated in order to prevent the electronic key battery and the battery from being discharged while the vehicle is not in operation for a long time.

- In the following situations, the smart entry & start system may take some time to unlock the doors.
 - The electronic key has been left in an area of approximately 3.5 m (11.5 ft.) of the outside of the vehicle for 2 minutes or longer.
 - The smart entry & start system has not been used for 5 days or longer.
 - If the smart entry & start system has not been used for 14 days or longer, the doors cannot be unlocked at any doors except the driver's door. In this case, take hold of the driver's door handle, or use the wireless remote control or the mechanical key, to unlock the doors.


■ **Turning an electronic key to battery-saving mode**

- When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press  twice while pressing and holding .

Confirm that the electronic key indicator flashes 4 times.

While the battery-saving mode is set, the smart entry & start system cannot be used. To cancel the function, press any of the electronic key buttons.

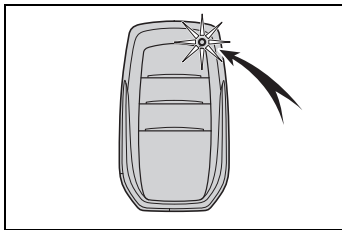

- Electronic keys that will not be used for long periods of time can be set to the battery-saving mode in advance.

■ **Conditions affecting operation**

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and engine immobilizer system from operating properly.

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the electronic key is in contact with, or is covered by the following metallic objects
 - Cards to which aluminum foil is attached

- Cigarette boxes that have aluminum foil inside
- Metallic wallets or bags
- Coins
- Hand warmers made of metal
- Media such as CDs and DVDs

- When other wireless key (that emits radio waves) is being used nearby

- When carrying the electronic key together with the following devices that emit radio waves

- Portable radio, cellular phone, cordless phone or other wireless communication devices
- Another vehicle's electronic key or a wireless key that emits radio waves
- Personal computers or personal digital assistants (PDAs)
- Digital audio players
- Portable game systems

- If window tint with a metallic content or metallic objects are attached to the rear window

- When the electronic key is placed near a battery charger or electronic devices

- When the vehicle is parked in a pay parking spot where radio waves are emitted.

If the doors cannot be locked/unlocked using the smart entry & start system, lock/unlock the doors by performing any of the following:

- Bring the electronic key close to either front door handle and operate the entry function.

- Operate the wireless remote control.

If the doors cannot be locked/unlocked using the above methods, use the mechanical key. (→P.168)

If the engine cannot be started using the smart entry & start system, refer to P.728.

■ **Note for the entry function**

- Even when the electronic key is within the effective range (detection areas),

the system may not operate properly in the following cases:

- The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
 - The electronic key is on the instrument panel, luggage cover (if equipped) or floor, or in the door pockets or glove box when the engine is started or engine switch modes are changed.
 - Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
 - As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
 - Even if the electronic key is not inside the vehicle, it may be possible to start the engine if the electronic key is near the window.
 - The doors may unlock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The doors will automatically be locked after approximately 30 seconds if the doors are not opened and closed.)
 - If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
 - Touching the door lock sensor while wearing gloves may delay or prevent lock operation. Remove the gloves and touch the lock sensor again.
 - When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition signals will be given. (if equipped)
 - If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:
 - Place the electronic key in a location 2 m (6 ft.) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
 - Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P.192)
 - If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
 - The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again, or use the lock sensor on the lower part of the door handle.
 - A sudden approach to the effective range or door handle may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.
 - If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.
- **When the vehicle is not driven for extended periods**
- To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
 - The smart entry & start system can be deactivated in advance. (→P.765)

- Battery-saving mode can reduce the power consumption of electronic keys. (→P.192)

■ **To operate the system properly**

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention may not operate.)

■ **If the smart entry & start system does not operate properly**

- Locking and unlocking the doors: Use the mechanical key. (→P.728)
- Starting the engine: →P.728

■ **Customization**

Settings (e.g. smart entry & start system) can be changed. (Customizable features: →P.765)

If the smart entry & start system has been deactivated in a customized setting, refer to the explanations for the following operations.

- Locking and unlocking the doors: Use the wireless remote control or mechanical key. (→P.169, 728)
- Starting the engine and changing engine switch modes: →P.728
- Stopping the engine: →P.258

 **WARNING**

■ **Caution regarding interference with electronic devices**

- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas. (→P.190)
The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask your Toyota dealer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.
- User of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.


Ask your Toyota dealer for details for disabling the entry function.

Front seats

The seats can be adjusted (longitudinally, vertically, etc.). Adjust the seat to ensure the correct driving posture.


Adjustment procedure

► Manual seat

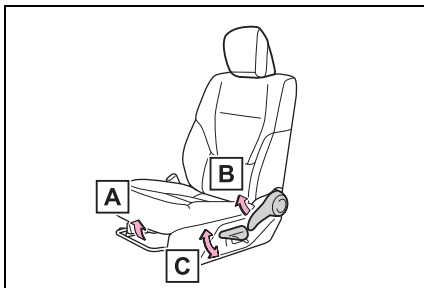

- A** Seat position adjustment lever
- B** Seatback angle adjustment lever
- C** Vertical height adjustment lever (driver's side only)

► Power seat

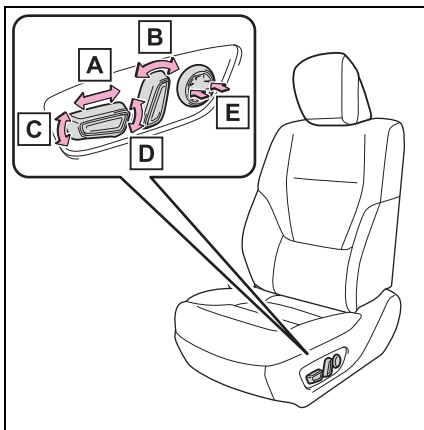

- A** Seat position control switch
- B** Seatback angle control switch
- C** Seat cushion (front) angle control switch
- D** Vertical height control switch
- E** Lumbar support control switch (driver's side only)

■ When adjusting the seat

- Make sure that any surrounding passengers or objects are not contact the seat.
- Take care when adjusting the seat so that the head restraint does not touch the ceiling.

■ Power easy access system (vehicles with driving position memory)

The driver's seat and steering wheel move in accordance with engine switch mode and the driver's seat belt condition. (→P.220)

■ Jam protection function (vehicles with driving position memory)

While the driving position is recalled or the power easy access system is operating, if an object is stuck behind the front seat, the front seat will stop and then slightly move forward. When the jam protection function operates, the seat stops at a position other than the set seat position. Check the seat position.

WARNING

■ When adjusting the seat position

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.

⚠ WARNING

- Do not put your hands under the seat or near the moving parts to avoid injury. Fingers or hands may become jammed in the seat mechanism.
- Make sure to leave enough space around the feet so they do not get stuck.
- Manual seat only: After adjusting the seat, make sure that the seat is locked in position.

■ Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary. If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident. Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.


Rear seats

The reclining angle can be adjusted and the seatback can be folded by operating the lever or switch.

Adjustment procedure


- ▶ Second seat

Pull the lever and adjust the seat-back

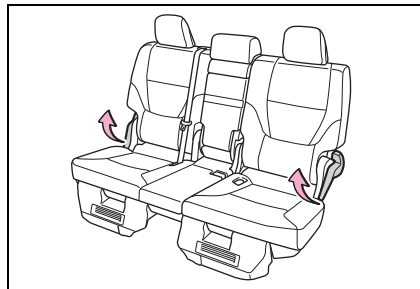


- ▶ Third seat (manual type) (if equipped)

Pull the lever and adjust the seat-back

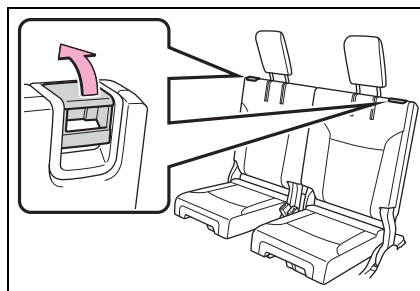

- ▶ Third seat (power type) (if equipped)


Press the switch and adjust the seatback

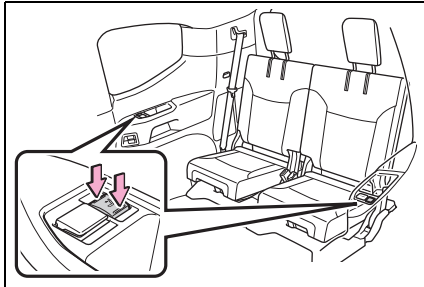

Folding down second center seatback (vehicles with armrest)

Pull the center seatback lock release lever behind the seatback and fold it down.

To return the center seatback to its original position, lift it up until it locks.

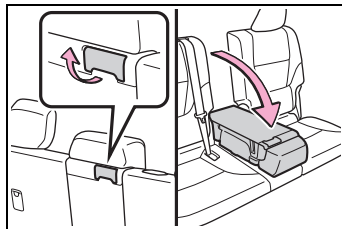

WARNING

When folding the seatbacks down

Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not fold the seatbacks down while driving.
- Stop the vehicle on level ground, set the parking brake and shift the shift lever to P.
- Do not allow anyone to sit on a folded seatback or in the luggage compartment while driving.
- Do not allow children to enter the luggage compartment.

Adjusting the reclining angle

Do not fold the seatback more than required. During a collision, your body could slip beneath the seat belt resulting in extreme pressure being applied to your abdomen, or the shoulder belt could wrap around your neck, which may result in death or serious injury.

NOTICE

When operating the rear seat

- Be careful that your hands and legs do not get caught in moving parts or connection areas.
- Do not arrange seats while they are occupied.

When entering and exiting the third seat (if equipped)

For easy access to the third seat, perform **1** in "Tumbling the second seats". (→P.198)


When tumbling the second seats

Before tumbling the second seats

- 1** Stow the seat belt buckles and lower the head restraints to the lowest position.

Use the band to secure the center seat


buckle.

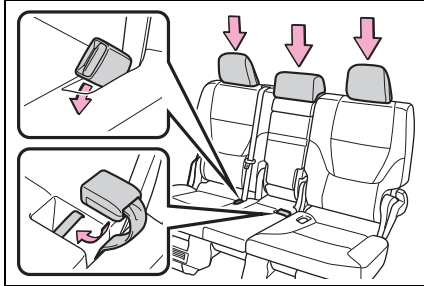

- 2 Pass the outer seat belts through the seat belt hangers and secure the seat belt plates.

This prevents the shoulder belt from being damaged.

Make sure that the seat belts are removed from the hangers before using them.

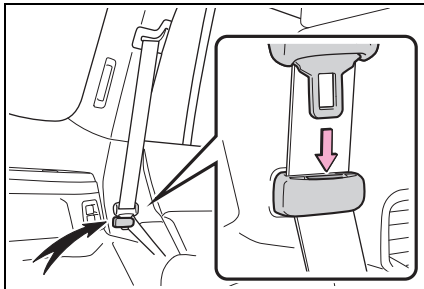


■ **Tumbling the second seats**


- 1 Pull the lever

The seatback is folded forward and the

seat springs up.

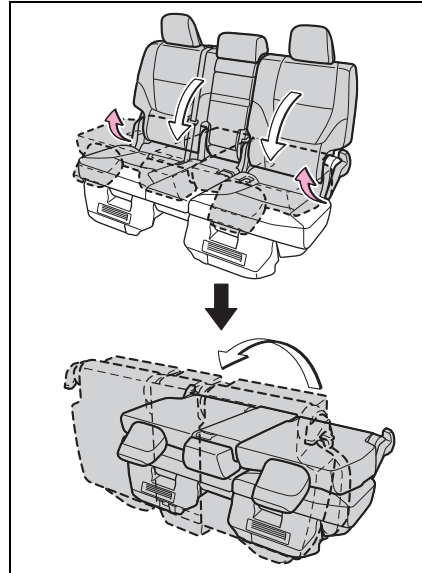


- 2 Open the cover and then attach the hook to the assist grip to prevent the seat from moving

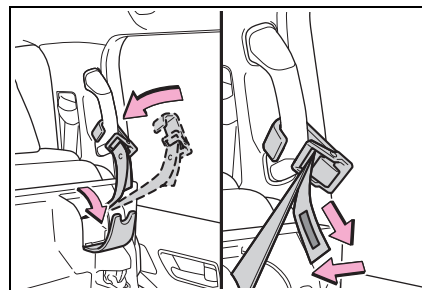

- 3 Remove the seat hook covers from the back of the seat cushion.

ion, and install them on the seat hooks.

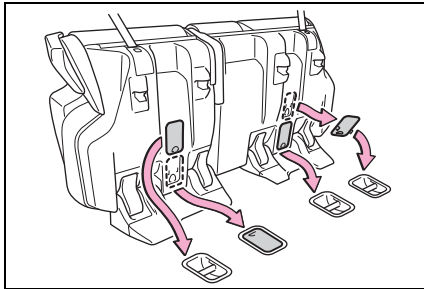

⚠ WARNING


- **When tumbling the second seat**
 - Do not sit on or place anything on the seatback while driving.
 - Be sure to install the seat hook covers on the seat hooks, or you may get burned when they become hot.
 - Do not tumble the second seat with any electrical devices left connected to the accessory outlet or charging USB port* on the rear of the console box. The second seat could strike the electrical device and damage it.
- *: If equipped

Returning the second seat to its original position


1 Detach the hook from the assist grip

If detaching from the assist grip is diffi-

cult, loosen the belt.

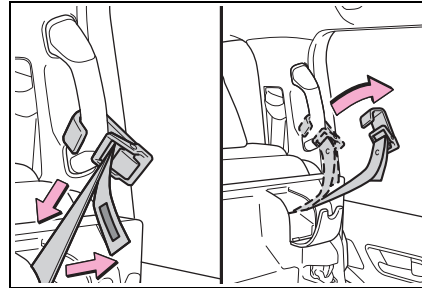

2 Stow the hook and tumble band, and then close the cover

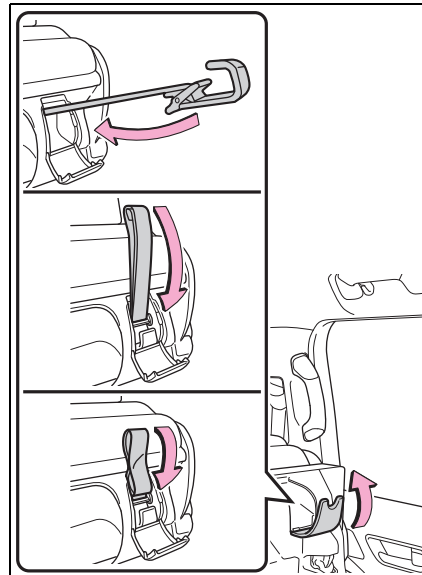


3 Return the seat to its original position.

3


Before driving

Push the seat until it is locked.

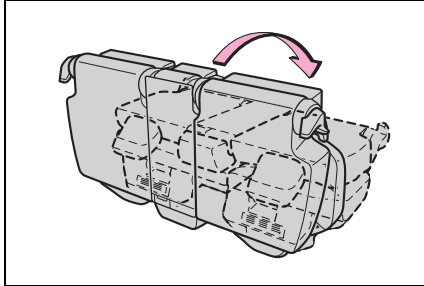


4 Lift the seatback.

Lift it until it is locked.

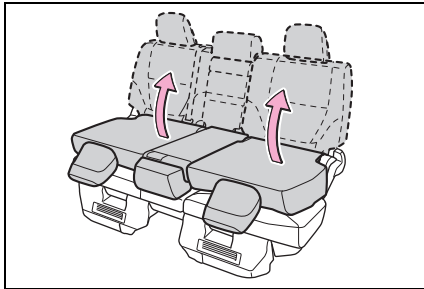

■ If you cannot raise the seatback (vehicles with armrest)

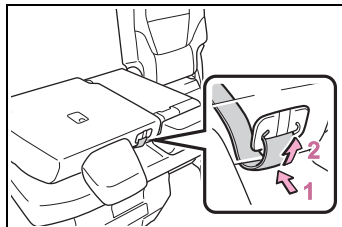


- 1** Pushing on the lower front edge of the seatback to slacken the seat belt.
- 2** Let the seat belt retract a little.


⚠ WARNING

■ When returning the seat to its original position

- Make sure the seat legs are securely latched to the floor when putting back the seats.

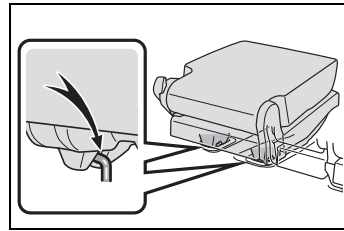

- When returning the second seat to the original position, be careful not to get your hand or foot of the third seat passengers caught between the second seat and the floor.

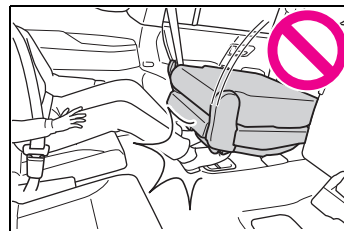

■ After returning the seat to its original position

- After returning the seat to its original position, gently shake it to the front and rear and check that it is secure
- Do not pinch the seat belt
- Make sure that the seat belt is removed from the hanger as before


When stowing the third seat (manual type)

■ **Before stowing the third seats**

- 1 Pass the seat belts through the seat belt hangers and secure the seat belt plates.

This prevents the shoulder belt from being damaged.


Make sure that the seat belts are removed from the hangers before using them.

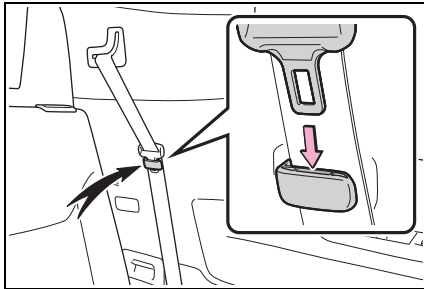

- 2 Adjust the seatback of the second seat so that it does not interfere with the third seat. (→P.196)

■ **Stowing the third seats**


- 1 Pull the strap and fold the head restraint

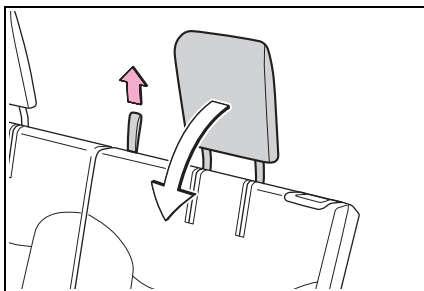

- 2 Pull the lever and fold the seatback

The seat cushion is stowed into the

floor when the seatback is folded.

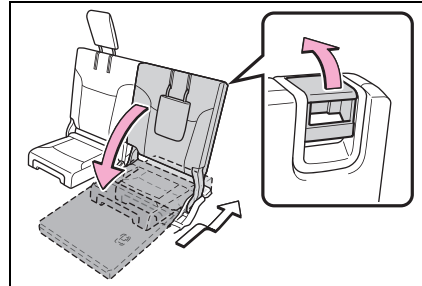

WARNING

■ **When stowing the third seats**

Observe the following precautions. Failure to do so may result in death or serious injury.

- Check that there is no luggage and that there are no other people around the seat before stowing operation.
- Conduct the procedure slowly and carefully.
- Do not insert hands or feet into the moving parts of the seat.
- Do not allow children to operate the seat.
- Do not use the seat if only the seat cushion has been stowed.

NOTICE


■ **When stowing the third seats**

If there is a luggage cover attached to the vehicle, remove the luggage cover. (→P.600) The third seat could strike the luggage cover and damage it.


Returning the third seat (manual type) to its original position

- 1 Pull the lever while lifting the seatback


Lift the seatback until it locks.

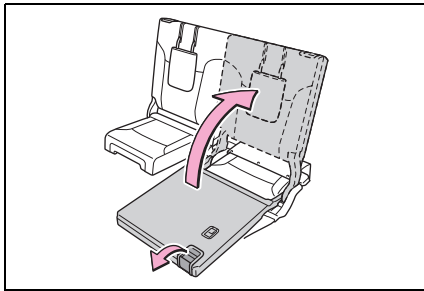

- 2 Pull the grip and pull out the seat cushion

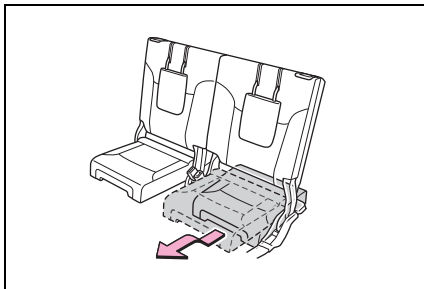


- 3 Lift the head restraint

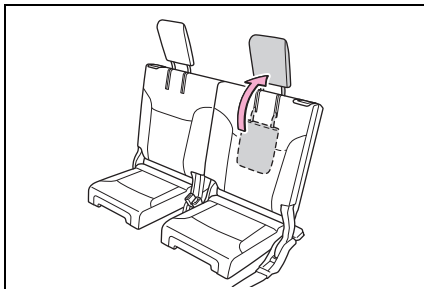

WARNING

- After returning the seat to its original position
- After returning the seat to its original position, gently shake it to the front and rear and check that it is secure
- Do not pinch the seat belt
- Make sure that the seat belt is removed from the hanger as before

Third power seat control switches (if equipped)

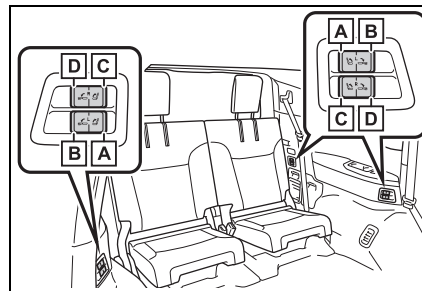

- A Left seat return switch
- B Left seat stow switch
- C Right seat return switch
- D Right seat stow switch

Operation can also be performed using both the seat and back door switches.

■ The third power seats can be operated when

When the engine switch is off, or ON with the shift lever in P

■ Switch operation

- Do not release the switch while the third seat is operating. Releasing the switch will cause the seat to stop operating and will sound a (continuous) buzzer. Press the switch again to

stop the buzzer.

- If the third seat is close to the second seat or other surrounding parts, third seat movement may be restricted.

■ If the warning buzzer sounds continuously

If a system malfunction occurs, the warning buzzer may continue to sound while the engine switch is on. In this case, perform the following.

- 1 Press and hold the return switch on the back door
- 2 Press the stow switch on the seat 5 times within 10 seconds, and check that the buzzer sounds 3 times
- 3 Press and hold the return switch on the seat or back door

After the seat is stowed, the warning buzzer will stop.

If the malfunction does not disappear even after performing this procedure above, have the vehicle inspected by your Toyota dealer.

When stowing the third seat (power type)


■ Before stowing the third seats

- 1 Pass the seat belts through the seat belt hangers and secure the seat belt plates.

This prevents the shoulder belt from being damaged.

Make sure that the seat belts are removed from the hangers before using

them.

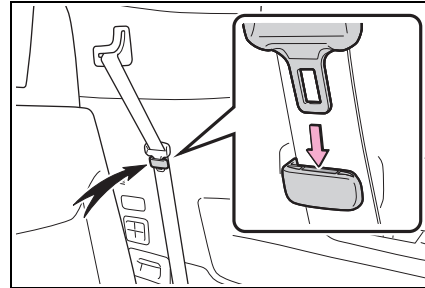


- 2 Adjust the seatback of the second seat so that it does not interfere with the third seat. (→P.196)

■ Stowing the third seat

Press and hold the stow switch to stow the third seat

After the buzzer sounds twice, the seatback will be folded down and the head restraint and seat cushion will be automatically stowed in the floor.

When the seat has been stowed, the buzzer will sound twice and operation will be automatically stopped. When the operation has been stopped, release the switch.

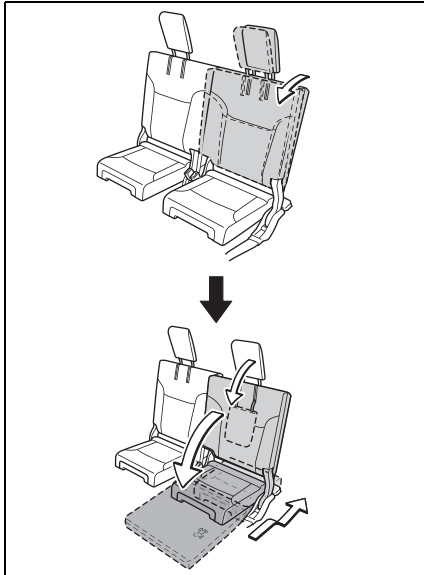

⚠ WARNING

■ **When stowing the third seats**

Observe the following precautions. Failure to do so may result in death or serious injury.

- Check that there is no luggage and that there are no other people around the seat before stowing operation.
- Do not insert hands or feet into the moving parts of the seat.
- Do not allow children to operate the seat.
- Do not use the seat if only the seat cushion has been stowed.

⚠ NOTICE

■ **When stowing the third seats**


If there is a luggage cover attached to the vehicle, remove the luggage cover. (→P.600) The third seat could strike the luggage cover and damage it.

Returning the third seat (power type) to its original position


- 1 Push and hold the return switch to return the third seats.

After the buzzer sounds twice, the seat-back and seat cushion will be started to move. Make sure not to release the switch before the operation has completed.

When the seat has been returned, the buzzer will sound twice and operation will be automatically stopped. When the operation has been stopped, release the switch.

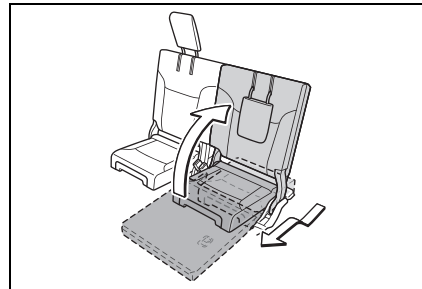

- 2 Lift the head restraint

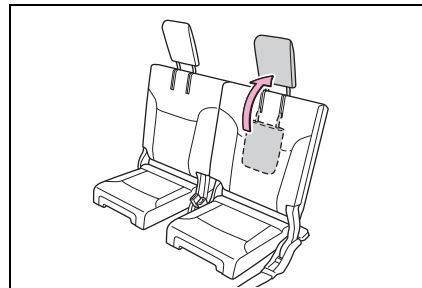

⚠ WARNING

■ **After returning the seat to its original position**

- Do not pinch the seat belt
- Make sure that the seat belt is removed from the hanger as before

⚠ WARNING

- Lift the head restraint to its original position

Head restraints

Head restraints are provided for all seats.


⚠ WARNING**■ Head restraint precautions**

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.
- Vehicles with third seat: When sitting on the third seat, make sure that the head restraint is not folded.

3


Before driving

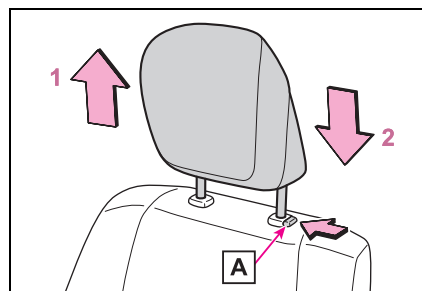Vertical adjustment**■ Front and outer second seats**

- 1 Up
- 2 Down

Push the head restraint down while pressing the lock release button **A**.

■ Second center seat

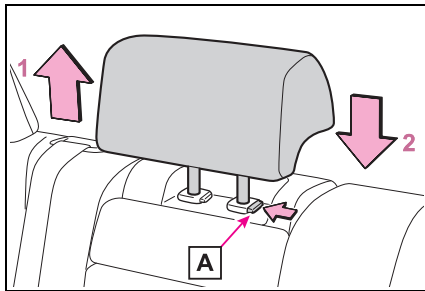


- 1 Up
- 2 Down

Push the head restraint down while pressing the lock release button **A**.

■ Adjusting the height of the head restraints (front and second seats)


Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

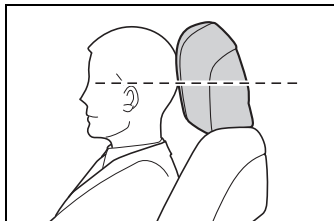

Horizontal adjustment (if equipped)

The position of the head restraint can be adjusted forward in 4 stages.

If the head restraint is pulled forward from the foremost position, it will return to the rearmost position.

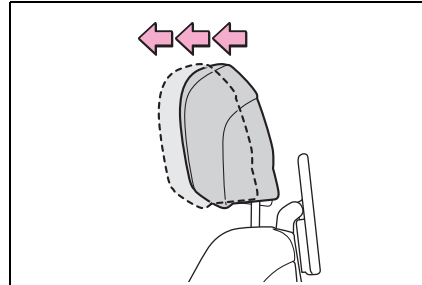


Folding the head restraint (third seats) (if equipped)

Folding the head restraint

Fold the head restraint while pulling the strap.

To return the head restraint, pull it up.

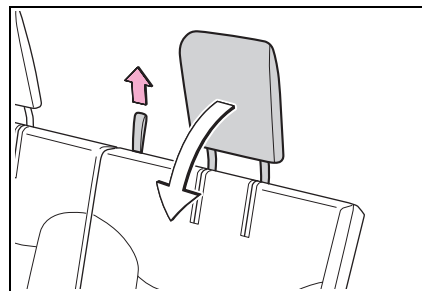


Removing the head restraints

■ Front and outer second seats

Pull the head restraint up while pressing the lock release button

A.

If the head restraint touches the ceiling, making the removal difficult, change the seat height or angle. (→P.195, 196)

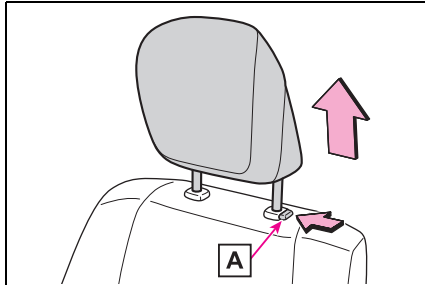


■ **Second center seat**

Pull the head restraint up while pressing the lock release button

A .

If the head restraint touches the ceiling, making the removal difficult, change the seat angle. (→P.196)

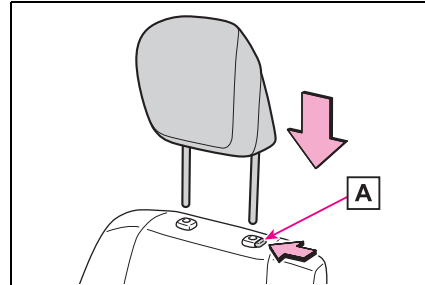


■ **Second center seat**

Align the head restraint with the installation holes and push it down to the lock position.


Press and hold the lock release button

A when lowering the head restraint.

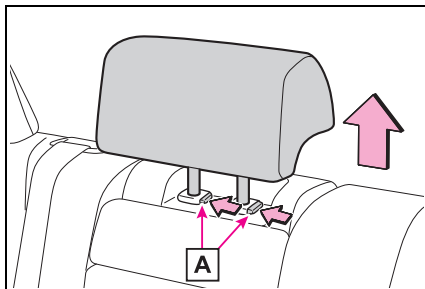

■ **Third seats (if equipped)**

The head restraint cannot be removed.

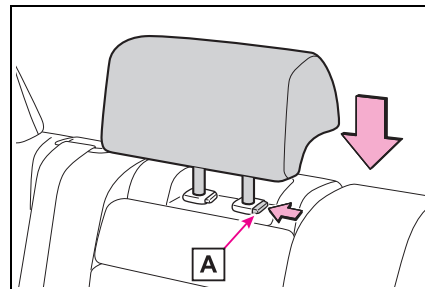

Installing the head restraints

■ **Front and outer second seats**

Align the head restraint with the installation holes and push it down to the lock position.

Press and hold the lock release button

A when lowering the head restraint.

3


Before driving

Steering wheel

Adjustment procedure


► Manual adjustment type

1 Hold the steering wheel and pull the lever down.

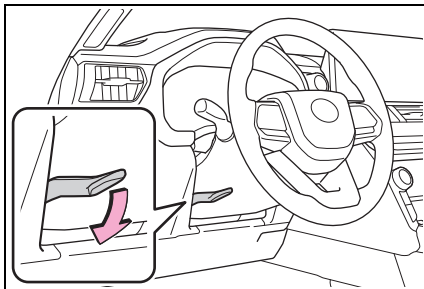


2 Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

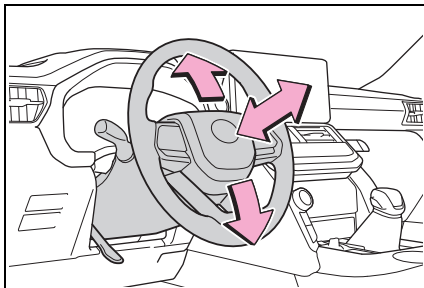

► Power adjustment type

Operating the switch moves the steering wheel in the following directions:

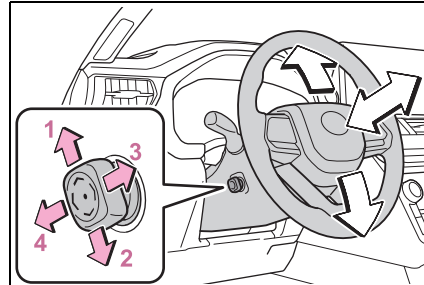

- 1 Up
- 2 Down
- 3 Toward the driver
- 4 Away from the driver

■ **The power adjustment type steering wheel can be adjusted when**

The engine switch is in ACC or ON.

■ **Power easy access system (if equipped)**

The steering wheel and driver's seat move in accordance with engine switch mode and the driver's seat belt condition. (→P.220)

■ **Automatic adjustment of the steering position (power adjustment type)**

A desired steering position can be entered to memory and recalled automatically by the driving position memory system. (→P.221)

■ **After adjusting the steering wheel (manual adjustment type)**

Make sure that the steering wheel is securely locked.

The horn may not sound if the steering wheel is not securely locked.

⚠ WARNING**■ Caution while driving**

Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

■ After adjusting the steering wheel (manual adjustment type)


Make sure that the steering wheel is securely locked.

Otherwise, the steering wheel may move suddenly, possibly causing an accident, and resulting in death or serious injury. Also, the horn may not sound if the steering wheel is not securely locked.


Auto tilt away (power adjustment type)

When the engine switch is turned off, the steering wheel returns to its stowed position by moving up and away to enable easier driver entry and exit.

Turning the engine switch to ACC or ON will return the steering wheel to the original position.

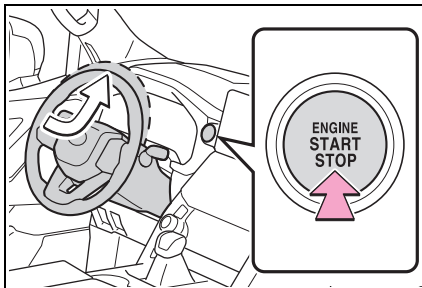**Sounding the horn**

To sound the horn, press on or close to the  mark.

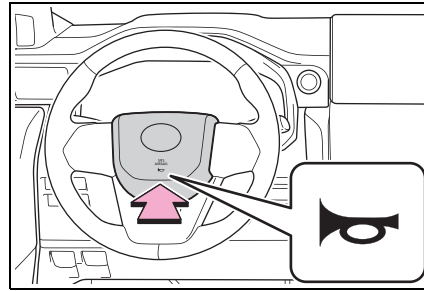

3

Before driving


Inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

Adjusting the height of rear view mirror

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

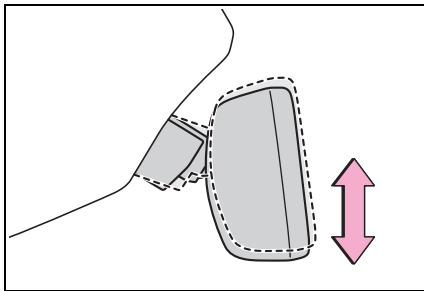

! WARNING


■ Caution while driving

Do not adjust the position of the mirror while driving. Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

Anti-glare function

- ▶ Manual anti-glare inside rear view mirror

Reflected light from the headlights of vehicles behind can be reduced by operating the lever.

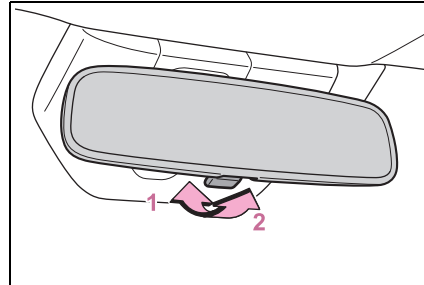

- 1 Normal position
- 2 Anti-glare position

- ▶ Auto anti-glare inside rear view mirror


Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

Changing automatic anti-glare function mode ON/OFF

When the automatic anti-glare function is in ON mode, the indicator **A** illuminates.


The function will be set to ON mode each time the engine switch is turned to ON.

Pressing the button turns the function to OFF mode. (The indicator **A** also turns off.)

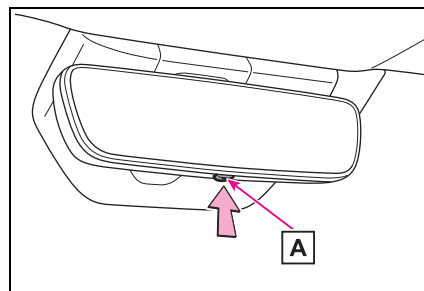

■ **To prevent sensor error (vehicles with auto anti-glare inside rear view mirror)**

To ensure that the sensors operate properly, do not touch or cover them.

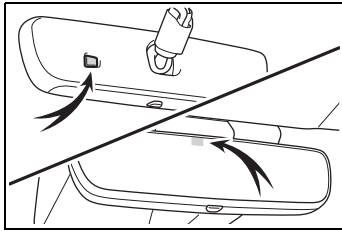

Outside rear view mirrors

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

■ **Defogging the mirrors (if equipped)**

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. (→P.559, 571)

■ **Auto anti-glare function (if equipped)**

When the anti-glare inside rear view mirror is set to auto mode, the outside rear view mirrors will activate in conjunction with the anti-glare inside rear view mirror to reduce reflected light. (→P.210)



WARNING

■ **Important points while driving**

Observe the following precautions while driving.

Failing to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

■ **When the mirror defoggers are operating (if equipped)**

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.




NOTICE

■ If ice should jam the mirror

Do not operate the control or scrape the mirror face. Use a spray de-icer to free the mirror.

Adjustment procedure


- 1 To select a mirror to adjust, turn the switch.

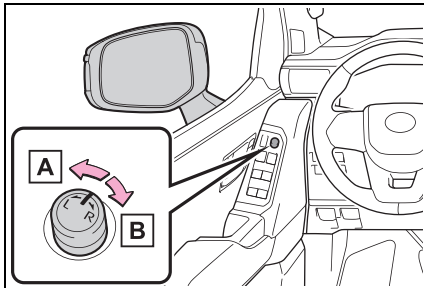

A Left

B Right

- 2 To adjust the mirror, operate the switch.

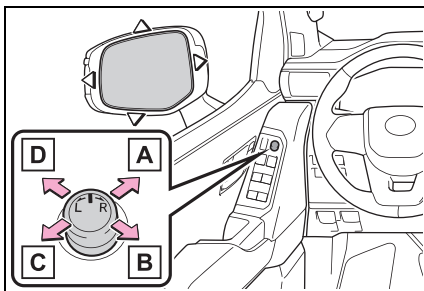

A Up

B Right

C Down

D Left

■ Mirror angle can be adjusted when


The engine switch is in ACC or ON.

■ Automatic adjustment of the mirror angle (if equipped)

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory. (→P.221)

Folding and extending the mirrors


- ▶ Vehicles without automatic mode

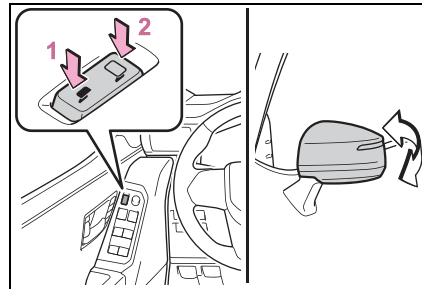

1 Folds the mirrors

2 Extends the mirrors

- ▶ Vehicles with automatic mode

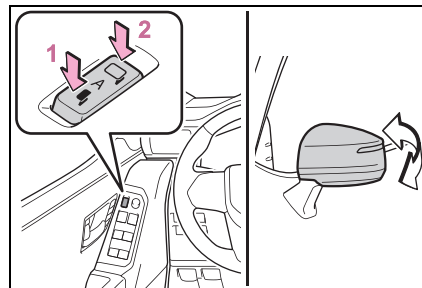

1 Folds the mirrors

2 Extends the mirrors

Putting the outside rear view mirror folding switch in the neutral position sets the mirrors to automatic mode. Automatic mode allows the folding or

extending of the mirrors to be linked to locking/unlocking of the doors.

■ **Using automatic mode in cold weather (vehicles with automatic mode)**

When automatic mode is used in cold weather, the door mirror could freeze up and automatic stowing and return may not be possible. In this event, remove any ice and snow from the door mirror, then either operate the mirror using manual mode or move the mirror by hand.

■ **Customization (vehicles with automatic mode)**

The automatic mirror folding and extending operation can be changed. (Customizable features: →P.768)



WARNING

■ **When a mirror is moving**

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

Linked mirror function when reversing (if equipped)

When the mirror select switch is in the L or R position, the outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground.

To disable this function, move the mirror select switch to the neutral position (between L and R).

■ **Adjusting the mirror angle when the vehicle is reversing**

With the shift lever in R, adjust the mirror angle at a desired position.

The adjusted angle will be memorized and the mirror will automatically tilt to the memorized angle whenever the shift lever is shifted to R from next time.

The memorized downward tilt position of the mirror is linked to the normal position (angle adjusted with the shift lever in other than R). Therefore, if the normal position is changed after adjustment, the tilt position will also change.


When the normal position is changed, readjust the angle in reversing.

Power windows

Opening and closing the power windows

The power windows can be opened and closed using the switches.

Operating the switch moves the windows as follows:

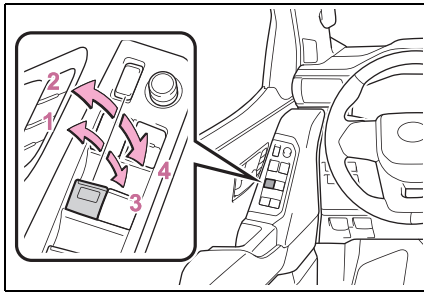

- 1 Closing
- 2 One-touch closing*
- 3 Opening
- 4 One-touch opening*

*: To stop the window partway, operate the switch in the opposite direction.

■ The power windows can be operated when

The engine switch is in ON.

■ Operating the power windows after turning the engine off

The power windows can be operated for approximately 45 seconds even after the engine switch is turned to ACC or turned off. They cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object becomes jammed between the window and the window frame while the window is closing, window movement is stopped and the window is

opened slightly.

■ Catch protection function

If an object becomes caught between the door and window while the window is opening, window movement is stopped.

■ When the window cannot be opened or closed

When the jam protection function or catch protection function operates unusually and the door window cannot be opened and closed, perform the following operations with the power window switch of that door.

- Stop the vehicle. With the engine switch in ON, within 4 seconds of the jam protection function or catch protection function activating, continuously operate the power window switch in the one-touch closing direction or one-touch opening direction so that the door window can be opened and closed.
- If the door window cannot be opened and closed even when performing the above operations, perform the following procedure for function initialization.
 - 1 Turn the engine switch to ON.
 - 2 Pull and hold the power window switch in the one-touch closing direction and completely close the side window.
 - 3 Release the power window switch for a moment, resume pulling the switch in the one-touch closing direction, and hold it there for approximately 6 seconds or more.
 - 4 Press and hold the power window switch in the one-touch opening direction. After the door window is completely opened, continue holding the switch for an additional 1 second or more.
 - 5 Release the power window switch for a moment, resume pushing the switch in the one-touch opening direction, and hold it there for approximately 4 seconds or more.

- 6 Pull and hold the power window switch in the one-touch closing direction again. After the side window is completely closed, continue holding the switch for a further 1 second or more.

If you release the switch while the window is moving, start again from the beginning.

If the window reverses and cannot be fully closed or opened, have the vehicle inspected by your Toyota dealer.

■ Door lock linked window operation (if equipped)

- The power windows can be opened and closed using the mechanical key.* (→P.728)
- The power windows can be opened and closed using the wireless remote control.* (→P.169)
- Vehicles with intrusion sensor: if the power windows are closed using the door lock linked window operation when the alarm system is set, the alarm may be triggered.

*: These settings must be customized at your Toyota dealer.

■ Power window open reminder function

A message is shown on the multi-information display when the engine switch is turned to OFF and the driver's door is opened with the power windows open.

■ Customization

Settings (e.g. linked door lock operation) can be changed. (Customizable features: →P.768)



WARNING

Observe the following precautions. Failing to do so may result in death or serious injury.

■ Closing the windows

- The driver is responsible for all the power window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power windows. It is possible for children and other passengers to have body parts caught in the power window. Also, when riding with a child, it is recommended to use the window lock switch. (→P.216)

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.

- When using the wireless remote control or mechanical key and operating the power windows, operate the power window after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window. Also, do not let a child operate window by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the power window.

- When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

■ Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets jammed just before the window is fully closed. Be careful not to get any part of your body jammed in the window.



WARNING

■ **Catch protection function**

- Never use any part of your body or clothing to intentionally activate the catch protection function.
- The catch protection function may not work if something gets caught just before the window is fully opened. Be careful not to get any part of your body or clothing caught in the window.

after reconnecting the battery.


Preventing accidental operation (window lock switch)

This function can be used to prevent children from accidentally opening or closing a passenger window.

Press the switch.

The indicator **A** will come on and the passenger windows will be locked.

The passenger windows can still be opened and closed using the driver's switch even if the lock switch is on.

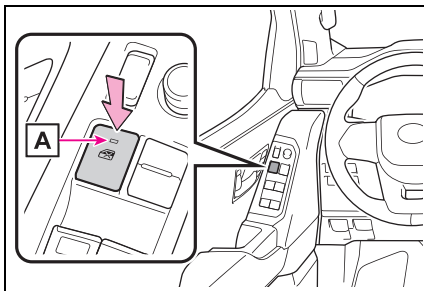

■ **The window lock switch can be operated when**

The engine switch is in ON.

■ **When the battery is disconnected**

The window lock switch is disabled. If necessary, press the window lock switch


Moon roof*

*: If equipped

Use the overhead switches to open and close the moon roof and tilt it up and down.

Operating the moon roof

■ Opening and closing

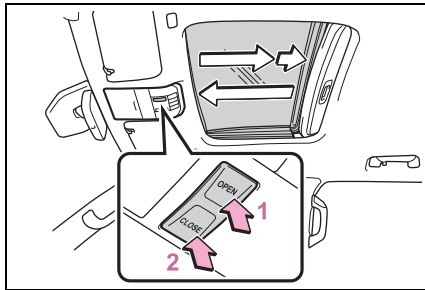

1 Opens the moon roof*


The moon roof stops slightly before the fully open position to reduce wind noise.

Press the switch again to fully open the moon roof.

2 Closes the moon roof*

*: Lightly press either end of the moon roof switch to stop the moon roof partway.

■ Tilting up and down

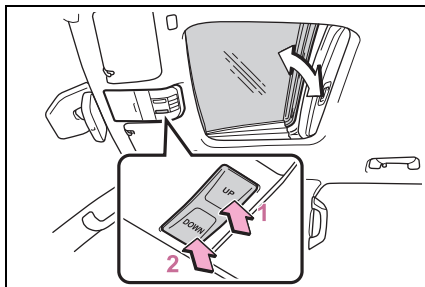

1 Tilts the moon roof up*

2 Tilts the moon roof down*

*: Lightly press either end of the moon roof switch to stop the moon roof partway.

■ The moon roof can be operated when

The engine switch is in ON.

■ Operating the moon roof after turning the engine off

The moon roof can be operated for approximately 45 seconds after the engine switch is turned to ACC or turned off. It cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object is detected between the moon roof and the frame while the moon roof is closing or tilting down, travel is stopped and the moon roof opens slightly.

■ Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

■ Door lock linked moon roof operation (if equipped)

- The moon roof can be opened and closed using the mechanical key.* (→P.728)
- The moon roof can be opened and closed using the wireless remote control.* (→P.169)
- Vehicles with intrusion sensor: if the moon roof is closed using the door lock linked window operation when the alarm system is set, the alarm may be triggered.

*: These settings must be customized at your Toyota dealer.

■ **When the moon roof does not close normally**

Perform the following procedure:

- If the moon roof closes but then re-opens slightly
 - 1 Stop the vehicle.
 - 2 Press and hold the “CLOSE” switch.*1
The moon roof will close, re-open and pause for approximately 10 seconds.*2 Then it will close again, tilt up and pause for approximately 1 second. Finally, it will tilt down, open and close.
 - 3 Check to make sure that the moon roof is completely closed and then release the switch.
- If the moon roof tilts down but then tilts back up
 - 1 Stop the vehicle.
 - 2 Press and hold the “UP” switch*1 until the moon roof moves into the tilt up position and stops.
 - 3 Release the “UP” switch once and then press and hold the “UP” switch again.*1

The moon roof will pause for approximately 10 seconds in the tilt up position.*2 Then it will adjust slightly and pause for approximately 1 second. Finally, it will tilt down, open and close.

- 4 Check to make sure that the moon roof is completely closed and then release the switch.

*1: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

*2: If the switch is released after the above mentioned 10 second pause, automatic operation will be disabled. In that case, press and hold the “CLOSE” or “UP” switch, and the moon roof will tilt up and pause for approximately 1 second. Then it will tilt down, open and close. Check to

make sure that the moon roof is completely closed and then release the switch.

If the moon roof does not fully close even after performing the above procedure correctly, have the vehicle inspected by your Toyota dealer.

■ **Moon roof open reminder function**

A message is shown on the multi-information display when the engine switch is turned to OFF and the driver’s door is opened with the moon roof open.

■ **Customization**

Settings (e.g. linked door lock operation) can be changed. (Customizable features: →P.768)



WARNING

Observe the following precautions. Failure to do so may cause death or serious injury.

■ **Opening the moon roof**

- Do not allow any passengers to put their hands or head outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

■ **Opening and closing the moon roof**

- The driver is responsible for moon roof opening and closing operations. In order to prevent accidental operation, especially by a child, do not let a child operate the moon roof. It is possible for children and other passengers to have body parts caught in the moon roof.
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the moon roof is being operated.

**WARNING**

- When using the wireless remote control or mechanical key and operating the moon roof, operate the moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the moon roof. Also, do not let a child operate moon roof by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the moon roof.
 - When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.
- **Jam protection function**
- Never use any part of your body to intentionally activate the jam protection function.
 - The jam protection function may not work if something gets caught just before the moon roof is fully closed.

Driving position memory*

*: If equipped

This feature automatically adjusts the positions of the driver's seat, steering wheel, outside rear view mirrors and head-up display (if equipped) to make entering and exiting the vehicle easier or to suit your preferences.

When My Settings is turned on:

Up to 3 different driving positions can be recorded for each the driver and guest that have been registered for My Settings.

When electronic key assignment is registered for My Settings, the driving position for each driver can be recalled (memory recall function).

When My Settings is turned off:

Up to 3 different driving positions can be recorded.


Each electronic key can be registered to recall your preferred driving position (memory recall function).

For details about My Settings, refer to P.224.

Enabling easier driver entry and exit (power easy access system)

When all of the following have been performed, the driver's seat and steering wheel are automatically adjusted to a position that allows driver to enter and exit the vehicle easily.

- The shift lever has been shifted to P.
- The engine switch has been turned to OFF.
- The driver's seat belt has been unfastened.

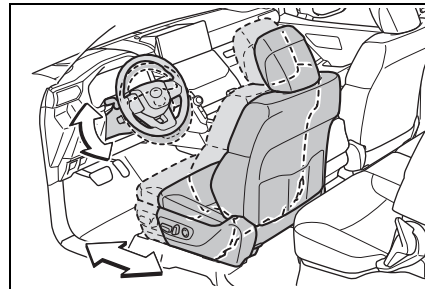

When any of the following has been performed, the driver's seat and steering wheel automatically return to their original positions.

- The engine switch has been turned to ACC or ON.
- The driver's seat belt has been fastened.

■ Operation of the power easy access system

When exiting the vehicle, the power easy access system may not operate if the seat is already close to the rearmost

position, etc.

■ Customization

The seat movement amount settings of the power easy access system can be customized. (Customizable features: →P.767)

! WARNING

■ While the power easy access system is operating and the steering wheel and seat is moving


Be careful not to get body parts or luggage caught. Failure to do so may cause an injury or damage to the luggage.

Recording a driving position into memory button

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to ON.
- 3 Adjust the driver's seat, steering wheel, outside rear view mirrors and head-up display (if equipped) to the desired positions.
- 4 While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1", "2" or "3" until the buzzer sounds.

If the selected button has already been preset, the previously recorded position

will be overwritten.

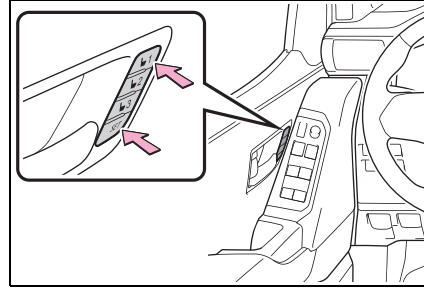

■ Seat position that can be memorized (→P.195)

The adjusted positions other than the position adjusted by lumbar support switch can be recorded.

■ In order to correctly use the driving position memory function

If a seat position is already in the furthest possible position and the seat is operated in the same direction, the recorded position may be slightly different when it is recalled.

! WARNING

■ Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.


Recalling a driving position

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to ON.

3

Before driving

- 3 Press one of the buttons for the driving position you want to recall until the buzzer sounds.

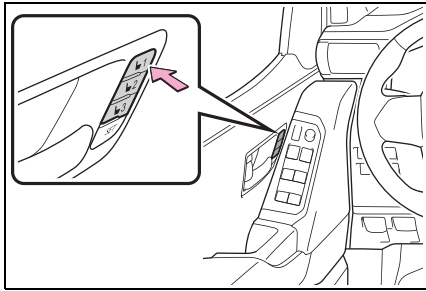

■ **To stop the position recall operation part-way through**

Perform any of the following:

- Press the "SET" button.
- Press button "1", "2" or "3".
- Operate any of the seat adjustment switches (only cancels seat position recall).
- Operate the tilt and telescopic steering control switch (only cancels steering wheel position recall).

■ **Operating the driving position memory after turning the engine switch off**

Recorded seat positions can be activated up to 180 seconds after the driver's door is opened and another 60 seconds after it is closed again.

■ **When recalling the driving position**

Take care when recalling the driving position so that the head restraint does not touch the ceiling.

■ **When the recorded seat position cannot be recalled**

The seat position may not be recalled in some situations when the seat position is recorded in a certain range. For details, contact your Toyota dealer.

Recalling a driving position automatically when getting in the vehicle (memory recall function)

■ **When My Settings is turned on (an individual is identified with an electronic key):**

The driving positions can be automatically recalled for each registered driver by registering electronic key assignments in My Settings.

- Driving position registration procedure

When the shift lever is shifted to P after driving the vehicle, the current driving position will be recorded.

- Driving position recall procedure

- 1 Carry only the key that has been assigned and registered in My Settings, and then unlock and open the driver's door using the smart entry & start system or wireless remote control.

The driving position other than the steering wheel and head-up display (if equipped) will move to the recorded position. However, the seat will move to a position slightly behind the recorded position in order to make entering the vehicle easier.

If the driving position is in a position that has already been recorded, the driving position will not move.

- 2 Turn the engine switch to ACC or ON.

The seat, steering wheel and head-up display (if equipped) (only when the engine switch is in ON) will move to the recorded position.

- Memory recall function cancellation procedure

Initialize the driver registered settings in My Settings (→P.227).

■ **When My Settings is turned on (to identify an individual with fingerprint information) (vehicles with fingerprint authentication system):**

The driving position can automatically be recalled for each registered driver by registering fingerprint information on the fingerprint authentication system.

- Driving position registration procedure

When the shift lever is shifted to P after driving the vehicle, the current driving position will be recorded.

- Driving position recall procedure

Turn the engine switch to ACC or ON.

After fingerprint authentication was successful, the seat, steering wheel and head-up display (if equipped) (only when the engine switch is turned on) move to the registered driving position.

If the driving position is in a position that has already been recorded, the driving position will not move.

- Memory recall function cancellation procedure

Delete fingerprint information on the fingerprint authentication.(→P.117)

■ **When My Settings is turned off:**

Each electronic key can be registered to automatically recall your preferred driving position.

- Driving position registration procedure


Record your driving position to button "1", "2" or "3" before performing the following:

Carry only the key you want to register, and then close the driver's door.

If 2 or more keys are in the vehicle, the driving position cannot be recorded properly.

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to ON.
- 3 Recall the driving position that you want to record.
- 4 While pressing the recalled button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds.

If the button could not be registered, the buzzer sounds continuously for approximately 3 seconds.

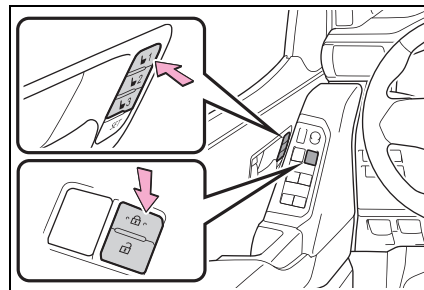

- Driving position recall procedure

- 1 Carry the electronic key that has been registered to the driving position, and then unlock and open the driver's door using the smart entry & start system or wireless remote control.

The driving position other than the steering wheel and head-up display (if

equipped) will move to the recorded position. However, the seat will move to a position slightly behind the recorded position in order to make entering the vehicle easier.

If the driving position is in a position that has already been recorded, the driving position will not move.

- 2 Turn the engine switch to ACC or ON, or fasten a seat belt.

The seat, steering wheel and head-up display (if equipped) (only when the engine switch is in ON) will move to the recorded position.

- Memory recall function cancellation procedure

Carry only the key you want to cancel and then close the driver's door.

If 2 or more keys are in the vehicle, the driving position cannot be canceled properly.

- 1 Turn the engine switch to ON.
- 2 While pressing the "SET" button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds twice.

If the button could not be canceled, the buzzer sounds continuously for approximately 3 seconds.

■ Recalling the driving position using the memory recall function

If a door other than the driver's door is unlocked with the smart entry & start system, the driving position cannot be recalled. In this case, press the driving position button which has been set.

■ Customization

Some functions can be customized. (Customizable features: →P.767)

My Settings

Drivers are identified using devices such as electronic keys to store the driving position and vehicle settings for each. Then the information can be recalled the next time the vehicle is driven.

Authentication devices can be assigned in advance to drivers so that they can drive using their preferred settings.

Settings for 3 drivers can be stored in My Settings.

Types of assigned authentication devices

An individual can be identified using the following authentication devices.

- Electronic key

An individual is identified when the smart entry & start system detects their electronic key. (→P.190)

- Fingerprint authentication system (if equipped)

An individual is identified when they touch the fingerprint sensor on the engine switch. If their fingerprint has been registered in the system, they are authenticated by fingerprint. (→P.115, 256)

An individual identified using fingerprint authentication is prioritized even when an individual is identified with an electronic key.

Recalled functions

When an individual is identified from an authentication device, settings for the following functions are recalled.

- Driving position (memory recall function) (if equipped)

After an individual is identified, the driving position that was set when driving was last completed is recalled when either of the following operations is performed.

- The door is unlocked and opened using the smart entry & start system or wireless remote control.
- Vehicles with fingerprint authentication system: The engine switch is turned to ACC or ON.

Refer to P.222 for information on driving position registration and recall.

- Meter displays and head-up display (if equipped) information *

When an individual is identified, the display settings used when the engine switch was last turned off are recalled.

- Vehicle settings that can be set using the multimedia system (if equipped)*

When an individual is identified, the vehicle settings used when the engine switch was last turned off are recalled.

*: Some settings are excluded

Electronic key assignment registration/deletion


Electronic key assignment is registered/deleted on the multi-informa-

tion display.

■ **Registering an electronic key assignment (registering from the “New Key Detected” screen)**





- 1 Ensure that the electronic key to assign and register is the only electronic key inside the vehicle, and then turn the engine switch on.
- 2 The “New Key Detected” screen is displayed on the multi-information display. Select “Yes” and then press OK .

If the electronic key has already been assigned and registered, the “New Key Detected” screen will not be displayed.

Selecting “Do Not Show Again” will prevent the “New Key Detected” screen from being displayed again. Electronic key assignment can be registered from  screen of the multi-information display.

- 3 Select the driver or “(blank)” to register, and then press OK .
- 4 If “(blank)” was selected in step 3, enter the driver’s name and then press OK .



Enter this information using the meter control switches.

-  or  : Select letter
-  or  : Select position
- OK : Save

When registration is complete, a message “Key Sync Added” is displayed on the multi-information display.

■ **Registering an electronic key assignment (registering from screen of the multi-information display)**



An electronic key is assigned and registered for the current driver.

- 1 Select My Settings in  screen -  / "Vehicle Settings" screen of the multi-information display, and then press OK .
- 2 Select "Setting" and then press OK .
- 3 Select "Key Sync" and then press OK .
- 4 Select "Key Addition" and then press OK .
- 5 Ensure that the electronic key to assign and register is the only electronic key inside the vehicle, and then select "Start Key Detection" and press OK .

When registration is complete, a message "Key Sync Added" is displayed on the multi-information display.

■ **Deleting an electronic key assignment**

All electronic keys assigned and registered for the current driver are deleted.

- 1 Select My Settings in  screen -  / "Vehicle Settings" screen of the multi-information display, and then press OK .

- 2 Select "Setting" and then press OK .
- 3 Select "Key Sync Change" and then press OK .
- 4 Select "Key Deletion" and then press OK .
- 5 Select "Yes" and then press OK .

When deletion is complete, a message "Key Sync Deleted" is displayed on the multi-information display.

■ **Electronic key assignment registration**



- A single electronic key can be assigned and registered for only a single driver.
- It will not be possible to detect an electronic key normally if there is no electronic key inside the vehicle, or if there are multiple electronic keys inside the vehicle. When registering, ensure that there is only a single electronic key inside the vehicle.
- When deleting an assignment, all registered electronic keys will be deleted. Assignments cannot be individually deleted.

Fingerprint assignment registration/deletion

→P.115

Changing the driver's name

The driver name displayed on the multi-information display can be changed.





1 Select My Settings in  screen
-  / “Vehicle Settings” screen
of the multi-information display,
and then press OK .

2 Select “Setting” and then press
OK .

3 Select “Driver Name Change”
and then press OK .

4 Enter the driver’s name and
then press OK .



Enter this information using the meter
control switches.

-  or  : Select letter
-  or  : Select position
- OK : Save

The registered name that was entered
is displayed on the multi-information
display.

Initializing driver registered settings

All registered settings (driving position, etc.) for the driver are deleted and returned to their default settings.

1 Select My Settings in  screen
-  / “Vehicle Settings” screen
of the multi-information display,
and then press OK .

2 Select “Setting” and then press
OK .

3 Select “Driver Initialization” and
then press OK .

4 Select “Yes” and then press
OK .



When initialization is complete, a message “Driver Initialized” is displayed on the multi-information display.

Fingerprint registration deletion

If a driver’s fingerprint is registered in the fingerprint authentication system (if equipped), it will not be possible to initialize that driver’s registered settings. The registered fingerprint will need to be deleted first. (→P.115)

Manually switching drivers

When drivers are switched or an electronic key assigned to someone else was brought into the vehicle, drivers can be manually switched.

1 Select My Settings in  screen
-  / “Vehicle Settings” screen
of the multi-information display,
and then press OK .

2 Select “Setting” and then press
OK .

3 Select “Driver Change” and then
press OK .

4 Select a new driver, and then
press OK .

- 5 The “Adjust Position” screen is displayed. Select “Yes” and then press OK .

If “Guest” was selected, the “Adjust Position” screen will not be displayed.

■ **“Guest” mode**

- Vehicles are delivered without any authentication devices registered. The system will operate in “Guest” mode until registration is performed.
- If an individual is not identified using an authentication device, the system will operate in “Guest” mode.
- An electronic key cannot be assigned and registered for the “Guest” user.

■ **Customization**

The meter control switches can be used to turn My Settings on and off. (→P.776)

If My Settings is turned off, the system will operate in “Guest” mode.

4-1. Before driving	
Driving the vehicle	231
Cargo and luggage	238
Trailer towing (with towing hitch).....	239
Pintle hook.....	246
Electric winch.....	247
4-2. Driving procedures	
Engine (ignition) switch.....	256
Automatic transmission (with M mode)	261
Automatic transmission (with S mode)	264
Turn signal lever	268
Parking brake	269
Brake Hold.....	272
4-3. Operating the lights and wipers	
Headlight switch	275
AHS (Adaptive High-beam System)	280
AHB (Automatic High Beam)	284
Fog light switch.....	287
Windshield wipers and washer	288
Rear window wiper and washer	292
4-4. Refueling	
Opening the fuel tank cap.....	294
4-5. Using the driving support systems	
Toyota Safety Sense	297
PCS (Pre-Collision System)	302
LTA (Lane Tracing Assist)	314
LDA (Lane Departure Alert with Yaw Assist Function)	324
RSA (Road Sign Assist).....	331
Dynamic radar cruise control with full-speed range	335
Dynamic radar cruise control	348
Cruise control.....	358
Stop & Start system	361
BSM (Blind Spot Monitor)	367
Toyota parking assist-sensor	372
RCTA (Rear Cross Traffic Alert) function	379
RCD (Rear Camera Detection) function	384
PKSB (Parking Support Brake)	388
Parking Support Brake function (static objects)	394
Parking Support Brake function (rear-crossing vehicles) ..	397
Parking Support Brake function (rear pedestrians)	399
Rear view monitor system	401
Toyota parking assist monitor	408
Multi-terrain Monitor.....	421
Driving mode select switch.....	473

Four-wheel drive system ..	475
Front differential lock system	478
Rear differential lock system	480
Crawl Control (with Turn Assist function)	481
Multi-terrain Select.....	486
Downhill assist control system	489
DPF (Diesel Particulate Filter) system	491
Driving assist systems	494
4-6. Driving tips	
Off-road precautions	502
Winter driving tips	504
Eco-friendly driving tips	507

Driving the vehicle

The following procedures should be observed to ensure safe driving:

Driving procedure

■ Starting the engine

→P.256

■ Driving

- 1 With the brake pedal depressed, shift the shift lever to D.
(→P.262, 266)
- 2 If the parking brake is in manual mode, release the parking brake. (→P.269)
- 3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

■ Stopping

- 1 With the shift lever in D, depress the brake pedal.
- 2 If necessary, set the parking brake. (→P.269)

If the vehicle is to be stopped for an extended period of time, shift the shift lever to P or N. (→P.262, 266)

■ Parking the vehicle

- 1 With the shift lever in D, depress the brake pedal.
- 2 Set the parking brake (→P.269), and shift the shift lever to P (→P.262, 266).

- 3 Press the engine switch to stop the engine.
- 4 Lock the door, making sure that you have the key on your person.

If parking on a hill, block the wheels as needed.

■ Starting off on a steep uphill

- 1 With the brake pedal depressed, shift the shift lever to D.
(→P.262, 266)
- 2 Pull the parking brake switch to set the parking brake manually.
(→P.269)
- 3 Release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.
- 4 Press the parking brake switch and parking brake is released manually.

■ When starting off on a uphill

The hill-start assist control will activate.
(→P.495)

■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

■ Engine speed while driving

In the following conditions, the engine speed may become high while driving.

This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be driving uphill or downhill
- When the accelerator pedal is released
- When the brake pedal is depressed while power mode is selected (automatic transmission with S mode) (→P.267)
- When the brake pedal is depressed (automatic transmission with M mode)

■ **Restraining the engine output (Brake Override System)**

- When the accelerator and brake pedals are depressed at the same time, the engine output may be restrained.
- A warning message is displayed on the multi-information display and head-up display (if equipped) while the system is operating. (→P.703)

■ **Breaking in your new Toyota**

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 300 km (200 miles):
Avoid sudden stops.
- For the first 800 km (500 miles) (with towing hitch):
Do not tow a trailer.
- For the first 1000 km (600 miles):
 - Do not drive at extremely high speeds.
 - Avoid sudden acceleration.
 - Do not drive continuously in low gears.
 - Do not drive at a constant speed for extended periods.

■ **When driving in an extremely cold environment**

In an extremely cold environment, idle the engine for more than 30 seconds after starting the engine. Do not race the engine while idling.

■ **Idling time before stopping the engine**

To prevent damage to the turbocharger, allow the engine to idle immediately after high-speed driving or driving up a hill.

Vehicles with a Stop & Start system: To allow the engine to idle when the vehicle is stopped, disable the Stop & Start cancel switch. (→P.143, 153)

(With the Stop & Start system enabled, the engine will be stopped by the Stop & Start system when the vehicle is stopped.)

▶ V35A-FTS engine

Driving condition		Idling time
Normal city driving		Not necessary
High-speed driving (constant speed of approx. 80 km/h [50 mph])		Not necessary
Steep hill driving or continuous driving at 100 km/h (62 mph) or more (race track driving etc.)		Approximately 1 minute

▶ F33A-FTV engine

Driving condition		Idling time
Normal city driving		Not necessary
High-speed driving	Constant speed of approx. 80 km/h (50 mph)	Approximately 20 seconds
	Constant speed of approx. 100 km/h (62 mph)	Approximately 1 minute
Steep hill driving or continuous driving at 100 km/h (62 mph) or more (race track driving etc.)		Approximately 2 minutes

■ Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P.747)



WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

■ When starting the vehicle

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

■ When driving the vehicle

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
- Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
- When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
- Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
- Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- Do not drive the vehicle over or stop the vehicle near flammable materials.
The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.

- During normal driving, do not turn off the engine. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so. However, in the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: →P.690
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill.
Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P.261, 264)
- Do not adjust the position of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.
Doing so may result in a loss of vehicle control.
- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.
- **When driving on slippery road surfaces**
- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.
- Sudden acceleration, engine braking due to shifting, or changes in engine speed could cause the vehicle to skid.
- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

**WARNING****■ When shifting the shift lever**

- Do not let the vehicle roll backward while the shift lever is in a driving position, or roll forward while the shift lever is in R. Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle.
- Do not shift the shift lever to P while the vehicle is moving. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to a driving position while the vehicle is moving backward. Doing so can damage the transmission and may result in a loss of vehicle control.
- Moving the shift lever to N while the vehicle is moving will disengage the engine from the transmission. Engine braking is not available when N is selected.
- Be careful not to shift the shift lever with the accelerator pedal depressed. Shifting the shift lever to a gear other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

■ If you hear a squealing or scraping noise (brake pad wear indicators)

Have the brake pads checked and replaced by your Toyota dealer as soon as possible. Rotor damage may result if the pads are not replaced when needed. It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

■ When the vehicle is stopped

- Do not race the engine. If the vehicle is in any gear other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.
- In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the engine is running, and apply the parking brake as necessary.
- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.
- Avoid revving or racing the engine. Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

■ When the vehicle is parked

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun. Doing so may result in the following:
 - Gas may leak from a cigarette lighter or spray can, and may lead to a fire.

**WARNING**

- The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
- Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake, shift the shift lever to P, stop the engine and lock the vehicle. Do not leave the vehicle unattended while the engine is running. If the vehicle is parked with the shift lever in P but the parking brake is not set, the vehicle may start to move, possibly leading to an accident.

- If the shift lever is moved before the low speed four-wheel drive indicator turns on/off, the transfer mode may not be shifted completely.

The transfer mode disengages both the front and rear driveshafts from the powertrain and allows the vehicle to move regardless of the shift position. (At this time, the indicator blinks and the buzzer sounds.)

Therefore, the vehicle is free to roll even if the shift lever is in P. You or someone else could be seriously injured. You must complete the shifting of the transfer mode. (→P.475)

- Do not touch the exhaust pipes while the engine is running or immediately after turning the engine off. Doing so may cause burns.

■ When taking a nap in the vehicle

Always turn the engine off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

■ When braking

- When the brakes are wet, drive more cautiously. Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.

**WARNING**

- If the brake booster device does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking. In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.
- Do not pump the brake pedal if the engine stalls. Each push on the brake pedal uses up the reserve for the power-assisted brakes.
- The brake system consists of 2 individual hydraulic systems; if one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. Have your brakes fixed immediately.

■ If the vehicle becomes stuck

Do not spin the wheels excessively when any of the tires is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.

**NOTICE****■ When driving the vehicle**

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the engine output.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

■ Avoiding damage to vehicle parts

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time. Doing so may damage the power steering pump.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.
- Diesel engine only: Make sure to idle the engine immediately after high-speed driving or hill climbing. Stop the engine only after the turbocharger has cooled down. Failure to do so may cause damage to the turbocharger.

■ If you get a flat tire while driving

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
 - The vehicle will make abnormal sounds or vibrations.
 - The vehicle will lean abnormally.
- Information on what to do in case of a flat tire (→P.714)

■ When encountering flooded roads

Do not drive on a road that has flooded after heavy rain, etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

**NOTICE**

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have your Toyota dealer check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, transmission, transfer, differentials, etc.
- Lubricant condition for the propeller shaft, bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

■ When parking the vehicle

Always set the parking brake, and shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

Sudden start restraint control (Drive-Start Control [DSC])

When the following unusual operation is performed with the accelerator pedal depressed, the engine output may be restrained.

- When the shift lever is shifted to R*.
- When the shift lever is shifted from P or R to forward drive shift position such as D*.

When the system operates, a message appears on the multi-information display. Read the message and follow the instruction.

*: Depending on the situation, the shift position may not be changed.

■ Drive-Start Control (DSC)

- When the TRC is turned off (→P.496), sudden start restraint control also does not operate. If your vehicle has trouble escaping from the mud or fresh snow due to sudden start restraint control operation, deactivate TRC(→P.496) so that the vehicle may become able to escape from the mud or fresh snow.


Also, sudden start restraint control will not operate in the following conditions:

- When the four-wheel drive control switch is in "L4" position.
 - When the center differential is locked
 - When Multi-terrain Select* is selected
- *: If equipped

Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load:

Roof rack (if equipped)

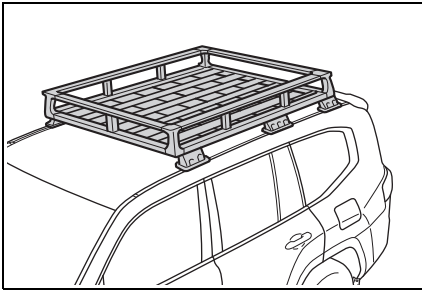

WARNING

■ Things that must not be carried in the luggage compartment

The following things may cause a fire if loaded in the luggage compartment:

- Receptacles containing gasoline
- Aerosol cans

■ Storage precautions

Observe the following precautions. Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- Stow cargo and luggage in the luggage compartment whenever possible.
- Do not stack anything in the luggage compartment higher than the seatbacks.

- When you fold down the rear seats, long items should not be placed directly behind the front seats.

- Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened. Otherwise, they are much more likely to suffer death or serious bodily injury, in the event of sudden braking, sudden swerving or an accident.

- Do not place cargo or luggage in or on the following locations.

- At the feet of the driver
- On the front passenger or rear seats (when stacking items)
- On the luggage cover (if equipped)
- On the instrument panel
- On the dashboard
- On the auxiliary box or tray that has no lid
- Secure all items in the occupant compartment.

■ Load and distribution

- Do not overload your vehicle.
- Do not apply loads unevenly.

Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

■ When loading cargo on the roof rack (if equipped)

Observe the following precautions:

- Place the cargo so that its weight is distributed evenly between the front and rear axles.
- If loading long or wide cargo, never exceed the vehicle overall length or width. (→P.742)

**WARNING**

- Before driving, make sure the cargo is securely fastened on the roof rack.
- Loading cargo on the roof rack will make the center of gravity of the vehicle higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly and result in death or serious injury.
- If driving for a long distance, on rough roads, or at high speeds, stop the vehicle now and then during the trip to make sure the cargo remains in its place.
- Do not exceed 100 kg (220 lb.) cargo weight on the roof rack.

**NOTICE****■ When loading cargo on the roof rack (if equipped)**

Be careful not to scratch the surface of the moon roof (if equipped).

Trailer towing (with towing hitch)*

*: If equipped

The strain of towing a trailer will have a negative impact on the running performance, handling, fuel consumption and endurance of your vehicle. Use the vehicle features in the correct manner and operate the vehicle with care for safer driving and optimal comfort. Damage and/or malfunctions that occur as a result of towing performed for commercial purposes are not covered by the Toyota warranty.

Contact your Toyota dealer for further information about additional requirements such as towing kits, etc.

■ Tire information

- Increase the tire inflation pressure to 20.0 kPa (0.2 kgf/cm² or bar, 3 psi) greater than the recommended value when towing. (→P.757)
- Increase the air pressure of the trailer tires in accordance with the total trailer weight and according to the values recommended by the manufacturer of your trailer.

■ Trailer lights

Check that the turn signal lights and stoplights are operating correctly every time you hitch up the trailer. Directly wiring up to your vehicle may damage the electrical system and stop the lights from functioning correctly.

■ **Safety checks before towing**

- Check that the maximum load limit for the towing hitch/bracket and hitch ball is not exceeded. Bear in mind that the coupling weight of the trailer will add to the load exerted on the vehicle. Also make sure that the total load exerted on the vehicle is within the range of the weight limits. (→P.241)
- Ensure that the trailer load is secure.
- Supplementary outside rear view mirrors should be added to the vehicle if the traffic behind cannot be clearly seen with standard mirrors. Adjust the extending arms of these mirrors on both sides of the vehicle so that they always provide maximum visibility of the road behind.
- The trailer ball is set up at the proper height for the coupler on the trailer.

■ **Maintenance**

- Maintenance must be performed more frequently when using the vehicle for towing due to the greater weight burden placed on the vehicle compared to normal driving.
- Retighten all bolts securing the hitching ball and bracket after towing for approximately 1000 km (600 miles).

 **WARNING**

Follow all the instructions described in this section. Failure to do so could cause an accident resulting in death or serious injury.

■ **Trailer towing precautions**

When towing, make sure that none of the weight limits are exceeded. (→P.241)

■ **To avoid accident or injury**

Do not use cruise control (if equipped), dynamic radar cruise control (if equipped) or dynamic radar cruise control with full-speed range (if equipped) when trailer towing.

■ **Vehicle speed in towing**

Observe the legal maximum speeds for trailer towing.

■ **Before descending hills or long declines**

Reduce speed and downshift. However, never downshift suddenly while descending steep or long downhill grades.

■ **Operation of the brake pedal**

Do not hold the brake pedal depressed often or for long periods of time.

Doing so may result in the brake overheating or reduce braking effects.

Weight limits

Check the allowable towing capacity, GVM (Gross Vehicle Mass), MPAC (Maximum Permissible Axle Capacity), and permissible drawbar load before towing. (→P.744)

Towing hitch/bracket

Toyota recommends the use of the Toyota hitch/bracket for your vehicle. Other products of a suitable nature and comparable quality may also be used.

When using the Toyota hitch/bracket, use the reinforcement patch. Contact your Toyota dealer for details.

For vehicles where the towing device blocks any of the lights or license plate, the following shall be observed:

- Do not use towing devices that


cannot be easily removed or repositioned.

- Towing devices must be removed or repositioned when not in use.

Connecting trailer lights (if equipped)

Use the wire harness stored in the rear end.

Please consult your dealer when installing trailer lights, as incorrect installation may cause damage to the vehicle's lights. Please take care to comply with your state's laws when installing trailer lights.


 **NOTICE**

Do not directly splice trailer lights

Directly splicing trailer lights may damage your vehicle's electrical system and cause a malfunction.

Important points regarding trailer loads

- **Total trailer weight and permissible drawbar load**

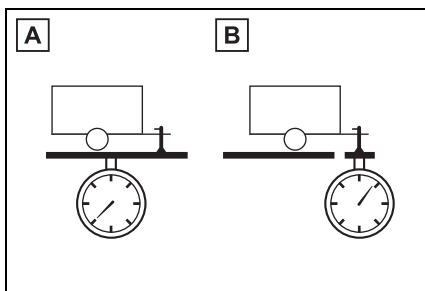

A Total trailer weight

Weight of the trailer itself plus the trailer load should be within the maximum towing capacity. Exceeding this weight is dangerous. (→P.744)


When towing a trailer, use a friction coupler or friction stabilizer (sway control device).

When the total trailer weight is over 2000 kg (4409 lb.), a friction stabilizer (sway control device) is required.

B Permissible drawbar load

Allocate the trailer load so that the drawbar load is greater than 25 kg (55.1 lb.) or 4% of the towing capacity. Do not let the drawbar load exceed the indicated weight. (→P.744)

- **Information tag (manufacturer's label) (if equipped)**

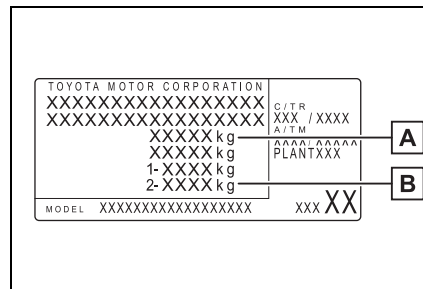

A Gross vehicle mass

The combined weight of the driver, passengers, towing hitch, total curb mass and drawbar load should not exceed the gross vehicle mass by more than 100 kg (220.5 lb.). Exceeding this weight is dangerous.

B Maximum permissible rear axle capacity

The weight borne by the rear axle should not exceed the maximum permissible axle capacity by 15% or more. Exceeding this weight is dangerous.

The values for towing capacity were derived from testing conducted at sea level. Take note that engine output and towing capacity will be reduced at high altitudes.


! WARNING

■ When the gross vehicle mass limit or maximum permissible axle capacity is exceeded


Do not exceed the established speed limit for towing a trailer in built-up areas or 100 km/h (62 mph), whichever is lower.

Failing to observe this precaution may lead to an accident causing death or serious injury.

Installation positions for the towing hitch/bracket and hitch ball

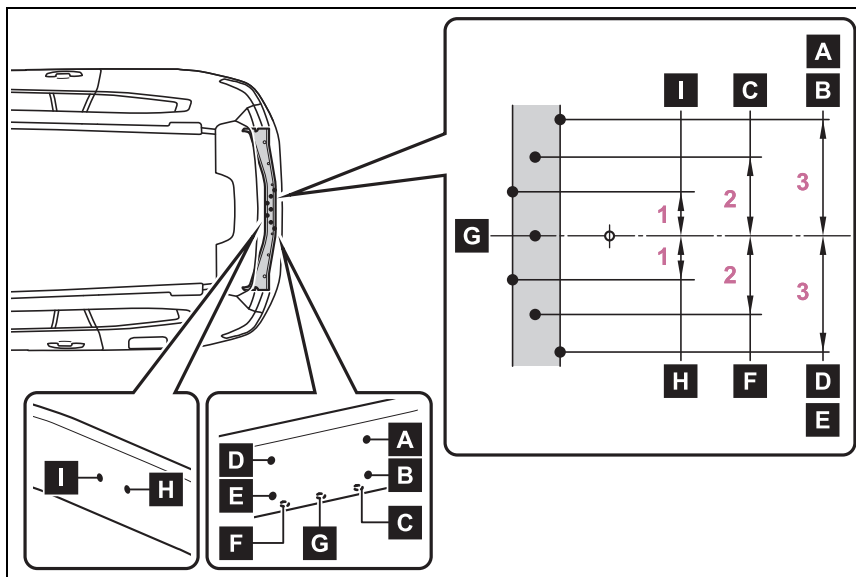

- 1** 30 mm (1.2 in.)
- 2** 60 mm (2.4 in.)
- 3** 80 mm (3.1 in.)

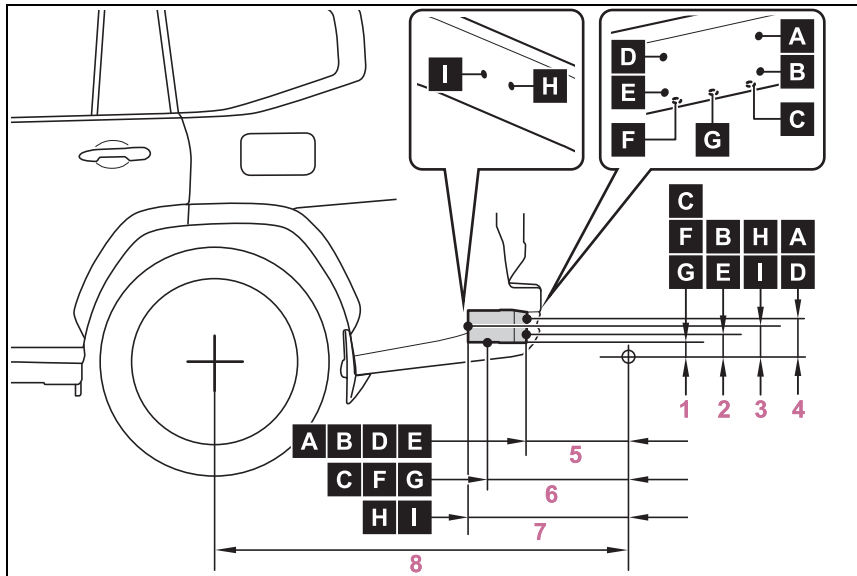

- 1** 76.9 mm (3.0 in.)
- 2** 106.5 mm (4.2 in.)
- 3** 137.5 mm (5.4 in.)
- 4** 160.5 mm (6.3 in.)
- 5** 136 mm (5.4 in.)
- 6** 183.5 mm (7.2 in.)
- 7** 211.1 mm (8.3 in.)
- 8** 1272 mm (50.1 in.)

NOTICE


■ **When the rear bumper strengthening material is aluminum**

Ensure the steel bracket part does not come directly in contact with that area.


When steel and aluminum come into contact, there is a reaction similar to corrosion, which will weaken the section concerned and may result in damage. Apply a rust inhibitor to parts that will come in contact when attaching a steel bracket.

Removing hitch cover

- 1** Remove the clips.
- ▶ Type A

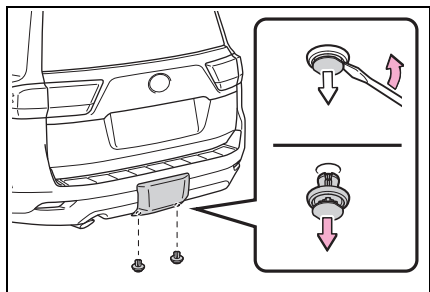


► Type B

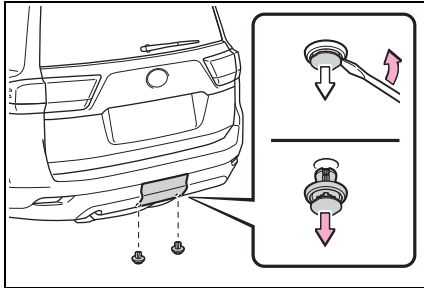


2 Remove the cover as shown in the illustration.

When reattaching the cover, reverse the steps listed.

► Type A

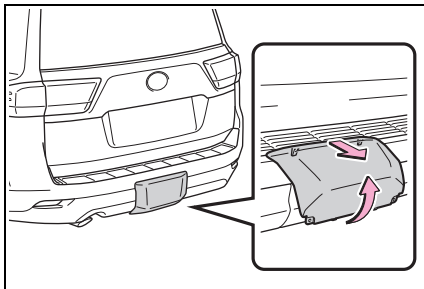

► Type B

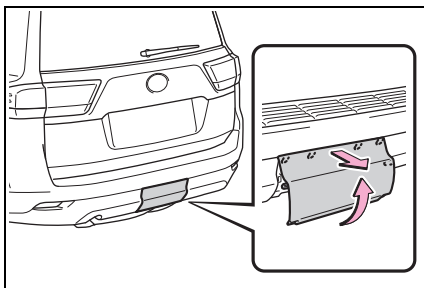

Guidance

Your vehicle will handle differently when towing a trailer. In order to avoid accident, death or serious

injury, keep the following in mind when towing:

■ **Checking connections between trailer and lights**

Stop the vehicle and check the operation of the connection between the trailer and lights after driving for a brief period as well as before starting off.

■ **Practicing driving with a coupled trailer**

- Get the feel for turning, stopping and reversing with the trailer coupled by practicing in an area with no or light traffic.
- When reversing with a coupled trailer, hold the section of the steering wheel nearest to you and rotate clockwise to turn the trailer left or counterclockwise to turn it right. Always rotate a little at a time to prevent steering error. Have someone guide you when reversing to lessen the risk of an accident.

■ **Increasing vehicle-to-vehicle distance**

At a speed of 10 km/h (6 mph), the distance to the vehicle running ahead of you should be equivalent to or greater than the combined length of your vehicle and trailer. Avoid sudden braking that may cause skidding. Otherwise, the vehicle may spin out of control. This is especially true when driving on wet or slippery road surfaces.

■ Sudden acceleration/steering input/cornering

Executing sharp turns when towing may result in the trailer colliding with your vehicle. Decelerate well in advance when approaching turns and take them slowly and carefully to avoid sudden braking.

■ Important points regarding turning

The wheels of the trailer will travel closer to the inside of the curve than the wheels of the vehicle. To make allowance for this, take the turns wider than you would normally do.

■ Important points regarding stability

Vehicle movement resulting from uneven road surfaces and strong crosswinds will affect handling. The vehicle may also be rocked by passing buses or large trucks. Frequently check behind when moving alongside such vehicles. As soon as such vehicle movement occurs, immediately start to decelerate smoothly by slowly applying the brakes. Always steer the vehicle straight ahead while braking.

■ Passing other vehicles

Consider the total combined length of your vehicle and trailer and ensure that the vehicle-to-vehicle distance is sufficient before executing lane changes.

■ Transmission information

To maintain engine braking efficiency, when using engine braking, do not use the transmission in D.

If in the M mode, the transmission shift range position must be in 7 or lower. (→P.263)

■ If the engine overheats

Towing a loaded trailer up a long, steep incline in temperatures exceeding 30°C (85°F) may result in the engine overheating. If the engine coolant temperature gauge indicates that the engine is overheating, turn the air conditioning off immediately, leave the road and stop the vehicle in a safe place. (→P.736)

■ When parking the vehicle

Always place wheel chocks under the wheels of both the vehicle and trailer. Firmly set the parking brake and shift the shift lever to P.

■ Break-in schedule

Toyota recommends that vehicles fitted with new power train components should not be used for towing trailers for the first 800 km (500 miles).

■ If trailer sway occurs

One or more factors (crosswinds, passing vehicles, rough roads, etc.) can adversely affect handling of your vehicle and trailer, causing instability.

● If trailer swaying occurs:

- Firmly grip the steering wheel. Steer straight ahead.
Do not try to control trailer swaying by turning the steering wheel.
- Begin releasing the accelerator pedal immediately but very gradually to

reduce speed.
Do not increase speed. Do not apply vehicle brakes.

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize (if enabled, Trailer Sway Control can also help to stabilize the vehicle and trailer.).

- After the trailer swaying has stopped:
 - Stop in a safe place. Get all occupants out of the vehicle.
 - Check the tires of the vehicle and the trailer.
 - Check the load in the trailer. Make sure the load has not shifted. Make sure the tongue weight is appropriate, if possible.
 - Check the load in the vehicle. Make sure the vehicle is not overloaded after occupants get in.


If you cannot find any problems, the speed at which trailer swaying occurred is beyond the limit of your particular vehicle-trailer combination. Drive at a lower speed to prevent instability. Remember that swaying of the towing vehicle-trailer increases as speed increases.

Pintle hook*

*: If equipped


The pintle hook can be used for towing.

- 1 Pull the pintle hook lock lever up.

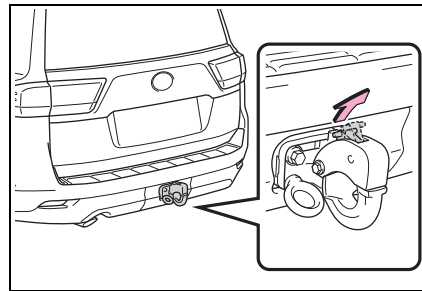

- 2 Lift the upper half of the hook up.

After attaching the trailer, let the upper half of the pintle hook lower to its original position, and lower the pintle hook lock lever.

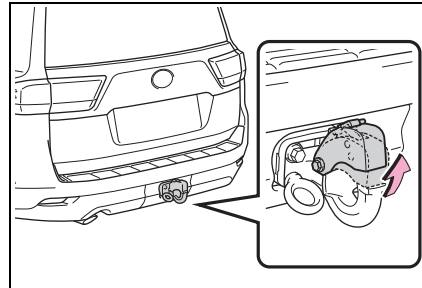


■ When towing

- As a double safety measure, attach the vehicle being towed to the eyelet bolt with a cable or rope.
- Attach the vehicle being pulled to the pintle hook so that the pulling force is horizontal.
- Because of the installations of the pintle hook and steps, the vehicle's


departure angle is reduced. Be careful not to interfere with road surface while driving through rough terrain.

Electric winch*

*: If equipped

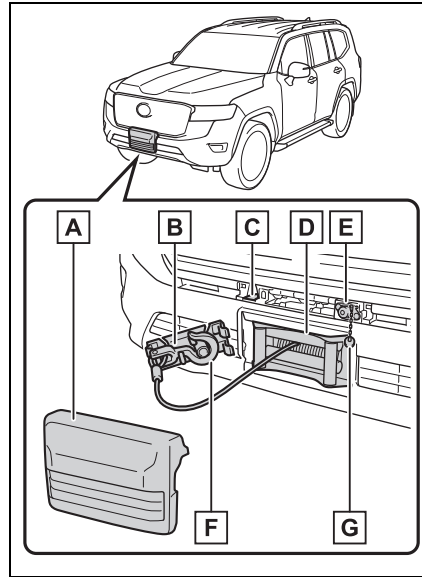

- A** Winch cover
- B** Hook holder
- C** Winch clutch opening
- D** Winch opening
- E** Remote control terminal
- F** Hook
- G** Dust cap

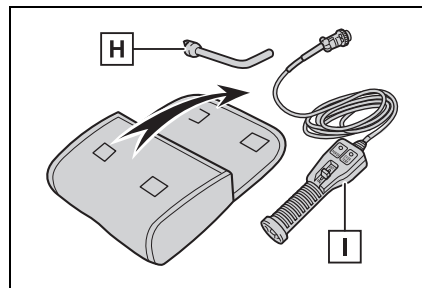


H Winch clutch lever

I Remote control

You can find the winch clutch lever and remote control in the storage bag on the front passenger seat.

Remote control

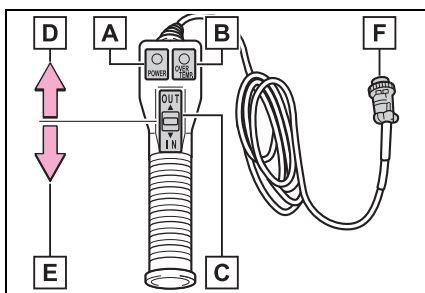

A “POWER” indicator light

This light indicates that the winch is ready to use.

With the remote control plugged into the winch terminal, this light comes on when the engine is started.

If the “POWER” indicator light dims noticeably, stop operation and allow the battery to recharge.

B “OVER TEMP” warning light

This light indicates that the winch motor is overheating.

When pulling heavy loads, the “OVER TEMP” warning light may come on and the warning buzzer may sound.

If this happens, stop operation and allow the winch motor to cool.

C Remote control switch


D “OUT” side (release)

E “IN” side (wind)

F Wire plug


Removing the winch cover

1 Raise the cover as shown in the illustration.

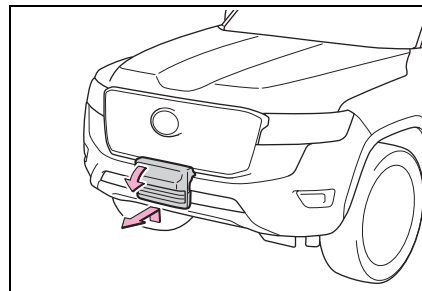


2 Squeeze the cover fastener and remove the cover as shown in the illustration.

When reattaching the winch cover, reverse the steps listed.

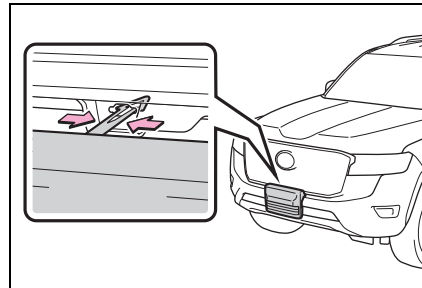


Preparing to use the winch

- 1 Park the vehicle straight ahead of the object you want to pull.

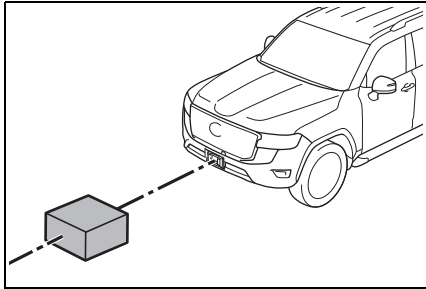


- 2 Remove the winch cover.
- 3 Set the winch clutch lever and turn the winch clutch lever counterclockwise from lock to the free position.

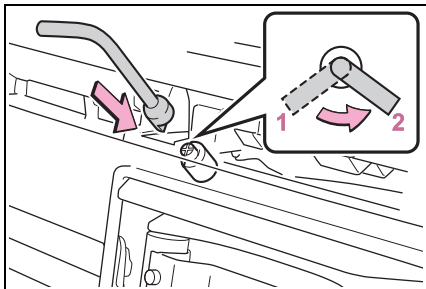


- 1 Lock
- 2 Free

- 4 Remove the hook holder and pull out the cable by hand.

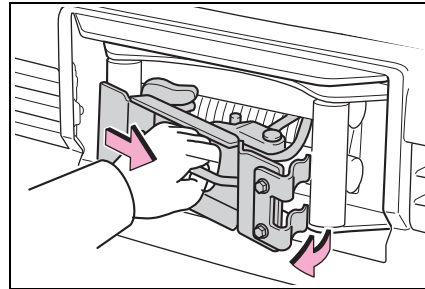


- 5 Hold the hook and extend the cable as far as necessary.

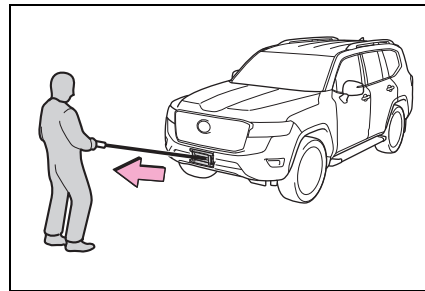

Operating the winch


- Pulling out the cable (with power)

- 1 Turn the winch clutch lever clockwise to the lock position.

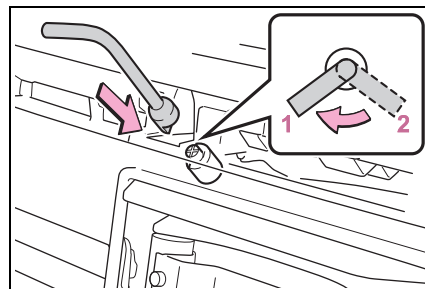


- 1 Lock
- 2 Free

- 2 Remove the dust cap of the remote control terminal and connect the remote control wire plug to the terminal.

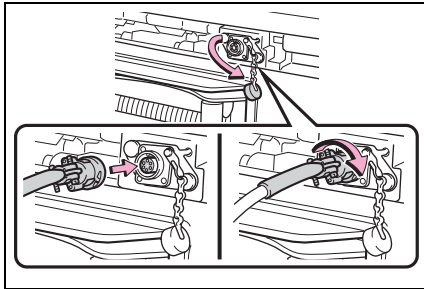


- 3 When using the winch with the vehicle parked, shift the shift lever to "P" and set the parking brake firmly.
- 4 Block the front wheels.
- 5 Start the engine and run it at higher engine rpm than idling.
- 6 Make sure the "POWER" indicator light comes on. Then slide the remote control switch to the "OUT" position.

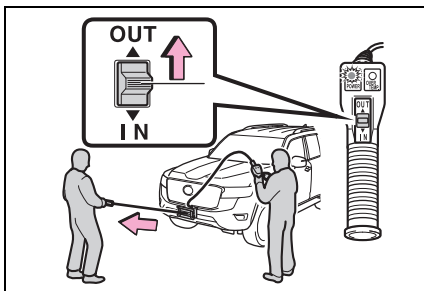

■ Rewinding the cable

Make sure the "POWER" indicator light comes on, then slide the remote control switch to the "IN" position.


When rewinding, rewind the cable at the angle shown in the illustration to prevent the cable from jamming.

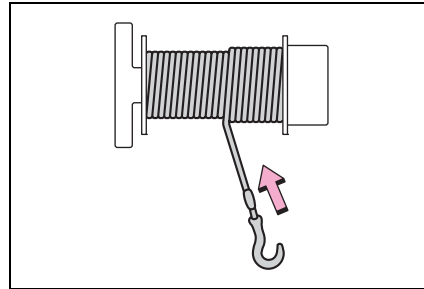


How to use the winch

■ Range of the winch cable

The cable should be pulled straight ahead within 15 degrees horizontally and vertically of the center of the winch opening.

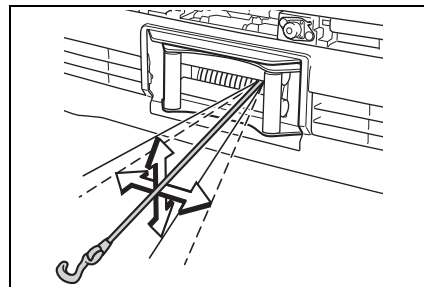


To pull an object that is more than 15 degrees offset from the center of the winch opening, use a block and tackle as shown in the illustration.

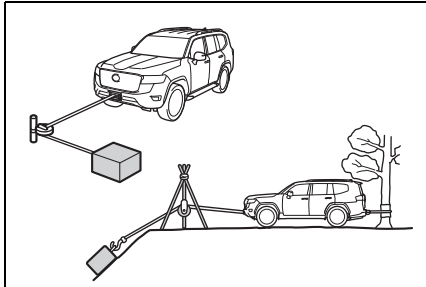

■ **Attaching the cable**


Attach the cable hook securely to the object to be pulled or to a standing tree.

The separate cable **A** wrapped around the object must be at least as thick as the towing cable, and of sufficient strength.

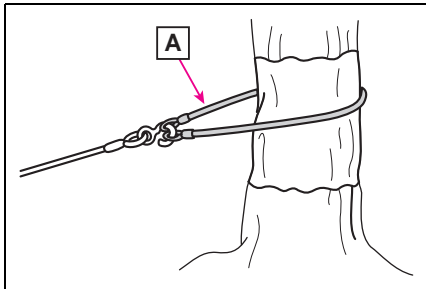

■ **Moving heavy objects**


Attach your vehicle to a standing tree that can withstand the load you will apply to it. Using a block, tackle and rollers will make the work easier.

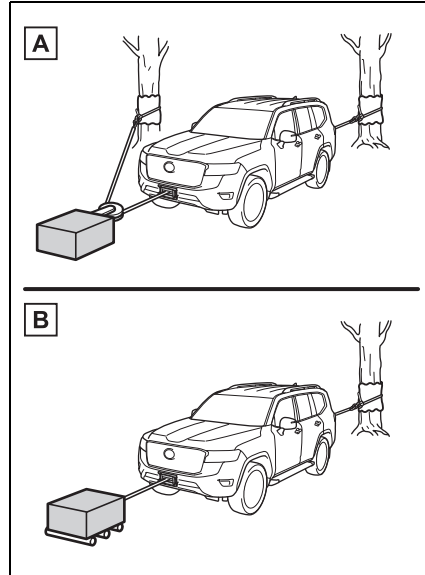

A Using a block and tackle

B Using the rollers

■ **How to hook the cable**

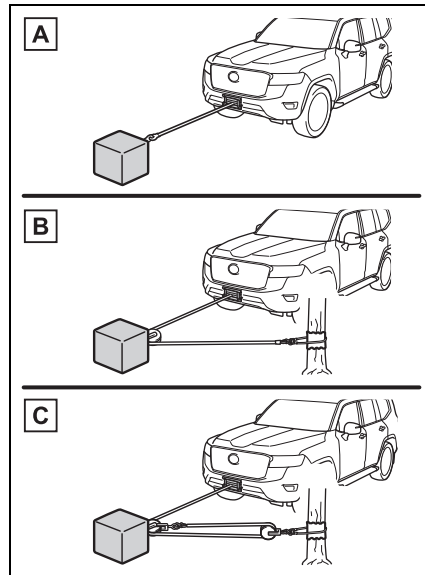


The allowable load is as follows.

Cable	Pulling Force
A Single line	Less than 1000 kg (2204 lb.)
B Double line	Less than 2000 kg (4409 lb.)
C Triple line	Less than 3000 kg (6613 lb.)


■ **Freeing the vehicle when stuck, or ascending a steep incline**

Attach the cable to a nearby standing tree or another vehicle.

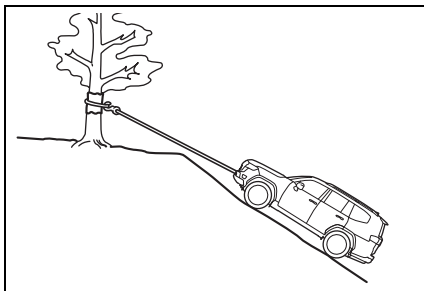


After using the winch


- 1 With another person holding the hook and pulling it lightly to maintain some tension on the cable, wind the cable one loop at a time starting from the edge of the drum.

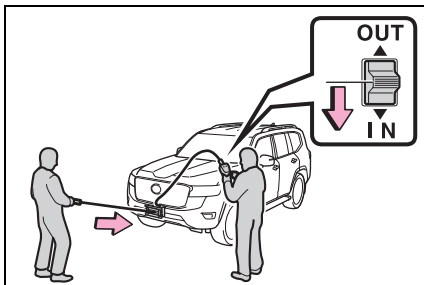


- 2 Stop the remote control switch when about 1 m (3 ft.) of cable is left.

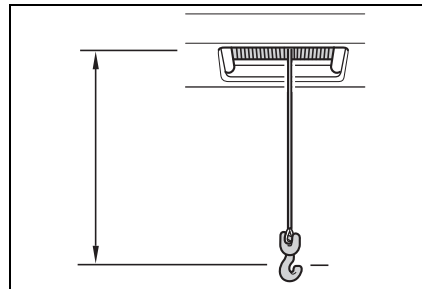


- 3 Secure the hook in place on the hook holder.

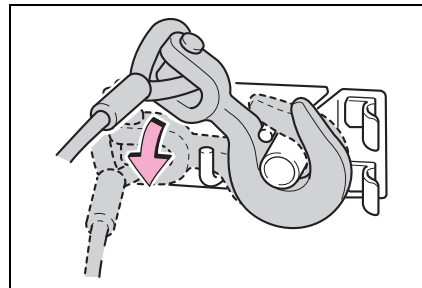


- 4 Hold the hook holder by the handle and operate the remote control switch intermittently until the cable is almost rewound.

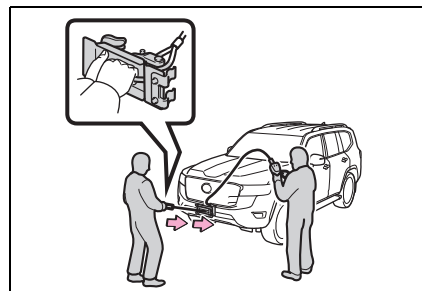

- 5** Install the hook holder in the winch opening.

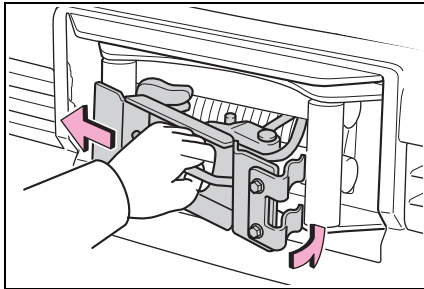

- 6** Rewind the cable so that it is under slight tension.

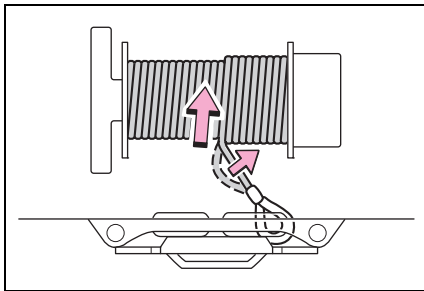

- 7** Disconnect the remote control wire plug from the terminal and install the dust cap on the terminal.
- 8** Put the winch clutch lever and remote control in the storage bag in the glove box.
- 9** Install the winch cover. (→P.248)

■ When using the electric winch

When first using the winch, some smoke may issue from the motor. This does not indicate a malfunction, and the smoke will disappear gradually while using the winch.

■ When stopping winch operation

Note that the winch drum will not stop

immediately when you release the switch.

■ When you attach a separate cable to a standing tree

Use durable cloth or some other covering on the tree surface and take care not to damage it.

⚠ WARNING

■ To avoid accident or injury

- Before and after using the winch, check for:
 - Looseness of the winch installation bolt
 - Wear or rusting of the winch cable
 - Cracks, crushing or shorting of the lead wire of the remote control
- If the cable is deformed, frayed or worn, the cable strength may be dangerously weakened. If the remote control lead wire is shorted, the winch may begin operating without warning. If you detect any abnormality with the winch equipment, do not use the winch, and consult your Toyota dealer.
- Never use the winch to lift or move people, or to lift objects.
- No one other than the operator should stand beside the winch opening, winch cable, winch hook or remote control while the winch is in use or the remote control is attached to the winch. Do not rest your hands or feet on the front bumper near the winch opening. They may get jammed in the mechanism.
- Do not touch the cable or the hook if the cable is under tension even though the winch is not being used.


 **WARNING**

- Connect the remote control to the winch only when using the winch. Remove the remote control when the winch is not used. Starting the winch unexpectedly by accident: Pressing the remote control switch could cause a serious accident such as crushing your fingers in the winch.
- Apply the parking brake and place the wheel blocks in front of the front wheels when using the winch with your vehicle parked.
- Rewind the cable in the direction shown on the winch assembly. Winding in the opposite direction is dangerous because the brake does not work and the control switch will rewind the cable on the “OUT” side. This could result in a dangerous mistake when operating the remote control switch.
- If you are untangling the cable on the drum, pull out the cable by the hook, then rewind the cable. Do not hold the cable in your hands. However, if you must hold the cable in your hands, first remove the remote control from the winch to prevent unexpected activation of the winch.
- As the cable is wound onto the drum, the speed of the drum gets faster. To avoid injury, take care not to get your hands caught in the winch assembly.
- Make sure to use the hook holder when only approximately 1 m (3 ft.) of cable remains unwound. To avoid injury while rewinding, do not place your hand on the cable guide or hold the hook or cable instead of holding the handle of the hook holder.

- When handling the cable, wear thick gloves, preferably leather. Do not let the cable slide through your hands, as it may burn them or cause abrasions.
- When towing your vehicle using the winch, avoid applying a load suddenly to the towing cable by rocking the vehicle back and forth, as the hook may accidentally come off or the cable may break.
- Do not touch the winch motor surface during and after use of the winch as it may be hot.


 **NOTICE**

- **To prevent damage to the vehicle or the electric winch**
- Do not operate the winch with the hook holder still fixed in place.
- Do not continue operation if the “OVER TEMP” warning light is lit and the warning buzzer sounds.
- Do not pull out all of the cable. Leave at least 5 turns on the winch drum.
- Keep the cable straight ahead, in line with the vehicle. Do not pull anything with the cable offset more than 15 degrees from the center of the winch opening.
- Do not pull a load heavier than 3000 kg (6613 lb.)
- The towing cable may break if wrapped directly around the object.

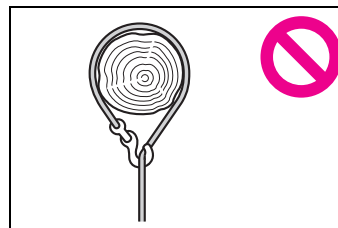

**NOTICE**

- The strength of the supplementary cable is weakened as its pulling angle exceeds 90 degrees (pulled horizontally). It may break if it is too short and the pulling angle is greater than 120 degrees.

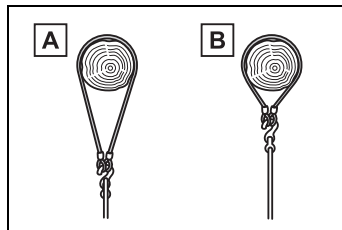

A Good

B Poor

- Do not wind the cable by hand. Using the winch motor, keep some tension in the cable when winding. If the cable is loosely wound, it could be crushed and damaged when a load is applied.
- Do not continue winding if the cable slips off the drum, as the winch assembly may be damaged.
- Do not leave the remote control switch in the "IN" position. When rewinding is no longer possible (because the object being moved has hit a rock, etc.), turn the remote control switch to off.
- Do not wind the cable too tightly after winding the cable and replacing the hook holder.

■ **To prevent battery discharge**

- Do not continue operation if the "POWER" indicator light becomes dim and a warning buzzer sounds.
- Do not use the winch continuously for a long period.

■ **Remote control**

- Avoid knocking the remote control hard against other objects or dropping it.
- Avoid operating the remote control in heavy rain or immersing it in water.
- Do not apply excessive force to the remote control terminal or expose it to water, mud or chemicals, etc.

■ **When not in use**

Observe the following precautions to prevent damage to the electric winch:


- Put the winch clutch in the lock position.
- Remove the winch clutch lever and remote control from the winch, put them in the storage bag in the glove box.
- Always put the dust cap back on the terminal. Dust and sand etc. in the terminal can result in a poor connection.
- Always install the winch cover to close the winch opening.

Engine (ignition) switch

Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch modes.

Starting the engine

- 1 Pull the parking brake switch to check that the parking brake is set. (→P.269)
- 2 Check that the shift lever is set in P.
- 3 Firmly depress the brake pedal.

 and a message will be displayed on the multi-information display. If it is not displayed, the engine cannot be started.

- 4 Vehicles with fingerprint authentication system and fingerprint authentication system is on: Authenticate by touching the fingerprint sensor on the engine switch using your finger (fingerprint information must have already been registered). (→P.115)

The buzzer will sound (a short beeping sound) if fingerprint authentication is successful.

Fingerprint authentication may fail if you move too quickly or if you slide your finger while pressing.


- 5 Press the engine switch quickly but fully.

When the vehicle has a fingerprint authentication system and the fingerprint authentication system is on, the buzzer will sound (a short beeping sound) after fingerprint authentication is successful. Press the engine switch within approximately 5 seconds of this happening. If this is not done quickly enough, fingerprint authentication will need to be performed again.

When operating the engine switch, one short, firm press is enough. It is not necessary to press and hold the switch.


The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.

Diesel engine only:  (engine preheating indicator) turns on. The engine will start after the indicator light goes out.

If the engine coolant temperature is above approximately 30°C (86°F), the engine preheating indicator may not turn on.

The engine can be started from any engine switch mode.

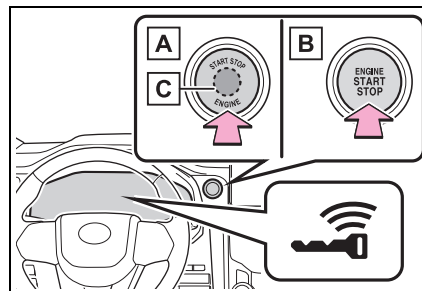

- A** Vehicles with fingerprint authentication system
- B** Vehicles without fingerprint authentication system
- C** Fingerprint sensor

■ Engine switch illumination

According to the situation, the engine switch illumination operates as follows.

- When driver's door or front passenger's door is opened, the engine switch illumination illuminates.
- When the engine switch is in OFF and depressing the brake pedal with carrying the electronic key on your person, the engine switch illumination blinks.
- When the engine switch is in ACC or ON, the engine switch illumination illuminates.
- When the engine switch mode is changed from ACC or ON to OFF, the engine switch illumination illuminates for a certain amount of time. Afterwards, the engine switch illumination turns off.

■ If the engine does not start

- The engine immobilizer system may not have been deactivated. (→P.109) Contact your Toyota dealer.
- If a message related to start-up is shown on the multi-information display, read the message and follow the instructions.


■ If the battery is discharged

The engine cannot be started using the smart entry & start system. Refer to P.729 to restart the engine.

■ Fingerprint authentication

- Fingerprint authentication certification may take some time depending on the amount of registered fingerprint information.
- When touching the fingerprint sensor, ensure that your finger covers the entire surface of the sensor. Touching the sensor with your fingertip or the side of your finger may prevent authentication.
- Touch the sensor slowly. Touching too quickly or strongly, or sliding your finger along the sensor while touching may prevent normal recognition.

- If it is difficult to press the engine switch (for example, if the nail on your finger is too long), first perform fingerprint authentication. Once that has succeeded, release your finger and then press the engine switch with another finger.

- If fingerprint authentication fails, a message "Push  Sensor with Already Registered Finger Again Slowly" will be displayed on the multi-information display.

- If fingerprint authentication fails 3 times in a row, a message "Press Brake Pedal and Touch Engine Switch with Key" will be displayed on the multi-information display.

- If it is unknown which user registered their fingerprint information, or if fingerprint authentication is not successful, hold the electronic key close to the engine switch while depressing the brake pedal, and then press the engine switch. (→P.728)

■ Electronic key battery depletion

→P.166

■ Conditions affecting operation


→P.192

■ Note for the entry function

→P.192

■ Steering lock function

- After turning the engine switch to OFF and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the engine switch again automatically cancels the steering lock.
- When the steering lock cannot be released, "Push Engine Switch while Turning Steering Wheel in Either Direction" will be displayed on the multi-information display. Check that the shift lever is set in P. Press the engine switch shortly and firmly while turning the steering wheel left and right.

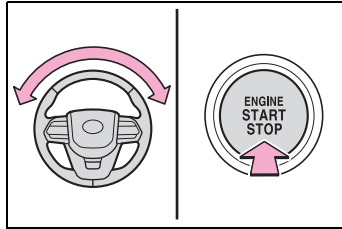

- To prevent the steering lock motor from overheating, operation of the motor may be suspended if the engine is turned on and off repeatedly in a short period of time. In this case, refrain from running the engine. After about 10 seconds, the steering lock motor will resume functioning.

■ **If there is a malfunction in the smart entry & start system**

If “Smart Entry & Start System Malfunction See Owner’s Manual” is displayed on the multi-information display, the system may be malfunctioning. Have the vehicle inspected by your Toyota dealer immediately.

■ **Electronic key battery**

→P.679

■ **Operation of the engine switch**

- If the switch is not pressed shortly and firmly, the engine switch mode may not change or the engine may not start.
- If attempting to restart the engine immediately after turning the engine switch to OFF, the engine may not start in some cases. After turning the engine switch to OFF, please wait a few seconds before restarting the engine.

■ **Customization**

If the smart entry & start system has been deactivated in a customized setting, refer to P.765.

WARNING

■ **When starting the engine**

Always start the engine while sitting in the driver’s seat. Do not depress the accelerator pedal while starting the engine under any circumstances. Doing so may cause an accident resulting in death or serious injury.

■ **Caution while driving**

If engine failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

NOTICE

■ **When starting the engine**

- Do not race a cold engine.
- If the engine becomes difficult to start or stalls frequently, have your vehicle checked by your Toyota dealer immediately.

■ **Symptoms indicating a malfunction with the engine switch**

If the engine switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact your Toyota dealer immediately.

Stopping the engine

- 1 Stop the vehicle completely.
- 2 If the parking brake is in manual mode, set the parking brake. (→P.269)

Check the parking brake indicator is illuminated.

- 3 Shift the shift lever to P. (→P.262)

- 4 Press the engine switch shortly and firmly.

The engine will stop, and the meter display will be extinguished.

Release the shift lever when pressing the engine switch.

- 5 Release the brake pedal and check that "ACCESSORY" or "IGNITION ON" is not shown on the multi-information display.

WARNING

■ **Stopping the engine in an emergency**


- If you want to stop the engine in an emergency while driving the vehicle, press and hold the engine switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P.690)

However, do not touch the engine switch while driving except in an emergency. Turning the engine off while driving will not cause loss of steering or braking control. However, power assist for these systems may be lost making it difficult to steer or brake before stopping the vehicle depending on the remaining charge in the battery or usage conditions. In this situation, you should pull over and stop the vehicle as soon as it is safe to do so.

- If the engine switch is operated while the vehicle is running, a warning message will be shown on the multi-information display and a buzzer sounds.
- When restarting the engine after an emergency shutdown, shift the shift lever to N and press the engine switch shortly and firmly.

Changing engine switch modes

Modes can be changed by pressing the engine switch with the brake pedal released. (The mode changes each time the switch is pressed.)

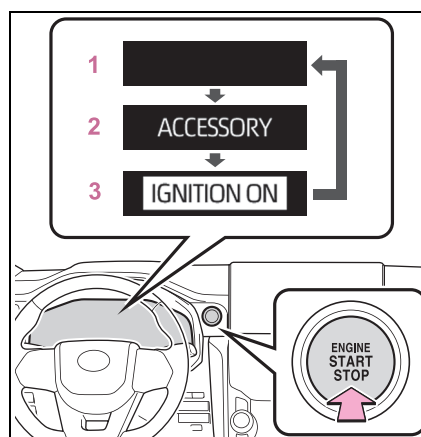

1 OFF*

The emergency flashers can be used.

The multi-information display will not be displayed.

2 ACC

Some electrical components such as the audio system can be used. "ACCESSORY" will be displayed on the multi-information display.

3 ON


All electrical components can be used. "IGNITION ON" will be displayed on the multi-information display.

*: If the shift lever is in a position other than P when turning off the engine, the engine switch will remain ON, will not turn to OFF.

■ **Auto power off function**

If the vehicle is left in ACC or ON (the engine is not running) for more than 20 minutes with the shift lever in P, the engine switch will automatically turn to OFF.

However, this function cannot entirely prevent battery discharge. Do not leave the vehicle with the engine switch in ACC or ON for long periods of time when the engine is not running.


	NOTICE
<p>■ To prevent battery discharge</p> <ul style="list-style-type: none"> ● Do not leave the engine switch in ACC or ON for long periods of time without the engine running. ● If “ACCESSORY” or “IGNITION ON” is displayed on the multi-information display, the engine switch is not in OFF. Exit the vehicle after turning the engine switch to OFF. 	

When stopping the engine with the shift lever in a position other than P

If the engine is stopped with the shift lever in a position other than P, the engine switch will not be turned to OFF but instead be turned to ACC. Perform the following procedure to turn the switch to OFF:

- 1 Check that the parking brake is set.
- 2 Shift the shift lever to P.
- 3 Check that “IGNITION ON” is displayed on the multi-information display and press the engine switch shortly and firmly.

- 4 Check that “ACCESSORY” or “IGNITION ON” on the multi-information display is off.

	NOTICE
<p>■ To prevent battery discharge</p> <p>Do not stop the engine when the shift lever is in a position other than P. If the engine is stopped in another shift lever position, the engine switch will not be turned to OFF but instead remain ON. If the vehicle is left in ON, battery discharge may occur.</p>	

**Automatic transmission
(with M mode)**

Select the shift position depending on your purpose and situation.

Shift position purpose and functions

Shift position	Objective or function
P	Parking the vehicle/starting the engine
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving ^{*1}
M	M mode driving ^{*2} (→P.263)

^{*1}: Shifting to the D position allows the system to select a gear suitable for the driving conditions. Setting the shift lever to the D position is recommended for normal driving.

^{*2}: Any gear range can be fixed when driving in M mode.

■ Driving on a downhill

On declines, there may be case where the vehicle shifts down automatically to obtain engine braking. As a result of the downshifting, the engine speed may increase.

■ To protect the automatic transmission

- If the tires spin continually when the vehicle becomes stuck in mud, dirt or snow, or if the accelerator pedal is

depressed and released repeatedly while driving, the automatic transmission temperature may become too high and the automatic transmission may be damaged.

To avoid damaging the automatic transmission, the system may temporarily lock the gear.

If the automatic transmission temperature falls, the gear locking is canceled and the automatic transmission is returned to the normal operation.

- If the automatic transmission fluid temperature is high, "Transmission Oil Temp. High Stop in a Safe Place and See Owner's Manual" will be displayed on the multi-information display. Immediately stop the vehicle in a safe place, shift the shift lever to P and wait until the warning message go off. If the warning message go off, you may start the vehicle again. If the warning message do not go off, contact your Toyota dealer.

■ When driving with dynamic radar cruise control with full-speed range (if equipped), dynamic radar cruise control (if equipped) or cruise control activated (if equipped)

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate because dynamic radar cruise control with full-speed range, dynamic radar cruise control or cruise control will not be canceled.

- While driving in M mode, downshifting to 9, 8, 7, 6, 5 or 4. (→P.263)
- When switching the driving mode to sport mode while driving in D position. (→P.473)

■ Restraining sudden start (Drive-Start Control)

→P.237

■ AI-SHIFT

The AI-SHIFT automatically selects the suitable gear according to driver performance and driving conditions. The AI-SHIFT automatically operates


when the shift lever is in D position.
(Shifting the shift lever to the M position
cancels the function.)

⚠ WARNING

■ **When driving on slippery road surfaces**

Do not accelerate or shift gears suddenly.
Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

Shifting the shift lever

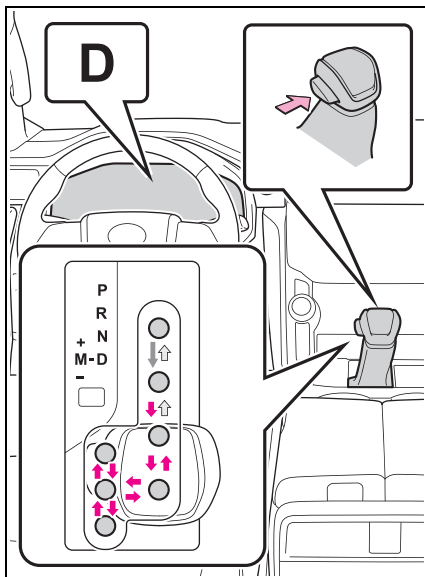

← While the engine switch is in ON and the brake pedal depressed*, shift the shift lever while pushing the shift release button on the shift knob.

← Shift the shift lever while

pushing the shift release button on the shift knob.

← Shift the shift lever normally.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

*: For the vehicle to be able to be shifted from P, the brake pedal must be depressed before the shift release button is pushed. If the shift release button is pushed first, the shift lock will not be released.

■ **Shift lock system**

The shift lock system is a system to prevent accidental operation of the shift lever in starting.

The shift lever can be shifted from P only when the engine switch is in ON, the brake pedal is depressed and the shift release button is pushed.

■ **If the shift lever cannot be shifted from P**

First, check whether the brake pedal is being depressed.


If the shift lever cannot be shifted even though the brake pedal is depressed and the shift release button is pushed, there may be a problem with the shift lock system. Have the vehicle inspected by your Toyota dealer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.


Releasing the shift lock:

- 1 Set the parking brake.
- 2 Turn the engine switch off.
- 3 Depress the brake pedal.
- 4 Pry the cover up with a flathead screwdriver or equivalent tool.
To prevent damage to the cover,

cover the tip of the screwdriver with a rag.

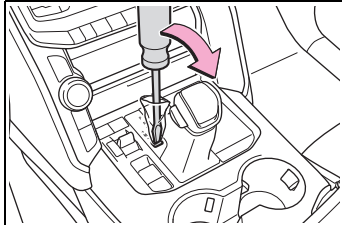

- 5 Press and hold the shift lock override button and then push the button on the shift knob. The shift lever can be shifted while both buttons are pressed.

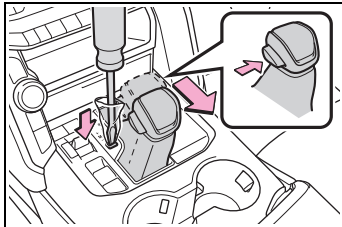

⚠ WARNING

■ To prevent an accident when releasing the shift lock

Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal. If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.

Selecting the driving mode

■ **Drive mode**

→P.473


■ **Second start mode (if equipped)**

Use second start mode for acceler-

ating and driving on slippery road surfaces such as snow.

Press the button to use second start mode.

Press the button again to cancel second start mode.

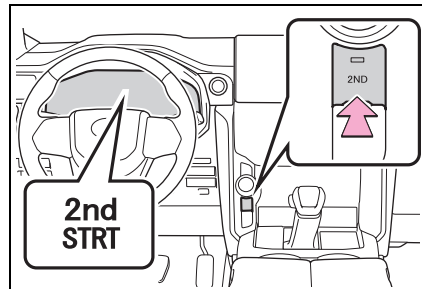


■ **Second start mode automatic deactivation**

Second start mode is automatically deactivated if the engine is turned off after driving in second start mode.

Selecting gears in M mode

To enter M mode, shift the shift lever to M. Gears can be selected by operating the shift lever, allowing you to drive in the gear of your choosing.

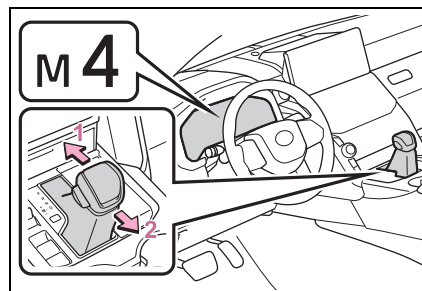

- 1 Upshifting
- 2 Downshifting

The gear changes once every time the shift lever is operated. The selected gear, from M1 to M10, will be fixed and displayed on the meter.

When in the M position, the gear will not change unless the shift lever is operated.

However, even when in the M position, the gears will be automatically changed in the following situations:

- When vehicle speed drops (downshift only).
- When it is necessary to protect the engine or automatic transmission when the engine coolant temperature is low, the automatic transmission fluid temperature is high or low, or other reasons.

Also, the gear will not shift when the vehicle speed is low, even if an upshift operation is performed.

Downshifting restriction warning buzzer

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever is operated. (A buzzer will sound twice.)

If the “M” indicator does not come on even after shifting the shift lever to M

This may indicate a malfunction in the automatic transmission system. Have the vehicle inspected by your Toyota dealer immediately.

Automatic transmission (with S mode)

Select the shift position depending on your purpose and situation.

Shift position purpose and functions

Shift position	Objective or function
P	Parking the vehicle/starting the engine
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving*1
S	S mode driving*2 (→P.267)

*1: Shifting to the D position allows the system to select a gear suitable for the driving conditions. Setting the shift lever to the D position is recommended for normal driving.

*2: Selecting shift ranges using S mode restricts the upper limit of the possible gear ranges, controls engine braking force, and prevents unnecessary upshifting.

Driving on a downhill

On declines, there may be case where the vehicle shifts down automatically to obtain engine braking. As a result of the downshifting, the engine speed may increase.

■ To protect the automatic transmission

- If the tires spin continually when the vehicle becomes stuck in mud, dirt or snow, or if the accelerator pedal is depressed and released repeatedly while driving, the automatic transmission temperature may become too high and the automatic transmission may be damaged.

To avoid damaging the automatic transmission, the system may temporarily lock the gear.

If the automatic transmission temperature falls, the gear locking is canceled and the automatic transmission is returned to the normal operation.

- If the automatic transmission fluid temperature is high, "Transmission Oil Temp. High Stop in a Safe Place and See Owner's Manual" will be displayed on the multi-information display. Immediately stop the vehicle in a safe place, shift the shift lever to P and wait until the warning message goes off. If the warning message goes off, you may start the vehicle again. If the warning message does not go off, contact your Toyota dealer.

■ When driving with dynamic radar cruise control with full-speed range (if equipped) or cruise control activated (if equipped)

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate because dynamic radar cruise control with full-speed range or cruise control will not be canceled.

- While driving in S mode, downshifting to 5 or 4. (→P.267)
- When switching the driving mode to power mode while driving in D position. (→P.473)

■ Restraining sudden start (Drive-Start Control)

→P.237

■ AI-SHIFT

The AI-SHIFT automatically selects the

suitable gear according to driver performance and driving conditions.

The AI-SHIFT automatically operates when the shift lever is in D position. (Shifting the shift lever to the S position cancels the function.)

■ Transmission protection function

If the tires spin continually when the vehicle becomes stuck in mud, dirt or snow, or if the accelerator pedal is depressed and released repeatedly while driving, the automatic transmission temperature may become too high and the automatic transmission may be damaged.

To avoid damaging the automatic transmission, the system may temporarily lock the gear.

If the automatic transmission temperature falls, the gear locking is canceled and the automatic transmission is returned to the normal operation.




WARNING

■ When driving on slippery road surfaces

Do not accelerate or shift gears suddenly.

Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

Shifting the shift lever

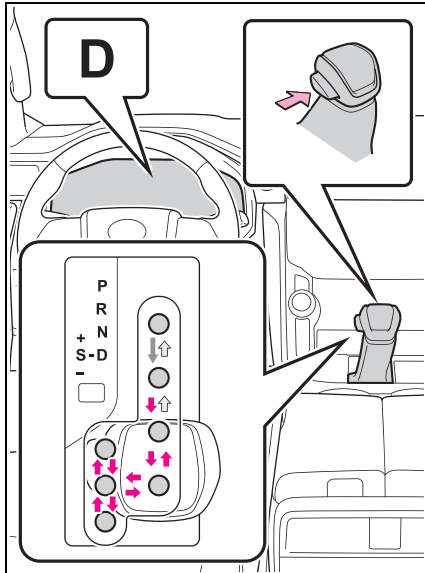

← While the engine switch is in ON and the brake pedal depressed*, shift the shift lever while pushing the shift release button on the shift knob.

← Shift the shift lever while pushing the shift release button on the shift knob.

← Shift the shift lever normally.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

*: For the vehicle to be able to be shifted from P, the brake pedal must

be depressed before the shift release button is pushed. If the shift release button is pushed first, the shift lock will not be released.

■ **Shift lock system**

The shift lock system is a system to prevent accidental operation of the shift lever in starting.

The shift lever can be shifted from P only when the engine switch is in ON, the brake pedal is depressed and the shift release button is pushed.

■ **If the shift lever cannot be shifted from P**


First, check whether the brake pedal is being depressed.

If the shift lever cannot be shifted even though the brake pedal is depressed and the shift release button is pushed, there may be a problem with the shift lock system. Have the vehicle inspected by your Toyota dealer immediately.


The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.

Releasing the shift lock:

- 1 Set the parking brake.
- 2 Turn the engine switch off.
- 3 Depress the brake pedal.
- 4 Pry the cover up with a flathead screwdriver or equivalent tool. To prevent damage to the cover, cover the tip of the screwdriver with a rag.

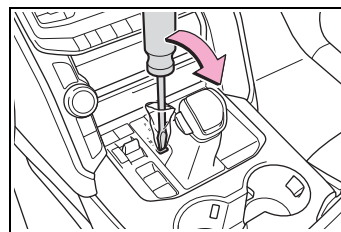

- 5 Press and hold the shift lock override button and then push the button on the shift knob. The shift lever can be shifted while both buttons are pressed.

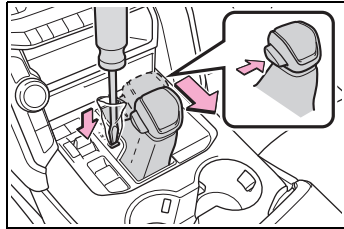


⚠ WARNING
■ To prevent an accident when releasing the shift lock
 Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal. If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.

Selecting a driving mode


The following patterns can be selected to suit current driving and operating conditions.

■ Power mode

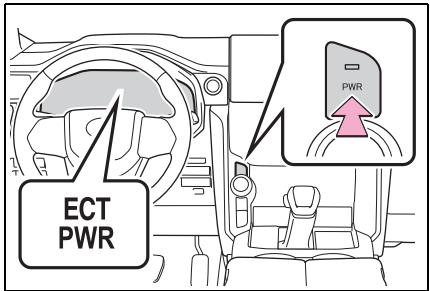

For powerful acceleration and driving in mountainous regions.
 Press the button again to cancel power mode.

■ Second start mode

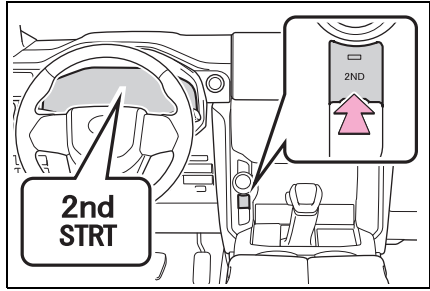


For starting on slippery road surfaces, such as on snow.
 Press the button again to cancel second start mode.

■ Second start mode automatic deactivation

Second start mode is automatically deactivated if the engine is turned off after driving in second start mode.

Changing shift ranges in S mode

When the shift lever is in the S position, the shift lever can be operated as follows:

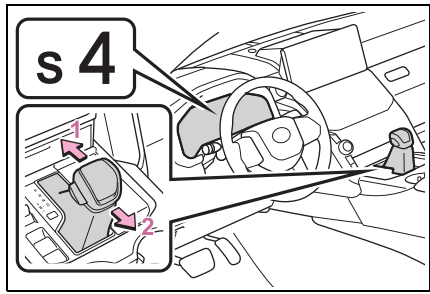

- 1** Upshifting
- 2** Downshifting

The selected shift range will be displayed in the meter.

The initial shift range in S mode is set automatically to 5 or 4 according to vehicle speed. However, the initial shift range may be set to 3 or 2 if AI-SHIFT has operated while the shift lever was in the D position. (→P.265)

■ **S mode**

- You can choose from 6 levels of accelerating force and engine braking force.
- A lower shift range will provide greater accelerating force and engine braking force than a higher shift range, and the engine revolutions will also increase.
- To prevent the engine from over-revving, upshifting may automatically occur.
- To protect the automatic transmission, a function is adopted that automatically selects a higher shift range when the fluid temperature is high.
- When the shift range is 5 or lower, holding the shift lever toward “+” sets the shift range to 6.

■ **Downshifting restriction warning buzzer**

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever is operated. (A buzzer will sound twice.)


■ **If the “S” indicator does not come on even after shifting the shift lever to S**

This may indicate a malfunction in the automatic transmission system. Have the vehicle inspected by your Toyota dealer immediately.

Turn signal lever

Operating instructions

The turn signal lever can be used to show the following intentions of the driver:

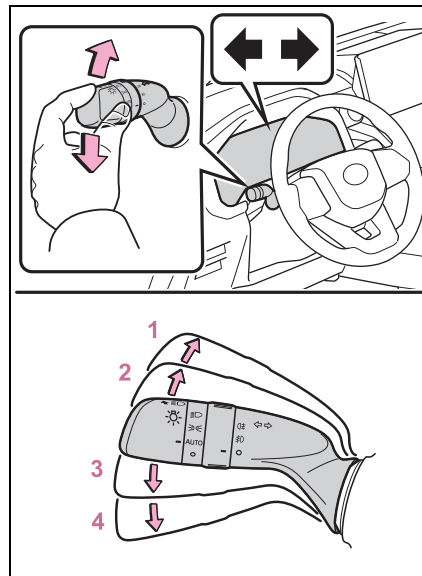

- 1 Right turn
- 2 Lane change to the right (move the lever partway and release it)
The right hand signals will flash 3 times.
- 3 Lane change to the left (move the lever partway and release it)
The left hand signals will flash 3 times.
- 4 Left turn

■ **Turn signals can be operated when**

The engine switch is in ON.

■ **If the indicator flashes faster than usual**

Check that a light bulb in the front or rear turn signal lights has not burned

out.


Parking brake

The parking brake can be set or released automatically or manually. In automatic mode, the parking brake can be set or released automatically according to shift lever operation. Also, even in automatic mode, the parking brake can be set or released manually.

Operating instructions

■ Using the manual mode

The parking brake can be set and released manually.

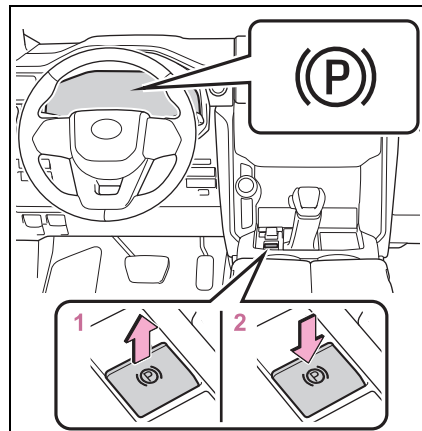

- 1** Pull the switch to set the parking brake.

The parking brake indicator light will turn on.

Pull and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.

- 2** Push the switch to release the

parking brake.


- Operate the parking brake switch while depressing the brake pedal or the accelerator pedal. When using this function, slowly depress the accelerator pedal.
- Parking brake automatic release function (→P.270)

Make sure that the parking brake indicator light turn off.

If the parking brake indicator light flashes, operate the switch again. (→P.705)

■ **Turning the automatic mode on**

While the vehicle is stopped, pull and hold the parking brake switch until a buzzer sounds and “EPB Shift Interlock Function Activated” is displayed on the multi-information display.

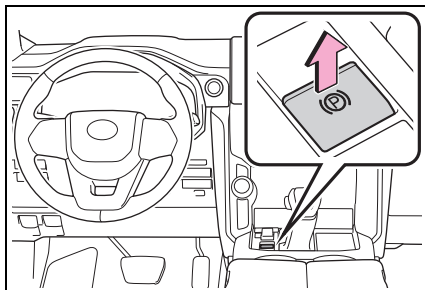

When the automatic mode is turned on, the parking brake operates as follows.


- When the shift lever is shifted from P, the parking brake will be released, and the parking brake indicator light will turn off.
- When the shift lever is shifted to P, the parking brake will be set,

and the parking brake indicator light will turn on.

Operate the shift lever with the vehicle stopped and the brake pedal depressed.

■ **Turning the automatic mode off**

While the vehicle is stopped and depressing the brake pedal, press and hold the parking brake switch until a buzzer sounds and “EPB Shift Interlock Function Deactivated” is displayed on the multi-information display.

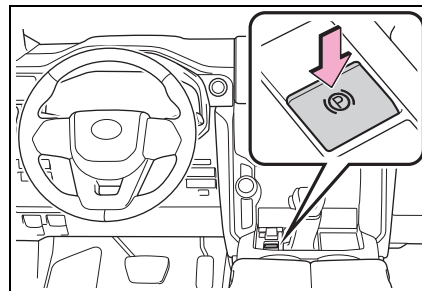

■ **Parking brake operation**

- When the engine switch is not in ON, the parking brake cannot be released using the parking brake switch.
- When the engine switch is not in ON, automatic mode (automatic brake setting and releasing) is not available.

■ **Parking brake automatic release function**

The parking brake will be released automatically when the accelerator pedal is slowly depressed under the following conditions:

- The driver's door is closed
- The driver is wearing the seat belt
- The shift lever is in a forward or reverse position.

- The malfunction indicator lamp or brake system warning light is not illuminated

If the automatic release function does not operate, release the parking brake manually.

■ Parking brake automatic lock function

The parking brake will be set automatically under the following conditions:

- The driver does not operate the brake pedal
- The driver's door is not closed
- The driver is not wearing the seat belt
- The shift lever position is not in P or N
- The malfunction indicator lamp or brake system warning light is not illuminated

■ If "Parking Brake Temporarily Unavailable" is displayed on the multi-information display

If the parking brake is operated repeatedly over a short period of time, the system may restrict operation to prevent overheating. If this happens, refrain from operating the parking brake. Normal operation will return after about 1 minute.

■ If "Parking Brake Unavailable" is displayed on the multi-information display

Operate the parking brake switch. If the message does not disappear after operating the switch several times, the system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

■ Parking brake operation sound

When the parking brake operates, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Parking brake indicator light

- Depending on the engine switch mode, the parking brake indicator light will turn on and stay on as described below:

ON: Comes on until the parking brake is released.

Not in ON: Stays on for approximately 15 seconds.

- When the engine switch is turned to OFF with the parking brake set, the parking brake indicator light will stay on for about 15 seconds. This does not indicate a malfunction.

■ When the parking brake switch malfunctions

Automatic mode (automatic brake setting and releasing) will be turned on automatically.

■ Parking the vehicle

→P.231

■ Parking brake engaged warning buzzer

A buzzer will sound if the vehicle is driven with the parking brake engaged. "Parking Brake ON" is displayed on the multi-information display (with the vehicle reaching a speed of 5 km/h [3 mph]).

■ If the brake system warning light comes on

→P.698

■ Usage in winter time

→P.506



WARNING

■ When parking the vehicle

Do not leave a child in the vehicle alone. The parking brake may be released unintentionally by a child and there is the danger of the vehicle moving that may lead to an accident resulting in death or serious injury.

■ Parking brake switch

Do not set any objects near the parking brake switch. Objects may interfere with the switch and may lead the parking brake to unexpectedly operate.



NOTICE

■ When parking the vehicle

Before you leave the vehicle, shift the shift lever to P, set the parking brake and make sure that the vehicle does not move.

■ When the system malfunctions

Stop the vehicle in a safe place and check the warning messages.

■ When the parking brake cannot be released due to a malfunction

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear. Have the vehicle inspected by your Toyota dealer immediately if this occurs.

Brake Hold

- ▶ Automatic transmission (with M mode)

The brake hold system keeps the brake applied when the shift lever is in D, M or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or M to allow smooth start off.

- ▶ Automatic transmission (with S mode)


The brake hold system keeps the brake applied when the shift lever is in D, S or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or S to allow smooth start off.

Enabling the system

Turns the brake hold system on

The brake hold standby indicator

(green) **A** comes on. While the system is holding the brake, the brake hold operated indicator (yellow) **B** comes on.

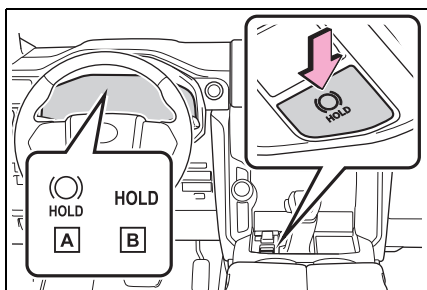

■ Brake hold system operating conditions

The brake hold system cannot be turned on in the following conditions:

- The driver's door is not closed.
- The driver is not wearing the seat belt.
- The parking brake is engaged.

If any of the conditions above are detected when the brake hold system is enabled, the system will turn off and the brake hold standby indicator light will go off. In addition, if any of the conditions are detected while the system is holding the brake, a warning buzzer will sound and a message will be shown on the multi-information display. The parking brake will then be set automatically.

■ Brake hold function

- If the brake pedal is left released for a period of about 3 minutes after the system has started holding the brake, the parking brake will be set automatically. In this case, a warning buzzer sounds and a message is shown on the multi-information display.
- To turn the system off while the system is holding the brake, firmly depress the brake pedal and press the button again.
- The brake hold function may not hold the vehicle when the vehicle is on a steep incline. In this situation, it may be necessary for the driver to apply the brakes. A warning buzzer will sound and the multi-information display will inform the driver of this situation. If a warning message is shown

on the multi-information display, read the message and follow the instructions.

■ When the parking brake is set automatically while the system is holding the brakes

Perform any of the following operations to release the parking brake:

- Depress the accelerator pedal. (The parking brake will not be released automatically if the seat belt is not fastened.)
- Operate the parking brake switch with the brake pedal depressed.

Make sure that the parking brake indicator light goes off. (→P.269)

■ When an inspection at your Toyota dealer is necessary

When the brake hold standby indicator (green) does not illuminate even when the brake hold switch is pressed with the brake hold system operating conditions met, the system may be malfunctioning. Have the vehicle inspected at your Toyota dealer.

■ If "Brake Hold Malfunction Press Brake to Deactivate Visit Your Dealer" or "Brake Hold Malfunction Visit Your Dealer" is displayed on the multi-information display

The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

■ Warning messages and buzzers

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution. If a warning message is shown on the multi-information display, read the message and follow the instructions.

■ When another control activates with the brake hold system

A message is displayed on the multi-information display in any of the following cases.

- "Brake Hold Unavailable See the Owner's Manual"

- When the brake hold switch is pressed while the downhill assist control system is activated.
- When the brake hold switch is pressed while the four-wheel drive control switch is turned to L4 mode.
- “Brake Hold Unavailable Press Brake to Deactive”
- When the DAC/CRAWL switch is operated while the brake hold system is activated.
- When the four-wheel drive control switch is turned to L4 mode while the brake hold system is activated.

The brake hold system and downhill assist control system or transfer L4 mode cannot be activated at the same time.

Please press the brake hold switch with the brake pedal depressed to turn off the brake hold system.

■ **If the brake hold operated indicator flashes**

→P.705



NOTICE

■ **When parking the vehicle**

The brake hold system is not designed for use when parking the vehicle for a long period of time. Turning the engine switch off while the system is holding the brake may release the brake, which would cause the vehicle to move. When operating the engine switch, depress the brake pedal, shift the shift lever to P and set the parking brake.



WARNING

■ **When the vehicle is on a steep incline**

Take care when using the brake hold system on a steep incline, exercise caution. The brake hold function may not hold brakes in such situations.

Also, the system may not activate depending on the angle of the slope.

■ **When stopped on a slippery road**

The system cannot stop the vehicle when the gripping ability of the tires has been exceeded. Do not use the system when stopped on a slippery road.


Headlight switch




The headlights can be operated manually or automatically.

Turning on the headlights


Operating the  switch turns on the lights as follows:

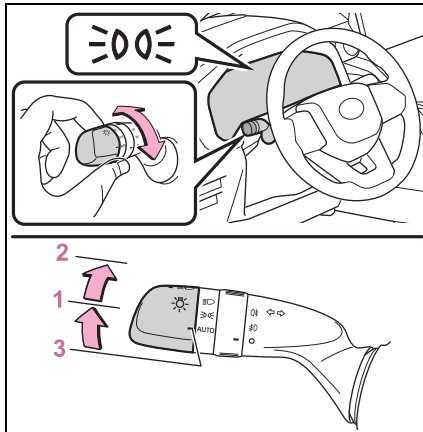



► Type A

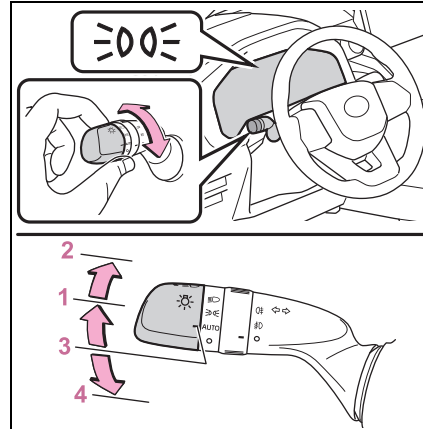

- 1  The front position, tail, license plate and instrument panel lights turn on.
- 2  The headlights and all lights listed above turn on.
- 3  The headlights, daytime running lights (→P.275) and all lights listed above turn on and off automatically.

► Type B




- 1  The front position, tail, license plate and instrument panel lights turn on.
- 2  The headlights and all lights listed above turn on.
- 3  The headlights, daytime running lights (→P.275) and all lights listed above turn on and off automatically.
- 4  The daytime running lights turn off. (→P.275)

On some models: The daytime running lights turn on. (→P.275)

■ AUTO mode can be used when

The engine switch is in ON.


■ Daytime running light system

To make your vehicle more visible to other drivers during daytime driving, the daytime running lights turn on automatically whenever the engine is started and the parking brake is released with the headlight switch in the  or AUTO position. (Illuminate brighter than the front

position lights.) Daytime running lights are not designed for use at night.

■ Headlight control sensor


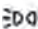

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield. Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

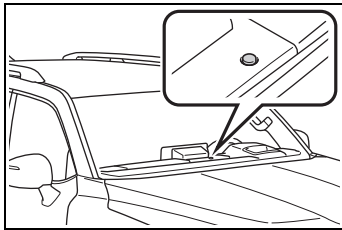



■ Automatic light off system

► Type A


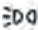

The lights turn off after the engine switch is turned to ACC or OFF.

To turn the lights on again, turn the engine switch to ON, or turn the light switch to  or AUTO position once and then back to  or  position.

► Type B

- When the light switch is in  or  position: The headlights and front fog lights turn off after the engine switch is turned to ACC or OFF.

- When the light switch is in AUTO position: The headlights and all lights turn off after the engine switch is turned to ACC or OFF.

To turn the lights on again, turn the engine switch to ON, or turn the light switch to  or AUTO position once and then back to  or  position.

■ Light reminder buzzer

A buzzer sounds when the engine switch is turned to ACC or OFF and the driver's door is opened while the lights are turned on.

■ Automatic headlight leveling system (if equipped)

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

■ Battery-saving function

In order to prevent the battery of the vehicle from discharging, if the headlights and/or tail lights are on when the engine switch is turned off the battery saving function will operate and automatically turn off all the lights after approximately 20 minutes. When the engine switch is turned to ON, the battery-saving function will be disabled.

When any of the following are performed, the battery-saving function is canceled once and then reactivated. All the lights will turn off automatically 20 minutes after the battery-saving function has been reactivated:

- When the headlight switch is operated
- When a door is opened or closed

■ Welcome lighting (if equipped)

The front position lights automatically turn on when the surroundings are dark and the doors are unlocked using the entry function or wireless remote control if the light switch is in the AUTO position.

■ Customization

Settings (e.g. light sensor sensitivity) can be changed.


(Customizable features: →P.769)

**NOTICE**

■ **To prevent battery discharge**

Do not leave the lights on longer than necessary when the engine is not running.

Turning on the high beam headlights

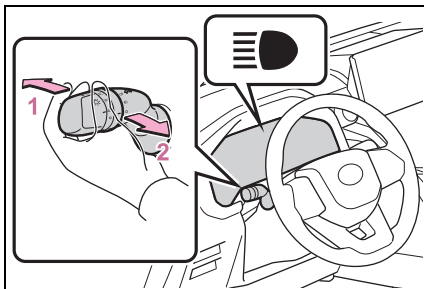

- 1 With the headlights on, push the lever forward to turn on the high beams.

Pull the lever back to the center position to turn the high beams off.

- 2 Pull the lever toward you and release it to flash the high beams once.

You can flash the high beams with the headlights on or off.


Extended Headlight Lighting (if equipped)

This system allows the headlights to be turned on for 30 seconds when the engine switch is turned to OFF.

Pull the lever toward you and release it with the light switch is in the AUTO position after turning the


engine switch to OFF.

Pull the lever toward you and release it again to turn off the lights.

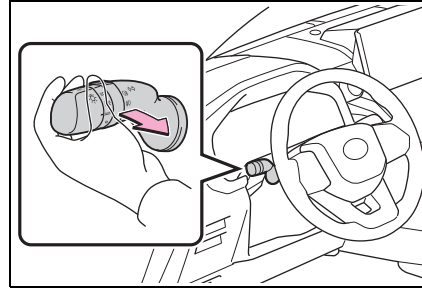

Manual headlight leveling dial (if equipped)

The level of the headlights can be adjusted according to the number of passengers and the loading condition of the vehicle.

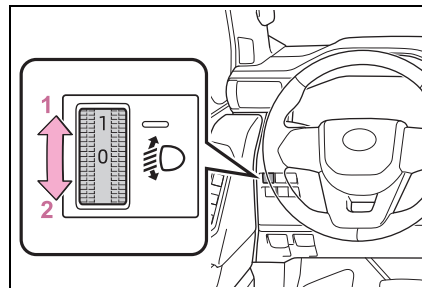

- 1 Raises the level of the headlights
- 2 Lowers the level of the headlights

■ **Guide to dial settings**

- ▶ Except for vehicles with model code* that has "V" as the last letter.

*: The model code is indicated on the manufacturer's label or the Certifica-

tion Regulation label. (→P.744)

Occupancy and luggage load conditions		Dial position
Occupants	Luggage load	
Driver only, or driver and one passenger in the front seat	None	0
Driver, front passenger and all passengers in the rear seats farthest to the rear	None	1
All seats occupied	None	1 ^{*1} 1.5 ^{*2}
All seats occupied	Full luggage loading	2.5 ^{*4} 3 ^{*5}
Driver	Full luggage loading	3 ^{*6, 7} 3.5 ^{*8, 9}

*1: For vehicles with model code^{*3} that has "W" as the last letter

*2: Except for vehicles with model code^{*3} that has "W" as the last letter

*3: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P.744)

*4: FJA300L-GNUAY and FJA300L-GMUAYW models^{*3} with sub fuel tank system, and FJA300L-GNUGY model^{*3}

*5: FJA300L-GNUAY and FJA300L-GMUAYW models^{*3} without sub fuel tank system, and FJA300R-GNUAY, VJA300R-GNUAZ and VJA300L-

GMUAZW models^{*3}

*6: FJA300L-GNUAY model^{*3} with sub fuel tank system, and FJA300L-GNUGY and VJA300R-GNUAZ models^{*3}

*7: Except for EURO V models^{*10} of FJA300R-GNUAY model^{*3} with sub fuel tank system, and for EURO V models^{*10} of FJA300R-GNUAY model^{*3} with sub fuel tank system and 18 or 20-inch tires

*8: FJA300L-GNUAY and FJA300R-GNUAY models^{*3} without sub fuel tank system, and FJA300L-GMUAYW and VJA300L-GMUAYW models^{*3}

*9: EURO V models^{*10} of FJA300R-GNUAY model^{*3} with sub fuel tank system and 17-inch tires

*10: EURO V is an emission standard. If it is not clear that your vehicle meets relevant standards, contact your Toyota dealer.

► For vehicles with model code^{*} that has "V" as the last letter.

*: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P.744)

Occupancy and luggage load conditions		Dial position
Occupants	Luggage load	
Driver only, or driver and one passenger in the front seat	None	0
Driver, front passenger and all passengers in the rear seats farthest to the rear	None	1
All seats occupied	None	1 ^{*1} 1.5 ^{*2}
All seats occupied	Full luggage loading	2 ^{*4} 2.5 ^{*5}
Driver	Full luggage loading	2.5 ^{*6} 3 ^{*7}

^{*1}: FJA300L-GMUGYV model^{*3}
^{*2}: Except FJA300L-GMUGYV model^{*3}
^{*3}: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P.744)
^{*4}: FJA300L-GNUAYV and VJA300L-GNUGZV models^{*3}
^{*5}: Except FJA300L-GNUAYV and VJA300L-GNUGZV models^{*3}
^{*6}: Except GRJ300L-GNTGKV model^{*3}
^{*7}: GRJ300L-GNTGKV model^{*3}

Cornering lights (if equipped)

When any of the following condi-

tions is met, while the headlights (low beam) are on, the cornering lights will additionally turn on and light up the direction of movement for the vehicle. This is to ensure excellent visibility when either driving at intersections or parking at night.

- The steering wheel is operated
- The turn signal lever is operated
- The shift lever is in R (both left and right side cornering lights)

■ **Cornering light control**

- The lights illuminate when the vehicle speed is approximately 30 km/h (19 mph) or less. However, the lights turn off when the vehicle speed increases to approximately 35 km/h (22 mph) or more.
- After the lights remain illuminated for 30 minutes, they automatically turn off.

AHS (Adaptive High-beam System)*

*: If equipped

The Adaptive High-beam System uses a front camera located behind the upper portion of the windshield to assess the brightness of the lights of vehicles ahead, streetlights, etc., and automatically controls the headlight light distribution as necessary.

WARNING

■ Limitations of the Adaptive High-beam System

Do not overly rely on the Adaptive High-beam System. Always drive safely, taking care to observe your surroundings and turning the high beams on or off manually if necessary.

■ To prevent incorrect operation of the Adaptive High-beam System


Do not overload the vehicle.

System functions

- Adjusts the brightness and illuminated area of the high beams according to the vehicle speed.
- Adjusts the intensity of the high beams, while driving on a curve, so that the area in the direction that the vehicle is turning will be illuminated more brightly than other areas.
- Operates the shaded high beams so that the area around

vehicles ahead is partially not illuminated while all other areas continue to be illuminated with the high beams.

The shaded high beams help optimize forward visibility while reducing the dazzling effect on the drivers of vehicles ahead.

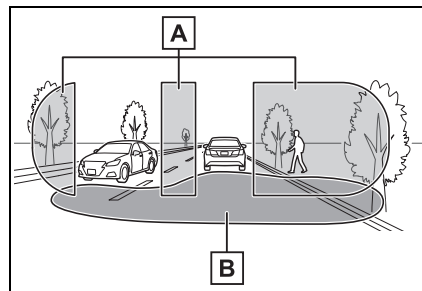


A Illuminated area of the high beams


B Illuminated area of the low beams

- Adjusts the distance that the low beams are projected according to the distance to a preceding vehicle.


Activating the Adaptive High-beam System

- 1 Press the Adaptive High-beam System switch.

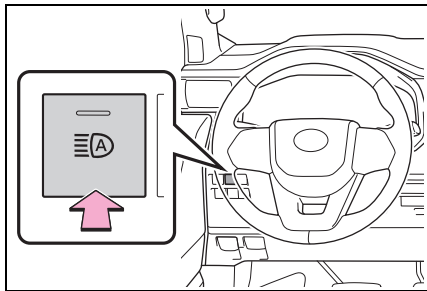

- 2 Turn the headlight switch to the AUTO or  position.

The Adaptive High-beam System indicator will come on when the system is operating.

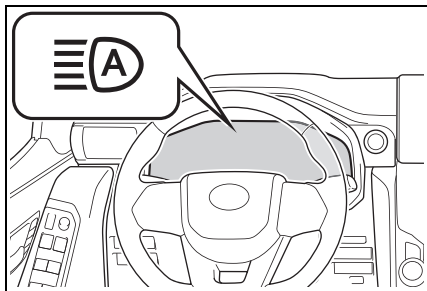

Conditions in which the light distribution control of the headlights changes automatically

- When all of the following conditions are met, the high beams will be turned on automatically and the system will operate:
 - The vehicle speed is approximately 15 km/h (9 mph) or more.*
 - The area ahead of the vehicle is dark.

*: When the vehicle speed is approximately 30 km/h (19 mph) or more, the area in the direction that the vehicle is

turning will be illuminated more brightly than other areas while driving on a curve.

- When all of the following conditions are met, the shaded high beams will turn on and the distance that the low beams are projected will be adjusted automatically, depending on the location of vehicles ahead:
 - The vehicle speed is approximately 15 km/h (9 mph) or more.
 - The area ahead of the vehicle is dark.
 - There are vehicles ahead with headlights or tail lights turned on.
- If any of the following conditions is met, the high beams or shaded high beams will be changed to the low beams automatically:
 - The vehicle speed is below approximately 12 km/h (7 mph).
 - The area ahead of the vehicle is not dark.
 - There are many vehicles ahead.
 - Vehicles ahead are moving quickly and the high beams may blind the drivers of the other vehicles.

Front camera detection information

- The high beams may not be automatically changed to the shaded high beams in the following situations:
 - When vehicles ahead suddenly appear from a curve
 - When the vehicle is cut in front of by another vehicle
 - When vehicles ahead are hidden from sight due to repeated curves, road dividers or roadside trees
 - When vehicles ahead appear from the faraway lane on wide road
 - When vehicles ahead have no lights
- The high beams may be changed to the shaded high beams if a vehicle ahead that is using fog lights without its headlights turned on is detected.
- House lights, street lights, traffic signals, and illuminated billboards or signs and other reflective objects may cause the high beams to change to the shaded high beams, cause the high beams not to change to the

shaded high beams, or change the area that is not illuminated.

- The following factors may affect the amount of time taken to turn the high beam on or off, or the speed by which the areas not illuminated change:
 - The brightness of headlights, fog lights, and tail lights of vehicles ahead
 - The movement and direction of vehicles ahead
 - When a vehicle ahead only has operational lights on one side
 - When a vehicle ahead is a two-wheeled vehicle
 - The condition of the road (gradient, curve, condition of the road surface etc.)
 - The number of passengers and amount of luggage
- The light distribution control of the headlights may change unexpectedly.
- Bicycles or similar objects may not be detected.
- In the following situations the system may not be able to correctly detect the surrounding brightness level. This may cause the low beams to remain on or the high beams to flash or dazzle pedestrians or vehicles ahead. In such a case, it is necessary to manually switch between the high and low beams.
 - When driving in inclement weather (heavy rain, snow, fog, sandstorms, etc.)
 - When the windshield is obscured by fog, mist, ice, dirt, etc.
 - When the windshield is cracked or damaged
 - When the front camera is deformed or dirty
 - When the temperature of the front camera is extremely high
 - When the surrounding brightness level is equal to that of headlights, tail lights or fog lights
 - When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly
 - When the vehicle is hit by water, snow, dust, etc. from a preceding

vehicle

- When driving through an area of intermittently changing brightness and darkness
- When frequently and repeatedly driving on ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel roads, etc.)
- When frequently and repeatedly taking curves or driving on a winding road
- When there is a highly reflective object ahead of the vehicle, such as a sign or mirror
- When the back of a preceding vehicle is highly reflective, such as a container on a truck
- When the vehicle's headlights are damaged or dirty, or are not aimed properly
- When the vehicle is listing or tilting due to a flat tire, a trailer being towed, etc.
- When the headlights are changed between the high beams and low beams repeatedly in an abnormal manner
- When the driver believes that the high beams may be flashing or dazzling pedestrians or other drivers
- When the vehicle is used in an area in which vehicles travel on the opposite side of the road of the country for which the vehicle was designed, for example using a vehicle designed for right-hand traffic in a left-hand traffic area, or vice versa

■ **If “Headlight System Malfunction Visit Your Dealer” is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

■ **Customization**

Some functions can be customized. (Customizable features: →P.770)


Turning the high beams on/off manually

■ Switching to the high beams

Push the lever away from you.

The Adaptive High-beam System indicator will turn off and the headlight high beam indicator will turn on.

Pull the lever to its original position to activate the Adaptive High-beam System again.

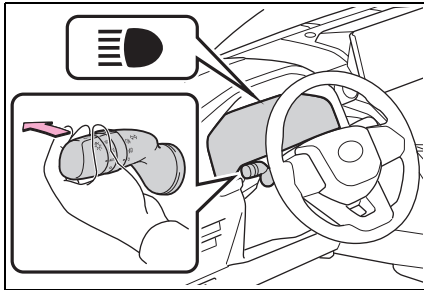


■ Switching to the low beams

Press the Adaptive High-beam System switch.

The Adaptive High-beam System indicator will turn off.

Press the switch to activate the Adaptive High-beam System again.

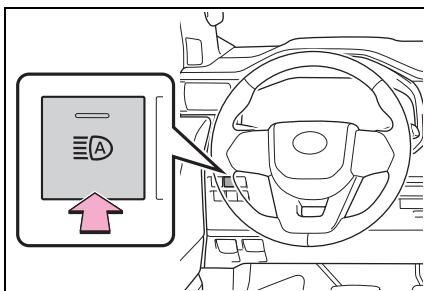


■ Temporarily switching to the low beams

Pull the lever toward you and then

return it to its original position.

The high beams are on while the lever is pulled toward you, however, after the lever is returned to its original position, the low beams remain on for a certain amount of time. Afterwards, the Adaptive High-beam System will be activated again.

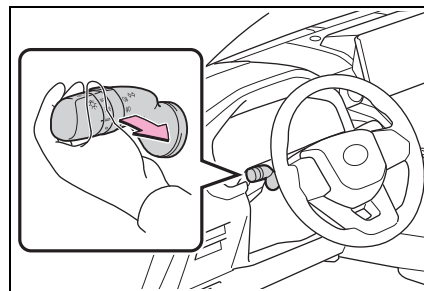

■ Temporarily switching to the low beams

It is recommended to switch to the low beams when the high beam may cause problems or distress to other drivers or pedestrians nearby.

AHB (Automatic High Beam)*

*: If equipped

The Automatic High Beam uses an in-vehicle front camera to assess the brightness of streetlights, the lights of vehicles ahead etc., and automatically turns the high beam on or off as necessary.

WARNING

■ Limitations of the Automatic High Beam


Do not overly rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning the high beam on or off manually if necessary.


■ To prevent incorrect operation of the Automatic High Beam system

Do not overload the vehicle.


Activating the Automatic High Beam system

- 1 Press the Automatic High Beam switch.

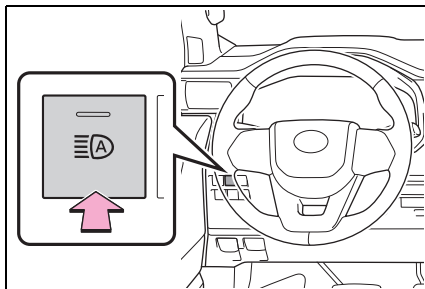

- 2 Turn the headlight switch to the **AUTO** or  position.

The Automatic High Beam indicator will come on when the system is operating.

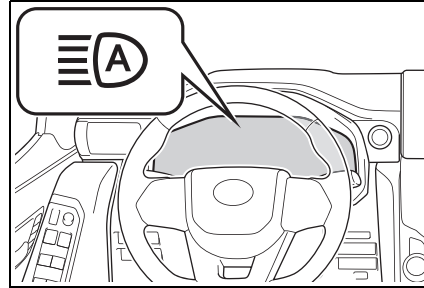

■ High beams automatic turning on or off conditions

- When all of the following conditions are fulfilled, the high beams will be automatically turned on (after approximately 1 second):
 - Vehicle speed is above approximately 30 km/h (19 mph).
 - The area ahead of the vehicle is dark.
 - There are no vehicles ahead with headlights or tail lights turned on.
 - There are few streetlights on the road ahead.
- If any of the following conditions are fulfilled, the high beams will be automatically turned off:
 - Vehicle speed drops below approximately 25 km/h (16 mph).
 - The area ahead of the vehicle is not dark.
 - Vehicles ahead have headlights or tail lights turned on.
 - There are many streetlights on the road ahead.

■ Front camera detection information

- The high beams may not be automatically turned off in the following situations:
 - When oncoming vehicles suddenly appear from a curve
 - When the vehicle is cut in front of by another vehicle
 - When vehicles ahead are hidden from sight due to repeated curves, road dividers or roadside trees
 - When vehicles ahead appear from the

- faraway lane on a wide road
- When vehicles ahead have no lights
 - The high beams may be turned off if a vehicle ahead that is using fog lights without using the headlights is detected.
 - House lights, street lights, traffic signals, and illuminated billboards or signs may cause the high beams to switch to the low beams, or the low beams to remain on.
 - The following factors may affect the amount of time taken to turn the high beams on or off:
 - The brightness of headlights, fog lights, and tail lights of vehicles ahead
 - The movement and direction of vehicles ahead
 - When a vehicle ahead only has operational lights on one side
 - When a vehicle ahead is a two-wheeled vehicle
 - The condition of the road (gradient, curve, condition of the road surface etc.)
 - The number of passengers and amount of luggage
 - The high beams may be turned on or off when the driver does not expect it.
 - Bicycles or similar objects may not be detected.
 - In the situations shown below, the system may not be able to accurately detect surrounding brightness levels. This may cause the low beams to remain on or the high beams to cause problems for pedestrians, vehicles ahead or other parties. In these cases, manually switch between the high and low beams.
 - In bad weather (rain, snow, fog, sandstorms, etc.)
 - The windshield is obscured by fog, mist, ice, dirt, etc.
 - The windshield is cracked or damaged
 - The front camera is deformed or dirty
 - When the temperature of the camera sensor is extremely high
 - Surrounding brightness levels are equal to those of headlights, tail lights or fog lights
 - When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly
 - When the vehicle is hit by water, snow, dust, etc. from a preceding vehicle
 - When driving through an area of intermittently changing brightness and darkness
 - When frequently and repeatedly driving on ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel roads, etc.)
 - When frequently and repeatedly taking curves or driving on a winding road
 - There is a highly reflective object ahead of the vehicle, such as a sign or mirror
 - The back of a vehicle ahead is highly reflective, such as a container on a truck
 - The vehicle's headlights are damaged or dirty, or are not aimed properly
 - The vehicle is listing or titling due to a flat tire, a trailer being towed, etc.
 - The high beams and low beams are repeatedly being switched between in an abnormal manner
 - The driver believes that the high beams may be causing problems or distress to other drivers or pedestrians nearby
 - The vehicle is used in a territory in which vehicles travel on the opposite side of the road of the country for which the vehicle is approved, for example using a vehicle designed for right-hand traffic in a left-hand traffic territory, or vice versa.
- **If “Headlight System Malfunction Visit Your Dealer” is displayed on the multi-information display**
- The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.


Turning the high beam on/off manually

■ **Switching to the high beams**

Push the lever away from you.

The Automatic High Beam indicator will turn off and the headlight high beam indicator will turn on.

Pull the lever to its original position to activate the Automatic High Beam system again.

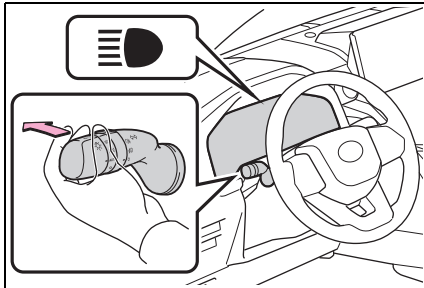


■ **Switching to the low beams**

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off.

Press the switch to activate the Automatic High Beam system again.

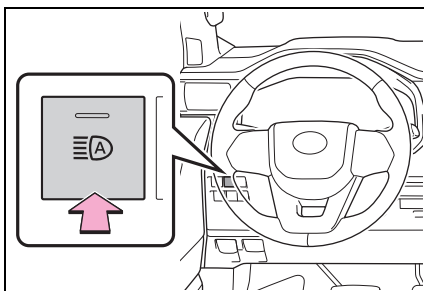


■ **Temporarily switching to the low beams**

Pull the lever toward you and then

return it to its original position.

The high beams are on while the lever is pulled toward you, however, after the lever is returned to its original position, the low beams remain on for a certain amount of time. Afterwards, the Automatic High Beam will be activated again.

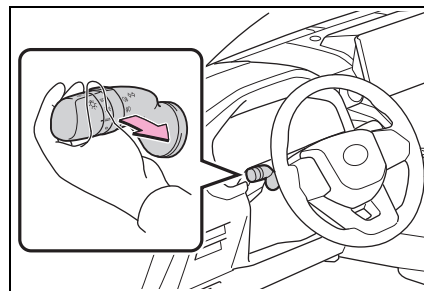

■ **Temporarily switching to the low beams**

It is recommended to switch to the low beams when the high beams may cause problems or distress to other drivers or pedestrians nearby.


Fog light switch *

*: If equipped

The fog lights offer improved visibility in difficult driving conditions, such as in rain and fog.


Operating procedure

■ **Front fog light switch**

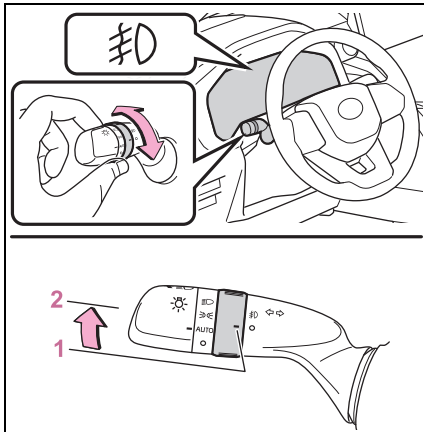


- 1 ○ Off
- 2 ☼ Fog Front fog lights on

■ **Rear fog light switch**

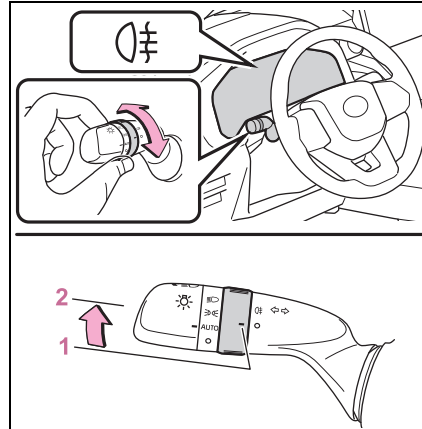

- 1 ○ Off
- 2 ☼ Rear fog lights on

■ **Front and rear fog light switch**

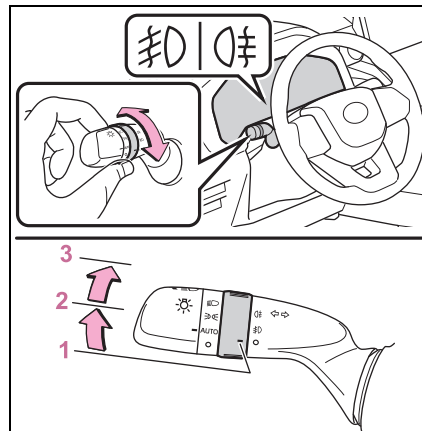

- 1 ○ Off
- 2 ☼ Front fog lights on
- 3 ☼ Front and rear fog lights on

Releasing the switch ring returns it to ☼ .

Operating the switch ring again turns

only the rear fog lights off.

■ **Fog lights can be used when**

- ▶ Vehicles with front fog lights
The front position lights are turned on.
- ▶ Vehicles with rear fog lights only
The headlights are turned on.
- ▶ Vehicles with a front and rear fog lights

Front fog lights: The front position lights are turned on.

Rear fog lights: The front fog lights are turned on.

Windshield wipers and washer

Operating the lever can switch between automatic operation and manual operation, or can use the washer.


 **NOTICE**


■ **When the windshield is dry**
Do not use the wipers, as they may damage the windshield.

Operating the wiper lever


Operating the  lever operates the wipers or washer as follows:

- ▶ Intermittent windshield wipers

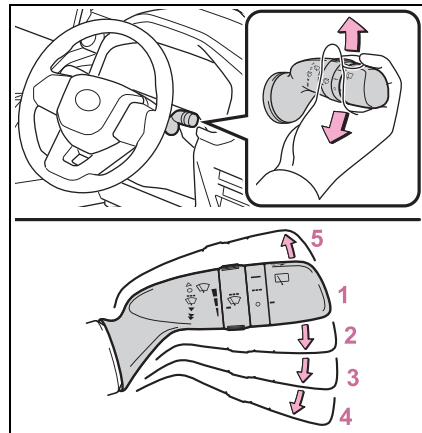



- 1 ○ Off
- 2  Intermittent operation
- 3 ▼ Low speed operation
- 4 ▼ High speed operation
- 5 ▲ Temporary operation

If equipped, wiper intervals can be adjusted when intermittent operation is selected.

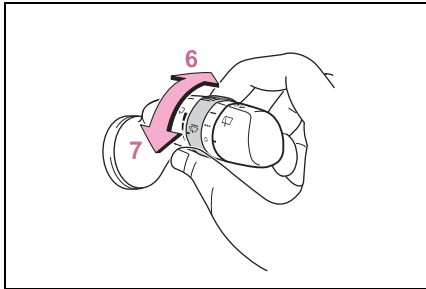

- 6** Increases the intermittent windshield wiper frequency
- 7** Decreases the intermittent windshield wiper frequency

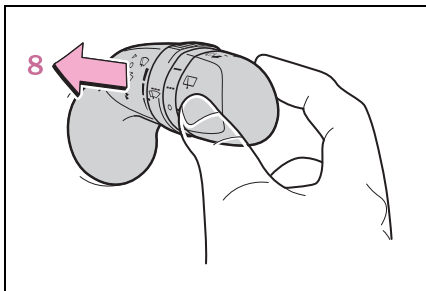


- 8**  Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

After operating several times, the wipers operate one more time after a short delay to prevent dripping.

Vehicles with headlight cleaners: When the engine switch is in ON and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.


► Rain-sensing windshield wipers

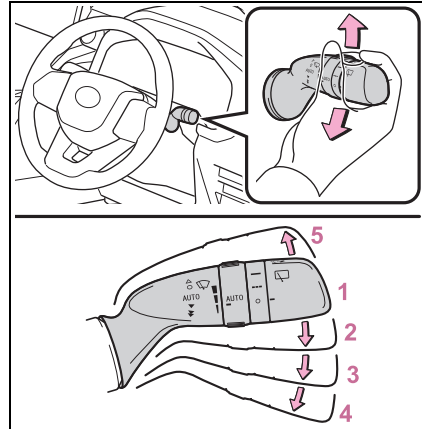


- 1** ○ Off
- 2** AUTO Rain-sensing operation (“AUTO”)
- 3** ▼ Low speed operation
- 4** ▼ High speed operation
- 5** ▲ Temporary operation


When “AUTO” is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when “AUTO” is selected.

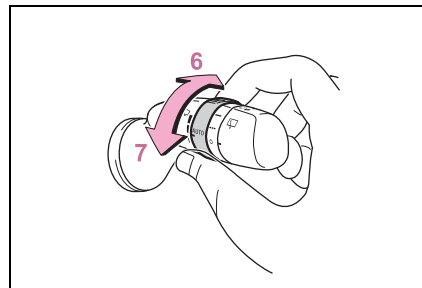

- 6 Increases the sensitivity
- 7 Decreases the sensitivity

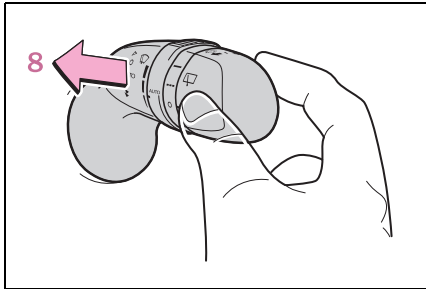

8  Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

After operating several times, the wipers operate one more time after a short delay to prevent dripping.

Vehicles with headlight cleaners: When the engine switch is in ON and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

■ The windshield wiper and washer can be operated when

The engine switch is in ON.

■ Effects of vehicle speed on wiper operation

- ▶ Vehicles with intermittent windshield wipers

With low speed windshield wiper operation selected, wiper operation will be switched from low speed to intermittent wiper operation when the vehicle is stationary. (However, when the wiper intervals are adjusted to the highest level, the mode will not switch.)


- ▶ Vehicles with rain-sensing windshield wipers

With low speed windshield wiper operation selected, wiper operation will be switched from low speed to intermittent wiper operation when the vehicle is stationary. (However, when the sensor sensitivity is adjusted to the highest level, the mode will not switch.)

■ Raindrop sensor (vehicles with rain-sensing windshield wipers)

- The raindrop sensor judges the amount of raindrops.

An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

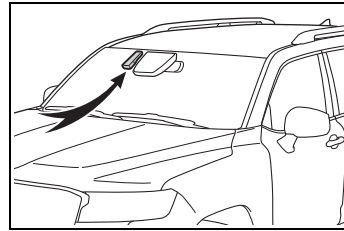

- If the wiper switch is turned to the "AUTO" position while the engine switch is in ON, the wipers will operate once to show that "AUTO" mode is activated.
- When the sensor sensitivity ring is turned toward high while in "AUTO" mode, the wipers will operate once to indicate that the sensor sensitivity is enhanced.
- If the temperature of the raindrop sensor is 85°C (185°F) or higher, or -30°C (22°F) or lower, automatic operation may not occur. In this case, operate the wipers in any mode other than "AUTO".

■ If no windshield washer fluid sprays

Check that the washer nozzles are not blocked if there is washer fluid in the

windshield washer fluid reservoir.

■ **Washer nozzle heaters (if equipped)**

The washer nozzle heaters operate when the outside temperature is 5°C (41°F) or less and the engine switch is in ON.



WARNING

■ **Caution regarding the use of windshield wipers in “AUTO” mode (vehicles with rain-sensing windshield wipers)**

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in “AUTO” mode. Take care that your fingers or anything else does not become caught in the windshield wipers.

■ **Caution regarding the use of washer fluid**

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

■ **When the washer nozzle heaters are operating (if equipped)**

Do not touch the area around the washer nozzle heaters, as they can become very hot and burn you.

■ **When there is no washer fluid spray from the nozzle**

Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.

■ **To prevent battery discharge**

Do not leave the wiper on longer than necessary when the engine is off.



NOTICE

■ **When the washer fluid tank is empty**

Do not operate the switch continually as the washer fluid pump may overheat.

■ **When a nozzle becomes blocked**

In this case, contact your Toyota dealer.

Do not try to clear it with a pin or other object. The nozzle will be damaged.


Rear window wiper and washer


The rear window wiper and washer can be used by operating the lever.

 NOTICE


■ **When the rear window is dry**
Do not use the wiper, as it may damage the rear window.


Operating the wiper lever

Operating the  switch operates the rear window wiper as follows:

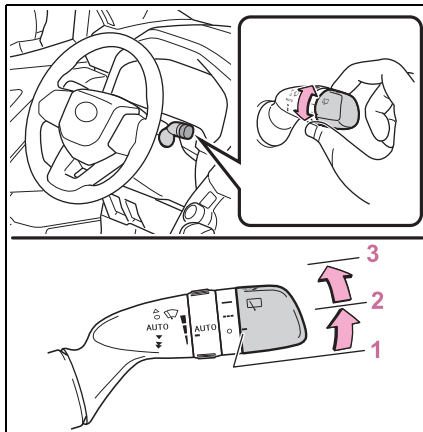

- 1 ○ Off
- 2 - - - Intermittent operation
- 3 — Normal operation

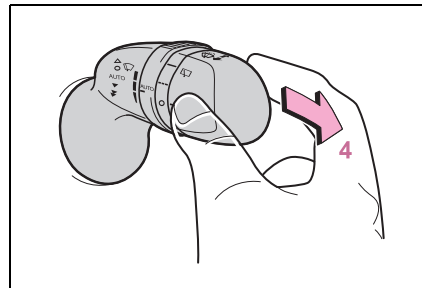

4  Washer/wiper dual operation

Pushing the lever operates the wiper and washer.

Vehicles with camera cleaning washer: The washer will automatically operate and clean the camera for the Toyota parking assist monitor* (→P.415) and Multi-terrain Monitor* (→P.463).

*: If equipped

■ **The rear window wiper and washer can be operated when**

The engine switch is in ON.

■ **If no washer fluid sprays**

Check that the washer nozzle is not blocked if there is washer fluid in the washer fluid reservoir.

■ **Dripping prevention wiper sweep**

When the washer is operated, the wipers will operate once more time after a short delay to prevent dripping.

■ **Back door opening linked rear window wiper stop function***

*: The setting must be customized at your Toyota dealer.

When the rear window wiper is operating, if the back door is opened while the vehicle is stopped, operation of the rear window wiper will be stopped to prevent anyone near the vehicle from being sprayed by water from the wiper. When the back door is closed, wiper operation

will resume.

■ **Customization**

Settings can be changed. (Customizable features: →P.770)



NOTICE

■ **When the washer fluid tank is empty**

Do not operate the switch continually as the washer fluid pump may overheat.

■ **When a nozzle becomes blocked**

In this case, contact your Toyota dealer. Do not try to clear it with a pin or other object. The nozzle will be damaged.

■ **To prevent battery discharge**

Do not leave the wipers on longer than necessary when the engine is off.

Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:

Before refueling the vehicle

- Turn the engine switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

■ **Fuel types**

→P.759

■ **Fuel tank opening for unleaded gasoline**

To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

 **WARNING**

■ **When refueling the vehicle**

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.

- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out of the filler neck and cause injury.

- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.

- Do not inhale vaporized fuel. Fuel contains substances that are harmful if inhaled.


- Do not smoke while refueling the vehicle. Doing so may cause the fuel to ignite and cause a fire.

- Do not return to the vehicle or touch any person or object that is statically charged. This may cause static electricity to build up, resulting in a possible ignition hazard.

■ **When refueling**

Observe the following precautions to prevent fuel overflowing from the fuel tank:


- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.

 NOTICE

■ Refueling

- Do not spill fuel during refueling. Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.
- Vehicles with DPF system: Use the specified fuel. If fuel other than the specified fuel is used, white smoke may be continuously emitted from the exhaust pipe during regenerating the filter. (→P.491)


Location of the fuel tank cap

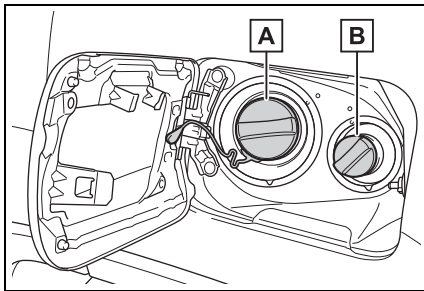


- A** Fuel tank cap
- B** AdBlue™ tank cap (if equipped) (→P.657)

Opening the fuel tank cap

- 1 Pull the lever.

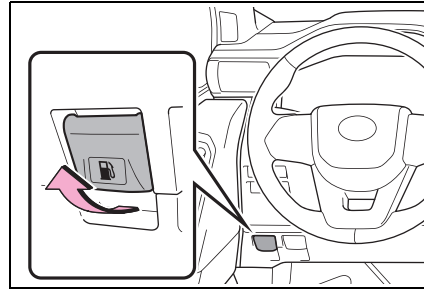


- 2 Turn the fuel tank cap slowly to open it and put it into the holder on the fuel filler door.

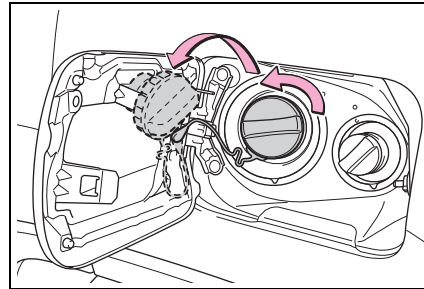

Closing the fuel tank cap

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

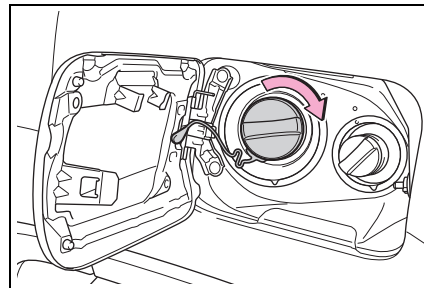



WARNING

■ **When replacing the fuel tank cap**

Do not use anything but a genuine Toyota fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

Toyota Safety Sense*

*: If equipped

The Toyota Safety Sense consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

Driving assist system

- **PCS (Pre-Collision System) (if equipped)**
→P.302
- **LTA (Lane Tracing Assist) (if equipped)**
→P.314
- **LDA (Lane Departure Alert with Yaw Assist Function) (if equipped)**
→P.324
- **AHS (Adaptive High-beam System) (if equipped)**
→P.280
- **AHB (Automatic High Beam) (if equipped)**
→P.284
- **RSA (Road Sign Assist) (if equipped)**
→P.335
- **Dynamic radar cruise control with full-speed range (if equipped)**
→P.335

■ Dynamic radar cruise control (if equipped)

→P.348

WARNING


■ Toyota Safety Sense

The Toyota Safety Sense is designed to operate under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants and the vehicle in the case of a collision or assist the driver in normal driving conditions.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

Sensors

Two types of sensors, located behind the front grille and windshield, detect information necessary to operate the drive assist systems.

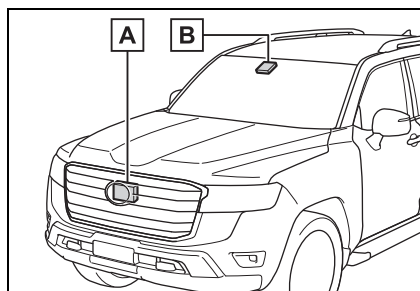

A Radar sensor


B Front camera

⚠ WARNING

■ To avoid malfunction of the radar sensor

Observe the following precautions. Otherwise, the radar sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the radar sensor and the radar sensor cover clean at all times.

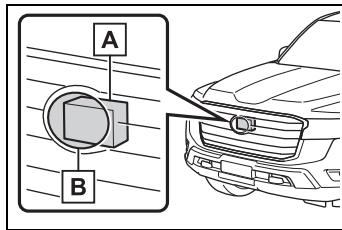

- A** Radar sensor
- B** Radar sensor cover

If the front of the radar sensor or the front or back of the radar sensor cover is dirty or covered with water droplets, snow, etc., clean it. Clean the radar sensor and radar sensor cover with a soft cloth to avoid damaging them.

- Do not attach accessories, stickers (including transparent stickers) or other items to the radar sensor, radar sensor cover or surrounding area.
- Do not subject the radar sensor or its surrounding area to a strong impact. If the radar sensor, front grille, or front bumper has been subjected to a strong impact, have the vehicle inspected by your Toyota dealer.
- Do not disassemble the radar sensor.

- Do not modify or paint the radar sensor or radar sensor cover.

- In the following cases, the radar sensor must be recalibrated. Contact your Toyota dealer for details.

- When the radar sensor or front grille are removed and installed, or replaced
- When the front bumper is replaced


■ To avoid malfunction of the front camera

Observe the following precautions. Otherwise, the front camera may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the windshield clean at all times.
- If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clean the windshield.
- If a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the front camera.
- If the inner side of the windshield where the front camera is installed is dirty, contact your Toyota dealer.

⚠ WARNING

- Do not attach objects, such as stickers, transparent stickers, etc., to the outer side of the windshield in front of the front camera (shaded area in the illustration).

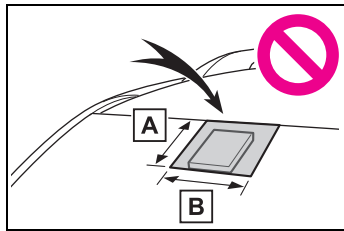

A From the top of the windshield to approximately 1 cm (0.4 in.) below the bottom of the front camera

B Approximately 20 cm (7.9 in.) (Approximately 10 cm [4.0 in.] to the right and left from the center of the front camera)

- If the part of the windshield in front of the front camera is fogged up or covered with condensation or ice, use the windshield defogger to remove the fog, condensation or ice. (→P.559, 571)
- If water droplets cannot be properly removed from the area of the windshield in front of the front camera by the windshield wipers, replace the wiper insert or wiper blade.
- Do not attach window tint to the windshield.
- Replace the windshield if it is damaged or cracked. After replacing the windshield, the front camera must be recalibrated. Contact your Toyota dealer for details.
- Do not allow liquids to contact the front camera.

- Do not allow bright lights to shine into the front camera.
- Do not dirty or damage the front camera. When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens of the front camera. Also, do not touch the lens. If the lens is dirty or damaged, contact your Toyota dealer.
- Do not subject the front camera to a strong impact.
- Do not change the installation position or direction of the front camera or remove it.
- Do not disassemble the front camera.
- Do not modify any components of the vehicle around the front camera (inside rear view mirror, etc.) or ceiling.
- Do not attach any accessories to the hood, front grille or front bumper that may obstruct the front camera. Contact your Toyota dealer for details.
- If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the front camera.
- Do not modify the headlights or other lights.

■ **If a warning message is displayed on the multi-information display**

A system may be temporarily unavailable or there may be a malfunction in the system.

- In the following situations, perform the actions specified in the table. When the normal operating conditions are detected, the message will disappear and the system will become operational.

If the message does not disappear, contact your Toyota dealer.

Situation	Actions
When the area around a camera is covered with dirt, moisture (fogged up, covered with condensation, ice, etc.), or other foreign matter	Using the wiper and A/C function, remove the dirt and other attached matter. (→P.559, 571)
When the temperature around the front camera is outside of the operational range, such as when the vehicle is in the sun or in an extremely cold environment	If the front camera is hot, such as after the vehicle had been parked in the sun, use the air conditioning system to decrease the temperature around the front camera. If a sunshade was used when the vehicle was parked, depending on its type, the sunlight reflected from the surface of the sunshade may cause the temperature of the front camera to become excessively high.
	If the front camera is cold, such as after the vehicle is parked in an extremely cold environment, use the air conditioning system to increase the temperature around the front camera.
The area in front of the front camera is obstructed, such as when the hood is open or a sticker is attached to the part of the windshield in front of the front camera.	Close the hood, remove the sticker, etc. to clear the obstruction.
When "Pre-Collision System Radar In Self Calibration Unavailable See Owner's Manual" is displayed.	Check whether there is attached materials on the radar sensor and radar sensor cover, and if there is, remove it.

- In the following situations, if the situation has changed (or the vehicle has been driven for some time) and the normal operating conditions are detected, the message will disappear and the system will become operational.

If the message does not disappear, contact your Toyota dealer.

- When the temperature around the radar sensor is outside of the operational range, such as when the vehicle is in the sun or in an extremely cold environment
- When the front camera cannot detect objects in front of the vehicle, such as when driving in the dark, snow, or fog, or when bright lights are shining into the front camera
- Depending on the conditions in the vicinity of the vehicle, the radar may judge the surrounding environment can not be properly recognized. In that case, "Pre-Collision System Unavailable See Owner's Manual" is displayed.

PCS (Pre-Collision System)*

*: If equipped

The pre-collision system uses a radar sensor and front camera to detect objects (→P.302) in front of the vehicle. When the system determines that the possibility of a frontal collision with an object is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with an object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-collision system can be disabled/enabled and the warning timing can be changed. (→P.306)

Detectable objects and function availability

The system can detect the following (The detectable objects differs depending on the function.):

Regions	Detectable objects	Function availability	Countries/areas
A	<ul style="list-style-type: none"> • Vehicles • Bicyclists • Pedestrians 	The pre-collision warning, pre-collision brake assist, pre-collision braking, emergency steering assist, intersection right/left turn assistance and suspension control function are available	Brunei, GCC countries*, South Africa, Ukraine, Kazakhstan, Russia
B		The pre-collision warning, pre-collision brake assist, pre-collision braking and suspension control function are available	Argentina, Ecuador, Guyana, Guatemala, Costa Rica, Colombia, Jamaica, Suriname, Nicaragua, Haiti, Panama, Paraguay, Bolivia, Honduras, Belize, Dominica
C	Vehicles		Indonesia, Cambodia, Philippines, Viet Nam, Myanmar, Lao People's Democratic Republic, Jordan, Lebanon, Azerbaijan, Georgia, Armenia


*: Saudi Arabia, Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

The countries and areas for each region listed in the table are current as of April 2021. However, depending on when the vehicle was sold, the countries and areas of each region may be different. Contact your Toyota dealer for details.

System functions

■ Pre-collision warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the multi-information display to urge the driver to take evasive action.

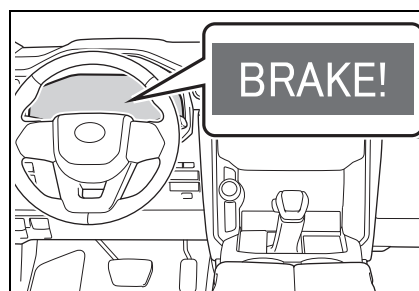

■ Pre-collision brake assist

When the system determines that


the possibility of a frontal collision is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

■ **Pre-collision braking**

If the system determines that the possibility of a frontal collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the impact of the collision.

■ **Emergency steering assist (for region A) (if equipped)**

If the system determines that the possibility of a frontal collision is high and that there is sufficient space for the vehicle to be steered into within its lane, and the driver has begun evasive maneuver or steering, emergency steering assist will assist the steering movements to help enhance the vehicle stability and for lane departure prevention. During operation, the indicator will illuminate in green.

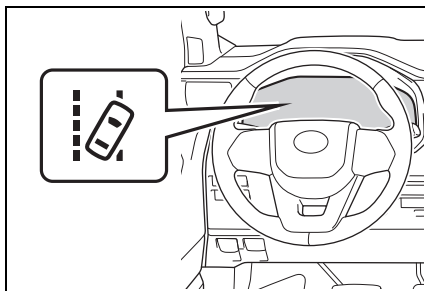


■ **Intersection right/left turn assistance (for region A)**

If the system determines that there


is a high possibility of a collision in the following situations, it will assist with Pre-collision warning and, if necessary Pre-collision braking.

Depending on the configuration of the intersection, it may not be possible to support.

- When you turn right/left at an intersection and cross the path of an oncoming vehicle

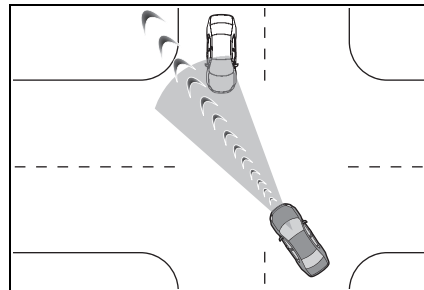

- When you turn right/left, pedestrian is detected in the forward direction and estimated to enter your vehicle's path (bicyclists are not detected.)

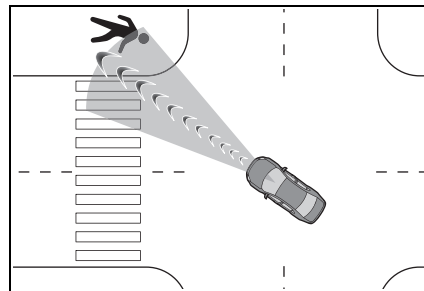

■ **Suspension control (if equipped)**

When the system determines that the possibility of a frontal collision is high, the AVS (→P.495) will control the damping force of the shock

absorbers to help maintain an appropriate vehicle posture.

 **WARNING**

■ **Limitations of the pre-collision system**

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.
Do not use the pre-collision system instead of normal braking operations under any circumstances. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not overly rely on this system. Failure to do so may lead to an accident, resulting in death or serious injury.
- Although this system is designed to help avoid a collision or help reduce the impact of the collision, its effectiveness may change according to various conditions, therefore the system may not always be able to achieve the same level of performance.
Read the following conditions carefully. Do not overly rely on this system and always drive carefully.
- Conditions under which the system may operate even if there is no possibility of a collision: →P.310
- Conditions under which the system may not operate properly: →P.311
- Do not attempt to test the operation of the pre-collision system yourself. Depending on the objects used for testing (dummies, cardboard objects imitating detectable objects, etc.), the system may not operate properly, possibly leading to an accident.

■ **Pre-collision braking**

- When the pre-collision braking function is operating, a large amount of braking force will be applied.

- If the vehicle is stopped by the operation of the pre-collision braking function, the pre-collision braking function operation will be canceled after approximately 2 seconds. Depress the brake pedal as necessary.

- The pre-collision braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-collision braking function from operating.

- In some situations, while the pre-collision braking function is operating, operation of the function may be canceled if the accelerator pedal is depressed strongly or the steering wheel is turned and the system determines that the driver is taking evasive action.

- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-collision braking function.

■ **Emergency steering assist (for region A)**

- As emergency steering assist operation will be canceled when the system determines that lane departure prevention function has been completed.
- Emergency steering assist may not operate or may be cancel in the following cases as the system may determine the driver is taking actions.

**WARNING**

- If the accelerator pedal is being depressed strongly, the steering wheel is being operated sharply, the brake pedal is being depressed or the turn signal lever is being operated. In this case, the system may determine that the driver is taking evasive action and the emergency steering assist may not operate.
- In some situations, while the emergency steering assist is operating, operation of the function may be canceled if the accelerator pedal is depressed strongly, the steering wheel is operated sharply or the brake pedal is being depressed and the system determines that the driver is taking evasive action.
- When the emergency steering assist is operating, if the steering wheel is held firmly or is operated in the opposite direction to that which the system is generating torque, the function may be canceled.


■ When to disable the pre-collision system

In the following situations, disable the system, as it may not operate properly, possibly leading to an accident resulting in death or serious injury:

- When the vehicle is being towed
- When your vehicle is towing another vehicle
- When transporting the vehicle via truck, boat, train or similar means of transportation
- When the vehicle is raised on a lift with the engine running and the tires are allowed to rotate freely


- When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer
- When a strong impact is applied to the front bumper or front grille, due to an accident or other reasons
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When tires of a size other than specified are installed
- When tire chains are installed
- When a compact spare tire or an emergency tire puncture repair kit is used
- If equipment (snow plow, etc.) that may obstruct the radar sensor or front camera is temporarily installed to the vehicle

Changing settings of the pre-collision system**■ Enabling/disabling the pre-collision system**


The pre-collision system can be enabled/disabled on  (→P.141, 151) of the multi-information display.

The system is automatically enabled each time the engine switch is turned to ON.

If the system is disabled, the PCS warning light will turn on and a message will be displayed on the multi-information display.

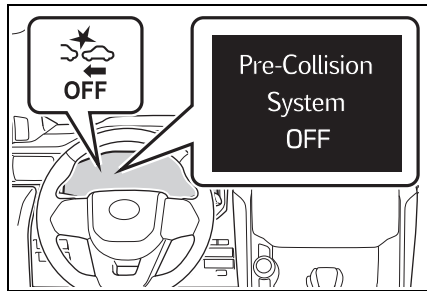


■ Changing the pre-collision warning timing

The pre-collision warning timing can be changed on  (→P.141, 151) of the multi-information display.

The warning timing setting is retained when the engine switch is turned OFF. However, if the pre-collision system is disabled and re-enabled, the operation timing will return to the default setting (middle).

For region A: If the pre-collision warning timing is changed, emergency steering assist timing will also be changed accordingly.

If late is selected, emergency steering assist would not operate in case of an emergency.

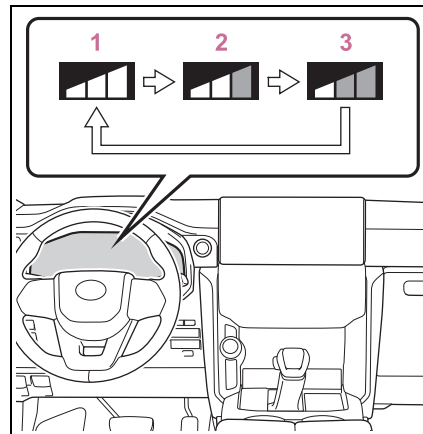

1 Early

2 Middle

This is the default setting.

3 Late

■ Operational conditions for each pre-collision function

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a detected object is high.

The system may not operate in the following situations:

- If a battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time
- If the shift lever is in R
- When the VSC OFF indicator is illuminated (only the pre-collision warning function will be operational)

The operation speeds and operation cancellation for each function is listed below.

● Pre-collision warning

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding and stopped vehicles	Approx. 10 to 180 km/h (7 to 110 mph)	Approx. 10 to 180 km/h (7 to 110 mph)
For region A and B: Oncoming vehicles	Approx. 10 to 180 km/h (7 to 110 mph)	Approx. 20 to 180 km/h (13 to 110 mph)
For region A and B: Bicyclists and pedestrians	Approx. 10 to 80 km/h (7 to 50 mph)	Approx. 10 to 80 km/h (7 to 50 mph)

While the pre-collision warning function is operating, if the steering wheel is operated heavily or suddenly, the pre-collision warning may be cancelled.

● Pre-collision brake assist

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding and stopped vehicles	Approx. 30 to 180 km/h (20 to 110 mph)	Approx. 30 to 180 km/h (20 to 110 mph)
For region A and B: Bicyclists and pedestrians	Approx. 30 to 80 km/h (20 to 50 mph)	Approx. 30 to 80 km/h (20 to 50 mph)

● Pre-collision braking

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding and stopped vehicles	Approx. 10 to 180 km/h (7 to 110 mph)	Approx. 10 to 180 km/h (7 to 110 mph)
For region A and B: Oncoming vehicles	Approx. 10 to 180 km/h (7 to 110 mph)	Approx. 20 to 180 km/h (13 to 110 mph)
For region A and B: Bicyclists and pedestrians	Approx. 10 to 80 km/h (7 to 50 mph)	Approx. 10 to 80 km/h (7 to 50 mph)

If either of the following occur while the pre-collision braking function is operating, it will be canceled:

- The accelerator pedal is depressed strongly.
- The steering wheel is turned sharply or abruptly.

● Emergency steering assist (for region A)

When the turn signal lights are flashing, emergency steering assist will not operate in case of an emergency.

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding and stopped vehicles, bicyclists and pedestrians	Approx. 40 to 80 km/h (25 to 50 mph)	Approx. 40 to 80 km/h (25 to 50 mph)

If any of the following occur while the emergency steering assist function is operating, it will be canceled:

- The accelerator pedal is depressed strongly.
- The steering wheel is turned sharply or abruptly.
- The brake pedal is depressed.
- Intersection right/left turn assistance (pre-collision warning) (for region A)

When the turn signal lights are not flashing, support for turning left or right at an intersection which targets oncoming vehicles does not work.

Detectable objects	Vehicle speed	Oncoming vehicle speed	Relative speed between your vehicle and object
Oncoming vehicles	Approx. 10 to 25 km/h (7 to 15 mph)	Approx. 30 to 55 km/h (20 to 35 mph)	Approx. 40 to 80 km/h (25 to 50 mph)
Pedestrians	Approx. 10 to 25 km/h (7 to 15 mph)	—	Approx. 10 to 25 km/h (7 to 15 mph)

- Intersection right/left turn assistance (pre-collision braking) (for region A)

When the turn signal lights are not flashing, support for turning left or right at an intersection which targets oncoming vehicles does not work.


Detectable objects	Vehicle speed	Oncoming vehicle speed	Relative speed between your vehicle and object
Oncoming vehicles	Approx. 15 to 25 km/h (10 to 15 mph)	Approx. 30 to 45 km/h (20 to 28 mph)	Approx. 45 to 70 km/h (28 to 43 mph)
Pedestrians	Approx. 10 to 25 km/h (7 to 15 mph)	—	Approx. 10 to 25 km/h (7 to 15 mph)

■ **Object detection function** detectable objects.


The system detects objects based on their size, profile, motion, etc. However, an object may not be detected depending on the surrounding brightness and the motion, posture, and angle of the detected object, preventing the system from operating properly. (→P.311)

The illustration shows an image of

► Region A and B

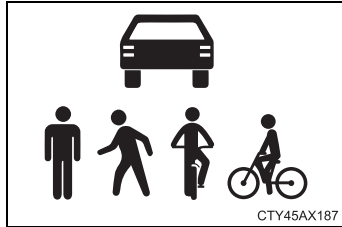


► Region C

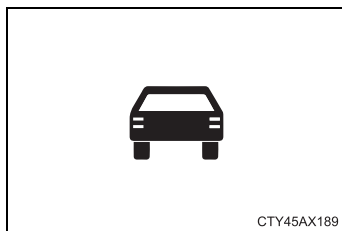


■ Conditions under which the system may operate even if there is no possibility of a collision

- In some situations such as the following, the system may determine that there is a possibility of a frontal collision and operate.
- When passing a detectable object, etc.
- When changing lanes while overtaking a detectable object, etc.
- When approaching a detectable object in an adjacent lane or on the roadside, such as when changing the course of travel or driving on a winding road

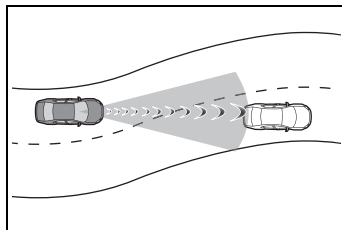


- When rapidly closing on a detectable object, etc.
- When approaching objects on the roadside, such as detectable objects, guardrails, utility poles, trees, or walls


- When there is a detectable object or other object by the roadside at the entrance of a curve

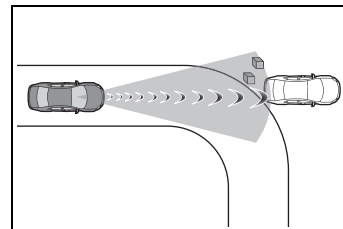

- When there are patterns or paint in front of your vehicle that may be mistaken for a detectable object
- When the front of your vehicle is hit by water, snow, dust, etc.
- When overtaking a detectable object that is changing lanes or making a right/left turn

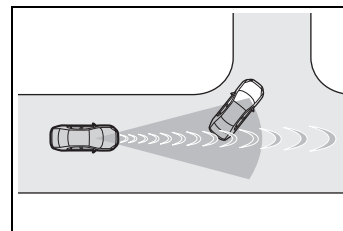


- When passing a detectable object in an oncoming lane that is stopped to make a right/left turn

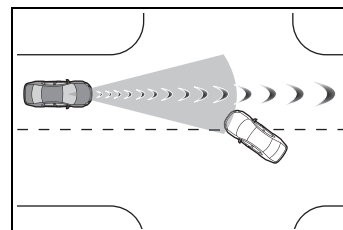


- When a detectable object approaches very close and then stops before entering the path of your vehicle
- If the front of your vehicle is raised or lowered, such as when on an uneven or undulating road surface
- When driving on a road surrounded by a structure, such as in a tunnel or on an iron bridge
- When there is a metal object (man-

- hole cover, steel plate, etc.), steps, or a protrusion in front of your vehicle
- When passing under an object (road sign, billboard, etc.)

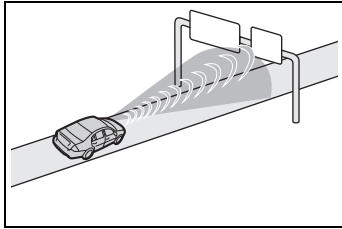


- When approaching an electric toll gate barrier, parking area barrier, or other barrier that opens and closes
- When using an automatic car wash
- When driving through or under objects that may contact your vehicle, such as thick grass, tree branches, or a banner

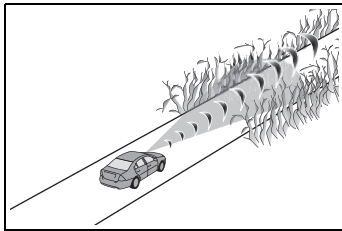

- When driving through steam or smoke
- When driving near an object that reflects radio waves, such as a large truck or guardrail
- When driving near a TV tower, broadcasting station, electric power plant, radar equipped vehicles, etc., or other location where strong radio waves or electrical noise may be present
- When there are many things which can reflect the radio waves of the radar in the vicinity (tunnels, truss bridges, gravel roads, snow covered road that have tracks, etc.)
- For region A: While making a right/left turn, when an oncoming vehicle or a crossing pedestrian has already exited the path of your vehicle
- For region A: While making a right/left turn, closely in front of an oncoming vehicle or a crossing pedestrian.


- For region A: While making a right/left turn, when an oncoming vehicle or a crossing pedestrian stops before entering the path of your vehicle
- For region A: While making a right/left turn, when an oncoming vehicle turns right/left in front of your vehicle

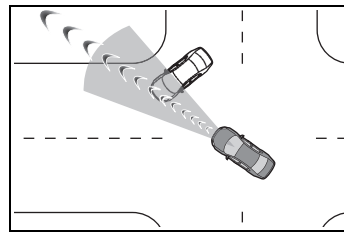

- For region A: While steering into the direction of oncoming traffic


■ **Situations in which the system may not operate properly**

- In some situations such as the following, an object may not be detected by the radar sensor and front camera, preventing the system from operating properly:
 - When a detectable object is approaching your vehicle
 - When your vehicle or a detectable object is wobbling
 - If a detectable object makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)
 - When your vehicle approaches a detectable object rapidly
 - When a detectable object is not directly in front of your vehicle

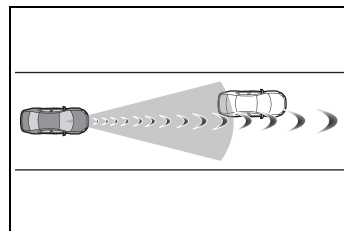


- When a detectable object is near a wall, fence, guardrail, manhole cover, vehicle, steel plate on the road, etc.
- When a detectable object is under a structure

- When part of a detectable object is hidden by an object, such as large baggage, an umbrella, or guardrail
- When there are many things which can reflect the radio waves of the radar in the vicinity (tunnels, truss bridges, gravel roads, snow covered road that have tracks, etc.)
- When there is an effect on the radio waves to the radar that is installed on another vehicle
- When multiple detectable objects are close together
- If the sun or other light is shining directly on a detectable object
- When a detectable object is a shade of white and looks extremely bright
- When a detectable object appears to be nearly the same color or brightness as its surroundings
- If a detectable object cuts or suddenly emerges in front of your vehicle
- When the front of your vehicle is hit by water, snow, dust, etc.
- When a very bright light ahead, such as the sun or the headlights of oncoming traffic, shines directly into the front camera
- When approaching the side or front of a vehicle ahead
- If a vehicle ahead is a motorcycle or bicycle (for region C)
- If a vehicle ahead is narrow, such as a personal mobility vehicle
- If a preceding vehicle has a small rear end, such as an unloaded truck
- If a preceding vehicle has a low rear end, such as a low bed trailer

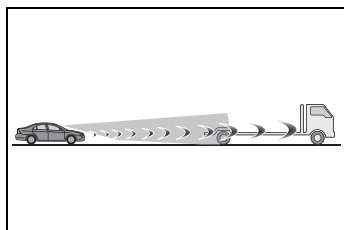


- If a vehicle ahead has extremely high ground clearance

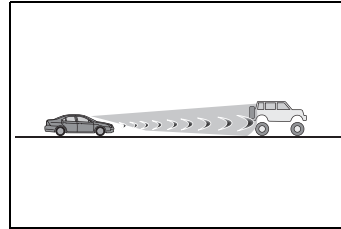


- If a vehicle ahead is carrying a load which protrudes past its rear bumper
- If a vehicle ahead is irregularly shaped, such as a tractor or side car
- For region A and B: If a vehicle ahead is a child sized bicycle, a bicycle that is carrying a large load, a bicycle ridden by more than one person, or a uniquely shaped bicycle (bicycle with a child seat, tandem bicycle, etc.)
- For region A and B: If a pedestrian/or the riding height of a bicyclist ahead is shorter than approximately 1 m (3.2 ft.) or taller than approximately 2 m (6.5 ft.)
- For region A and B: If a pedestrian/bicyclist is wearing oversized clothing (a rain coat, long skirt, etc.), making their silhouette obscure
- For region A and B: If a pedestrian is bending forward or squatting or bicyclist is bending forward
- For region A and B: If a pedestrian/bicyclist is moving fast
- For region A and B: If a pedestrian is pushing a stroller, wheelchair, bicycle or other vehicle
- When driving in inclement weather such as heavy rain, fog, snow or a sandstorm
- When driving through steam or smoke
- When the surrounding area is dim, such as at dawn or dusk, or while at night or in a tunnel, making a detectable object appear to be nearly the same color as its surroundings
- When driving in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a tunnel
- After the engine has started the vehicle has not been driven for a certain amount of time


- While making a left/right turn and for a few seconds after making a left/right turn
- While driving on a curve and for a few seconds after driving on a curve
- If your vehicle is skidding
- If the front of the vehicle is raised or lowered

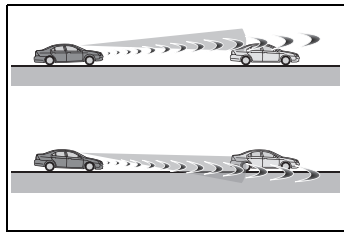

- If the wheels are misaligned
- If a wiper blade is blocking the front camera
- The vehicle is being driven at extremely high speeds
- When driving on a hill
- If the radar sensor or front camera is misaligned
- For region A: When driving in a traffic lane separated by more than one lane where oncoming vehicles are driving while making a right/left turn
- For region A: When largely out of place with the opposite facing targeted oncoming vehicle during a right/left turn

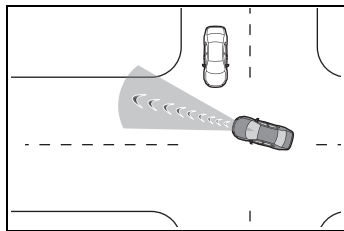

- For region A: While making a right/left turn, when a pedestrian approaches from behind or side of your vehicle

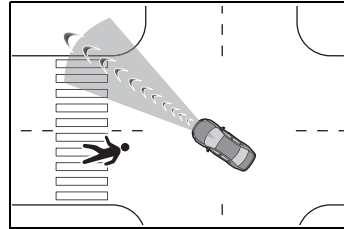

- For region A: In addition to the above, in some situations, such as the following, the emergency steering assist may not operate.
- For region A: When the white (yellow) lane lines are difficult to see, such as when they are faint, diverging/merging, or a shadow is cast upon them
- For region A: When the lane is wider or narrower than normal
- For region A: When there is a light and dark pattern on the road surface, such as due to road repairs
- For region A: When the target is too close
- For region A: When there is insufficient safe or unobstructed space for the vehicle to be steered into
- For region A: If oncoming vehicle is present
- For region A: If VSC function is operating
- In some situations such as the following, sufficient braking force or steering force (for region A) may not be obtained, preventing the system from performing properly:
- If the braking functions cannot operate to their full extent, such as when the brake parts are extremely cold, extremely hot, or wet
- If the vehicle is not properly maintained (brakes or tires are excessively worn, improper tire inflation pressure, etc.)
- When the vehicle is being driven on a gravel road or other slippery surface
- When the road surface has deep wheel tracks
- When driving on a hill road
- When driving on a road that has inclines to the left or right

■ **If VSC is disabled**

- If VSC is disabled (→P.496), the pre-collision brake assist and pre-collision braking functions are also disabled.
- The PCS warning light will turn on and “VSC Turned OFF Pre-Collision Brake System Unavailable” will be displayed on the multi-information display.


LTA (Lane Tracing Assist)*

*: If equipped

When driving on a road with clear white (yellow) lane lines, this function alerts the driver when the vehicle might depart from its lane or course* and provides assistance by applying a brake force to keep the vehicle in its lane or course*. Also, while the dynamic radar cruise control with full-speed range (→P.335) or dynamic radar cruise control (→P.348) is operating, this system will operate the steering wheel to maintain the vehicle’s lane position.

The LTA system recognizes white (yellow) lane lines or a course* using the front camera. Additionally, it detects preceding vehicles using the front camera and radar.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

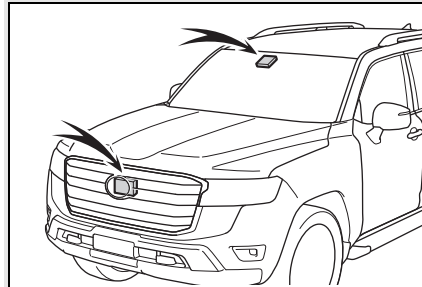

**WARNING**
■ Before using LTA system

- Do not rely solely upon the LTA system. The LTA system does not automatically drive the vehicle or reduce the amount of attention that must be paid to the area in front of the vehicle. The driver must always assume full responsibility for driving safely by paying careful attention to the surrounding conditions and operating the steering wheel to correct the path of the vehicle. Also, the driver must take adequate breaks when fatigued, such as from driving for a long period of time.
- Failure to perform appropriate driving operations and pay careful attention may lead to an accident, resulting in death or serious injury.

■ Situations unsuitable for LTA system

In the following situations, use the LTA switch to turn the system off. Failure to do so may lead to an accident, resulting in death or serious injury.

- Vehicle is driven on a road surface which is slippery due to rainy weather, fallen snow, freezing, etc.
- Vehicle is driven on a snow-covered road.
- White (yellow) lines are difficult to see due to rain, snow, fog, dust, etc.
- Vehicle is driven in a temporary lane or restricted lane due to construction work.
- Vehicle is driven in a construction zone.
- A spare tire, tire chains, etc. are equipped.

- When the tires have been excessively worn, or when the tire inflation pressure is low.
- When your vehicle is towing a trailer or during emergency towing


■ Preventing LTA system malfunctions and operations performed by mistake

- Do not modify the headlights or place stickers, etc. on the surface of the lights.
- Do not modify the suspension etc. If the suspension etc. needs to be replaced, contact your Toyota dealer.
- Do not install or place anything on the hood or grille. Also, do not install a grille guard (bull bars, kangaroo bar, etc.).
- If your windshield needs repairs, contact your Toyota dealer.

■ Conditions in which functions may not operate properly


In the following situations, the functions may not operate properly and the vehicle may depart from its lane. Drive safely by always paying careful attention to your surroundings and operate the steering wheel to correct the path of the vehicle without relying solely on the functions.

- When the follow-up cruising display is displayed (→P.320) and the preceding vehicle changes lanes. (Your vehicle may follow the preceding vehicle and also change lanes.)

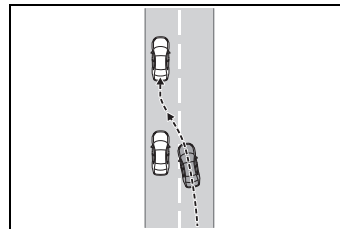


⚠ WARNING


- When the follow-up cruising display is displayed (→P.320) and the preceding vehicle is swaying. (Your vehicle may sway accordingly and depart from the lane.)
- When the follow-up cruising display is displayed (→P.320) and the preceding vehicle departs from its lane. (Your vehicle may follow the preceding vehicle and depart from the lane.)
- When the follow-up cruising display is displayed (→P.320) and the preceding vehicle is being driven extremely close to the left/right lane line. (Your vehicle may follow the preceding vehicle and depart from the lane.)
- Vehicle is being driven around a sharp curve.
- Objects or patterns that could be mistaken for white (yellow) lines are present on the side of the road (guardrails, reflective poles, etc.).

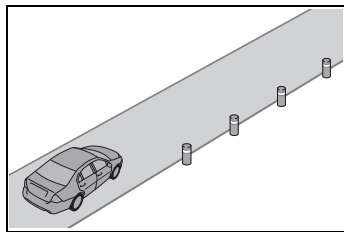

- Vehicle is driven where the road diverges, merges, etc.

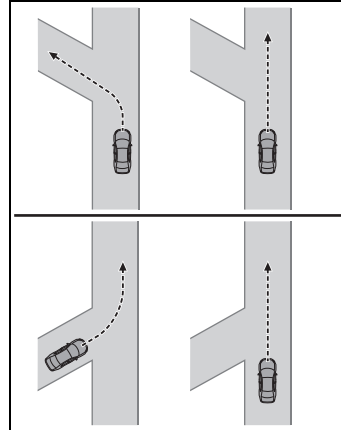

- Repair marks of asphalt, white (yellow) lines, etc. are present due to road repair.

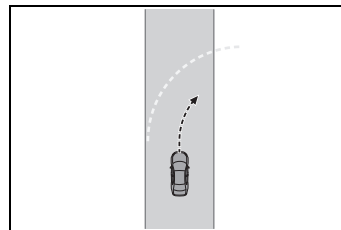

- There are shadows on the road that run parallel with, or cover, the white (yellow) lines.
- The vehicle is driven in an area without white (yellow) lines, such as in front of a tollgate or checkpoint, or at an intersection, etc.
- The white (yellow) lines are cracked, "Raised pavement marker" or stones are present.
- The white (yellow) lines cannot be seen or are difficult to see due to sand, etc.
- The vehicle is driven on a road surface that is wet due to rain, puddles, etc.

**WARNING**

- The traffic lines are yellow (which may be more difficult to recognize than lines that are white).
- The white (yellow) lines cross over a curb, etc.
- The vehicle is driven on a bright surface, such as concrete.
- If the edge of the road is not clear or straight.
- The vehicle is driven on a surface that is bright due to reflected light, etc.
- The vehicle is driven in an area where the brightness changes suddenly, such as at the entrances and exits of tunnels, etc.
- Light from the headlights of an oncoming vehicle, the sun, etc. enters the camera.
- The vehicle is driven on a slope.
- The vehicle is driven on a road which tilts left or right, or a winding road.
- The vehicle is driven on an unpaved or rough road.
- The traffic lane is excessively narrow or wide.
- The vehicle is extremely tilted due to carrying heavy luggage or having improper tire pressure.
- The distance to the preceding vehicle is extremely short.
- The vehicle is moving up and down a large amount due to road conditions during driving (poor roads or road seams).
- When driving in a tunnel or at night with the headlights off or when a headlight is dim due to its lens being dirty or it being misaligned.


- The vehicle is struck by a cross-wind.
- The vehicle is affected by wind from a vehicle driven in a nearby lane.
- The vehicle has just changed lanes or crossed an intersection.
- Tires which differ by structure, manufacturer, brand or tread pattern are used.
- When tires of a size other than specified are installed.
- Snow tires, etc. are equipped.
- The vehicle is being driven at extremely high speeds.

Functions included in LTA system**■ Lane departure alert function**

When the system determines that the vehicle might depart from its lane or course*, a warning is displayed on the multi-information display, and either a warning buzzer will sound or the steering wheel will vibrate to alert the driver.

When the warning buzzer sounds or the steering wheel vibrates, check the area around your vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane.


*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

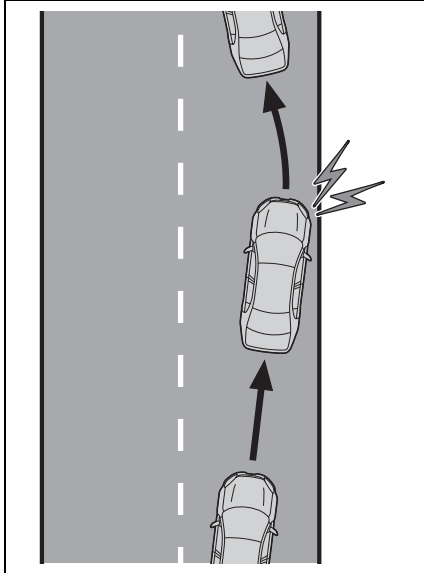

■ **Yaw assist function**


When the system determines that the vehicle might depart from its lane or course*, the system provides assistance as necessary by applying a brake force for a short period of time to keep the vehicle in its lane.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

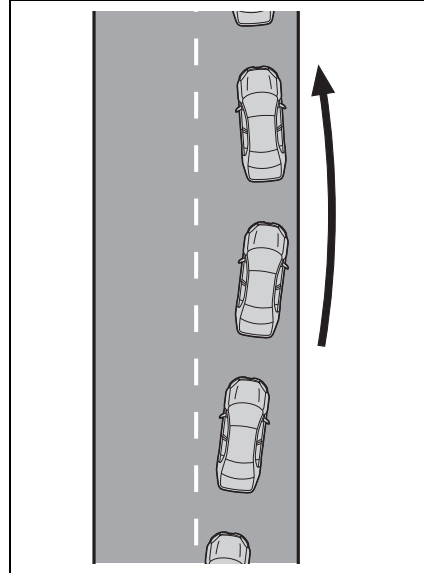

■ **Vehicle sway warning function**

When the vehicle is swaying within a lane, the warning buzzer will sound and a message will be displayed on the multi-information display to alert the driver.

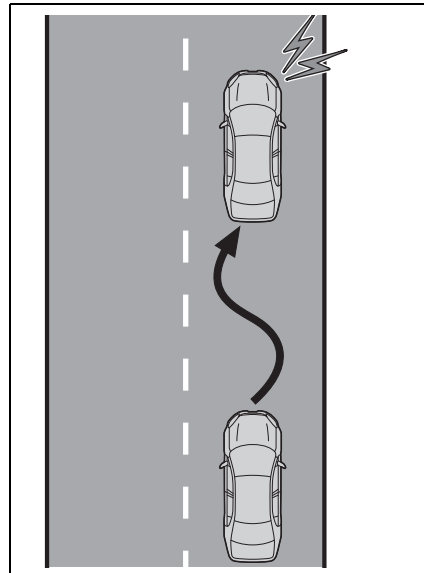


■ Lane centering function

This function is linked with dynamic radar cruise control with full-speed range or dynamic radar cruise control and provides the required assistance by operating the steering wheel to keep the vehicle in its current lane.

When dynamic radar cruise control with full-speed range or dynamic radar cruise control is not operating, the lane centering function does not operate.

In situations where the white (yellow) lane lines are difficult to see or are not visible, such as when in a traffic jam, this function will operate to help follow a preceding vehicle by monitoring the position of the preceding vehicle.

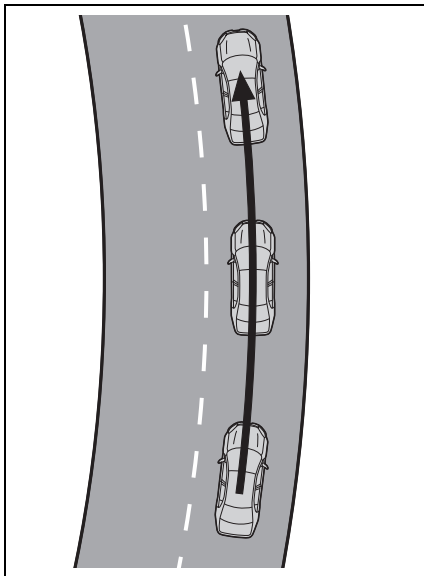


LTA system setting

■ Turning the lane centering function ON/OFF

Press the LTA switch.

The lane centering function will change between ON/OFF each time the switch is pressed.

The current setting will be displayed on the multi-information display.

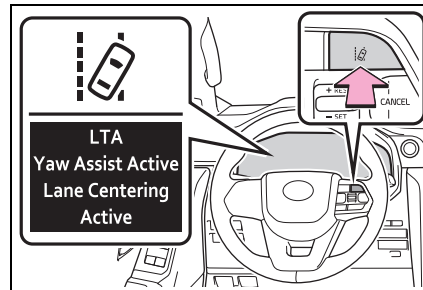

■ Turning the LTA system OFF

Press and hold the LTA switch


The LTA indicator light turns off when the LTA is turned OFF.

Press the switch again to turn the system on.

The LTA is turned ON each time the engine switch is turned to ON.

However, the lane centering function keeps either the ON/OFF state prior to the engine switch being turned OFF.

Indications on multi-information display

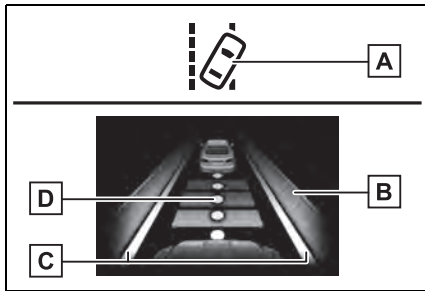

A LTA indicator

The illumination condition of the indicator informs the driver of the system operation status.

Illuminated in white: LTA system is operating.

Illuminated in green: Yaw assist assistance of the yaw assist function or lane centering function is operating.

Flashing in orange: Lane departure alert function is operating.

B Operation display of steering wheel operation support or yaw assist operation

Displayed when the multi-information display is switched to the driving support system information display.

Indicates that steering wheel assistance of the steering assist function or yaw assist function is operating.

Both outer sides of the lane are displayed: Indicates that steering wheel assist of the lane centering function is operating.

One outer side of the lane is displayed: Indicates that yaw assist of the yaw assist function is operating.

Both outer sides of the lane are flash-

ing: Alerts the driver that their input is necessary to stay in the center of the lane (lane centering function).

C Lane departure alert function display


Displayed when the multi-information display is switched to the driving support system information display.

► Inside of displayed lines is white



Indicates that the system is recognizing white (yellow) lines or a course*. When the vehicle departs from its lane, the white line displayed on the side the vehicle departs from flashes orange.

► Inside of displayed lines is black

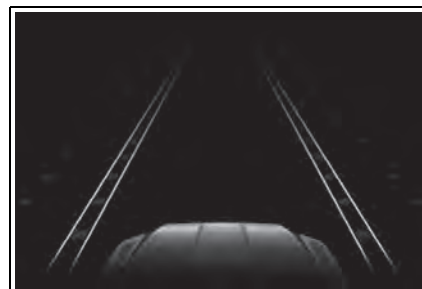

Indicates that the system is not able to recognize white (yellow) lines or a course* or is temporarily canceled.

D Follow-up cruising display

Displayed when the multi-information display is switched to the driving sup-

port system information display.

Indicates that steering assist of the lane centering function is operating by monitoring the position of a preceding vehicle.

When the follow-up cruising display is displayed, if the preceding vehicle moves, your vehicle may move in the same way. Always pay careful attention to your surroundings and operate the steering wheel as necessary to correct the path of the vehicle and ensure safety.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

■ Operation conditions of each function

● Lane departure alert function

This function operates when all of the following conditions are met.

- LTA is turned on.
- Vehicle speed is approximately 50 km/h (32 mph) or more.^{*1}
- System recognizes white (yellow) lane lines or a course^{*2}. (When a white [yellow] line or course^{*2} is recognized on only one side, the system will operate only for the recognized side.)
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- Turn signal lever is not operated.
- Vehicle is not being driven around a sharp curve.
- No system malfunctions are detected. (→P.323)

^{*1}: The function operates even if the vehicle speed is less than approximately 50 km/h (32 mph) when the lane centering function is operating.

^{*2}: Boundary between asphalt and the side of the road, such as grass, soil, or a curb


● Yaw assist function

This function operates when all of the following conditions are met in addition to the operation conditions for the lane departure alert function.

- Vehicle is not accelerated or decelerated by a fixed amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- Multi Terrain ABS, VSC, Active TRC and PCS are not operating.
- Active TRC or VSC is not turned off.


● Vehicle sway warning function

This function operates when all of the following conditions are met.

- Setting for "Sway Warning" in  of the multi-information display is set to "ON". (→P.146)
- Vehicle speed is approximately 50 km/h (32 mph) or more.
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- No system malfunctions are detected. (→P.323)


● Lane centering function

This function operates when all of the following conditions are met.

- LTA is turned on.
- Setting for "Lane Center" in  of the multi-information display is set to "ON". (→P.146)
- This function recognizes white (yellow) lane lines or the position of a preceding vehicle (except when the preceding vehicle is small, such as a motorcycle).
- The dynamic radar cruise control with full-speed range or dynamic radar cruise control is operating in vehicle-to-vehicle distance control mode.
- Width of traffic lane is approximately 3 to 4 m (10 to 13 ft.).
- Turn signal lever is not operated.
- Vehicle is not being driven around a sharp curve.
- No system malfunctions are detected. (→P.323)

- Vehicle does not accelerate or decelerate by a fixed amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- Multi Terrain ABS, VSC, Active TRC and PCS are not operating.
- Active TRC or VSC is not turned off.
- Hands off steering wheel warning is not displayed. (→P.322)
- The vehicle is being driven in the center of a lane.
- Steering assist function is not operating.

■ **Temporary cancelation of functions**

- When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. (→P.321)
- If the operation conditions (→P.321) are no longer met while the lane centering function is operating, the steering wheel may vibrate and the buzzer may sound to indicate that the function has been temporarily canceled. However, if the “Alert” customization setting is set to , the system will notify the driver by vibrating the steering wheel instead of sounding the buzzer.

■ **Yaw assist function/lane centering function**

- Depending on the vehicle speed, lane departure situation, road conditions, etc., the driver may not feel the function is operating or the function may not operate at all.
- The steering control or yaw assist of the function is overridden by the driver’s steering wheel operation.
- Do not attempt to test the operation of the steering assist function.
- A sound may be heard from the engine compartment when the brake pedal is depressed, when the yaw assist function is operating. This sound does not indicate that a mal-

function is occurred in the LTA system.

■ **Lane departure alert function**

- The warning buzzer may be difficult to hear due to external noise, audio playback, etc. Also, it may be difficult to feel steering wheel vibrations due to the road conditions, etc.
- If the edge of the course* is not clear or straight, the lane departure alert function may not operate.
- Do not attempt to test the operation of the lane departure alert function.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

■ **Hands off steering wheel warning**

In the following situations, a warning message urging the driver to hold the steering wheel and the symbol shown in the illustration are displayed on the multi-information display to warn the driver. The warning stops when the system determines that the driver holds the steering wheel. Always keep your hands on the steering wheel when using this system, regardless of warnings.




- When the system determines the driver is not holding the steering wheel while the lane centering function is operating

If the driver continues to keep their hands off of the steering wheel, the buzzer sounds, the driver is warned and the function is temporarily canceled.

This warning also operates in the same way when the driver continuously operates the steering wheel only a small

amount.

The buzzer also sounds even if the alert type is set to .

- When the system determines that the vehicle may deviate from the lane while driving around a curve while the lane centering function is operating.

Depending on the vehicle condition and road conditions, the warning may not operate. Also, if the system determines that the vehicle is driving around a curve, warnings will occur earlier than during straight-lane driving.

■ **Vehicle sway warning function**

When the system determines that the vehicle is swaying while the vehicle sway warning function is operating, a buzzer sounds and a warning message urging the driver to rest and the symbol shown in the illustration are simultaneously displayed on the multi-information display.



Depending on the vehicle and road conditions, the warning may not operate.

■ **Warning message**

If the following warning message is displayed on the multi-information display and the LTA indicator illuminates in orange, follow the appropriate troubleshooting procedure. Also, if a different warning message is displayed, follow the instructions displayed on the screen.

- “LTA Malfunction Visit Your Dealer”
The system may not be operating properly. Have the vehicle inspected by your Toyota dealer.
- “LTA Unavailable”

- The system is temporarily canceled due to a malfunction in a sensor other than the front camera. Turn the LTA system off, wait for a little while, and then turn the LTA system back on.
- The system is temporarily unavailable as the vehicle repeatedly departs from its lane or course* in a short period of time. Turn the engine switch off, and then turn it to ON again.

● “LTA Unavailable at Current Speed”

The function cannot be used as the vehicle speed exceeds the LTA operation range. Drive slower.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

■ **Customization**

Function settings can be changed. (Customizable features: →P.771)


LDA (Lane Departure Alert with Yaw Assist Function)*

*: If equipped

When driving on a road with clear white (yellow) lane lines, this function alerts the driver when the vehicle might depart from its lane or course* and provides assistance by applying a brake force to keep the vehicle in its lane or course*.

The LDA system recognizes white (yellow) lane lines or a course* using the front camera. Additionally, it detects preceding vehicles using the front camera and radar.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

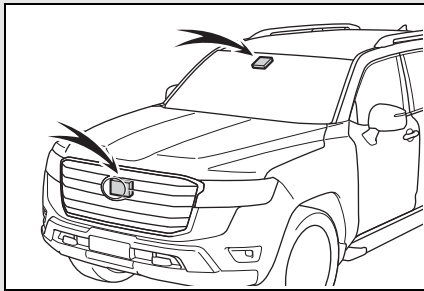

⚠ WARNING

■ Before using LDA system

- Do not rely solely upon the LDA system. The LDA system does not automatically drive the vehicle or reduce the amount of attention that must be paid to the area in front of the vehicle. The driver must always assume full responsibility for driving safely by paying careful attention to the surrounding conditions and operating the steering wheel to correct the path of the vehicle. Also, the driver must take adequate breaks when fatigued, such as from driving for a long period of time.
- Failure to perform appropriate driving operations and pay careful attention may lead to an accident, resulting in death or serious injury.

■ Situations unsuitable for LDA system

In the following situations, use the LDA switch to turn the system off. Failure to do so may lead to an accident, resulting in death or serious injury.

- Vehicle is driven on a road surface which is slippery due to rainy weather, fallen snow, freezing, etc.
- Vehicle is driven on a snow-covered road.
- White (yellow) lines are difficult to see due to rain, snow, fog, dust, etc.
- A spare tire, tire chains, etc. are equipped.
- When the tires have been excessively worn, or when the tire inflation pressure is low.
- When your vehicle is towing a trailer or during emergency towing.

⚠ WARNING


■ **Preventing LDA system malfunctions and operations performed by mistake**

- Do not modify the headlights or place stickers, etc. on the surface of the lights.
- Do not modify the suspension etc. If the suspension etc. needs to be replaced, contact your Toyota dealer.
- Do not install or place anything on the hood or grille. Also, do not install a grille guard (bull bars, kangaroo bar, etc.).
- If your windshield needs repairs, contact your Toyota dealer.


■ **Conditions in which functions may not operate properly**

In the following situations, the functions may not operate properly and the vehicle may depart from its lane. Drive safely by always paying careful attention to your surroundings and operate the steering wheel to correct the path of the vehicle without relying solely on the functions.


- Vehicle is being driven around a sharp curve.
- Objects or patterns that could be mistaken for white (yellow) lines are present on the side of the road (guardrails, reflective poles, etc.).

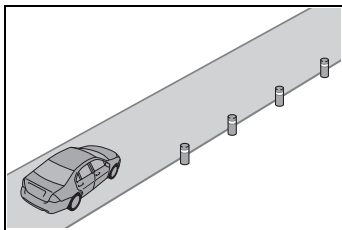

- Vehicle is driven where the road diverges, merges, etc.

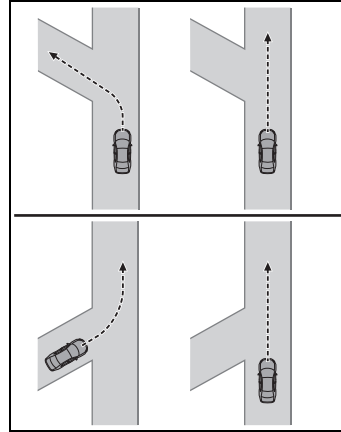

- Repair marks of asphalt, white (yellow) lines, etc. are present due to road repair.

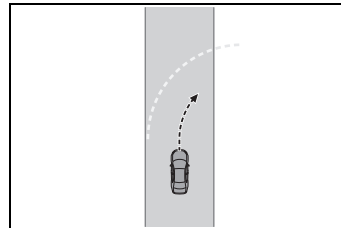

- There are shadows on the road that run parallel with, or cover, the white (yellow) lines.
- The vehicle is driven in an area without white (yellow) lines, such as in front of a tollgate or checkpoint, or at an intersection, etc.
- The white (yellow) lines are cracked, "Raised pavement marker" or stones are present.
- The white (yellow) lines cannot be seen or are difficult to see due to sand, etc.
- The vehicle is driven on a road surface that is wet due to rain, puddles, etc.

**WARNING**

- The traffic lines are yellow (which may be more difficult to recognize than lines that are white).
- The white (yellow) lines cross over a curb, etc.
- The vehicle is driven on a bright surface, such as concrete.
- If the edge of the road is not clear or straight.
- The vehicle is driven on a surface that is bright due to reflected light, etc.
- The vehicle is driven in an area where the brightness changes suddenly, such as at the entrances and exits of tunnels, etc.
- Light from the headlights of an oncoming vehicle, the sun, etc. enters the camera.
- The vehicle is driven on a slope.
- The vehicle is driven on a road which tilts left or right, or a winding road.
- The vehicle is driven on an unpaved or rough road.
- The traffic lane is excessively narrow or wide.
- The vehicle is extremely tilted due to carrying heavy luggage or having improper tire pressure.
- The distance to the preceding vehicle is extremely short.
- The vehicle is moving up and down a large amount due to road conditions during driving (poor roads or road seams).
- When driving in a tunnel or at night with the headlights off or when a headlight is dim due to its lens being dirty or it being misaligned.


- The vehicle is struck by a crosswind.
- The vehicle has just changed lanes or crossed an intersection.
- Tires which differ by structure, manufacturer, brand or tread pattern are used.
- When tires of a size other than specified are installed.
- Snow tires, etc. are equipped.

Functions included in LDA system**■ Lane departure alert function**

When the system determines that the vehicle might depart from its lane or course*, a warning is displayed on the multi-information display, and either a warning buzzer will sound or the steering wheel will vibrate to alert the driver.

When the warning buzzer sounds or the steering wheel vibrates, check the area around your vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane.


*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

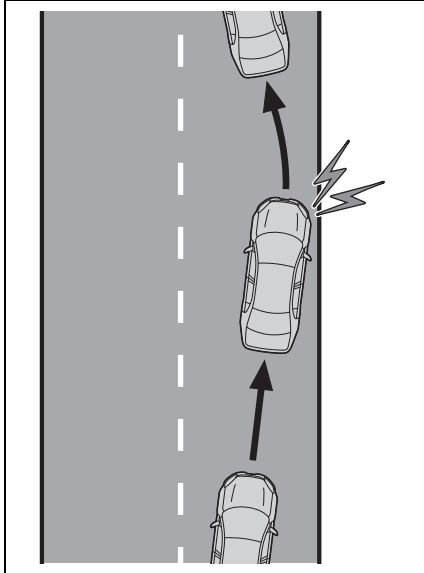

■ Yaw assist function


When the system determines that the vehicle might depart from its lane or course*, the system provides assistance as necessary by applying a brake force for a short period of time to keep the vehicle in its lane.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

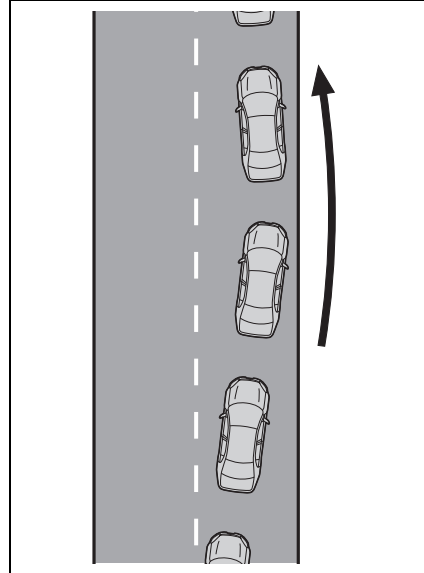

■ Vehicle sway warning function

When the vehicle is swaying within a lane, the warning buzzer will sound and a message will be displayed on the multi-information display to alert the driver.

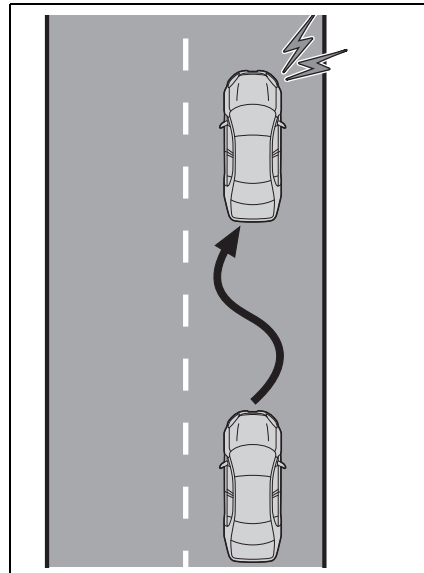

Turning the LDA system OFF


Press and hold the LDA switch

The LDA indicator light turns off when the LDA is turned OFF.

Press the switch again to turn the system on.

The LDA is turned ON each time the engine switch is turned to ON.

Indications on multi-information display

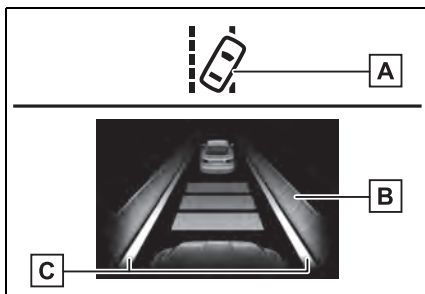

A LDA indicator

The illumination condition of the indicator informs the driver of the system operation status.

Illuminated in white: LDA system is operating.

Illuminated in green: Yaw assist function is operating.

Flashing in orange: Lane departure alert function is operating.

B Operation display of yaw assist function

Displayed when the multi-information display is switched to the driving support system information display.

Indicates that yaw assist function is

operating.

C Lane departure alert function display


Displayed when the multi-information display is switched to the driving support system information display.

► Inside of displayed lines is white



Indicates that the system is recognizing white (yellow) lines or a course*. When the vehicle departs from its lane, the white line displayed on the side the vehicle departs from flashes orange.

► Inside of displayed lines is black

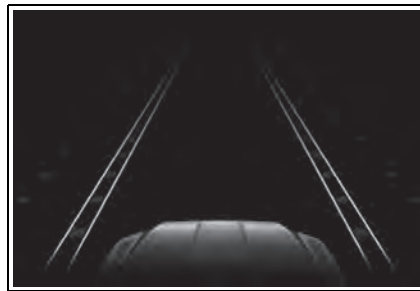

Indicates that the system is not able to recognize white (yellow) lines or a course* or is temporarily canceled.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

■ Operation conditions of each function

● Lane departure alert function

This function operates when all of the following conditions are met.

- LDA is turned on.
- Vehicle speed is approximately 50 km/h (32 mph) or more.
- System recognizes white (yellow) lane lines or a course*. (When a white [yellow] line or course is recognized on only one side, the system will operate only for the recognized side.)
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- Turn signal lever is not operated.
- Vehicle is not being driven around a sharp curve.
- No system malfunctions are detected. (→P.330)

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb


● Yaw assist function

This function operates when all of the following conditions are met in addition to the operation conditions for the lane departure alert function.

- Vehicle is not accelerated or decelerated by a fixed amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- Multi Terrain ABS, VSC, Active TRC and PCS are not operating.
- Active TRC or VSC is not turned off.

● Vehicle sway warning function

This function operates when all of the following conditions are met.

- Setting for "Sway Warning" in  of the multi-information display is set to "ON". (→P.137, 146)
- Vehicle speed is approximately 50 km/h (32 mph) or more.
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.

- No system malfunctions are detected. (→P.330)

■ Temporary cancelation of functions

When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. (→P.329)

■ Yaw assist function

- Depending on the vehicle speed, lane departure situation, road conditions, etc., the driver may not feel the function is operating or the function may not operate at all.
- The yaw assist of the function is overridden by the driver's steering wheel operation.
- Do not attempt to test the operation of the yaw assist function.
- A sound may be heard from the engine compartment when the brake pedal is depressed, when the yaw assist function is operating. This sound does not indicate that a malfunction is occurred in the LDA system.

■ Lane departure alert function

- The warning buzzer may be difficult to hear due to external noise, audio playback, etc. Also, it may be difficult to feel steering wheel vibrations due to the road conditions, etc.
- If the edge of the course* is not clear or straight, the lane departure alert function may not operate.
- Do not attempt to test the operation of the lane departure alert function.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

■ Vehicle sway warning function

When the system determines that the vehicle is swaying while the vehicle sway warning function is operating, a buzzer sounds and a warning message

urging the driver to rest and the symbol shown in the illustration are simultaneously displayed on the multi-information display.

▶ Vehicles with 4.2-inch display



▶ Vehicles with 7-inch display



Depending on the vehicle and road conditions, the warning may not operate.

■ **Warning message**

If the following warning message is displayed on the multi-information display and the LDA indicator illuminates in orange, follow the appropriate troubleshooting procedure. Also, if a different warning message is displayed, follow the instructions displayed on the screen.

- “Lane Departure Alert Malfunction Visit Your Dealer”
The system may not be operating properly. Have the vehicle inspected by your Toyota dealer.
- “LDA Unavailable”
 - The system is temporarily canceled due to a malfunction in a sensor other than the front camera. Turn the LDA system off, wait for a little while, and then turn the LDA system back on.
 - The system is temporarily unavailable as the vehicle repeatedly departs from its lane or course* in a short period of time. Turn the engine switch off, and

then turn it to ON again.

- “LDA Unavailable at Current Speed”
The function cannot be used as the vehicle speed exceeds the LDA operation range. Drive slower.

*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb


■ **Customization**

Function settings can be changed. (Customizable features: →P.771)

RSA (Road Sign Assist)*

*: If equipped

The RSA system recognizes specific road signs using the front camera and/or navigation system (when speed limit information is available) to provide information to the driver via the display.

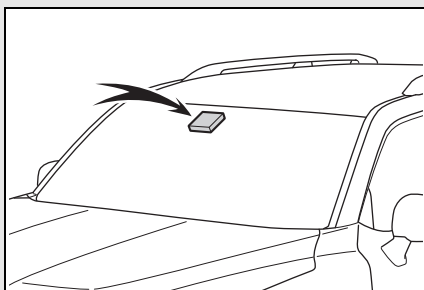

If the system judges that the vehicle is being driven over the speed limit, performing prohibited actions, etc. according to the recognized road signs, it notifies the driver through a visual notification and notification buzzer or steering wheel vibration.


**WARNING****■ Before using the RSA**

Do not rely solely upon the RSA system. RSA is a system which supports the driver by providing information, but it is not a replacement for a driver's own vision and awareness. Drive safely by always paying careful attention to the traffic rules.

Indication on the multi-information display


When the front camera recognizes a sign and/or information of a sign is available from the navigation system, the sign will be displayed on the multi-information display.

- When the driving support system information display is selected, a maximum of 3 signs can be displayed. (→P.137, 146)

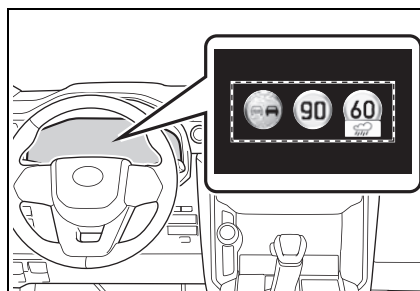

- When a tab other than the driving support system information display is selected, the following types of road signs will be displayed. (→P.137, 146)
 - Speed limit begins/ends sign
 - Speed limit related information sign (Motorway, Expressway, Urban area, Residential area)
 - End of prohibition sign
 - No-entry sign* (when notification is necessary)
 - Speed limit with supplemental sign (Ramp way only)

*: For vehicles with navigation system

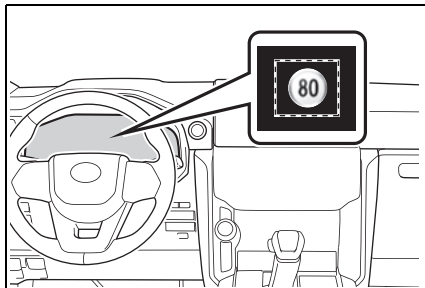


If signs other than speed limit signs are recognized, they will be displayed in an overlapping stack under the current speed limit sign.


Supported types of road signs


The following types of road signs, including electronic signs and blinking signs, are displayed.

A non-official (not meeting the Vienna Convention) or a recently introduced traffic sign may not be displayed.


- Speed limit road signs *


 Speed limit begins/Maximum speed zone begins


 Speed limit ends/Maximum speed zone ends


*: No speed limit information “” is displayed when speed limit sign or speed limit related sign information is not available.


- Speed limit related information *^{1, 2}


 Motorway entrance


 Motorway exit


 Expressway entrance


 Expressway exit


 Urban area beginning

 Urban area ending


 Urban area beginning

 Urban area ending

 Residential area beginning

 Residential area ending

*¹: Displayed when a sign is recognized but speed limit information for the road is not available from the navigation system

*²: No speed limit information “” is displayed when speed limit sign or speed limit related sign information is not available.

● No-overtaking road signs



No overtaking begins



No overtaking ends

● Other road signs



No-entry*



End of prohibition



Stop

*: For vehicles with navigation system

● Speed limit with supplemental mark*¹



Wet



Rain



Ice



Supplemental mark exists*²



Exit ramp on right*³



Exit ramp on left*³



Time

*¹: Displayed simultaneously with speed limit.

*²: Contents not recognized.

*³: If the turn signal indicator is not operated when changing lanes, the mark does not display.

Notification function

In the following situations, the RSA system will notify the driver.

- When the vehicle speed exceeds the speed notification threshold of the speed limit sign displayed, the sign display will be emphasized and a buzzer will sound.
- When the RSA system recognizes a no-entry sign and detects that the vehicle has entered a no-entry area based on the map information of the navigation system, the no-entry sign flashes and a buzzer will sound. (For vehicles with navigation system)
- If it is detected that your vehicle is overtaking when a no overtaking sign is displayed on the multi-information display, the displayed sign will flash and a steering wheel will vibrate.

Depending on the situation, traffic environment (traffic direction, speed unit) may be detected incorrectly and a notification function may not operate properly.

■ **Setting procedure**

→P.141, 151

■ **Automatic turn-off of RSA sign display**

One or more signs automatically turn off

in the following situations.

- No sign has been recognized for a certain distance.
- The road changes due to a left or right turn, etc.

■ **Conditions in which the function may not operate or detect correctly**

In the following situations, RSA does not operate normally and may not recognize signs, display the incorrect sign, etc. However, this does not indicate a malfunction.

- The front camera is misaligned due to a strong impact being applied to the sensor, etc.
- Dirt, snow, stickers, etc. are on the windshield near the front camera.
- In inclement weather such as heavy rain, fog, snow or sand storms.
- Light from an oncoming vehicle, the sun, etc. enters the front camera.
- The sign is dirty, faded, tilted or bent.
- The contrast of electronic sign is low.
- All or part of the sign is hidden by the leaves of a tree, a pole, etc.
- The sign is only visible to the front camera for a short amount of time.
- The driving scene (turning, lane change, etc.) is judged incorrectly.
- If a sign not appropriate for the currently traveled lane, but the sign exists directly after a freeway branches, or in an adjacent lane just before merging.
- Stickers are attached to the rear of the preceding vehicle.
- A sign resembling a system compatible sign is recognized.
- Side road speed signs may be detected and displayed (if positioned in sight of the front camera) while the vehicle is traveling on the main road.
- Roundabout exit road speed signs may be detected and displayed (if positioned in sight of the front camera) while traveling on a roundabout.

- The front of the vehicle is raised or lowered due to the carried load.
- The surrounding brightness is not sufficient or changes suddenly.
- When a sign intended for trucks, etc. is recognized.
- The vehicle is driven in a country with a different direction of traffic.
- The navigation system map data is outdated. (For vehicles with navigation system)
- The navigation system is not operating. (For vehicles with navigation system)
- The speed information displayed on the meter and on the navigation system may be different due to the navigation system using map data.

■ **Speed limit sign display**

If the engine switch was last turned off while a speed limit sign was displayed on the multi-information display, the same sign displays again when the engine switch is turned to ON.

■ **If “RSA Malfunction Visit Your Dealer” is shown**

The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

■ **Customization**

Some functions can be customized. (Customizable features: →P.771)

Dynamic radar cruise control with full-speed range*

*: If equipped


In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates and stops to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control with full-speed range on freeways and highways.

- Vehicle-to-vehicle distance control mode (→P.338)
- Constant speed control mode (→P.343)

System Components

■ Meter display

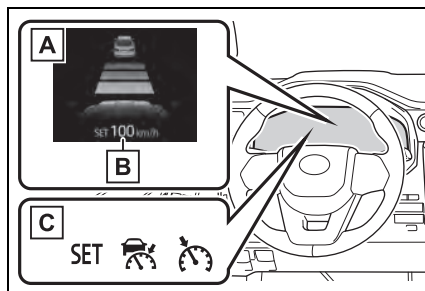


A Multi-information display

B Set speed

C Indicators

■ Operation switches

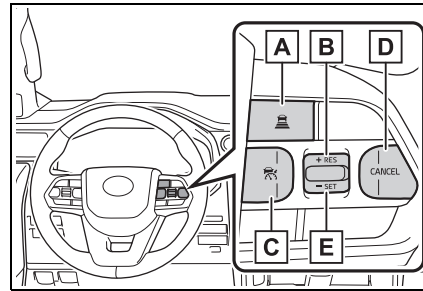

A Vehicle-to-vehicle distance switch

B "+RES" switch

C Cruise control main switch

D Cancel switch

E "-SET" switch

⚠ WARNING

■ Before using dynamic radar cruise control with full-speed range

● Driving safely is the sole responsibility of the driver. Do not rely solely on the system, and drive safely by always paying careful attention to your surroundings.

● The dynamic radar cruise control with full-speed range provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided.

Read the following conditions carefully. Do not overly rely on this system and always drive carefully.

- When the sensor may not be correctly detecting the vehicle ahead: →P.346

**WARNING**

- Conditions under which the vehicle-to-vehicle distance control mode may not function correctly: →P.347
- Set the speed appropriately depending on the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for checking the set speed.
- Even when the system is functioning normally, the condition of the preceding vehicle as detected by the system may differ from the condition observed by the driver. Therefore, the driver must always remain alert, assess the danger of each situation and drive safely. Relying solely on this system or assuming the system ensures safety while driving can lead to an accident, resulting in death or serious injury.
- Switch the dynamic radar cruise control with full-speed range setting to off, using the cruise control main switch when not in use.

■ Cautions regarding the driving assist systems

Observe the following precautions, as there are limitations to the assistance provided by the system. Failure to do so may cause an accident resulting in death or serious injury.

- Assisting the driver to measure following distance

The dynamic radar cruise control with full-speed range is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions.

It is still necessary for driver to pay close attention to the vehicle's surroundings.

- Assisting the driver to judge proper following distance

The dynamic radar cruise control with full-speed range determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

**WARNING**

- Assisting the driver to operate the vehicle

The dynamic radar cruise control with full-speed range does not include functions which will prevent or avoid collisions with vehicles ahead of your vehicle. Therefore, if there is ever any possibility of danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

■ Situations unsuitable for dynamic radar cruise control with full-speed range

Do not use dynamic radar cruise control with full-speed range in any of the following situations. Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- Roads where there are pedestrians, cyclists, etc.
- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhills, or where there are sudden changes between sharp up and down gradients

Vehicle speed may exceed the set speed when driving down a steep hill.


- At entrances to freeways and highways
- When weather conditions are bad enough that they may prevent the sensors from detecting correctly (fog, snow, sandstorm, heavy rain, etc.)

- When there is rain, snow, etc. on the front surface of the radar or front camera
- In traffic conditions that require frequent repeated acceleration and deceleration
- When your vehicle is towing a trailer or during emergency towing
- When an approach warning buzzer is heard often

Driving in vehicle-to-vehicle distance control mode

This mode employs a radar to detect the presence of vehicles up to approximately 100 m (328 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance switch.

When driving on downhill slopes, the vehicle-to-vehicle distance may become shorter.

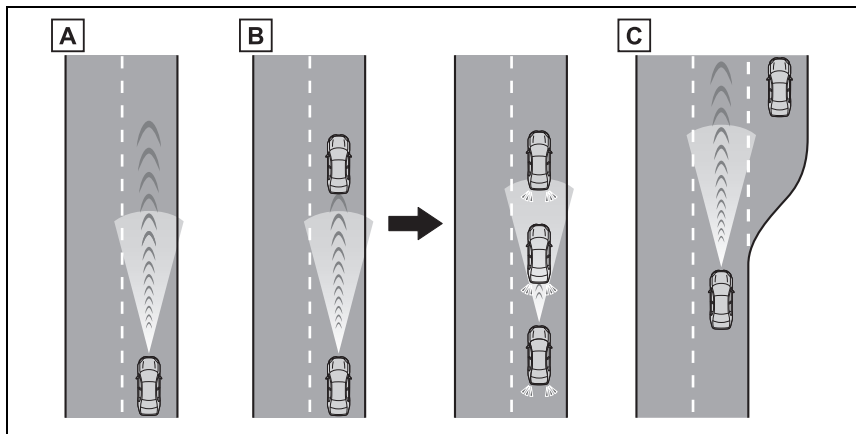

A Example of constant speed cruising

When there are no vehicles ahead

The vehicle travels at the speed set by the driver.

B Example of deceleration cruising and follow-up cruising

When a preceding vehicle driving slower than the set speed appears

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the stop lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. Approach warning warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

When the vehicle ahead of you stops, your vehicle will also stop (vehicle is stopped by system control). After the vehicle ahead starts off, pressing the "+RES" switch or depressing the accelerator pedal (start-off operation) will resume follow-up cruising. If the start-off operation is not performed, system control continues to keep your vehicle stopped.

When the turn signal lever is operated and your vehicle moves to an overtaking lane while driving at 80 km/h (50 mph) or more, the vehicle will accelerate to help to overtake a passing vehicle.

The system's identification of what is an overtaking lane may be determined solely based on the location of the steering wheel in the vehicle (left side driver position versus right side driver position.) If the vehicle is driven to a region where the overtaking lane is on a different side from where the vehicle is normally driven, the vehicle may accelerate when the turn signal lever is operated in the opposite direction to the overtaking lane (e.g., if the driver normally operates the vehicle in a region where the overtaking lane is to the right but then drives to a region where the overtaking lane is to the left, the vehicle may accelerate when the right turn signal is activated).

C Example of acceleration

When there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.


Setting the vehicle speed (vehicle-to-vehicle distance control mode)

- 1 Press the cruise control main switch to activate the cruise control.

Dynamic radar cruise control indicator will come on and a message will be displayed on the multi-information display. Press the switch again to deactivate the cruise control.

If the cruise control main switch is pressed and held for 1.5 seconds or more, the system turns on in constant

speed control mode. (→P.343)

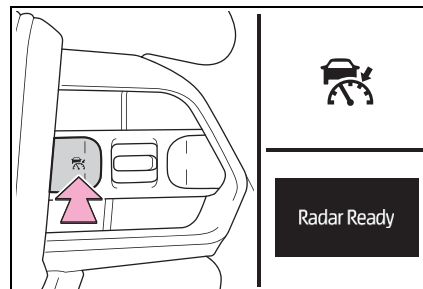


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 km/h [20 mph]) and press the “-SET” switch to set the speed.

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the switch is released becomes the set


speed.

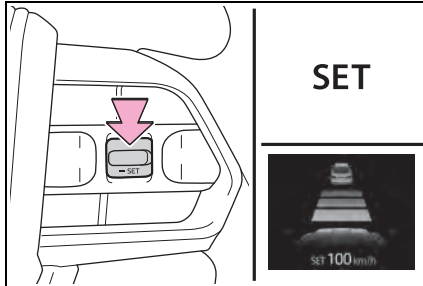

Adjusting the set speed

- Adjusting the set speed by the switch

To change the set speed, press the “+RES” or “-SET” switch until the desired set speed is displayed.

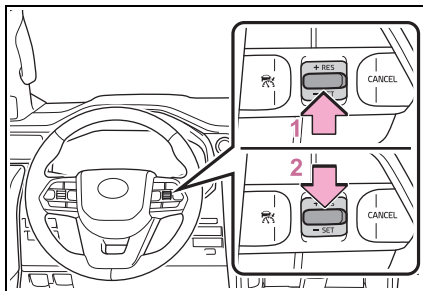

- 1 Increases the speed (Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)
- 2 Decreases the speed

Fine adjustment: Press the switch.
 Large adjustment: Press and hold the switch to change the speed, and release when the desired speed is reached.

In the vehicle-to-vehicle distance control mode, the set speed will be

increased or decreased as follows:

Fine adjustment: By 1 km/h (0.6 mph)^{*1} or 1 mph (1.6 km/h)^{*2} each time the switch is pressed

Large adjustment: Increases or decreases in 5 km/h (3.1 mph)^{*1} or 5 mph (8 km/h)^{*2} increments for as long as the switch is held

In the constant speed control mode (→P.343), the set speed will be increased or decreased as follows:

Fine adjustment: By 1 km/h (0.6 mph)^{*1} or 1 mph (1.6 km/h)^{*2} each time the switch is pressed

Large adjustment: The speed will continue to change while the switch is held.

^{*1}: When the set speed is shown in “km/h”


^{*2}: When the set speed is shown in “MPH”

- Increasing the set speed by the accelerator pedal

- 1 Accelerate with accelerator pedal operation to the desired vehicle speed
- 2 Press the “-SET” switch

Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

Pressing the switch changes the vehicle-to-vehicle distance as follows:

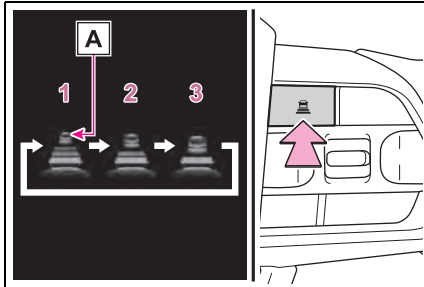

- 1 Long
- 2 Medium
- 3 Short

If a vehicle is running ahead of you, the preceding vehicle mark **A** will also be displayed.

Vehicle-to-vehicle distance settings (vehicle-to-vehicle distance control mode)

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed. When the vehicle is stopped by system control, the vehicle stops at a certain vehicle-to-vehicle distance depending on the situation.


Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (160 ft.)

Distance options	Vehicle-to-vehicle distance
Medium	Approximately 40 m (130 ft.)
Short	Approximately 30 m (100 ft.)


Resuming follow-up cruising when the vehicle has been stopped by system control (vehicle-to-vehicle distance control mode)

After the vehicle ahead of you starts off, press the “+RES” switch.

Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

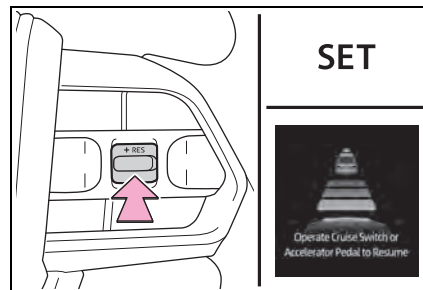

Canceling and resuming the speed control

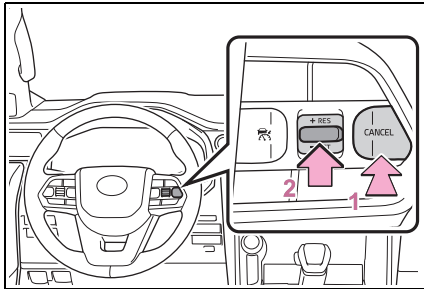


- 1 Pressing the cancel switch cancels the speed control.

The speed control is also canceled when the brake pedal is depressed. (When the vehicle has been stopped by system control, depressing the brake pedal does not cancel the setting.)

- 2 Pressing the “+RES” switch resumes the cruise control and returns vehicle speed to the set speed.

Approach warning (vehicle-to-vehicle distance control mode)

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

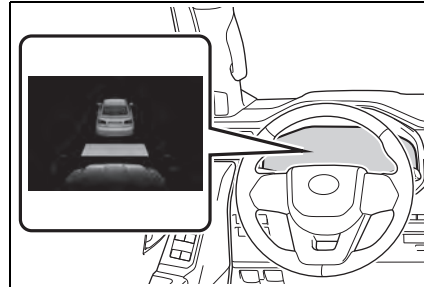

Warnings may not occur when

In the following instances, warnings may not occur even when the vehicle-to-vehicle distance is small.

- When the speed of the preceding vehicle matches or exceeds your vehicle speed
- When the preceding vehicle is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- When depressing the accelerator pedal

Curve speed reduction function

While driving in vehicle-to-vehicle distance control mode, this function will reduce the vehicle speed, if it is determined to be necessary.


Function operation

When the steering wheel begins to be turned, the vehicle speed will begin being reduced. When the steering wheel is returned to the center position, the vehicle speed reduction will end.

Depending on the situation, the vehicle speed will then return to the vehicle-to-vehicle distance control mode set speed.

In situations where vehicle-to-vehicle distance control needs to operate, such as when a preceding vehicle cuts in front of your vehicle, the curve speed reduction function will be canceled.

■ Operation display

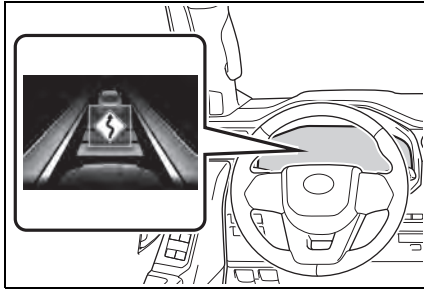


Displayed when the vehicle speed is being reduced.

When the vehicle speed reduction ends, the display will disappear.

■ Changing the settings of the curve speed reduction function

The curve speed reduction function can be enabled/disabled and the vehicle speed reduction strength can be adjusted.

- 1 Press the meter control switch to select .
- 2 Press the meter control switch to select "Curve Speed Reduction" and then press OK.

The setting will change each time the

OK meter control switch is pressed.


Selecting constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to a dirty radar, etc.

- 1 With the cruise control off, press and hold the cruise control main switch for 1.5 seconds or more.

Immediately after the switch is pressed, the dynamic radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.


Switching to constant speed control mode is only possible when operating the switch with the cruise control off.

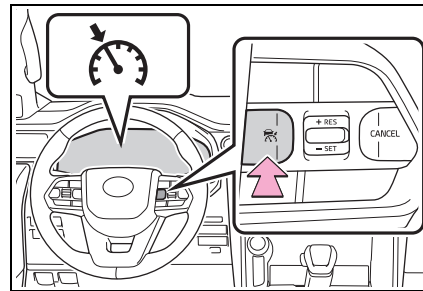

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 km/h [20 mph]) and press the "-SET" switch to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the switch is released becomes the set speed.
 Adjusting the speed setting: →P.340
 Canceling and resuming the speed setting: →P.342

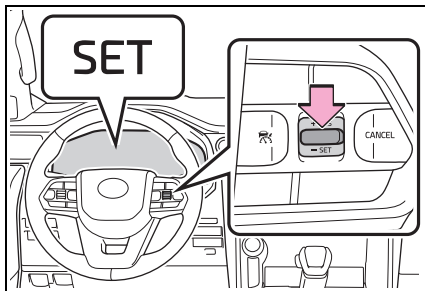


Dynamic Radar Cruise Control with Road Sign Assist (vehicles with RSA)

When this function is enabled and the system is operating in vehicle-to-vehicle distance control mode (→P.338), when a speed limit sign is detected, the recognized speed limit will be displayed with an up/down arrow. The set speed can be increased/reduced to the recognized speed limit by pressing and holding the “+RES”/“-SET” switch.


- When the current set speed is lower than the recognized speed limit

Press and hold the “+RES” switch.

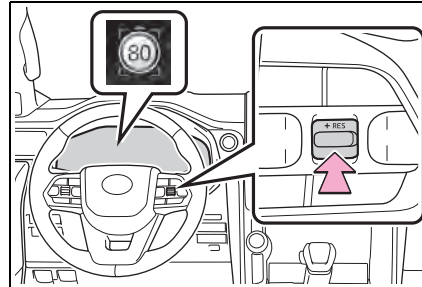


- When the current set speed is higher than the recognized speed limit

Press and hold the “-SET” switch.

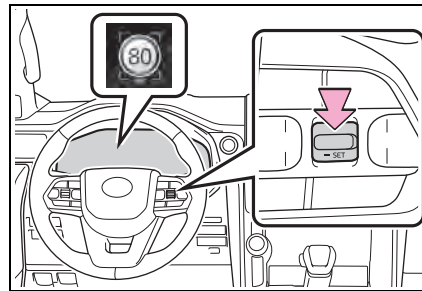

Enabling/Disabling the Dynamic Radar Cruise Control with Road Sign Assist (vehicles with RSA)

Dynamic Radar Cruise Control with Road Sign Assist can be enabled/disabled in  on the multi-information display. (→P.141, 151)

When the Dynamic Radar Cruise Control with Road Sign Assist is operating, while driving down a hill, the vehicle speed may exceed the set speed.

In this case, the displayed set vehi-

cle speed will be highlighted and a buzzer will sound to alert the driver.

■ **Dynamic radar cruise control with full-speed range can be set when**

- The shift lever is in D.
- The desired set speed can be set when the vehicle speed is approximately 30 km/h (20 mph) or more. (However, when the vehicle speed is set while driving at below approximately 30 km/h [20 mph], the set speed will be set to approximately 30 km/h [20 mph].)

■ **Accelerating after setting the vehicle speed**

The vehicle can accelerate by operating the accelerator pedal. After accelerating, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the preceding vehicle.

■ **When the vehicle stops while follow-up cruising**

- Pressing the "+RES" switch while the vehicle ahead stops will resume follow-up cruising if the vehicle ahead starts off within approximately 3 seconds after the switch is pressed.
- If the vehicle ahead starts off within 3 seconds after your vehicle stops, follow-up cruising will be resumed.

■ **Automatic cancelation of vehicle-to-vehicle distance control mode**

Vehicle-to-vehicle distance control mode is automatically canceled in the following situations.

- VSC is activated.
- Active TRC is activated for a period of time.
- When the VSC or Active TRC system is turned off.
- The sensor cannot detect correctly because it is covered in some way.

- When the brake control or output restriction control of a driving support system operates. (For example: Pre-Collision System, Drive-Start Control)

- The center differential lock/unlock is not completed within 5 seconds while the cruise control system is on.

- The parking brake is operated.

- The vehicle is stopped by system control on a steep incline.

- The following are detected when the vehicle has been stopped by system control:

- The driver is not wearing a seat belt.
- The driver's door is opened.
- The vehicle has been stopped for about 3 minutes

If vehicle-to-vehicle distance control mode is automatically canceled for any reasons other than the above, there may be a malfunction in the system. Contact your Toyota dealer.

■ **Automatic cancelation of constant speed control mode**

Constant speed control mode is automatically canceled in the following situations:

- Actual vehicle speed is more than approximately 16 km/h (10 mph) below the set vehicle speed.

- Actual vehicle speed falls below approximately 30 km/h (20 mph).

- VSC is activated.

- Active TRC is activated for a period of time.

- When the VSC or Active TRC system is turned off.

- When the brake control or output restriction control of a driving support system operates.

(For example: Pre-Collision System, Drive-Start Control)

- The center differential lock/unlock is not completed within 5 seconds while the cruise control system is on.

- The parking brake is operated.

If constant speed control mode is automatically canceled for any reasons other than the above, there may be a malfunction in the system. Contact your Toyota dealer.

■ **Situations in which the curve speed reduction function may not operate**

In situations such as the following, the curve speed reduction function may not operate:

- When the vehicle is being driven around a gentle curve
- When the accelerator pedal is being depressed
- When the vehicle is being driven around an extremely short curve

■ **The Dynamic Radar Cruise Control with Road Sign Assist may not operate properly when**

As the Dynamic Radar Cruise Control with Road Sign Assist may not operate properly in conditions in which RSA may not operate or detect correctly (→P.334), when using this function, make sure to check the speed limit sign displayed.

In the following situations, the set speed may not be changed to the recognized speed limit by pressing and holding the "+RES"/"-SET" switch.

- If speed limit information is not available
- When the recognized speed limit is the same as the set speed
- When the recognized speed limit is outside of the speed range that the dynamic radar cruise control system can operate

■ **Brake operation**

A brake operation sound may be heard and the brake pedal response may change, but these are not malfunctions.

■ **Warning messages and buzzers for dynamic radar cruise control with full-speed range**


Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. If a warning message is shown on the multi-information display, read the message and follow the instructions. (→P.300, 709)

■ **When the sensor may not be correctly detecting the vehicle ahead**


In the case of the following and depending on the conditions, operate the brake pedal when deceleration of the system is insufficient or operate the accelerator pedal when acceleration is required.

As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P.342) may not be activated.


- Vehicles that cut in suddenly
- Vehicles traveling at low speeds
- Vehicles that are not moving in the same lane
- Vehicles with small rear ends (trailers with no load on board, etc.)

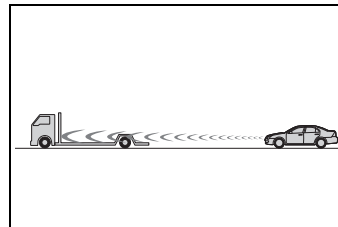

- Motorcycles traveling in the same lane
- When water or snow thrown up by the surrounding vehicles hinders the detecting of the sensor
- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment, etc.)

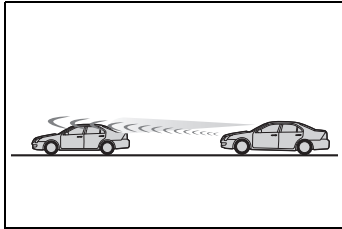

- Preceding vehicle has an extremely high ground clearance

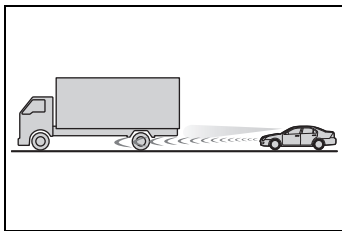


■ **Conditions under which the vehicle-to-vehicle distance control mode may not function correctly**


In the case of the following conditions, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.

As the sensor may not be able to correctly detect vehicles ahead, the system may not operate properly.

- When the road curves or when the lanes are narrow

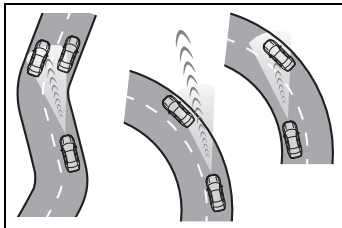

- When steering wheel operation or your position in the lane is unstable

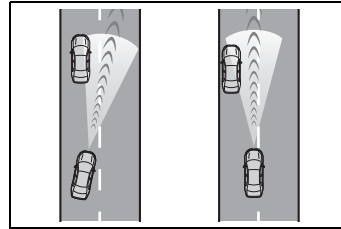

- When the vehicle ahead of you decelerates suddenly
- When driving on a road surrounded by a structure, such as in a tunnel or on a bridge

■ **Situations in which the curve speed reduction function may not operate properly**

In situations such as the following, the curve speed reduction function may not operate properly:

- When the vehicle is being driven around a curve on an incline/decline
- When the course of the vehicle differs from the shape of the curve
- When the vehicle speed is excessively high when entering a curve
- When the steering wheel is suddenly operated

Dynamic radar cruise control*

*: If equipped


In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control on freeways and highways.

- Vehicle-to-vehicle distance control mode (→P.350)
- Constant speed control mode (→P.355)


System Components

■ Meter display

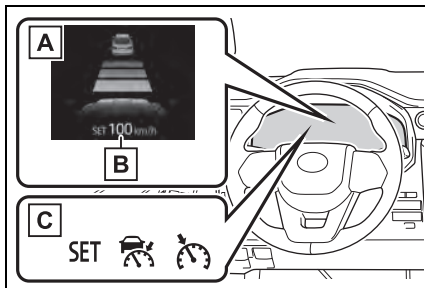

- A Multi-information display
- B Set speed
- C Indicators

■ Operation switches

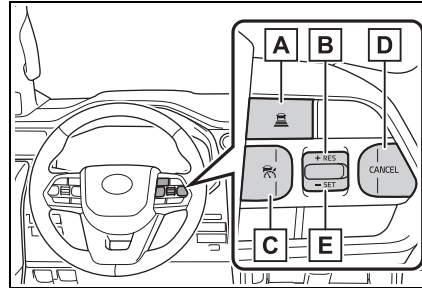

- A Vehicle-to-vehicle distance switch
- B "+RES" switch
- C Cruise control main switch
- D Cancel switch
- E "-SET" switch

⚠ WARNING

■ Before using dynamic radar cruise control

- Driving safely is the sole responsibility of the driver. Do not rely solely on the system, and drive safely by always paying careful attention to your surroundings.
- The dynamic radar cruise control provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided.

Read the following conditions carefully. Do not overly rely on this system and always drive carefully.

- When the sensor may not be correctly detecting the vehicle ahead: →P.357
- Conditions under which the vehicle-to-vehicle distance control mode may not function correctly: →P.357

**WARNING**

- Set the speed appropriately depending on the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for checking the set speed.
- Even when the system is functioning normally, the condition of the preceding vehicle as detected by the system may differ from the condition observed by the driver. Therefore, the driver must always remain alert, assess the danger of each situation and drive safely. Relying solely on this system or assuming the system ensures safety while driving can lead to an accident, resulting in death or serious injury.
- Switch the dynamic radar cruise control setting to off, using the cruise control main switch when not in use.

■ Cautions regarding the driving assist systems

Observe the following precautions, as there are limitations to the assistance provided by the system. Failure to do so may cause an accident resulting in death or serious injury.

- **Assisting the driver to measure following distance**
The dynamic radar cruise control is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for driver to pay close attention to the vehicle's surroundings.

- **Assisting the driver to judge proper following distance**

The dynamic radar cruise control determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

- **Assisting the driver to operate the vehicle**

The dynamic radar cruise control does not include functions which will prevent or avoid collisions with vehicles ahead of your vehicle. Therefore, if there is ever any possibility of danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

■ Situations unsuitable for dynamic radar cruise control

Do not use dynamic radar cruise control in any of the following situations. Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- Roads where there are pedestrians, cyclists, etc.
- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow




WARNING

- On steep downhills, or where there are sudden changes between sharp up and down gradients
Vehicle speed may exceed the set speed when driving down a steep hill.
- At entrances to freeways and highways
- When weather conditions are bad enough that they may prevent the sensors from detecting correctly (fog, snow, sandstorm, heavy rain, etc.)
- When there is rain, snow, etc. on the front surface of the radar or front camera
- In traffic conditions that require frequent repeated acceleration and deceleration
- When your vehicle is towing a trailer or during emergency towing
- When an approach warning buzzer is heard often

Driving in vehicle-to-vehicle distance control mode

This mode employs a radar to detect the presence of vehicles up to approximately 100 m (328 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance switch.

When driving on downhill slopes, the vehicle-to-vehicle distance may become shorter.

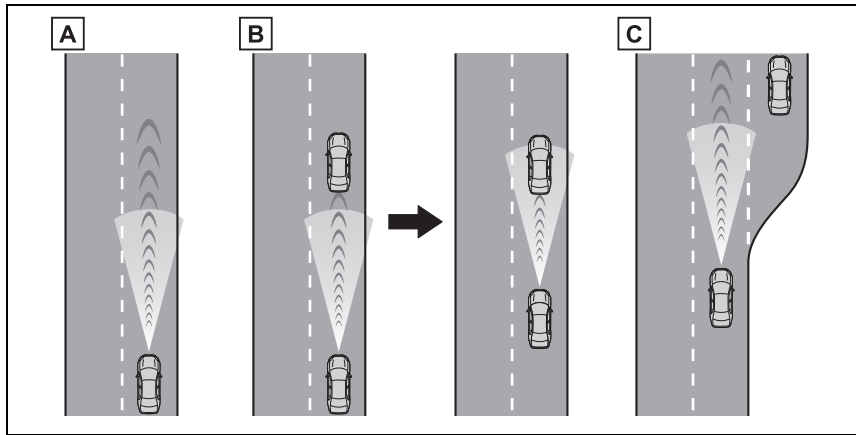

A Example of constant speed cruising

When there are no vehicles ahead

The vehicle travels at the speed set by the driver.

B Example of deceleration cruising and follow-up cruising

When a preceding vehicle driving slower than the set speed appears

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the stop lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. Approach warning warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

When the turn signal lever is operated and your vehicle moves to an overtaking lane while driving at 80 km/h (50 mph) or more, the vehicle will accelerate to help to overtake a passing vehicle.

The system's identification of what is an overtaking lane may be determined solely based on the location of the steering wheel in the vehicle (left side driver position versus right side driver position.) If the vehicle is driven to a region where the overtaking lane is on a different side from where the vehicle is normally driven, the vehicle may accelerate when the turn signal lever is operated in the opposite direction to the overtaking lane (e.g., if the driver normally operates the vehicle in a region where the overtaking lane is to the right but then drives to a region where the overtaking lane is to the left, the vehicle may accelerate when the right turn signal is activated).

C Example of acceleration

When there are no longer any preceding vehicles driving slower than the set speed


The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Setting the vehicle speed (vehicle-to-vehicle distance control mode)

- 1 Press the cruise control main switch to activate the cruise control.

Dynamic radar cruise control indicator will come on and a message will be displayed on the multi-information display. Press the switch again to deactivate the cruise control.

If the cruise control main switch is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode. (→P.355)

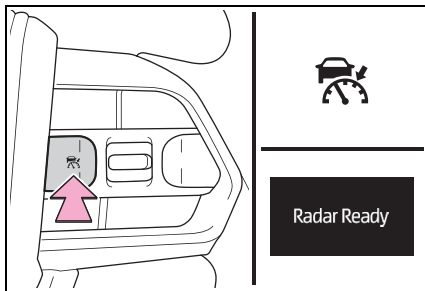


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 km/h [20 mph]) and press the “-SET” switch to set the speed.

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the switch is released becomes the set


speed.

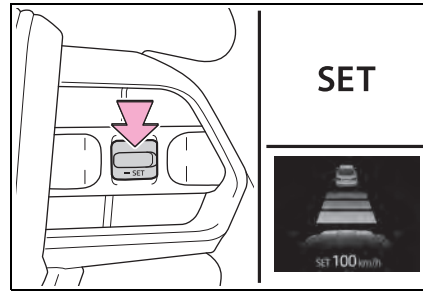

Adjusting the set speed

- Adjusting the set speed by the switch

To change the set speed, press the “+RES” or “-SET” switch until the desired set speed is displayed.

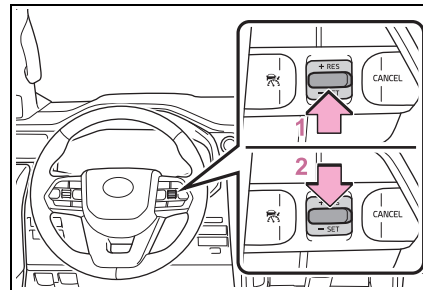

- 1 Increases the speed
- 2 Decreases the speed

Fine adjustment: Press the switch.

Large adjustment: Press and hold the switch to change the speed, and release when the desired speed is reached.

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

Fine adjustment: By 1 km/h (0.6 mph)^{*1} or 1 mph (1.6 km/h)^{*2} each time the switch is pressed

Large adjustment: Increases or decreases in 5 km/h (3.1 mph)^{*1} or 5 mph (8 km/h)^{*2} increments for as long as the switch is held

In the constant speed control mode (→P.355), the set speed will be increased or decreased as follows:

Fine adjustment: By 1 km/h (0.6 mph)^{*1} or 1 mph (1.6 km/h)^{*2} each time the switch is pressed

Large adjustment: The speed will continue to change while the switch is held.

^{*1}: When the set speed is shown in “km/h”


^{*2}: When the set speed is shown in “MPH”

- Increasing the set speed by the accelerator pedal

- 1 Accelerate with accelerator pedal operation to the desired vehicle speed
- 2 Press the “-SET” switch

Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

Pressing the switch changes the vehicle-to-vehicle distance as follows:

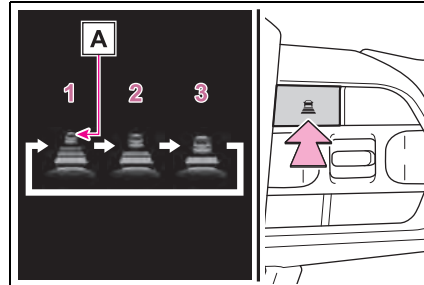

- 1 Long
- 2 Medium
- 3 Short


If a vehicle is running ahead of you, the preceding vehicle mark **A** will also be displayed.

Vehicle-to-vehicle distance settings (vehicle-to-vehicle distance control mode)

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (160 ft.)
Medium	Approximately 40 m (130 ft.)
Short	Approximately 30 m (100 ft.)

Canceling and resuming the speed control

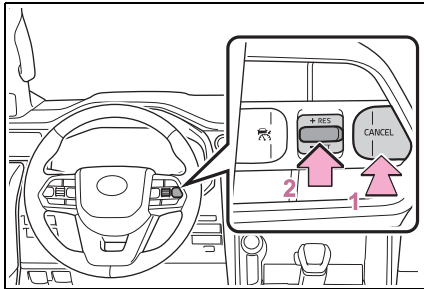

- 1 Pressing the cancel switch cancels the speed control.


The speed control is also canceled when the brake pedal is depressed.

- 2 Pressing the "+RES" switch resumes the cruise control and returns vehicle speed to the set speed.

However, cruise control does not resume when the vehicle speed is approximately 25 km/h (16 mph) or less.

Approach warning (vehicle-to-vehicle distance control mode)

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

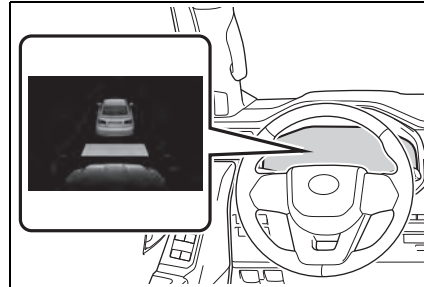

Warnings may not occur when

In the following instances, warnings may not occur even when the vehicle-to-vehicle distance is small.

- When the speed of the preceding vehicle matches or exceeds your vehicle speed
- When the preceding vehicle is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- When depressing the accelerator pedal

Curve speed reduction function

While driving in vehicle-to-vehicle distance control mode, this function will reduce the vehicle speed, if it is determined to be necessary.


Function operation

When the steering wheel begins to be turned, the vehicle speed will begin being reduced. When the steering wheel is returned to the center position, the vehicle speed reduction will end.

Depending on the situation, the vehicle speed will then return to the vehicle-to-vehicle distance control mode set speed.

In situations where vehicle-to-vehicle distance control needs to operate, such as when a preceding vehicle cuts in front of your vehicle, the curve speed reduction function will be canceled.

■ Operation display

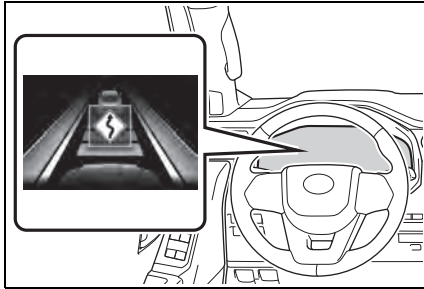


Displayed when the vehicle speed is being reduced.

When the vehicle speed reduction ends, the display will disappear.

■ Changing the settings of the curve speed reduction function

The curve speed reduction function can be enabled/disabled and the vehicle speed reduction strength can be adjusted.

- 1 Press the meter control switch to select .
- 2 Press the meter control switch to select "Curve Speed Reduction" and then press OK.

The setting will change each time the

OK meter control switch is pressed.


Selecting constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to a dirty radar, etc.

- 1 With the cruise control off, press and hold the cruise control main switch for 1.5 seconds or more.

Immediately after the switch is pressed, the dynamic radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

Switching to constant speed control mode is only possible when operating the switch with the cruise control off.

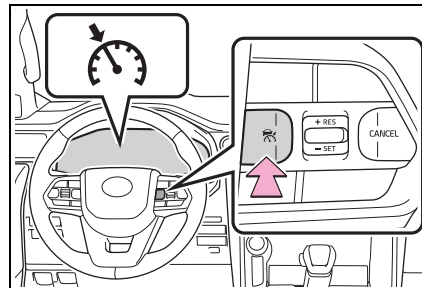


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 km/h [20 mph]) and press the "-SET" switch to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the switch is released becomes the set speed.

Adjusting the speed setting: →P.352

Canceling and resuming the speed setting: →P.354

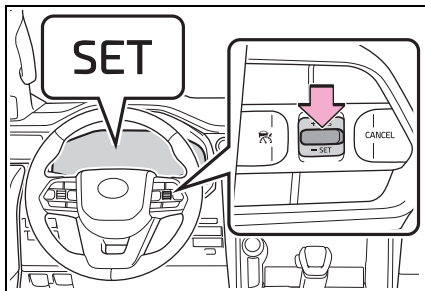

■ **Dynamic radar cruise control can be set when**

- The shift lever is in D.
- Depending on the control mode, this item can be set at the following speeds.
 - Vehicle-to-vehicle distance control mode: Approximately 30 km/h (20 mph) or more
 - Constant speed control mode: Approximately 30 km/h (20 mph) or more

■ **Accelerating after setting the vehicle speed**

The vehicle can accelerate by operating the accelerator pedal. After accelerating, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the preceding vehicle.

■ **Automatic cancelation of vehicle-to-vehicle distance control mode**

Vehicle-to-vehicle distance control mode is automatically canceled in the following situations.

- Actual vehicle speed falls below approximately 25km/h (16 mph).
- VSC is activated.

- Active TRC is activated for a period of time.
- When the VSC or Active TRC system is turned off.
- The sensor cannot detect correctly because it is covered in some way.
- When the brake control or output restriction control of a driving support system operates. (For example: Pre-Collision System, Drive-Start Control)
- The center differential lock/unlock is not completed within 5 seconds while the cruise control system is on.
- The parking brake is operated.

If vehicle-to-vehicle distance control mode is automatically canceled for any reasons other than the above, there may be a malfunction in the system. Contact your Toyota dealer.

■ **Automatic cancelation of constant speed control mode**

Constant speed control mode is automatically canceled in the following situations:

- Actual vehicle speed is more than approximately 16 km/h (10 mph) below the set vehicle speed.
- Actual vehicle speed falls below approximately 30 km/h (20 mph).
- VSC is activated.
- Active TRC is activated for a period of time.
- When the VSC or Active TRC system is turned off.
- When the brake control or output restriction control of a driving support system operates. (For example: Pre-Collision System, Drive-Start Control)
- The center differential lock/unlock is not completed within 5 seconds while the cruise control system is on.
- The parking brake is operated.

If constant speed control mode is automatically canceled for any reasons other

than the above, there may be a malfunction in the system. Contact your Toyota dealer.

■ Situations in which the curve speed reduction function may not operate

In situations such as the following, the curve speed reduction function may not operate:

- When the vehicle is being driven around a gentle curve
- When the accelerator pedal is being depressed
- When the vehicle is being driven around an extremely short curve

■ Brake operation

A brake operation sound may be heard and the brake pedal response may change, but these are not malfunctions.

■ Warning messages and buzzers for dynamic radar cruise control


Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. If a warning message is shown on the multi-information display, read the message and follow the instructions. (→P.300, 709)

■ When the sensor may not be correctly detecting the vehicle ahead


In the case of the following and depending on the conditions, operate the brake pedal when deceleration of the system is insufficient or operate the accelerator pedal when acceleration is required.

As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P.354) may not be activated.


- Vehicles that cut in suddenly
- Vehicles traveling at low speeds
- Vehicles that are not moving in the same lane
- Vehicles with small rear ends (trailers with no load on board, etc.)

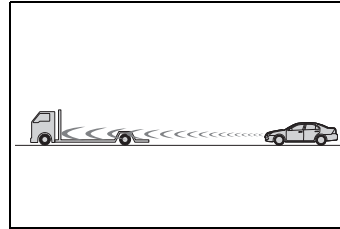

- Motorcycles traveling in the same lane
- When water or snow thrown up by the surrounding vehicles hinders the detecting of the sensor
- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment, etc.)

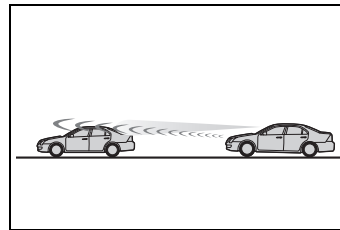

- Preceding vehicle has an extremely high ground clearance

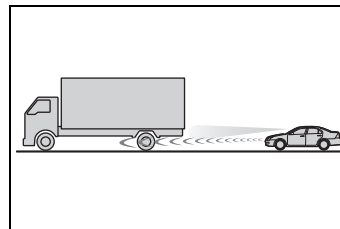


■ Conditions under which the vehicle-to-vehicle distance control mode may not function correctly


In the case of the following conditions, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.

As the sensor may not be able to correctly detect vehicles ahead, the system may not operate properly.

- When the road curves or when the lanes are narrow

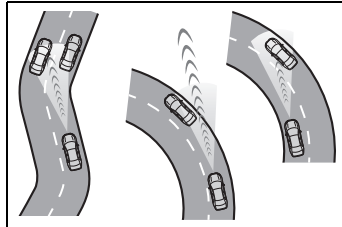

- When steering wheel operation or your position in the lane is unstable

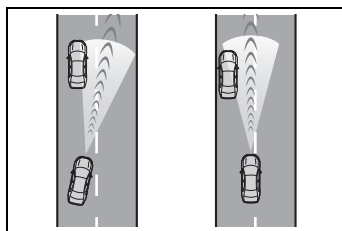

- When the vehicle ahead of you decelerates suddenly
- When driving on a road surrounded by a structure, such as in a tunnel or on a bridge

■ **Situations in which the curve speed reduction function may not operate properly**

In situations such as the following, the curve speed reduction function may not operate properly:

- When the vehicle is being driven around a curve on an incline/decline
- When the course of the vehicle differs from the shape of the curve
- When the vehicle speed is excessively high when entering a curve
- When the steering wheel is suddenly operated


Cruise control*

*: If equipped

Use the cruise control to maintain a set speed without depressing the accelerator pedal.


System Components

■ **Meter display**

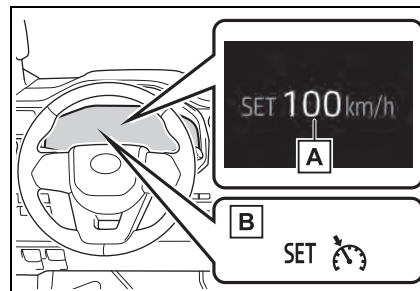

- A** Set speed
- B** Indicators

■ **Operation switches**

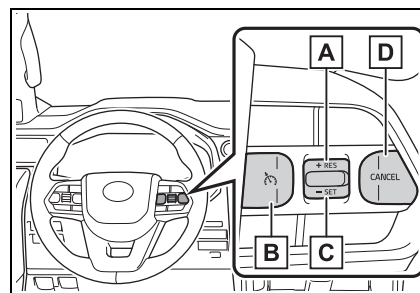

- A** "+RES" switch
- B** Cruise control main switch
- C** "-SET" switch
- D** Cancel switch

⚠ WARNING**■ To avoid operating the cruise control by mistake**

Switch the cruise control off using the cruise control main switch when not in use.

■ Situations unsuitable for cruise control

Do not use cruise control in any of the following situations.

Doing so may result in loss of control and could cause an accident resulting in death or serious injury.


- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep hills
Vehicle speed may exceed the set speed when driving down a steep hill.
- When your vehicle is towing a trailer or during emergency towing

Setting the vehicle speed

- 1 Press the cruise control main switch to activate the cruise control.

Cruise control indicator will be displayed.
Press the switch again to deactivate the


cruise control.

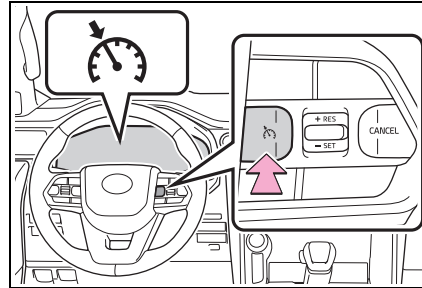


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired speed (at or above approximately 30 km/h [20 mph]) and press the “-SET” switch to set the speed.

Cruise control “SET” indicator will be displayed.

The vehicle speed at the moment the switch is released becomes the set speed.

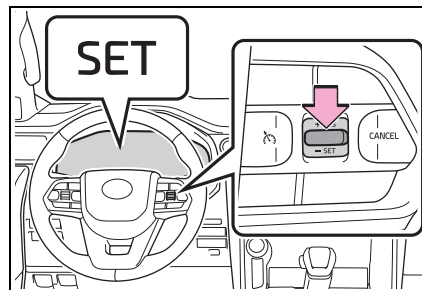**Adjusting the set speed**

To change the set speed, operate the “+RES” or “-SET” switch until the desired set speed is displayed.

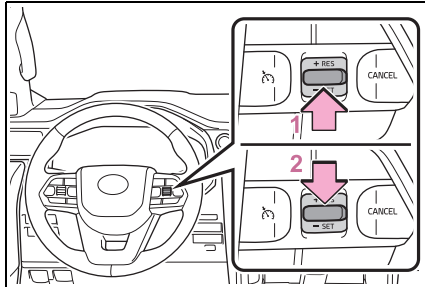

- 1 Increases the speed
- 2 Decreases the speed

Fine adjustment: Press the switch.

Large adjustment: Press and hold the switch to change the speed, and release when the desired speed is reached.

The set speed will be increased or decreased as follows:


Fine adjustment: By 1 km/h (0.6 mph)^{*1} or 1 mph (1.6 km/h)^{*2} each time the switch is operated.

Large adjustment: The set speed can be increased or decreased continually until the switch is released.

^{*1}: When the set speed is shown in "km/h"

^{*2}: When the set speed is shown in "MPH"

Canceling and resuming the constant speed control

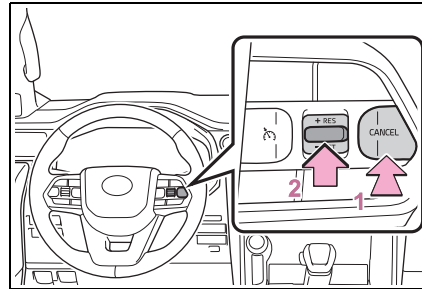

- 1 Pressing the cancel switch cancels the constant speed control.

The speed control is also canceled when the brake pedal is depressed.

- 2 Pressing the "+RES" switch resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 30 km/h (20 mph).

■ Cruise control can be set when

- The shift lever is in D.
- Vehicle speed is above approximately 30 km/h (20 mph).

■ Accelerating after setting the vehicle speed

- The vehicle can be accelerated normally. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pushing the "-SET" switch to set the new speed.

■ Automatic cancelation of cruise control

Cruise control will stop maintaining the vehicle speed in any of the following sit-

uations.

- Actual vehicle speed falls more than approximately 16 km/h (10 mph) below the preset vehicle speed.
- Actual vehicle speed is below approximately 30 km/h (20 mph).
- VSC is activated.
- Active TRC is activated for a period of time.
- When the VSC or Active TRC system is turned off.
- The parking brake is operated.

■ **If the warning message for the cruise control is shown on the multi-information display**

Press the cruise control main switch once to deactivate the system, and then press the switch again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by your Toyota dealer.

Stop & Start system*

*: If equipped


The Stop & Start system stops and starts the engine according to brake pedal or shift lever operation when the vehicle is stopped, such as at a stop-light, intersection, etc., in order to improve fuel economy and reduce noise pollution caused by the engine idling.

Stop & Start system operation

■ Stopping the engine

While driving with the D shift position selected, depress the brake pedal and stop the vehicle. The engine will stop automatically.

When the engine stops, the Stop & Start indicator will illuminate.

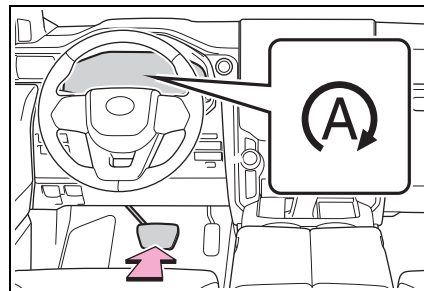

■ Restarting the engine

Release the brake pedal. The engine will start automatically.

When the engine starts, the Stop & Start indicator will turn off.

■ **When the brake hold system is operating**

- When the engine is stopped by the Stop & Start system, if the brake pedal is released the engine will remain stopped.
- If the accelerator pedal is depressed while the engine is stopped by the Stop & Start system, the engine will restart.
- While the engine is stopped by the Stop & Start system, if the engine is restarted, the brake hold system will continue to apply the brakes, unless the operation conditions of the brake hold system are no longer met. (→P.273)

■ **When the dynamic radar cruise control with full-speed range is operating**


- When the vehicle is stopped by the dynamic radar cruise control with full-speed range, the engine will stop automatically even though the brake pedal is not depressed.
- When the preceding vehicle starts off, the engine will restart automatically.
- If the engine is restarted by the Stop & Start system while the vehicle is stopped by the dynamic radar cruise control with full-speed range, the vehicle will remain stopped.

Disabling the Stop & Start system

Press the Stop & Start cancel switch to disable the Stop & Start system.

The Stop & Start cancel indicator will illuminate.

Pressing the switch again will enable the Stop & Start system and the Stop & Start cancel indicator will turn off.

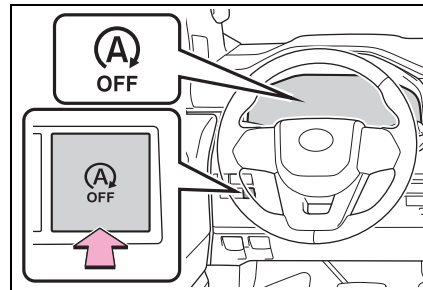

■ **Automatic enabling of the Stop & Start system**

If the Stop & Start system is disabled using the Stop & Start cancel switch, it will be automatically re-enabled once the engine switch is turned off and then the engine is started.

Hill-start assist control

When the engine is stopped by the Stop & Start system when the vehicle is on an incline, when the brake pedal is released, brake force is temporarily maintained to prevent the vehicle from rolling backwards before the engine is restarted and drive force is generated. When drive force is generated, the maintained brake force is automatically

canceled.

- This function operates on flat surfaces as well as steep inclines.
- Sound may be generated from the brake system, but this does not indicate a malfunction.
- Brake pedal response may change and vibration may occur, but this does not indicate a malfunction.

■ Points for use

- If the engine switch is pressed when the engine is stopped by the Stop & Start system, the engine will not be able to be restarted by the automatic engine start function. In this case, restart the engine using the normal engine starting procedure. (→P.256)
- When the engine is being restarted by the Stop & Start system, the power outlets may be temporarily unusable, but this does not indicate a malfunction.
- Installation and removal of electrical components and wireless devices may affect the Stop & Start system. Contact your Toyota dealer for details.
- When stopping the vehicle for a longer period of time, turn the engine switch off to stop the engine completely.
- When the engine is stopped by the Stop & Start system, the steering wheel feel heavy.
- While driving in L4 mode, it is recommended that the Stop & Start system be canceled because the system may not operate properly.

■ Operating conditions

- The Stop & Start system is operational when all of the following conditions are met:

- The vehicle has been driven a certain amount of time.
- The brake pedal is being depressed firmly.

(Except when the vehicle is stopped by the dynamic radar cruise control with full-speed range when in vehicle-to-vehicle distance control mode)

- The D shift position is selected.
- The driver's seat belt is fastened.
- The driver's door is closed.
- The selected driving mode is normal, ECO or Comfort mode. (if equipped)
- The center differential is not locked.
- The Multi-terrain Select is not operated.
- The windshield defogger is off.
- The accelerator pedal is not being depressed.
- The engine is adequately warmed up.
- The outside temperature is -5°C (23°F) or higher.
- The hood is closed. (→P.364)
- In the following situations the engine may not be stopped by the Stop & Start system. This is not a malfunction of the Stop & Start system.
 - When the air conditioning system is being used.
 - When the battery is undergoing a periodic recharge.
 - When the battery is not sufficiently charged, such as if the vehicle has been parked for a long time and the battery charge has decreased, the electric load is large, the battery fluid temperature is excessively low or the battery has deteriorated.
 - When the elapsed time since the engine was restarted is short.
 - When the vehicle is stopped frequently, such as when in a traffic jam.
 - When the engine coolant temperature or transmission fluid temperature is extremely low or high.
 - When the vehicle is stopped on a steep incline.
 - When the steering wheel is being operated.
 - When the vehicle is being driven in a high altitude area.

- When the battery fluid temperature is extremely low or high.
- For a while after the battery terminals have been disconnected and reconnected.
- When the engine is stopped by the Stop & Start system, the engine will be restarted automatically if any of the following conditions are met:

(To enable the engine to be stopped by the Stop & Start system again, drive the vehicle.)

- The air conditioning system is turned on.
- The windshield defogger is turned on.
- The shift lever is shifted from D or P. The shift lever is shifted from P. (When the engine is stopped by the Stop & Start system when the shift lever is in P.)
- The driver's seat belt is unfastened.
- The driver's door is opened.
- The driving mode is changed from normal, ECO or Comfort mode to another mode. (diesel engine only) (if equipped)
- The center differential is locked.
- The Multi-terrain Select is operated.
- The Stop & Start cancel switch is pressed.
- The steering wheel is operated.
- The accelerator pedal is depressed.
- The vehicle starts to roll on an incline.
- When the engine is stopped by the Stop & Start system, the engine may restart automatically in the following situations: (To enable the engine to be stopped by the Stop & Start system again, drive the vehicle.)
- When the air conditioning system is being used.
- When a switch of the air conditioning system is operated (windshield defogger switch, etc.).
- If the battery charge becomes low.

■ **When the hood is opened**

- If the hood is opened while the engine is stopped by the Stop & Start system, the engine will stall and will not be able to be restarted by the automatic

engine start function. In this case, restart the engine using the normal engine starting procedure. (→P.256)

- If the hood is closed after the engine is started with the hood open, the Stop & Start system will not operate. Close the hood, turn the engine switch off, wait 30 seconds or more, and then start the engine.

■ **Air conditioning system operation while the engine is stopped by the Stop & Start system**

When the air conditioning is in automatic mode and the engine is stopped by the Stop & Start system, the fan may operate at a low speed in order to prevent the temperature in the cabin from increasing or decreasing or may be stopped.


To prioritize air conditioning system performance when the vehicle is stopped, disable the Stop & Start system by pressing the Stop & Start cancel switch.

- If the windshield is fogged up
Turn the windshield defogger on. (→P.559, 571)

If the windshield fogs up frequently, press the Stop & Start cancel switch to disable the Stop & Start system.

- If an odor is emitted from the air conditioning system
Press the Stop & Start cancel switch to deactivate the Stop & Start system.


■ **Changing the idling stop time with the air conditioning system on**

The length of time the Stop & Start system will operate when the air conditioning system is on can be changed in  of the multi-information display (→P.141, 151). (The length of time the Stop & Start system will operate when the air conditioning system is off cannot be changed.)


■ **Displaying the Stop & Start system status**

→P.145, 156

■ **Multi-information display messages**

If the following situations,  and a message may be displayed on the multi-information display.

- When the engine cannot be stopped by the Stop & Start system

 “Press Brake More to Activate”

- The brake pedal is not sufficiently depressed.
- If the brake pedal is depressed further, the system will operate.

 “Non-dedicated Battery”


- A battery not designed for use with a Stop & Start system may have been installed.
- Have the vehicle inspected by your Toyota dealer.

 “Battery Charging”

- The battery charge may be low.
- Stopping of the engine is temporarily prohibited to prioritize charging of the battery. After the engine runs for a certain amount of time, the system will be enabled.
 - A refresh charge may be occurring

→After a refresh charge for up to an hour completes, the system can be operated.
 - If displayed continuously for a long time (more than an hour)

→The battery may be deteriorated. Contact your Toyota dealer for details.


 “Stop & Start System Unavailable”

- The Stop & Start system is temporarily disabled.

- Allow the engine to run for some time.
 - The engine may have been started with the hood open.
- Close the hood, turn the engine switch off, wait for 30 seconds or more, and then start the engine.

 “For Climate Control”

- The air conditioning system is being used when the ambient temperature is high or low.
- If the difference between the set temperature and cabin temperature becomes small, the system will be enabled.
 - The windshield defogger is on.
 - When the engine automatically restarts while stopped by the Stop & Start system

 “For Climate Control”

- The air conditioning system has been turned on or is being used.
- The windshield defogger has been turned on.

 “Battery Charging”

- The battery charge may be low.
- The system will be enabled after the engine runs to sufficiently charge the battery.

■ **When the buzzer sounds**

If the driver’s door is opened when the engine is stopped by the Stop & Start system and the shift lever is in D, a buzzer will sound and the Stop & Start system indicator will flash. To stop the buzzer, close the driver’s door.

■ **The Stop & Start system protection function**

- When the volume of the audio system is excessively high, sound output from

the audio system may suddenly be cut off in order to reduce battery consumption. To prevent the audio system from being cut off, keep the volume of audio system at a moderate level. If the audio system has been cut off, turn the engine switch off, wait for 3 seconds or more and then turn it to ACC or ON to re-enable the audio system.

- The audio system may not be activated if the battery terminals are disconnected and then reconnected. If this occurs, turn the engine switch off and then repeat the following operation twice to activate the audio system normally.
- Turn the engine switch to ON and then to off.

■ **Replacing the battery**

→P.734

■ **If the Stop & Start cancel indicator flashes continuously**

The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

■ **If “Stop & Start System Malfunction Visit Your Dealer” is displayed on the multi-information display**

The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

 **WARNING**

■ **When the Stop & Start system is operating**

Make sure to disable the Stop & Start system while the vehicle is in a poorly ventilated area.

If not disabled, the engine may be automatically restarted unexpectedly, causing exhaust gases to collect and enter the vehicle, possibly resulting in death or a serious health hazard.

- Do not leave the vehicle while the engine is stopped by the Stop & Start system (while the Stop & Start indicator is on). An accident may occur due to the automatic engine start function.
- Depress the brake pedal and apply the parking brake when necessary while the engine is stopped by the Stop & Start system (while the Stop & Start indicator is on).

 **NOTICE**

■ **To ensure the system operates correctly**

If any of the following situations occur, the Stop & Start system may not operate correctly. Have your vehicle inspected by your Toyota dealer.

- While the driver's seat belt is fastened, the driver's and front passenger's seat belt reminder light flashes.
- Even though the driver's seat belt is not fastened, the driver's and front passenger's seat belt reminder light does not illuminate.
- Even though the driver's door is closed, the open door warning light is illuminated or the interior light is illuminated when the interior light switch is in the door position.

**NOTICE**

- Even though the driver's door is open, the open door warning light does not illuminate or the interior light does not illuminate when the interior light switch is in the door position.

BSM (Blind Spot Monitor)*

*: If equipped

The Blind Spot Monitor is a system that uses rear side radar sensors installed on the inner side of the rear bumper on the left and right side to assist the driver in confirming safety when changing lanes.


**WARNING****■ Cautions regarding the use of the system**

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Blind Spot Monitor is a supplementary function which alerts the driver that a vehicle is in a blind spot of the outside rear view mirrors or is approaching rapidly from behind into a blind spot. Do not overly rely on the Blind Spot Monitor. As the function cannot judge if it is safe to change lanes, over reliance could lead to an accident resulting in death or serious injury.

As the system may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary.

System components

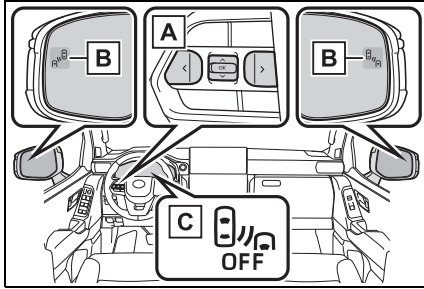

A Meter control switches

Turning the Blind Spot Monitor on/off.

B Outside rear view mirror indicators

When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.

C BSM OFF indicator

Illuminates when the Blind Spot Monitor is disabled.

■ **Outside rear view mirror indicators visibility**

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ **When “Blind Spot Monitor Unavailable See Owner’s Manual” is shown on the multi-information display**

Ice, snow, mud, etc., may be attached to the rear bumper around the sensors. (→P.368)

The system should return to normal operation after removing the ice, snow, mud, etc., from the rear bumper. Additionally, the sensors may not operate

normally when driving in extremely hot or cold environments.

■ **When “Blind Spot Monitor Malfunction Visit Your Dealer” is shown on the multi-information display**

There may be a sensor malfunction or misaligned. Have the vehicle inspected at a Toyota dealer.

■ **Customization**

Some functions can be customized. (→P.772)


WARNING

■ **To ensure the system can operate properly**

Blind Spot Monitor sensors are installed inside the left and right sides of the rear bumper respectively. Observe the following to ensure the Blind Spot Monitor can function correctly.

- Keep the sensors and the surrounding areas on the rear bumper clean at all times.

If a sensor or its surrounding area on the rear bumper is dirty or covered with snow, the Blind Spot Monitor may not operate and a warning message (→P.368) will be displayed. In this situation, clear off the dirt or snow and drive the vehicle with the operation conditions of the BSM function (→P.371) satisfied for approximately 10 minutes. If the warning message does not disappear, have the vehicle inspected by your Toyota dealer.

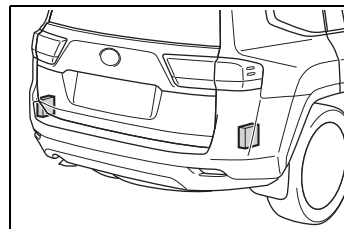


⚠ WARNING

- Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc. to a sensor or its surrounding area on the rear bumper.
- Do not subject a sensor or its surrounding area on the rear bumper to a strong impact.
If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly.
In the following situations, have your vehicle inspected by your Toyota dealer.
 - A sensor or its surrounding area is subject to a strong impact.
 - If the surrounding area of a sensor is scratched or dented, or part of them has become disconnected.
- Do not disassemble the sensor.
- Do not modify the sensor or surrounding area on the rear bumper.
- If a sensor or the rear bumper needs to be removed/installed or replaced, contact your Toyota dealer.

- Do not paint the rear bumper any color other than an official Toyota color.

Turning the Blind Spot Monitor on/off

Use the meter control switches to turn on/off the function. (→P.141, 151)

- 1 Press the meter control switch to select .
- 2 Press the meter control switch to select "BSM" and then press OK.


When the BSM function is disabled, the BSM OFF indicator illuminates. (Each time the engine switch is turned off then changed to ON, the Blind Spot Monitor will be enabled automatically.)

4

Driving

Blind Spot Monitor operation**■ Vehicles that can be detected by the Blind Spot Monitor**


The Blind Spot Monitor uses rear side radar sensors to detect the following vehicles traveling in adjacent lanes and advises the driver of the presence of such vehicles via the indicators on the outside rear view mirrors.

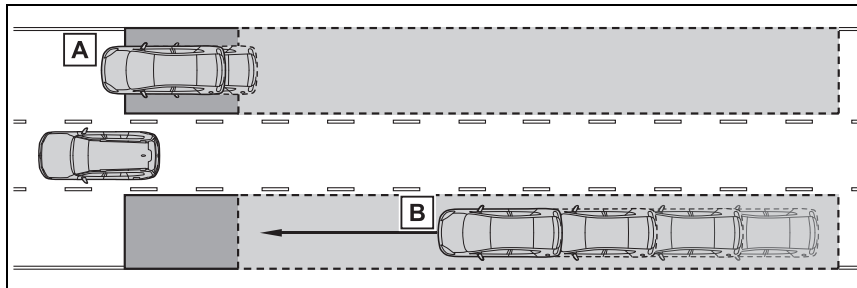

- A** Vehicles that are traveling in areas that are not visible using the outside rear view mirrors (the blind spots)
- B** Vehicles that are approaching rapidly from behind in areas that are not visible using the outside rear view mirrors (the blind spots)

■ **The Blind Spot Monitor detection areas**

The areas that vehicles can be detected in are outlined below.

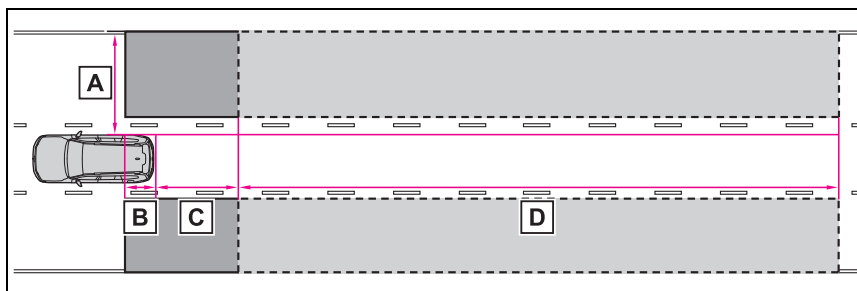

The range of each detection area is:

- A** Approximately 0.5 m (1.6 ft.) to 3.5 m (11.5 ft.) from either side of the vehicle^{*1}
- B** Approximately 1 m (3.3 ft.) forward of the rear bumper
- C** Approximately 3 m (9.8 ft.) from the rear bumper
- D** Approximately 3 m (9.8 ft.) to 60 m (197 ft.) from the rear bumper^{*2}

^{*1}: The area between the side of the vehicle and 0.5 m (1.6 ft.) from the side of the vehicle cannot be detected.

^{*2}: The greater the difference in speed between your vehicle and the detected vehicle is, the farther away the vehicle will be detected, causing the outside rear view mirror indicator to illuminate or flash.

■ The Blind Spot Monitor is operational when

The Blind Spot Monitor is operational when all of the following conditions are met:

- The Blind Spot Monitor is on.
- The shift lever is in a position other than R.
- The vehicle speed is greater than approximately 10 km/h (6 mph).

■ The Blind Spot Monitor will detect a vehicle when

The Blind Spot Monitor will detect a vehicle present in the detection area in the following situations:

- A vehicle in an adjacent lane overtakes your vehicle.
- You overtake a vehicle in an adjacent lane slowly.
- Another vehicle enters the detection area when it changes lanes.

■ Conditions under which the system will not detect a vehicle

The Blind Spot Monitor is not designed to detect the following types of vehicles and/or objects:

- Small motorcycles, bicycles, pedestrians, etc.*
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects*
- Following vehicles that are in the same lane*
- Vehicles traveling 2 lanes away from your vehicle*
- Vehicles which are being overtaken rapidly by your vehicle

*: Depending on the conditions, detection of a vehicle and/or object may occur.

■ Conditions under which the system may not function correctly

- The Blind Spot Monitor may not detect vehicles correctly in the following situations:
 - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
 - When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
 - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
 - When multiple vehicles are approaching with only a small gap between each vehicle
 - When the distance between your vehicle and a following vehicle is short
 - When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
 - When the difference in speed between your vehicle and another vehicle is changing
 - When a vehicle enters a detection area traveling at about the same speed as your vehicle
 - As your vehicle starts from a stop, a vehicle remains in the detection area
 - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
 - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
 - When vehicle lanes are wide, or when driving on the edge of a lane, and the vehicle in an adjacent lane is far away from your vehicle
 - When towing a trailer
 - When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle
 - When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
 - Immediately after the Blind Spot Monitor is turned on

- Instances of the Blind Spot Monitor unnecessarily detecting a vehicle and/or object may increase in the following situations:
- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When the distance between your vehicle and a guardrail, wall, etc., that enters the detection area is short
- When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
- When vehicle lanes are narrow, or when driving on the edge of a lane, and a vehicle traveling in a lane other than the adjacent lanes enters the detection area
- When driving on roads with sharp bends, consecutive curves, or uneven surfaces
- When the tires are slipping or spinning
- When the distance between your vehicle and a following vehicle is short
- When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle


Toyota parking assist-sensor*

*: If equipped

The distance from your vehicle to objects, such as a wall, when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the navigation system or multimedia system screen and a buzzer. Always check the surrounding area when using this system.

System components

■ Types of sensors

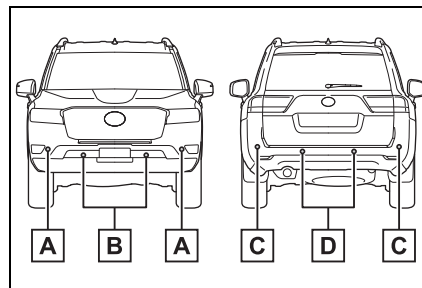

A Front corner sensors

B Front center sensors

C Rear corner sensors


D Rear center sensors

■ Display

When the sensors detect an object, such as a wall, a graphic is shown on the multi-information display and multimedia display depending on the position and distance to the

object. (As the distance to the object becomes short, the distance segments may blink.)

- Multi-information display

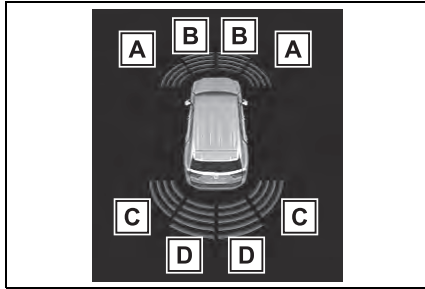

- A** Front corner sensor detection
- B** Front center sensor detection
- C** Rear corner sensor detection
- D** Rear center sensor detection

- Center display

When the rear view monitor system*, Toyota parking assist monitor* or Multi-terrain Monitor* is displayed.

A simplified image is displayed on the screen when an obstacle is detected while magnified display is shown. (→P.401, 408, 421)

*: If equipped

Turning Toyota parking assist-sensor on/off

Use the meter control switches to turn on/off the function. (→P.141, 151)

- 1 Press the meter control switch to select .

- 2 Press the meter control switch to select and then press OK.

When the Toyota parking assist-sensor function is disabled, the Toyota parking assist-sensor OFF indicator (→P.125) illuminates on the multi-information display.

To re-enable the system, select on the multi-information display, select and turn it on.

If the system is disabled, it will remain off even if the engine switch is turned to ON after the engine switch has been turned off.

WARNING

■ Cautions regarding the use of the system

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

■ To ensure the system can operate properly

Observe the following precautions. Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

- Do not damage the sensors, and always keep them clean.
- Do not attach a sticker or install an electronic component, such as a backlit license plate (especially fluorescent type), fog lights, fender pole or wireless antenna near a radar sensor.

**WARNING**

- Do not subject the radar sensor or its surrounding area to a strong impact. If the radar sensor, front grille, or front bumper has been subjected to a strong impact, have the vehicle inspected by your Toyota dealer. If a sensor or the rear bumper needs to be removed/installed or replaced, contact your Toyota dealer.

- Do not modify, disassemble or paint the sensors.

- Do not attach a license plate cover.

- Keep your tires properly inflated.

■ When to disable the function

In the following situations, disable the function as it may operate even though there is no possibility of a collision.

- Failing to observe the warnings above.

- A non-genuine Toyota suspension (lowered suspension, etc.) is installed.

■ Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area.

Doing so may result in the sensor malfunctioning.

- When using a high pressure washer to wash the vehicle, do not spray the sensors directly, as doing so may cause a sensor to malfunction.

- When using steam to clean the vehicle, do not direct steam too close to the sensors as doing so may cause a sensor to malfunction.

■ The system can be operated when

- The engine switch is in ON.
- Toyota parking assist-sensor function

is on.

- The vehicle speed is less than about 10 km/h (6 mph).

- The shift lever is in other than P.

■ If “Clean Parking Assist Sensor” is displayed on the multi-information display

A sensor may be covered with water drops, ice, snow, dirt, etc. Remove the water drops, ice, snow, dirt, etc., from the sensor to return the system to normal.

Also, due to ice forming on a sensor at low temperatures, a warning message may be displayed or the sensor may not be able to detect an object. Once the ice melts, the system will return to normal.

If a warning message is displayed even if the sensor is clean, there may be a sensor malfunction. Have the vehicle inspected by your Toyota dealer.

■ If “Parking Assist Unavailable” is displayed on the multi-information display

Water may be continuously flowing over the sensor surface, such as in a heavy rain. When the system determines that it is normal, the system will return to normal.

■ Sensor detection information

- The sensor's detection areas are limited to the areas around the vehicle's front and rear bumpers.

- The following situations may occur during use.

- Depending on the shape of the object and other factors, the detection distance may shorten, or detection may be impossible.

- Detection may be impossible if static objects draw too close to the sensor.

- There will be a short delay between static object detection and display (warning buzzer sounds). Even at low speeds, there is a possibility that the object will come within 30 cm (11.9 in.) before the display is shown and the warning buzzer sounds.

- It might be difficult to hear the buzzer due to the volume of the audio system or air flow noise of the air conditioning system.
- It may be difficult to hear the sound of this system due to the buzzers of other systems.

■ **Objects which the system may not properly detect**


The shape of the object may prevent the sensor from detecting it. Pay particular attention to the following objects:

- Wires, fences, ropes, etc.
- Cotton, snow and other materials that absorb sound waves
- Sharply-angled objects
- Low objects
- Tall objects with upper sections projecting outwards in the direction of your vehicle

■ **Situations in which the system may not operate properly**

Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect objects. Particular instances where this may occur are listed below.

- There is dirt, snow, water drops or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is frozen. (Thawing the area will resolve this problem.)
In especially cold weather, if a sensor is frozen the sensor display may be displayed abnormally, or objects, such as a wall, may not be detected.
- When a sensor or the area around a sensor is extremely hot or cold.

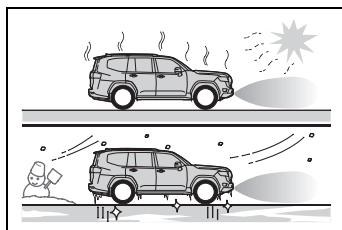


- On an extremely bumpy road, on an incline, on gravel, or on grass.
- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle.
- A sensor is coated with a sheet of spray or heavy rain.
- If objects draw too close to the sensor.
- When a pedestrian is wearing clothing that does not reflect ultrasonic waves (ex. skirts with gathers or frills).
- When objects that are not perpendicular to the ground, not perpendicular to the vehicle traveling direction, uneven, or waving are in the detection range.
- Strong wind is blowing.
- When driving in inclement weather such as fog, snow or a sandstorm.
- When an object that cannot be detected is between the vehicle and a detected object.
- If an object such as a vehicle, motorcycle, bicycle or pedestrian cuts in front of the vehicle or runs out from the side of the vehicle.
- If the orientation of a sensor has been changed due to a collision or other impact
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow.
- If the front of the vehicle is raised or lowered due to the carried load.
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning.
- When tire chains, a compact spare tire or an emergency tire puncture repair kit are used.


■ **Situations in which the system may operate even if there is no possibility of a collision**

In some situations, such as the following, the system may operate even though there is no possibility of a collision.


- When driving on a narrow road

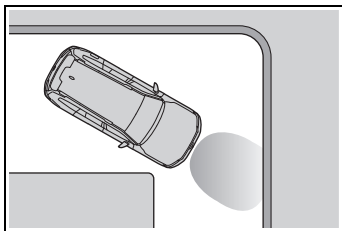

- When driving toward a banner, flag, low-hanging branch or boom barrier (such as those used at railroad crossings, toll gates and parking lots)
- When there is a rut or hole in the surface of the road
- When driving on a metal cover (grating), such as those used for drainage ditches
- When driving up or down a steep slope
- If a sensor is hit by a large amount of water, such as when driving on a flooded road
- There is dirt, snow, water drops or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is coated with a sheet of spray or heavy rain
- When driving in inclement weather such as fog, snow or a sandstorm
- When strong winds are blowing

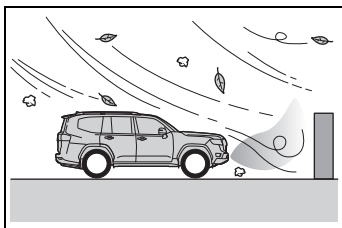


- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle
- If the front of the vehicle is raised or lowered due to the carried load
- If the orientation of a sensor has been changed due to a collision or other impact
- The vehicle is approaching a tall or curved curb
- Driving close to columns (H-shaped steel beams, etc.) in multi-story parking garages, construction sites, etc.
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- On an extremely bumpy road, on an incline, on gravel, or on grass

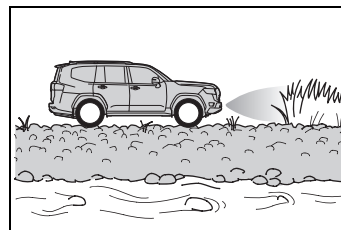

- When tire chains, a compact spare tire or an emergency tire puncture repair kit are used.

Sensor detection display, object distance

■ **Detection range of the sensors**

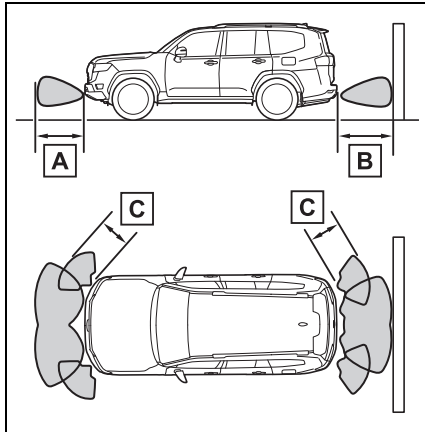

- A** Approximately 100 cm (3.3 ft.)
- B** Approximately 150 cm (4.9 ft.)
- C** Approximately 60 cm (2.0 ft.)

The diagram shows the detection range of the sensors. Note that the sensors cannot detect objects that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object, etc.

■ **The distance and buzzer**

Approximate distance to obstacle	Buzzer
Front sensor: 100 cm to 60 cm (3.3 ft. to 2.0 ft.)*	Slow
Rear sensor: 150 cm to 60 cm (4.9 ft. to 2.0 ft.)*	
60 cm to 45 cm (2.0 ft. to 1.5 ft.)*	Medium
45 cm to 30 cm (1.5 ft. to 1.0 ft.)*	Fast
30 cm to 15 cm (1.0 ft. to 0.5 ft.)	Continuous
Less than 15 cm (0.5 ft.)	

*: Automatic buzzer mute function is enabled. (→P.377)

■ **Buzzer operation and distance to an object**

A buzzer sounds when the sensors are operating.

- The buzzer beeps faster as the vehicle approaches an object. When the vehicle comes within approximately 30 cm (1.0 ft.) of

the object, the buzzer sounds continuously.



- When 2 or more sensors simultaneously detect a static object, the buzzer sounds for the nearest object.
- Even when the sensors are operating, the buzzer will be muted in

some situations. (automatic buzzer mute function)

■ **Adjusting the buzzer volume**

The buzzer volume can be adjusted on the multi-information display.

Use the meter control switches to change settings. (→P.141, 151)

- 1 Press the meter control switch to select .
- 2 Press the meter control switch to select  and then press and hold OK .
- 3 Select the volume and then press OK .

Each time the switch is pressed, the volume level will change between 1, 2, and 3.

■ **Muting a buzzer**

A mute button will be displayed on the multi-information display when an object is detected. To mute the buzzer, press “OK”.

The buzzers for the Toyota parking assist-sensor, RCTA function and RCD function will be muted simultaneously.

Mute will be canceled automatically in the following situations:

- When the shift lever is changed.
- When the vehicle speed exceeds a certain speed.
- When there is a malfunction in a sensor or the system is temporarily unavailable.
- When the operating function is

disabled manually.

- When the engine switch is turned off.

RCTA (Rear Cross Traffic Alert) function*

*: If equipped

The RCTA function uses the BSM rear side radar sensors installed behind the rear bumper. This function is intended to assist the driver in checking areas that are not easily visible when backing up.

WARNING


■ Cautions regarding the use of the system

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely. (→P.367)

■ To ensure the system can operate properly

→P.368

System components

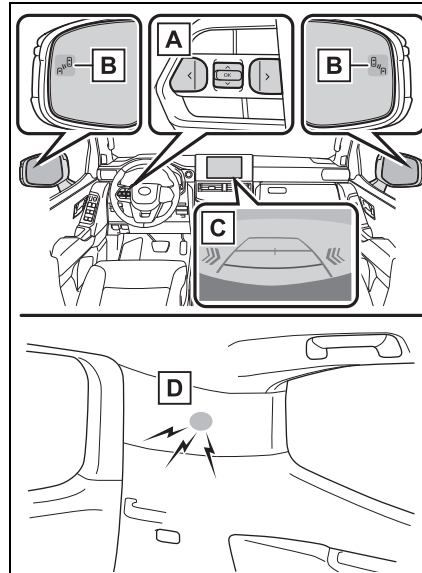

A Meter control switches

Turning the RCTA function on/off.

B Outside rear view mirror indicators

When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.

C Center Display

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon (→P.380) for the detected side will be displayed on the Center Display. This illustration shows an example of a vehicle approaching from both sides of the vehicle.


D RCTA buzzer

If a vehicle approaching from the right or left at the rear of the vehicle is

detected, a buzzer will sound.

Turning the RCTA function on/off

Use the meter control switches to enable/disable the RCTA function. (→P.141, 151)

- 1 Press the meter control switch to select .
- 2 Press the meter control switch to select "RCTA" and then press OK.

When the RCTA function is disabled, the RCTA OFF indicator (→P.125) illuminates. (Each time the engine switch is turned off then changed to ON, the RCTA function will be enabled automatically.)

Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

Hearing the RCTA buzzer

The RCTA buzzer may be difficult to hear over loud noises, such as if the audio system volume is high.

When "Rear Cross Traffic Alert Unavailable See Owner's Manual" is shown on the multi-information display

The sensor voltage has become abnormal, or water, snow, mud, etc., may be built up in the vicinity of the sensor area of the position above the rear bumper. (→P.368)

Removing the water, snow, mud, etc., from the vicinity of the sensor area should return it to normal. Also, the sensor may not function normally when used in extremely hot or cold weather.

When "Rear Cross Traffic Alert Malfunction Visit Your Dealer" is shown on the multi-information display

There may be a sensor malfunction or misaligned. Have the vehicle inspected at your Toyota dealer.


Radar sensors

→P.368

RCTA function

Operation of the RCTA function

The RCTA function uses radar sensors to detect vehicles approaching from the right or left at the rear of the vehicle and alerts the driver of the presence of such vehicles by flashing the outside rear view mirror indicators and sounding a buzzer.

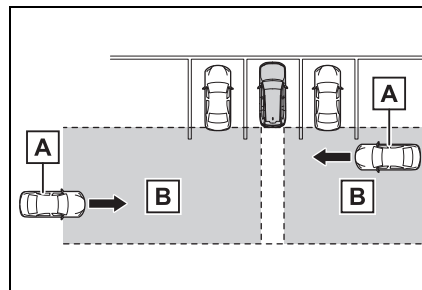


A Approaching vehicles

B Detection areas of approaching vehicles

RCTA icon display


When a vehicle approaching from the right or left at the rear of the vehicle is detected, the following will be displayed on the Center Display.

- This illustration shows an example of a vehicle approaching from both sides of the vehicle

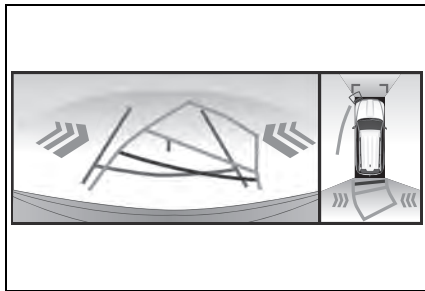

■ RCTA function detection areas

The areas that vehicles can be detected in are outlined below.

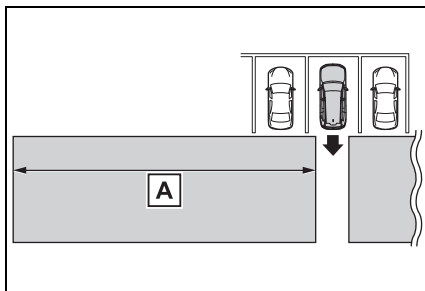

The buzzer can alert the driver of faster vehicles approaching from farther away.

Example:

Approaching vehicle speed	A Approximate alert distance
28 km/h (18 mph) (fast)	20 m (65 ft.)
8 km/h (5 mph) (slow)	5.5 m (18 ft.)

■ The RCTA function is operational when

The RCTA function operates when all of


the following conditions are met:

- The engine switch is in ON.
- The RCTA function is on.
- The shift lever is in R.
- The vehicle speed is less than approximately 8 km/h (5 mph).
- The approaching vehicle speed is between approximately 8 km/h (5 mph) and 28 km/h (18 mph).

■ Adjusting the buzzer volume

The buzzer volume can be adjusted on the multi-information display.

Use the meter control switches to change settings. (→P.141, 151)

- 1 Press the meter control switch to select .
- 2 Press the meter control switch to select "RCTA" and then press and hold OK .
- 3 Select the volume and then press OK .

Each time the switch is pressed, the volume level will change between 1, 2, and 3.

■ Muting a buzzer temporarily

A mute button will be displayed on the multi-information display when a vehicle or an object is detected. To mute the buzzer, press OK.


The buzzers for the Toyota parking assist-sensor, RCTA function and RCD function will be muted simultaneously. Mute will be canceled automatically in the following situations:

- When the shift lever is changed.
- When the vehicle speed exceeds a certain speed.
- When there is a malfunction in a sensor or the system is temporarily unavailable.
- When the operating function is disabled manually.
- When the engine switch is turned off.

■ **Conditions under which the system will not detect a vehicle**

The RCTA function is not designed to detect the following types of vehicles and/or objects:

- Vehicles approaching from directly behind
- Vehicles backing up in a parking space next to your vehicle
- Vehicles that the sensors cannot detect due to obstructions

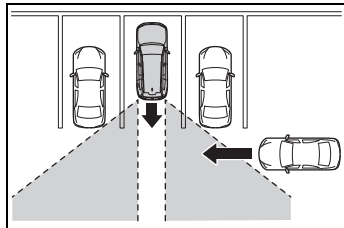

- Guardrails, walls, signs, parked vehicles and similar stationary objects
- Small motorcycles, bicycles, pedestrians, etc.*
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle
- The distance between the sensor and approaching vehicle gets too close

*: Depending on conditions, detection of a vehicle and/or object may occur.


■ **Situations in which the system may not operate properly**

The RCTA function may not detect vehicles correctly in the following situations:


- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When mud, snow, ice, a sticker, etc., is covering the sensor or surrounding area on the position above the rear bumper
- When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or

fog

- When multiple vehicles are approaching with only a small gap between each vehicle
- When a vehicle is approaching at high speed
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- When backing up on a slope with a sharp change in grade

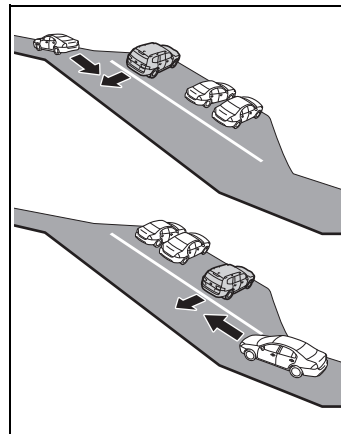


- When backing out of a sharp angle parking spot

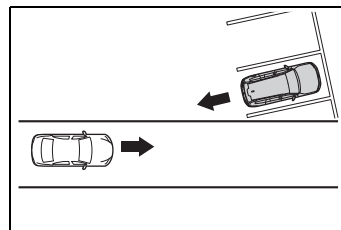


- When towing a trailer
- When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
- When a sensor or the area around a sensor is extremely hot or cold
- If the suspension has been modified

or tires of a size other than specified are installed

- If the front of the vehicle is raised or lowered due to the carried load
- When turning while backing up

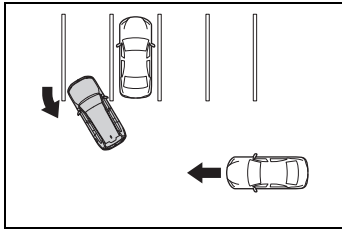


- When a vehicle turns into the detection area

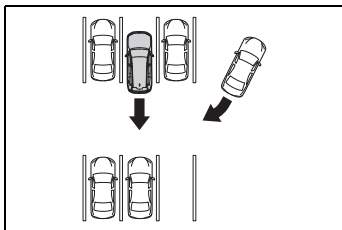


■ Situations in which the system may operate even if there is no possibility of a collision

Instances of the RCTA function unnecessarily detecting a vehicle and/or object may increase in the following situations:

- When the parking space faces a street and vehicles are being driven on the street

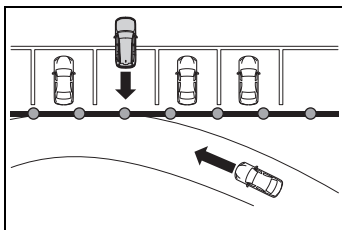


- When the distance between your vehicle and metal objects, such as a guardrail, wall, sign, or parked vehicle, which may reflect electrical waves toward the rear of the vehicle, is short

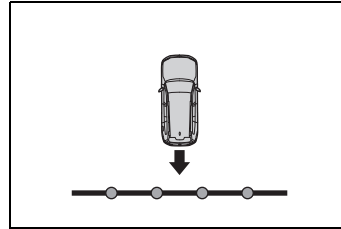


- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow

- When a vehicle passes by the side of your vehicle

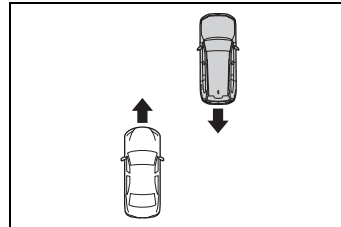

- When a detected vehicle turns while approaching the vehicle

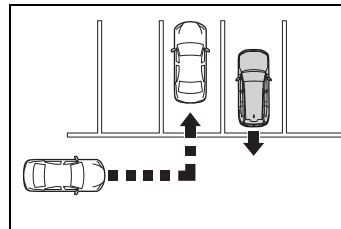

- When there are spinning objects near your vehicle such as the fan of an air conditioning unit
- When water is splashed or sprayed toward the rear bumper, such as from a sprinkler
- Moving objects (flags, exhaust fumes, large rain droplets or snowflakes, rain water on the road surface, etc.)
- When the distance between your vehicle and a guardrail, wall, etc., that enters the detection area is short
- Gratings and gutters

- When a sensor or the area around a sensor is extremely hot or cold
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load

RCD (Rear Camera Detection) function *

*: If equipped

When the vehicle is backing up, the rear camera detection function can detect pedestrians in the detection area behind the vehicle. If a pedestrian is detected, a buzzer will sound and an icon will be displayed on the Center Display to inform the driver of the pedestrian.

WARNING

■ Cautions regarding the use of the system

The recognition and control capabilities for this system are limited.

The driver should always drive safely by always being responsible without over relying on the system and have a understanding of the surrounding situations.

■ To ensure the system can operate properly

Observe the following, otherwise there is the danger that could lead to an accident.

- Always clean the camera without damaging it.
- Do not install market electronic parts (such as Illuminated license plate, fog lamps, etc.) in the camera vicinity.
- Do not subject the camera vicinity to strong impacts. If the vicinity is subjected to a strong impact, have the vehicle inspected by your Toyota dealer.

WARNING

- Do not disassemble, remodel or paint the camera.
- Do not attach accessories or stickers to the camera.
- Do not install market protection parts (bumper trim, etc.) to the rear bumper.
- Maintain suitable tire air pressure.
- Make sure the back door is completely closed.

RCD function is turned off

In the following situations the system turns off. The RCD function may not operate properly and thus there is the danger that an accident may occur.


- The contents mentioned above are not observed.
- Suspensions other than Toyota genuine parts are installed.

will be enabled automatically.)

Turning the RCD function on/off

Use the meter control switches to enable/disable the RCD function.


(→P.141, 151)

- 1 Press the meter control switch to select .
- 2 Press the meter control switch to select "RCD" and then press OK.

When the RCD function is disabled, the RCD OFF indicator (→P.125) illuminates.

When a pedestrian is detected


If the rear camera detection function detects a pedestrian in the detection area, the buzzer and pedestrian detection will operate as follows:

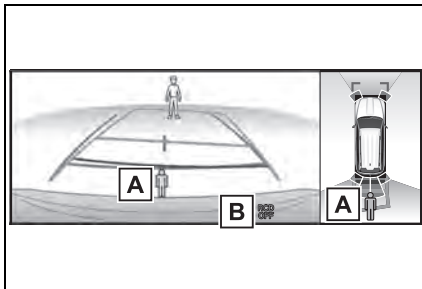Center Display**A Pedestrian detection icon**

Displayed automatically when a pedestrian is detected.

B RCD OFF icon

When the RCD function is disabled, the RCD OFF indicator illuminates. (Each time the engine switch is turned OFF then changed to ON, the RCD function

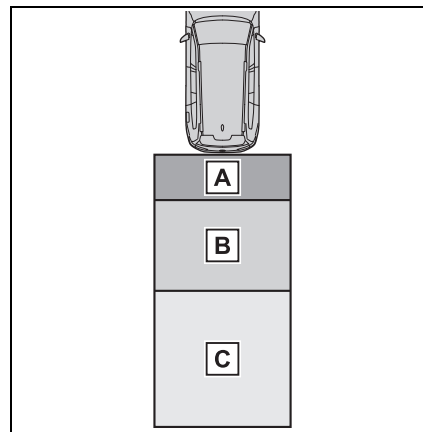

A If a pedestrian is detected in

area **A**
 Buzzer: Sounds repeatedly
 Pedestrian detection icon:
 Blinks 3 times and then stays on

B If a pedestrian is detected in area **B**
 Buzzer (When the vehicle is stationary): Sounds 3 times
 Buzzer (When the vehicle is backing up, when a pedestrian approaches the rear of the vehicle): Sounds repeatedly
 Pedestrian detection icon:
 Blinks 3 times and then stays on

C If the system determines that your vehicle may collide with a pedestrian in area **C**
 Buzzer: Sounds repeatedly
 Pedestrian detection icon:
 Blinks 3 times and then stays on


■ The rear camera detection function is operational when

- The engine switch is in ON.
- RCD function is on.
- The shift position is in R.

■ Adjusting the buzzer volume

The buzzer volume can be adjusted on the multi-information display.

Use the meter control switches to change settings. (→P.141, 151)

- 1 Press the meter control switch to select .
- 2 Press the meter control switch to select "RCD" and then press and hold OK.
- 3 Select the volume and then press OK.

Each time the switch is pressed, the volume level will change between 1, 2, and 3.

■ Muting a buzzer

A mute button will be displayed on the multi-information display when an object is detected. To mute the buzzer, press "OK".

The buzzers for the Toyota parking assist-sensor, RCTA function and RCD function will be muted simultaneously.

Mute will be canceled automatically in the following situations:

- When the shift lever is changed.
- When the vehicle speed exceeds a certain speed.
- When there is a malfunction in a sensor or the system is temporarily unavailable.
- When the operating function is disabled manually.
- When the engine switch is turned off.

■ If "Rear Camera Detection Unavailable Remove the Dirt of Rear Camera" is displayed on the multi-information display

The rear camera lens may be dirty or covered with snow or ice. In such cases, if it is removed from the rear camera lens, the system should return to normal. (It may be necessary to drive the vehicle for some time before the system returns to normal.)

■ If "Rear Camera Detection Unavailable" is displayed on the multi-information display

- If this message is displayed after the battery has been disconnected and reconnected, fully turn the steering wheel to the left and then the right on level ground.
- If this message is displayed only when the R shift position is selected, the rear camera lens may be dirty. Clean the rear camera lens.

■ Situations in which the system may not operate properly

- Some pedestrians, such as the following, may not be detected by the rear camera detection function, preventing the function from operating properly:
 - Pedestrians who are bending forward or squatting
 - Pedestrians who are lying down
 - Pedestrians who are running
 - Pedestrians who suddenly enter the detection area
 - People riding a bicycle, skateboard, or other light vehicle
 - Pedestrians wearing oversized clothing such as a rain coat, long skirt, etc., making their silhouette obscure
 - Pedestrians whose body is partially hidden by an object, such as a cart or umbrella
 - Pedestrians which are obscured by darkness, such as at night
- In some situations, such as the following, pedestrians may not be detected by the rear camera detection function, preventing the function from operating properly:
 - When backing up in inclement weather (rain, snow, fog, etc.)
 - When the rear camera is obscured (dirt, snow, ice, etc. are attached) or scratched
 - When a very bright light, such as the sun, or the headlights of another vehicle, shines directly into the rear camera
 - When backing up in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a garage or underground parking lot
 - When backing up in a dim environment such as during dusk or in an underground parking lot
 - When the camera position and direction are deviated
 - When a towing hook is attached
 - When water droplets are flowing on the camera lens
 - When the vehicle height is extremely changed (nose up, nose down)
 - When tire chains or an emergency tire

puncture repair kit are used

■ Situations in which the system may operate unexpectedly

- Even though there are no pedestrians in the detection area, some objects, such as the following, may be detected, possibly causing the rear camera detection function to operate.
 - Three dimensional objects, such as a pole, traffic cone, fence, or parked vehicle
 - Moving objects, such as a car or motorcycle
 - Objects moving toward your vehicle when backing up, such as flags or puddles (or airborne matter, such as smoke, steam, rain, or snow)
 - Cobblestone or gravel roads, tram rails, road repairs, white lines, pedestrian crossings or fallen leaves on the road
 - Metal covers (gratings), such as those used for drainage ditches
 - Objects reflected in a puddle or on a wet road surface
 - Shadows on the road
- In some situations, such as the following, the rear camera detection function may operate even though there are no pedestrians in the detection area.
 - When backing up toward the roadside or a bump on the road
 - When backing up toward an incline/decline
 - If the rear of the vehicle is raised or lowered due to the carried load
 - If a bumper protector, such as an additional trim strip, is installed to the rear bumper
 - If the orientation of the rear camera has been changed
 - If a towing eyelet is installed to the rear of the vehicle
 - When water is flowing over the rear camera lens
 - When the rear camera is obscured (dirt, snow, ice, etc. are attached) or scratched
 - If there is a flashing light in the detection area, such as the emergency

- flashers of another vehicle
- When tire chains or an emergency tire puncture repair kit are used
- Situations in which the rear camera detection function may be difficult to notice
- The buzzer may be difficult to hear if the surrounding area is noisy, the volume of the audio system volume is high, the air conditioning system is being used, etc.
- If the temperature in the cabin is extremely high or low, the Center Display may not operate correctly.

PKSB (Parking Support Brake)*

*: If equipped

The Parking Support Brake system consists of the following functions that operate when driving at a low speed or backing up, such as when parking. When the system determines that the possibility of a collision with a detected object or pedestrian is high, a warning operates to urge the driver to take evasive action. If the system determines that the possibility of a collision with a detected object or pedestrian is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

PKSB (Parking Support Brake) system

- **Parking Support Brake function (static objects)**
→P.394
- **Parking Support Brake function (rear-crossing vehicles) (if equipped)**
→P.397

■ Parking Support Brake function (rear pedestrians) (if equipped)

→P.399



WARNING

■ Cautions regarding the use of the system

Do not overly rely on the system, as doing so may lead to an accident.

Always drive while checking the safety of the surroundings of the vehicle.

Depending on the vehicle and road conditions, weather, etc., the system may not operate.

The detection capabilities of sensors and radars are limited. Always drive while checking the safety of the surroundings of the vehicle.

- The driver is solely responsible for safe driving. Always drive carefully, taking care to observe your surroundings. The Parking Support Brake system is designed to provide support to lessen the severity of collisions. However, it may not operate in some situations.
- The Parking Support Brake system is not designed to stop the vehicle completely. Additionally, even if the system has stopped the vehicle, it is necessary to depress the brake pedal immediately as brake control will be canceled after approximately 2 seconds.
- It is extremely dangerous to check the system operations by intentionally driving the vehicle into the direction of a wall, etc. Never attempt such actions.

■ When to disable the Parking Support Brake

In the following situations, disable the Parking Support Brake as the system may operate even though there is no possibility of a collision.

- When inspecting the vehicle using a chassis roller, chassis dynamo or free roller
- When loading the vehicle onto a boat, truck or other transport vessel
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- When using automatic car washing devices
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When tire chains, a compact spare tire or an emergency tire puncture repair kit are used.



NOTICE

■ If “Parking Support Brake Unavailable” is displayed on the multi-information display and the PKSB OFF indicator is flashing


If this message is displayed immediately after the engine switch is changed to ON, operate the vehicle carefully, paying attention to your surroundings. It may be necessary to drive the vehicle for a certain amount of time before the system returns to normal. (If the system is not return to normal after driving for a while, clean the rear camera lens.)

Enabling/Disabling the Parking Support Brake

The Parking Support Brake can be enabled/disabled by pressing the PKSB switch. All of the Parking Support Brake functions (static objects, rear-crossing vehicles, and rear pedestrians) are enabled/disabled simultaneously.

When the Parking Support Brake is disabled, the PKSB OFF indicator (→P.125) illuminates.

If disabled using this method, the system will not be re-enabled by turning the engine switch off and then to ON.

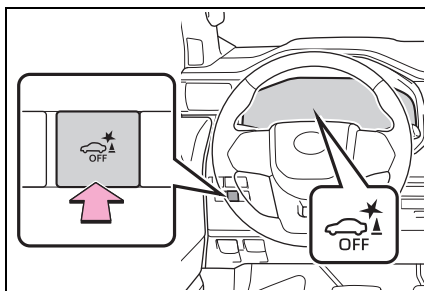

■ If the four-wheel drive control switch is in L4

Parking Support Brake will be turned off automatically.

Display and buzzer for engine output restriction control and brake control

If the engine output restriction control or brake control operates, a buzzer will sound and a message will be displayed on the multi-information and head-up display (if equipped), navigation system (if equipped) or multimedia system screen, to alert the driver.

Depending on the situation, engine output restriction control will operate to either limit acceleration or restrict output as much as possible.

- Engine output restriction control is operating (acceleration restriction)

Acceleration greater than a certain amount is restricted by the system.

Navigation system (if equipped) or multimedia system (if equipped) screen: No warning displayed

Multi-information display: “Object Detected Acceleration Reduced”

Head-up display (if equipped): No warning displayed

PKSB OFF indicator: Not illuminated

Buzzer: Does not sound

- Engine output restriction control is operating (output restricted as much as possible)

The system has determined that stron-

ger-than-normal brake operation is necessary.

Navigation system (if equipped) or multimedia system (if equipped) screen: "BRAKE!"

Multi-information display and head-up display (if equipped): "BRAKE!"

PKSB OFF indicator: Not illuminated

Buzzer: Short beep

- Brake control is operating

The system determined that emergency braking is necessary.

Navigation system (if equipped) or multimedia system (if equipped) screen: "BRAKE!"

Multi-information display and head-up display (if equipped): "BRAKE!"

PKSB OFF indicator: Not illuminated

Buzzer: Short beep

- Vehicle stopped by system operation

The vehicle has been stopped by brake control operation.

Navigation system (if equipped) or multimedia system (if equipped) screen: "Press Brake Pedal"

Multi-information display and head-up display (if equipped): "Switch to Brake" (If the accelerator pedal is not depressed, "Press Brake Pedal" will be displayed.)

PKSB OFF indicator: Illuminated

Buzzer: Short beep


System overview

If the Parking Support Brake determines that a collision with a detected object is possible, the

engine output will be restricted to restrain any increase in the vehicle speed. (Engine output restriction control: See figure 2.)

Additionally, if the accelerator pedal continues to be depressed, the brakes will be applied automatically to reduce the vehicle speed. (Brake control: See figure 3.)

- Figure 1: When the PKSB (Parking Support Brake) is not operating

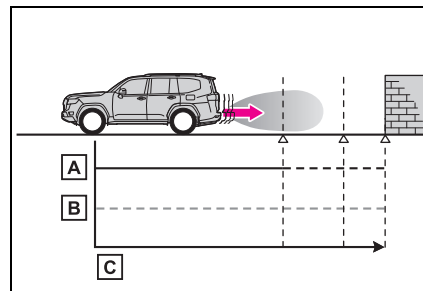


A Engine output

B Braking force

C Time


- Figure 2: When engine output restriction control operates

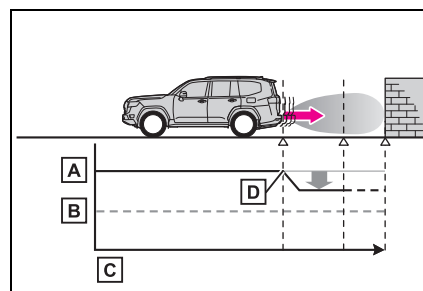

A Engine output

B Braking force

- C** Time
- D** Engine output restriction control begins operating (System determines that possibility of collision with detected object is high)
- Figure 3: When engine output restriction control and brake control operates

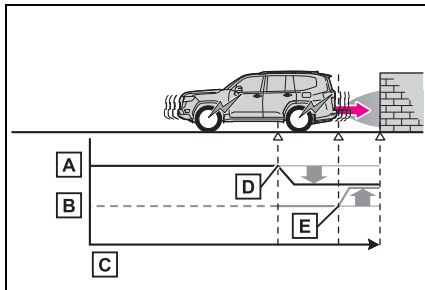

- A** Engine output
- B** Braking force
- C** Time
- D** Engine output restriction control begins operating (System determines that possibility of collision with detected object is high)
- E** Brake control begins operating (System determines that possibility of collision with detected object is extremely high)

■ If the Parking Support Brake has operated

If the vehicle is stopped due to operation of the Parking Support Brake, the Parking Support Brake will be disabled and the PKSB OFF indicator will illuminate. If the Parking Support Brake operates unnecessarily, brake control can be canceled by depressing the brake pedal or

waiting for approximately 2 seconds for it to automatically be canceled. Then, the vehicle can be operated by depressing the accelerator pedal.

■ Re-enabling the Parking Support Brake

To re-enable the Parking Support Brake when it is disabled due to operation of the Parking Support Brake, either enable the system again (→P.390), or turn the engine switch off and then back to ON. Additionally, if the object becomes no longer in the traveling direction of the vehicle or if the traveling direction of the vehicle changes* (such as changing from moving forward to backing up, or from backing up to moving forward), the system will be re-enabled automatically.

*: Except when the Parking Support Brake function (rear pedestrians) operated.

■ If “Parking Support Brake Unavailable” is displayed on the multi-information display and the PKSB OFF indicator is flashing

If the vehicle is stopped due to operation of the Parking Support Brake, the Parking Support Brake will be disabled and the PKSB OFF indicator will illuminate.

- A sensor may be covered with water drops, ice, snow, dirt, etc. Remove the water drops, ice, snow, dirt, etc., from the sensor to return the system to normal.

Also, due to ice forming on a sensor at low temperatures, a warning message may be displayed or the sensor may not be able to detect an object. Once the ice melts, the system will return to normal.

- If this message continues to be displayed even after cleaning the sensor, or is displayed even though the sensor is clean, have the vehicle inspected by your Toyota dealer.

■ If a battery terminal has been disconnected and reconnected

The system needs to be initialized. To initialize the system, drive the vehicle straight ahead for 5 seconds or more at a speed of approximately 35 km/h (22 mph) or more.

Parking Support Brake function (static objects)*


*: If equipped

If the sensors detect a static object, such as a wall, in the traveling direction of the vehicle and the system determines that a collision may occur due to the vehicle suddenly moving forward due to an accidental accelerator pedal operation, the vehicle moving the unintended direction due to the wrong shift position being selected, or while parking or traveling at low speeds, the system will operate to lessen the impact with the detected static object and reduce the resulting damage.


Examples of function operation

This function will operate in situations such as the following if an object is detected in the traveling direction of the vehicle.


- When traveling at a low speed and the brake pedal is not depressed, or is depressed late

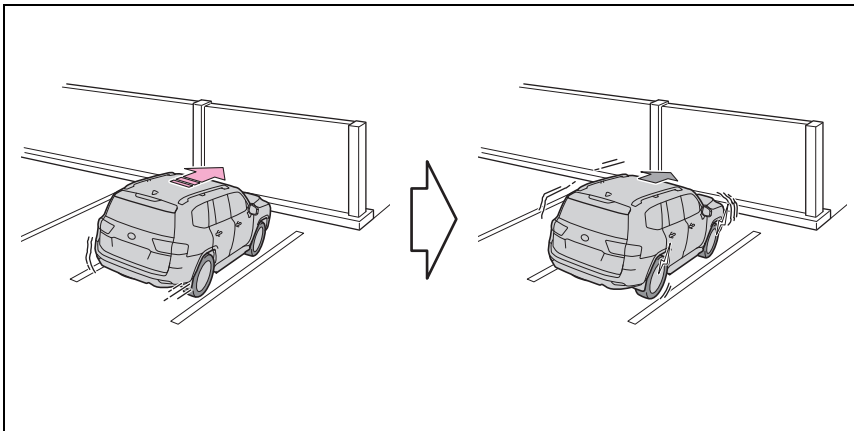

■ When the accelerator pedal is depressed excessively

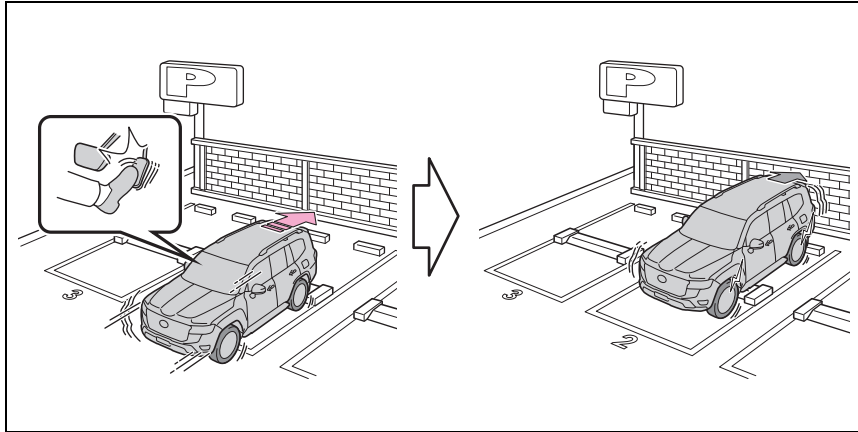

■ When the vehicle moves in the unintended direction due to the wrong shift position being selected

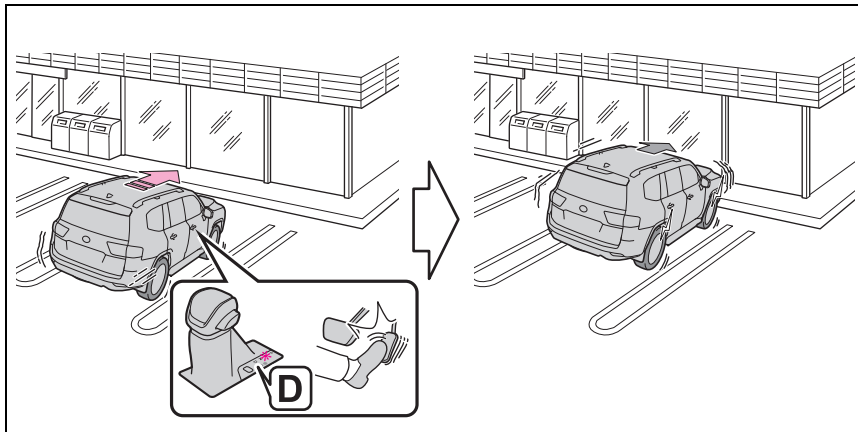

Types of sensors

→P.372

⚠ WARNING

■ To ensure the system can operate properly

→P.373

■ If the Parking Support Brake function (static objects) operates unnecessarily, such as at a railroad crossing

→P.392

■ Notes when washing the vehicle

→P.374

■ **The Parking Support Brake function (static object) will operate when**

The function will operate when the PKSB OFF indicator is not illuminated or flashing (→P.124, 125) and all of the following conditions are met:

- Engine output restriction control
 - The Parking Support Brake is enabled.
 - The vehicle speed is approximately 15 km/h (9 mph) or less.
 - There is a static object in the traveling direction of the vehicle and approximately 2 to 4 m (6 to 13 ft.) away.
 - The Parking Support Brake determines that a stronger-than-normal brake operation is necessary to avoid a collision.
- Brake control
 - Engine output restriction control is operating
 - The Parking Support Brake determines that an immediate brake operation is necessary to avoid a collision.

■ **The Parking Support Brake function (static objects) will stop operating when**

The function will stop operating if any of the following conditions are met:

- Engine output restriction control
 - The Parking Support Brake is disabled.
 - The system determines that the collision has become avoidable with normal brake operation.
 - The static object is no longer approximately 2 to 4 m (6 to 13 ft.) away from the vehicle or in the traveling direction of the vehicle.
- Brake control
 - The Parking Support Brake is disabled.
 - Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
 - The brake pedal is depressed after the vehicle is stopped by brake control.

- The static object is no longer approximately 2 to 4 m (6 to 13 ft.) away from the vehicle or in the traveling direction of the vehicle.

■ **Detection range of the Parking Support Brake function (static objects)**

The detection range of the Parking Support Brake function (static objects) differs from the detection range of the Toyota parking assist-sensor. (→P.377) Therefore, even if the Toyota parking assist-sensor detects an object and provides a warning, the Parking Support Brake function (static objects) may not start operating.

■ **Situations in which the system may not operate properly**

→P.375

■ **Situations in which the system may operate even if there is no possibility of a collision**

→P.376

Parking Support Brake function (rear-crossing vehicles)*


*: If equipped

If a rear radar sensor detects a vehicle approaching from the right or left at the rear of the vehicle and the system determines that the possibility of a collision is high, this function will perform brake control to reduce the likelihood of an impact with the approaching vehicle.

Examples of function operation

This function will operate in situations such as the following if a vehicle is detected in the traveling direction of the vehicle.

- When reversing, a vehicle is approaching and the brake pedal is not depressed, or is depressed late

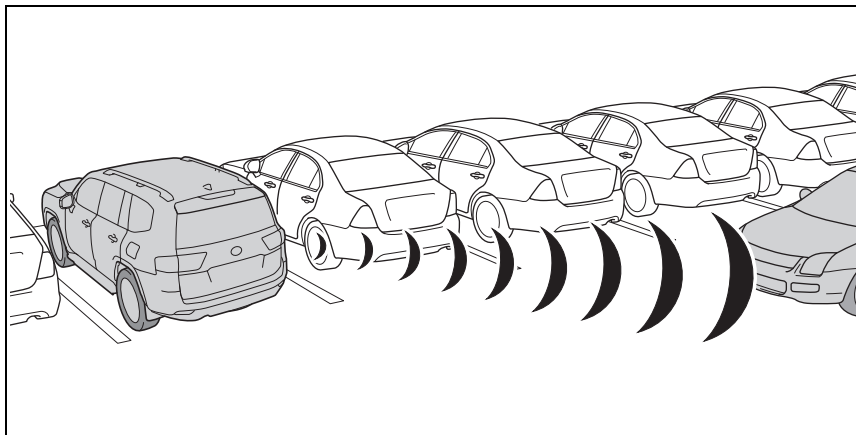

Types of sensors

→P.368



WARNING

- To ensure the system can operate properly

→P.368

■ The Parking Support Brake function (rear-crossing vehicles) will operate when

The function will operate when the PKSB OFF indicator is not illuminated or flashing (→P.124, 125) and all of the following conditions are met:

- Engine output restriction control
- The Parking Support Brake is enabled.
- The vehicle speed is approximately 15 km/h (9 mph) or less.

- Vehicles are approaching from the right or left at the rear of the vehicle at a traveling speed of approximately 8 km/h (5 mph) or more.
- The shift lever is in R.
- The Parking Support Brake determines that a stronger than normal brake operation is necessary to avoid a collision with an approaching vehicle.
- Brake control
- Engine output restriction control is operating
- The Parking Support Brake determines that an emergency brake operation is necessary to avoid a collision with an approaching vehicle.

■ **The Parking Support Brake function (rear-crossing vehicles) will stop operating when**

The function will stop operating if any of the following conditions are met:

- Engine output restriction control
- The Parking Support Brake is disabled.
- The collision becomes avoidable with normal brake operation.
- A vehicle is no longer approaching from the right or left at the rear of the vehicle.
- Brake control
- The Parking Support Brake is disabled.
- Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
- The brake pedal is depressed after the vehicle is stopped by brake control.
- A vehicle is no longer approaching from the right or left at the rear of the vehicle.

■ **Detection area of the Parking Support Brake function (rear-crossing vehicles)**

The detection area of the Parking Support Brake function (rear-crossing vehicles) differs from the detection area of the RCTA function (→P.381). Therefore, even if the RCTA function detects a

vehicle and provides an alert, the Parking Support Brake function (rear-crossing vehicles) may not start operating.

■ **Situations in which the system may not operate properly**

→P.382

■ **Situations in which the system may operate even if there is no possibility of a collision**

→P.383


Parking Support Brake function (rear pedestrians) *

*: If equipped

If the rear camera sensor detects a pedestrian behind the vehicle while backing up and the system determines that the possibility of colliding with the detected pedestrian is high, a buzzer will sound. If the system determines that the possibility of colliding with the detected pedestrian is extremely high, the brakes will be applied automatically to help reduce the impact of the collision.


Examples of system operation

When a pedestrian is detected behind the vehicle while backing up, the brake pedal is not depressed or is depressed late.

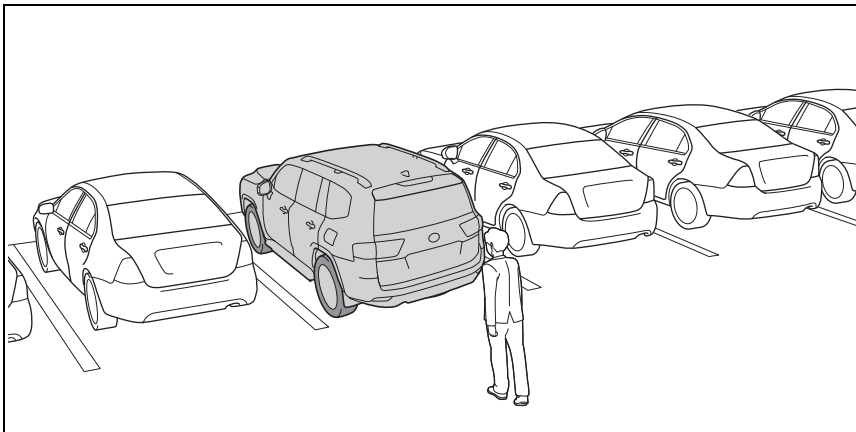

Center Display

Displays a message to urge the driver to take evasive action when a pedestrian is detected in the detection area behind the vehicle. (A message will also be displayed on the multi-information display and head-up display [if equipped].)

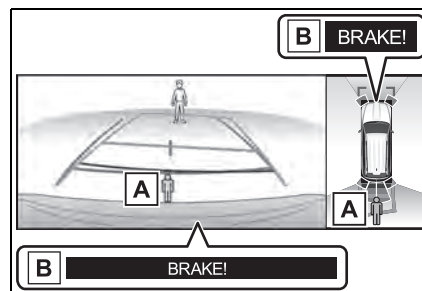

A Pedestrian detection icon

B Brake reminder



WARNING

■ **If the Parking Support Brake function (rear pedestrians) operates unnecessarily**

Depress the brake pedal immediately after the Parking Support Brake function (rear pedestrians) operates. (Operation of the function is canceled by depressing the brake pedal.)

■ **Correct use of the Parking Support Brake function (rear pedestrians)**

→P.384

■ **Parking Support Brake function (rear pedestrians) will operate when**

The function will operate when the PKSB OFF indicator is not illuminated or flashing (→P.124, 125) and all of the following conditions are met:

- Engine output restriction control
- The Parking Support Brake is enabled.
- The vehicle speed is 15 km/h (9 mph) or less.
- The shift position is in R.
- The rear camera sensor detects a pedestrian behind the vehicle while backing up and the system determines that the possibility of colliding with the detected pedestrian is high.
- Brake control
- Engine output restriction control is operating.
- The Parking Support Brake determines that an emergency brake operation is necessary to avoid a collision with a pedestrian.

■ **The Parking Support Brake function (rear pedestrians) will stop operating when**

The function will stop operating if any of the following conditions are met:

- Engine output restriction control
- The Parking Support Brake is disabled.

- The collision becomes avoidable with normal brake operation.
- The pedestrian is no longer detected behind your vehicle.
- Brake control
- The Parking Support Brake is disabled.
- Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
- The brake pedal is depressed after the vehicle is stopped by brake control.
- The pedestrian is no longer detected behind your vehicle.

■ **Re-enabling the Parking Support Brake function (rear pedestrians)**

→P.392

■ **Detection area of the Parking Support Brake function (rear pedestrians)**

The detection area of the Parking Support Brake function (rear pedestrians) differs from the detection area of the RCD function (→P.385). Therefore, even if the RCD function detects a pedestrian and provides an alert, the Parking Support Brake function (rear pedestrians) may not start operating.

■ **Situations in which the system may not operate properly**

→P.387

■ **Situations in which the system may operate unexpectedly**


→P.387

Rear view monitor system*

*: If equipped

The rear view monitor system assists the driver by displaying guide lines and an image of the view behind the vehicle while backing up, for example while parking.

The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

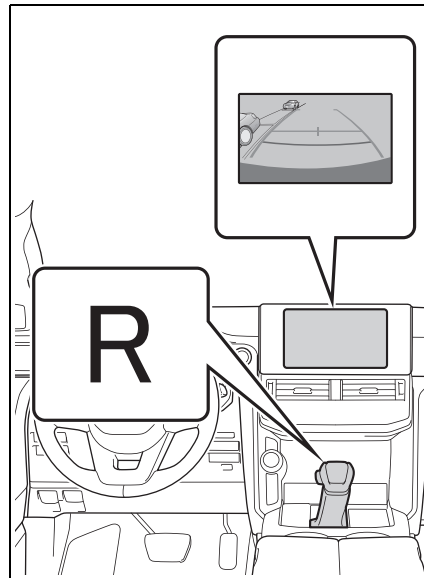

Rear view monitor system operation

The rear view monitor system will activate when the shift lever is in R.


The rear view monitor system will be deactivated when the shift lever is in any position other than R.

When the shift lever is shifted to the R position and any mode button (such as "MENU") is pressed, the rear view monitor system is canceled, and the screen is switched to the mode of the button that was pressed.

Using the rear view monitor system

■ **Screen description**

The rear view monitor system screen will be displayed if the shift lever is shifted to R while the engine switch is in ON.

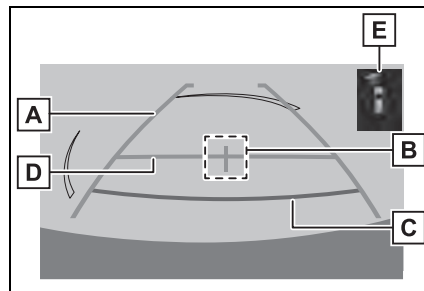

A Vehicle width extension guide line

The line indicates a guide path when the vehicle is being backed straight up. The displayed width is wider than the

actual vehicle width.

B Vehicle center guide line

The line indicates the estimated vehicle center on the ground.

C Distance guide line (red)


The line shows distance behind the vehicle, a point approximately 0.5 m (1.5 ft.) from the edge of the bumper.

D Distance guide line (blue)

The line shows distance behind the vehicle, a point approximately 1 m (3 ft.) from the edge of the bumper.

E Toyota parking assist-sensor display (if equipped)

If an obstacle is detected while the Toyota parking assist-sensor is on, a display is shown at the top right corner of the screen.

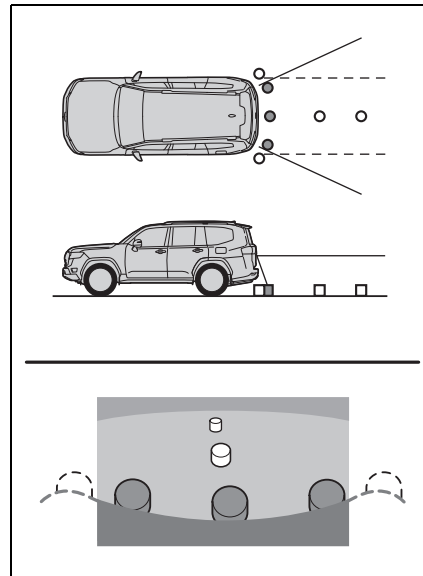

Rear view monitor system precautions

■ Area displayed on screen

The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle.

The image on the rear view monitor system screen can be adjusted, refer to the “Navigation and Multimedia System Owner’s Manual”.


- The area displayed on the screen may vary according to vehicle orientation conditions.
- Objects which are close to either corner of the bumper or under the bumper cannot be displayed.
- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- Items which are located higher than the camera may not be displayed on the monitor.
- If your vehicle is equipped with a backlit license plate, it may interfere with the display.

■ Rear view monitor system camera

● Using the camera

If dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera, it cannot transmit a clear

image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.

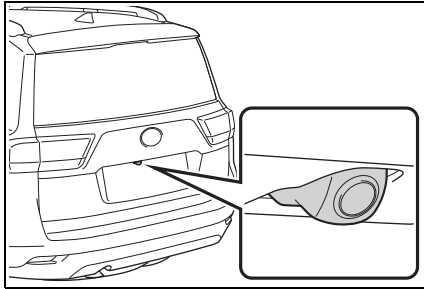

■ **Differences between the screen and the actual road**

The distance guide lines and the vehicle width extension guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.


The distances between the vehicle width extension guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.

The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

● **When the ground behind the vehicle slopes up sharply**


The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they

actually are. In the same way, there will be a margin of error between the guide lines and the actual distance/course on the road.

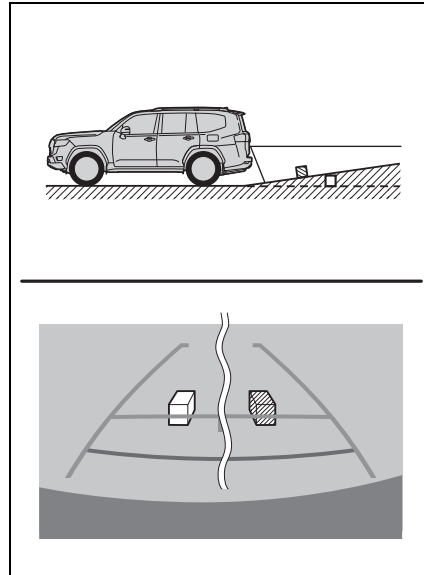


● **When the ground behind the vehicle slopes down sharply**

The distance guide lines will appear to be further from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guide lines and the actual distance/course on the road.

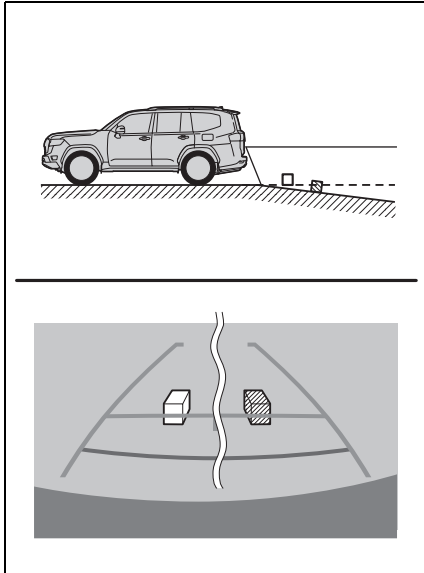

● When any part of the vehicle sags

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

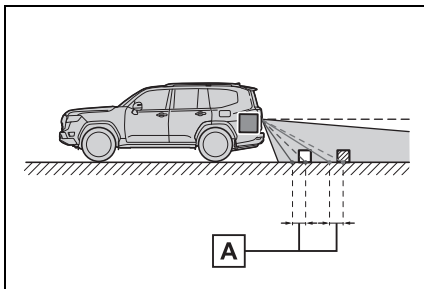

A A margin of error


■ When approaching three-dimensional objects

The distance guide lines are displayed according to flat surfaced

objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the distance guide lines. When approaching a three-dimensional object that extends outward (such as the flat-bed of a truck), be careful of the following.


● Vehicle width extension guide lines

Visually check the surroundings and the area behind the vehicle. In the case shown in the illustration, the truck appears to be outside of the vehicle width extension guide lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the vehicle width extension guide lines. In reality if you back up as guided by the vehicle width extension guide lines, the vehicle may hit the truck.

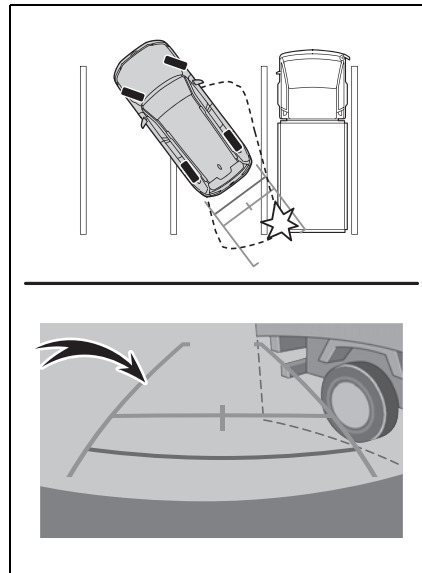

● Distance guide lines

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point **B**. However, in reality if you back up to point **A**, you will hit the truck. On the screen, it appears that **A** is closest and **C** is farthest away. However, in reality, the distance to **A** and **C** is the same, and **B** is farther than **A** and **C**.

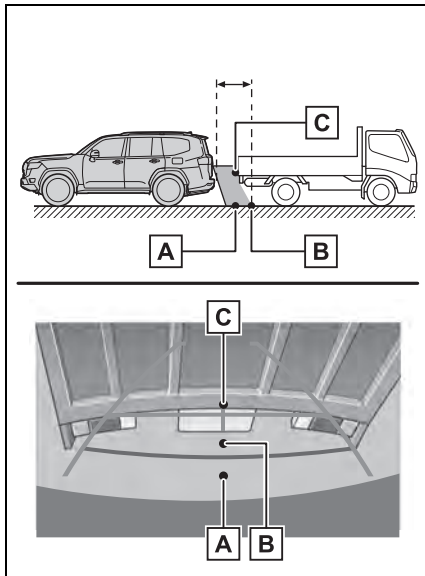

Things you should know

■ **If you notice any symptoms**

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Toyota dealer.

● The image is difficult to see

Likely cause	Solution
<ul style="list-style-type: none"> • The vehicle is in a dark area • The temperature around the lens is either high or low • The outside temperature is low • There are water droplets on the camera • It is raining or humid • Foreign matter (mud etc.) is adhering to the camera • There are scratches on the camera • Sunlight or headlights are shining directly into the camera • The vehicle is under fluorescent lights, sodium lights, mercury lights etc. 	<p>If this happens due to these causes, it does not indicate a malfunction.</p> <p>Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>The image on the rear view monitor system screen can be adjusted, refer to the "Navigation and Multimedia System Owner's Manual".</p>

● The image is blurry

Likely cause	Solution
<p>Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.</p>	<p>Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.</p>

- The image is out of alignment

Likely cause	Solution
The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Toyota dealer.

- The fixed guide lines are very far out of alignment

Likely cause	Solution
The camera position is out of alignment.	Have the vehicle inspected by your Toyota dealer.
<ul style="list-style-type: none"> ● The vehicle is tilted (there is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.) ● The vehicle is used on an incline. 	<p>If this happens due to these causes, it does not indicate a malfunction.</p> <p>Back up while visually checking the vehicle's surroundings.</p>

 **WARNING**

■ **When using the rear view monitor system**

The rear view monitor system is a supplemental device intended to assist the driver when backing up. When backing up, be sure to check visually behind and all around the vehicle before proceeding.

Observe the following precautions to avoid an accident that could result in death or serious injuries.

- Never depend on the rear view monitor system entirely when backing up. The image and the position of the guide lines displayed on the screen may differ from the actual state. Use caution, just as you would when backing up any vehicle.

- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.

- The instructions given are only guide lines. When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the rear view monitor system.

- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.

- Do not use the rear view monitor system in the following cases:

- On icy or slick road surfaces, or in snow
- When using tire chains
- When the back door is not closed completely
- On roads that are not flat or straight, such as curves or slopes.

- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to check direct visually and with the mirrors all around the vehicle before proceeding.

- If the tire sizes are changed, the position of the fixed guide lines displayed on the screen may change.

- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P.401)

**WARNING****■ When using the rear view monitor system**

- The position of the guide lines displayed on the screen may change in accordance with the number of passengers, the amount of cargo etc. Be sure to check behind and all around the vehicle direct visually and with mirror before proceeding.
- The vehicle width extension guide lines are wider than the actual width of the vehicle. When backing up, be sure to check behind and all around the vehicle direct visually and with mirror before proceeding.

**NOTICE****■ How to use the camera**

- The rear view monitor system may not operate properly in the following cases, or if the precautions described below are not followed.
 - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
 - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
 - When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
 - Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.

- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
- When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- When the camera is used under fluorescent lights, sodium light or mercury light etc., the lights and the illuminated areas may appear to flicker.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Toyota dealer as soon as possible.

Toyota parking assist monitor*

*: If equipped

The parking assist monitor assists the driver by displaying an image of the view behind the vehicle while backing up, for example while parking.

When the display is changed to the wide rear view mode, a wider lateral view behind the vehicle will be displayed.

- The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

Driving precautions

The parking assist monitor is a supplemental device intended to assist the driver when backing up. When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle, and could possibly cause an accident.

Pay attention to the following precautions when using the parking assist monitor.

WARNING

- Never depend on the parking assist monitor entirely when backing up. The image and the position of the guide lines displayed on the screen may differ from the actual state. Use caution, just as you would when backing up any vehicle.
- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- If you seem likely to hit nearby vehicles, obstacles, people or mount the shoulder, depress the brake pedal to stop the vehicle.
- The instructions given are only guide lines. When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the parking assist system.
- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.
- Do not use the parking assist monitor in the following cases:
 - On icy or slick road surfaces, or in snow
 - When using tire chains or emergency tires
 - When the back door is not closed completely
 - On roads that are not flat or straight, such as curves or slopes
 - If the suspension has been modified or tires of a size other than specified are installed

⚠ WARNING

- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- If the tire sizes are changed, the position of the guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P.416)


Screen display

The parking assist monitor screen will be displayed if the shift lever is shifted to the R while the engine switch is in ON.

Each time the display mode switching button is selected, the mode will change as follows:

▶ **Rear view**

Displays the rear view of the vehicle.

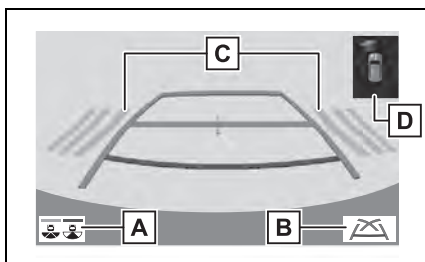

A Display mode switching button
Each time the button is selected, the

rear view mode and the wide rear view mode are switched.

B Guide line switching button

Select to switch the guide line mode. (→P.410)

- Each time the button is selected, the display mode changes in the following order:

Estimated course line display mode → Parking assist guide line display mode → Distance guide line display mode.

C Rear Cross Traffic Alert*

When a sensor detects an obstacle, the direction of obstacle is displayed and the buzzer sounds.


D Toyota parking assist-sensor*

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

*: If equipped

▶ **Wide rear view**

Displays a near 180° image from the rear view camera.

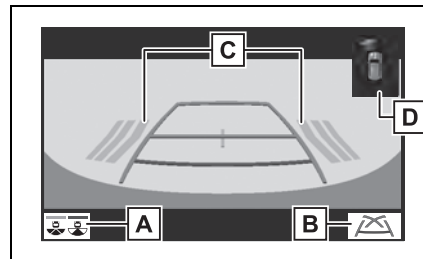

A Display mode switching button

Each time the button is selected, the rear view mode and the wide rear view mode are switched.

B Guide line switching button

Select to switch the guide line mode.

(→P.410)

- Each time the button is selected, the display mode changes in the following order:

Estimated course line display mode →

Parking assist guide line display mode

→ Distance guide line display mode.

C Rear Cross Traffic Alert*

When a sensor detects an obstacle, the direction of obstacle is displayed and the buzzer sounds.

D Toyota parking assist-sensor*

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

*: If equipped

! WARNING


● As the Rear Cross Traffic Alert display is displayed over the camera view, it may be difficult to see the Rear Cross Traffic Alert display depending on the color and brightness of the surrounding area.

Canceling Toyota parking assist monitor

The parking assist monitor is canceled when the shift lever is shifted into any position other than the R.


Using the system

Use any of the following modes.

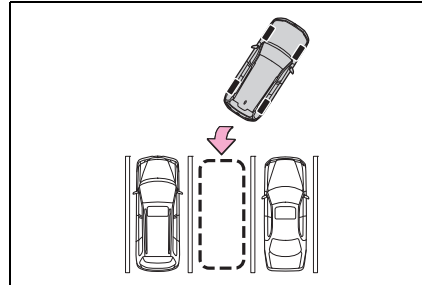

▶ Estimated course line display mode (→P.411)


Estimated course lines are displayed which move in accordance with the operation of the steering wheel.

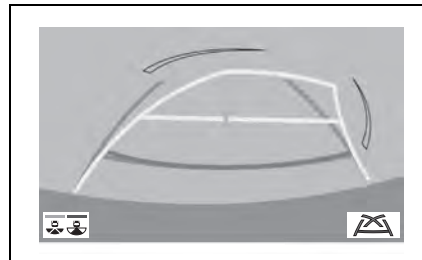

▶ Parking assist guide line display mode (→P.412)

The steering wheel return points (parking assist guide lines) are displayed.


This mode is recommended for those who are comfortable with parking the vehicle without the aid of the estimated course lines.

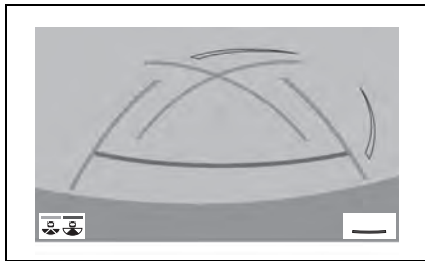

▶ Distance guide line display mode (→P.413)

Distance guide lines only are displayed.


This mode is recommended for those who are comfortable with parking the vehicle without the aid of the guide lines.

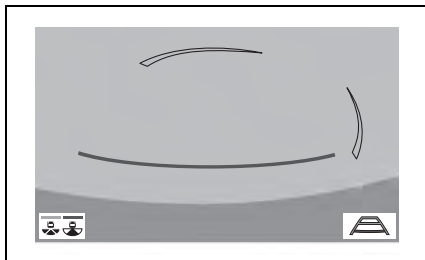

Estimated course line display mode

Screen description

▶ Rear view

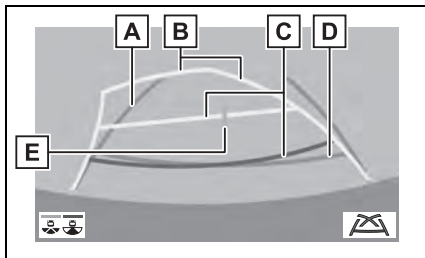

A Vehicle width guide lines

Displays a guide path when the vehicle is being backed straight up.

B Estimated course lines

Show an estimated course when the steering wheel is turned.

C Distance guide lines

Show distance behind the vehicle when the steering wheel is turned.

- The guide lines move in conjunction with the estimated course lines.
- The guide lines display points approximately 0.5 m (1.5 ft.) (red) and approximately 1 m (3 ft.) (yellow) from the center of the edge of the bumper.

D Distance guide line


Shows distance behind the vehicle.

- Displays a point approximately 0.5 m (1.5 ft.) (blue) from the edge of the bumper.

E Vehicle center guide line

Indicates the estimated vehicle center on the ground.

▶ Wide rear view

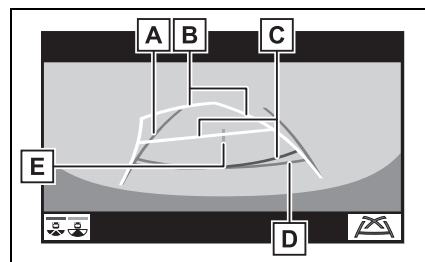

A Vehicle width guide lines

Displays a guide path when the vehicle is being backed straight up.

B Estimated course lines

Show an estimated course when the steering wheel is turned.

C Distance guide lines

Show distance behind the vehicle when the steering wheel is turned.

- The guide lines move in conjunction with the estimated course lines.
- The guide lines display points approximately 0.5 m (1.5 ft.) (red) and approximately 1 m (3 ft.) (yellow) from the center of the edge of the bumper.

D Distance guide line

Shows distance behind the vehicle.

- Displays a point approximately 0.5 m (1.5 ft.) (blue) from the edge of the bumper.

E Vehicle center guide line

Indicates the estimated vehicle center on the ground.




WARNING

- If the steering wheel is straight and the vehicle width guide lines and the estimated course lines are not in alignment, have the vehicle inspected by your Toyota dealer.

Parking assist guide line display mode

Screen description

► Rear view

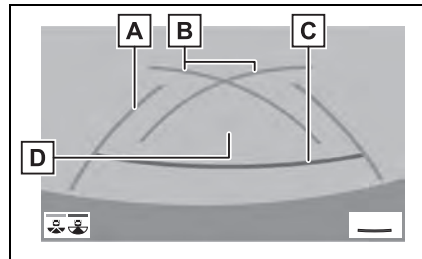

A Vehicle width guide lines

Displays a guide path when the vehicle is being backed straight up.

- The displayed width is wider than the actual vehicle width.

B Parking assist guide lines

Show the path of the smallest turn possible behind the vehicle.

C Distance guide line


Shows distance behind the vehicle.

- Displays points approximately 0.5 m (1.5 ft.) (red) from the edge of the bumper.

D Vehicle center guide line

Indicates the estimated vehicle center on the ground.

► Wide rear view

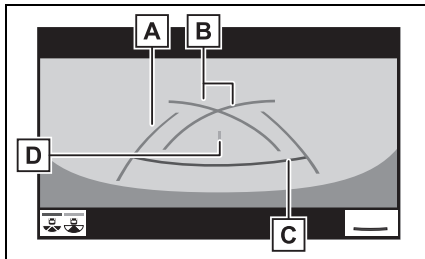


- A** Vehicle width guide lines
Displays a guide path when the vehicle is being backed straight up.
 - The displayed width is wider than the actual vehicle width.
- B** Parking assist guide lines
Shows the path of the smallest turn possible behind the vehicle.
- C** Distance guide line
Shows distance behind the vehicle.
 - Displays points approximately 0.5 m (1.5 ft.) (red) from the edge of the bumper.
- D** Vehicle center guide line
Indicates the estimated vehicle center on the ground.

Distance guide line display mode


Screen description

► Rear view

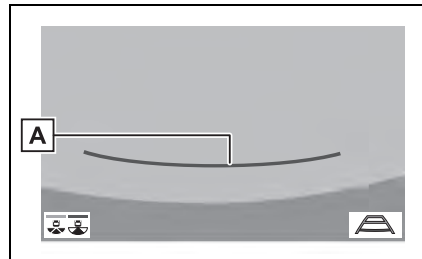

- A** Distance guide line
Shows distance behind the vehicle.
 - Displays points approximately 0.5 m (1.5 ft.) (red) from the edge of the bumper.

► Wide rear view

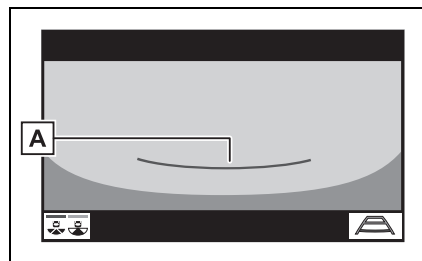

- A** Distance guide line
Shows distance behind the vehicle.


- Displays points approximately 0.5 m (1.5 ft.) (red) from the edge of the bumper.

Toyota parking assist monitor precautions

Area displayed on screen

The parking assist monitor displays an image of the view from the bumper of the rear area of the vehicle.


► Rear view

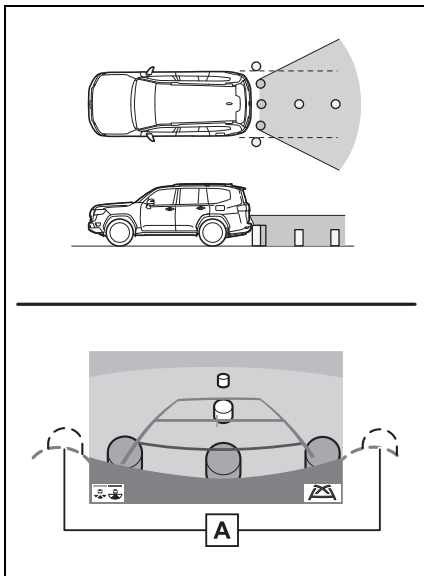

A Corners of bumper

- The area around both corners of the bumper will not be displayed.

► Wide rear view

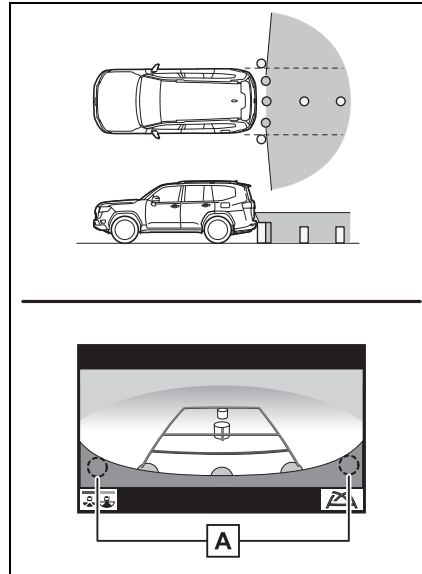

A Corners of bumper

- The area around both corners of the bumper will not be displayed.

● The image adjustment procedure for the parking assist monitor screen is the same as the procedure for adjusting the screen display. Refer to the "Navigation and Multimedia System Owner's Manual".

● The area displayed on the screen may vary according to vehicle orientation conditions.


● Objects which are close to either corner of the bumper or under the bumper cannot be displayed.

● The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.

● Items which are located higher than the camera may not be displayed on the monitor.

The camera

The camera for the parking assist monitor is located as shown in the illustration.

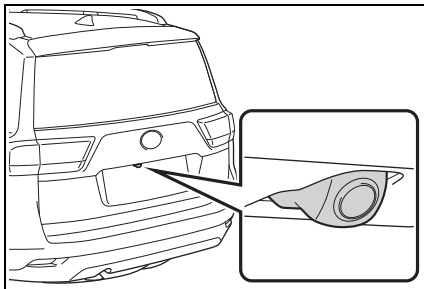

Using the camera

If dirt or foreign matter (such as water droplets, snow, mud, etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.

Dirt on the camera lens can be cleaned by operating the dedicated camera cleaning washer. (→P.292)



NOTICE

- The parking assist monitor may not operate properly in the following cases.
 - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
 - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.

- When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
- Do not allow organic solvent, car wax, window cleaner or a glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.
- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
- When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Toyota dealer as soon as possible.

Cleaning the camera with washer fluid (if equipped)

- When cleaning the camera, it may be difficult to see the image due to the washer fluid. Therefore, take care in the surrounding area while driving.
- If washer fluid remains on the camera lens surface after cleaning, the image may be difficult to see at night due to the height or inclination of the headlights of the vehicle behind. In this case, change to optical mirror mode.
- Some dirt may not be removed completely after cleaning. In this

case, rinse the camera lens with a large quantity of water and then wipe it clean with a soft cloth dampened with water.

- Washer fluid is sprayed onto the camera lens surface. Therefore, the ice, snow, etc. adhering around the camera cannot be removed.


Differences between the screen and the actual road

- The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.
- The distances between the vehicle width guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.
- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

■ **When the ground behind the vehicle slopes up sharply**


The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther

away than they actually are. In the same way, there will be a margin of error between the guide lines and the actual distance/course on the road.

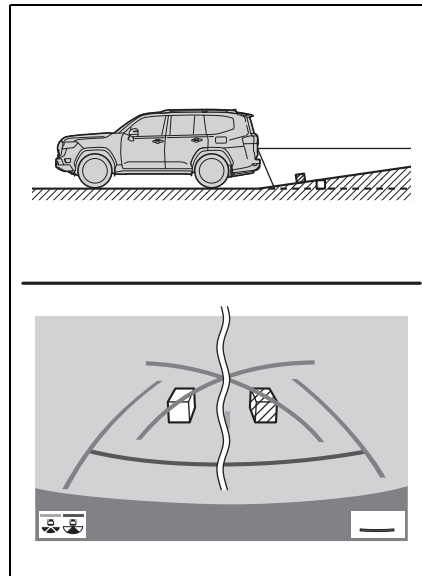


■ **When the ground behind the vehicle slopes down sharply**

The distance guide lines will appear to be farther from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guide lines and the actual distance/course on the road.

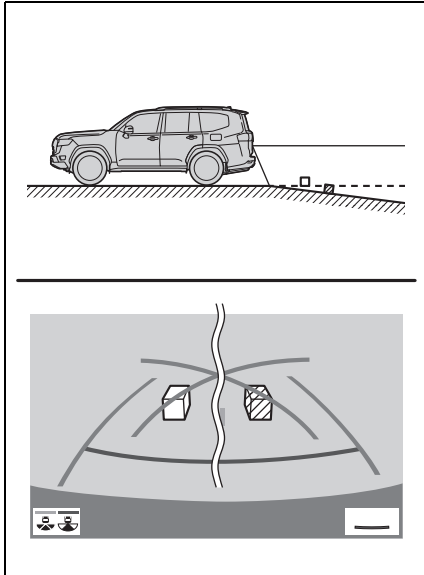

■ **When any part of the vehicle sags**

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

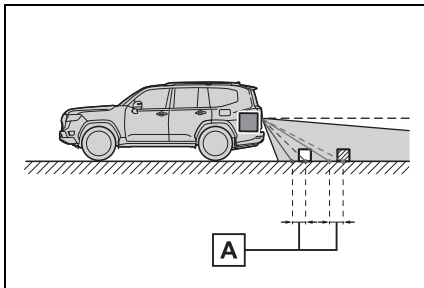

A A margin of error


When approaching three-dimensional objects

The estimated course lines target


flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the estimated course lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flat-bed of a truck), be careful of the following.

■ **Estimated course lines**

Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the estimated course lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the estimated course lines. In reality if you back up as guided by the estimated course lines, the vehicle may hit the truck.

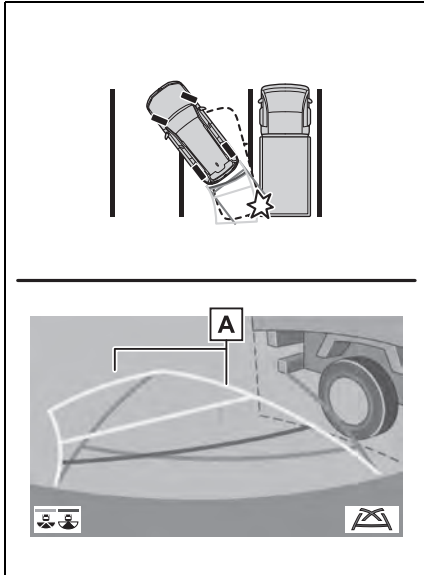

you will hit the truck. On the screen, it appears that **A** is closest and **C** is farthest away. However, in reality, the distance to **A** and **C** is the same, and **B** is farther than **A** and **C**.

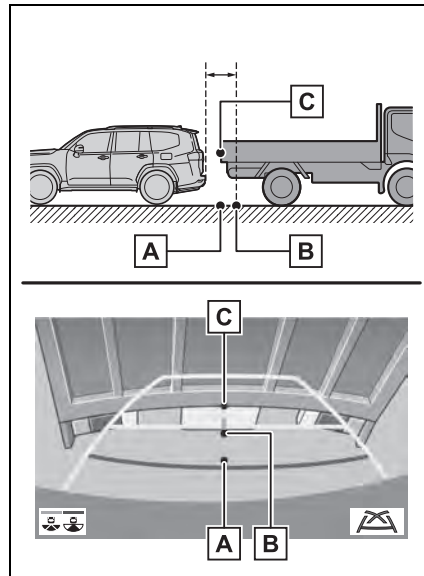

A Estimated course lines

■ **Distance guide lines**

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point **B**. However, in reality if you back up to point **A**,


Things you should know

If you notice any symptoms

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Toyota dealer.

Symptom	Likely cause	Solution
The image is difficult to see	<ul style="list-style-type: none"> • The vehicle is in a dark area • The temperature around the lens is either high or low • The outside temperature is low • There are water droplets on the camera • It is raining or humid • Foreign matter (mud etc.) is adhering to the camera • Sunlight or headlights are shining directly into the camera • The vehicle is under fluorescent lights, sodium lights, mercury lights etc. 	<p>Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>The procedure for adjusting the picture quality of the parking assist monitor is the same as the procedure for adjusting the screen display. Refer to the "Navigation and Multimedia System Owner's Manual".</p>
The image is blurry	Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.	<p>Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.</p> <p>Operate the dedicated camera cleaning washer and clean the camera lens. (→P.292)</p>
The image is out of alignment	The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Toyota dealer.
The guide lines are very far out of alignment	The camera position is out of alignment.	Have the vehicle inspected by your Toyota dealer.
	<ul style="list-style-type: none"> • The vehicle is tilted (there is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.) • The vehicle is used on an incline. 	<p>If this happens due to these causes, it does not indicate a malfunction.</p> <p>Back up while visually checking the vehicle's surroundings.</p>

Symptom	Likely cause	Solution
The estimated course lines move even though the steering wheel is straight	There is a malfunction in the signals being output by the steering sensor.	Have the vehicle inspected by your Toyota dealer.
Guide lines are not displayed	The back door is open.	Close the back door. If this does not resolve the symptom, have the vehicle inspected by your Toyota dealer.
 is displayed	<ul style="list-style-type: none"> • Battery has been reinstalled. • The steering wheel has been moved while the battery was being reinstalled. • Battery power is low. • The steering sensor has been reinstalled. • There is a malfunction in the signals being output by the steering sensor. 	<p>Stop the vehicle, and turn the steering wheel as far as it will go to the left and right.</p> <p>If this does not resolve the symptom, have the vehicle inspected by your Toyota dealer.</p>

Multi-terrain Monitor*

*: If equipped

The Multi-terrain Monitor helps the driver to check the vehicle surroundings. It assists in determining the conditions around the driver in a variety of situations, such as when judging conditions during off-road driving or checking for obstacles when parking.

- The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.



WARNING

■ When using the Multi-terrain Monitor system

Observe the following precautions to avoid an accident that could result in death or serious injuries.


- Never rely solely on the Multi-terrain Monitor. As with unequipped vehicles, drive carefully while directly confirming the safety of your surroundings and the area to the rear of the vehicle. Take particular care to avoid parked cars and other obstacles.
- Due to the characteristics of the camera lens, the actual position and distance of people and other obstacles will differ from those shown on the Multi-terrain Monitor screen. Directly confirm the safety of your surroundings before driving.

- Never drive while looking only at the screen as the image on the screen is different from actual conditions. If you are driving while looking only at the screen, you may hit a person or an object, resulting in an accident. When driving, be sure to check the vehicle's surroundings with your own eyes and the vehicle's mirrors.
- In low temperatures, the screen may darken or the images may become faint. Images of moving objects in particular may distort or disappear from the screen. Therefore, make sure to drive carefully while directly visually confirming the safety of your surroundings.

Multi-terrain Monitor screens


The following screens can be selected according to driving conditions.

- Screens that can be selected vary depending on conditions such as shift position and vehicle speed. (→P.425)
- Depending on the displayed screen, the display can be switched from normal to full screen display.
- **Screens when the four-wheel drive control switch is in L4 or H4 and Multi-terrain Select (if equipped) is in on.**
 - When checking the area to the front and sides of the vehicle
 - ▶ Front view & dual side views

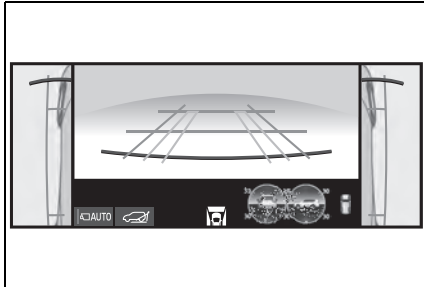


→P.429

▶ Front view (magnified)

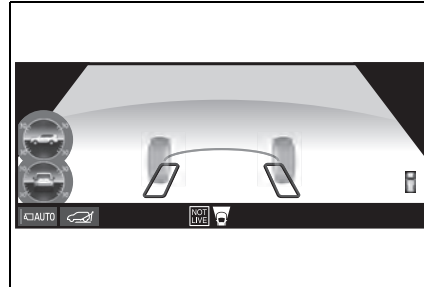

→P.432


▶ Under vehicle terrain view (rear wheel) & dual side views

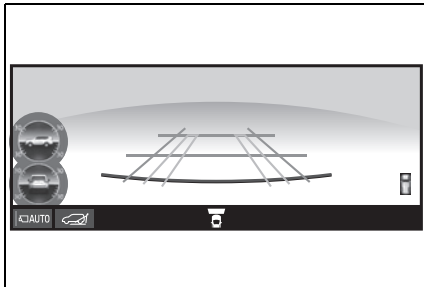

→P.429


● When checking the condition of the road surface under the vehicle

▶ Under vehicle terrain view & dual side views

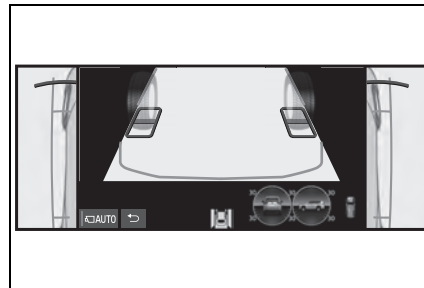


→P.434

▶ Under vehicle terrain view (rear wheel) (magnified)

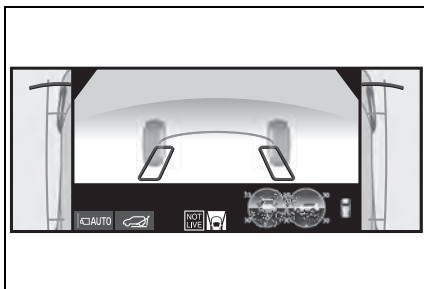

→P.432


▶ Under vehicle terrain view (magnified)

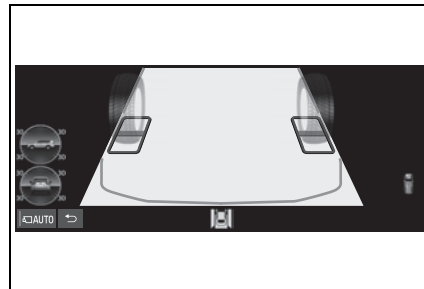


→P.434

● When checking the area to the rear of the vehicle

▶ Rear view & dual side views

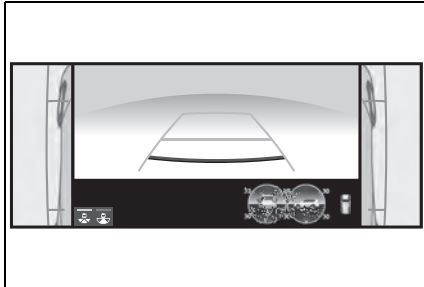


→P.437
 ▶ Wide rear view & dual side views

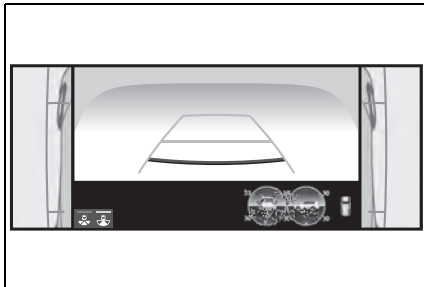


→P.437
 ■ **Screens when the four-wheel drive control switch is in H4 and Multi-terrain Select (if equipped) is in off.**


- When checking the area to the around of the vehicle
- ▶ Moving view

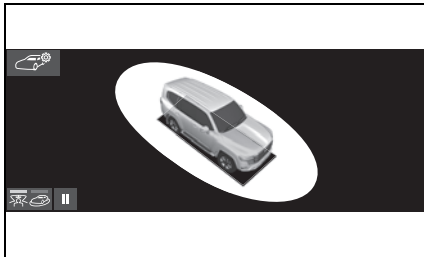


→P.441
 ▶ See-through view

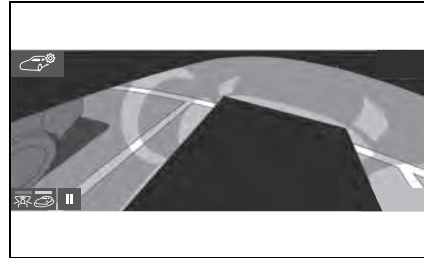


→P.441
 ● When checking the area to the front of the vehicle
 ▶ Wide front view & panoramic view

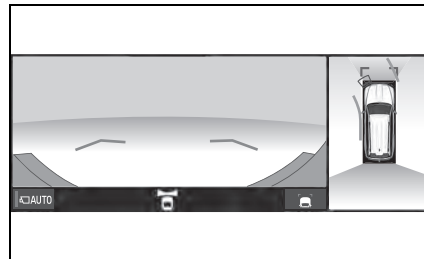

→P.442
 ▶ Side Clearance View & panoramic view

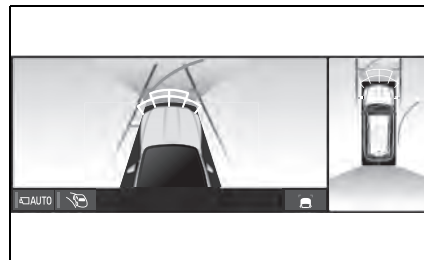


→P.444
 ▶ Cornering View & panoramic view

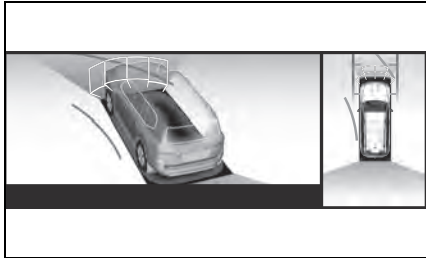


→P.444

- When checking the area to the rear of the vehicle
- ▶ Rear view & panoramic view

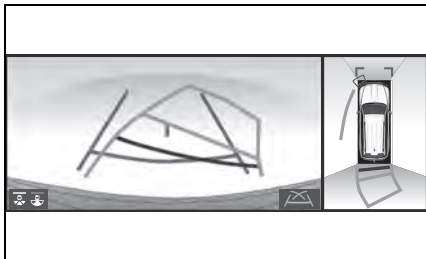


→P.449

- ▶ Wide rear view & panoramic view

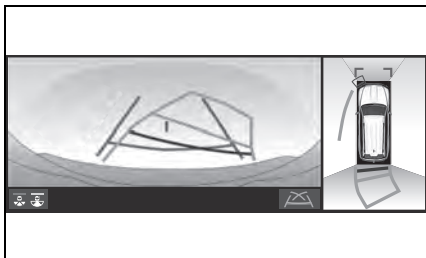


→P.449

- When folding the outside rear view mirrors
- ▶ Wide front view & dual side views

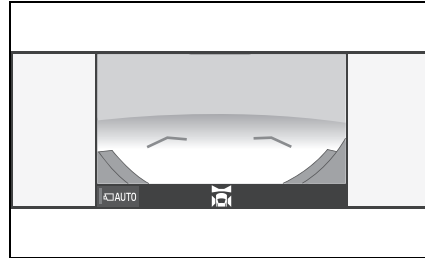


→P.457

- ▶ Rear view & dual side views

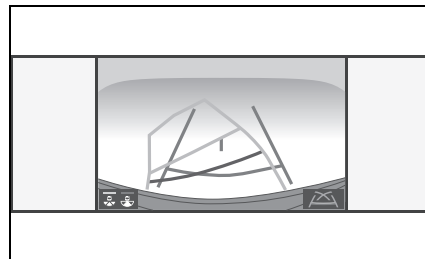

→P.457


- ▶ Wide rear view & dual side views

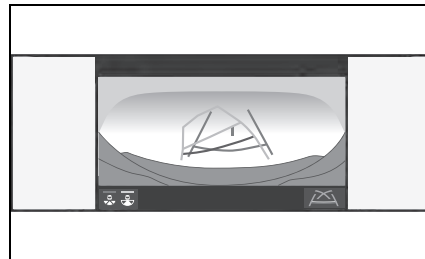

→P.457

VIEW switch

The VIEW switch is located as shown in the illustration.

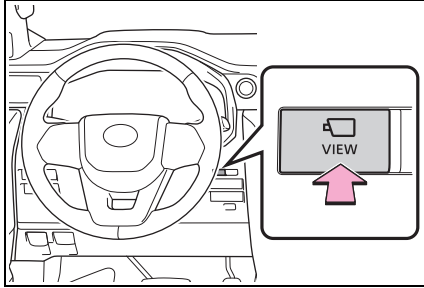


How to switch the screen

When you press the VIEW switch while the engine switch is in ON, the monitor displays operates.

The monitor displays various views of the position of the vehicle. (The following is an example)

Four-wheel drive control switch is in L4 or H4 and Multi-terrain Select (if equipped) is in on


■ When the shift lever is in the P, D or N position

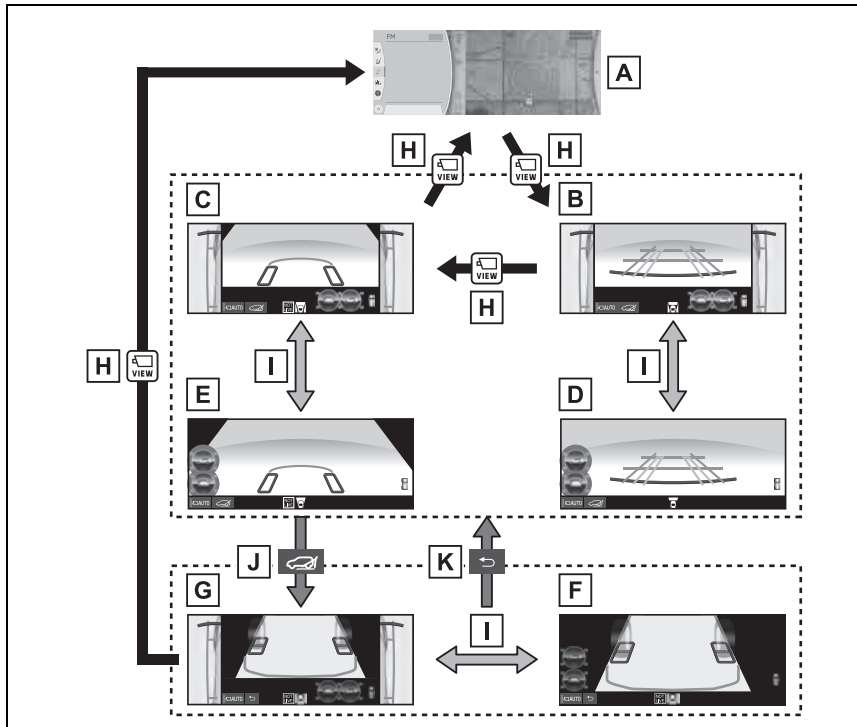

- A** Audio screen, etc.
- B** Front view & dual side views
- C** Under vehicle terrain view & dual side views
- D** Front view (magnified)
- E** Under vehicle terrain view (magnified)
- F** Under vehicle terrain view (rear wheel) (magnified)
- G** Under vehicle terrain view (rear wheel) & dual side views
- H** Press the VIEW switch
- I** Select the Multi-terrain Monitor screen
- J** Select the under vehicle terrain view (rear wheel) switch

K Select the return switch

■ When the shift lever is in the R position

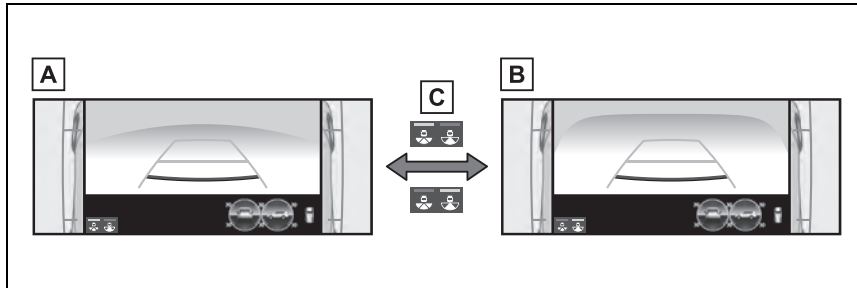


A Rear view & dual side views

B Wide rear view & dual side views

C Select the display mode switch

Four-wheel drive control switch is in H4 and Multi-terrain Select (if equipped) is in off

■ When the shift lever is in the P position

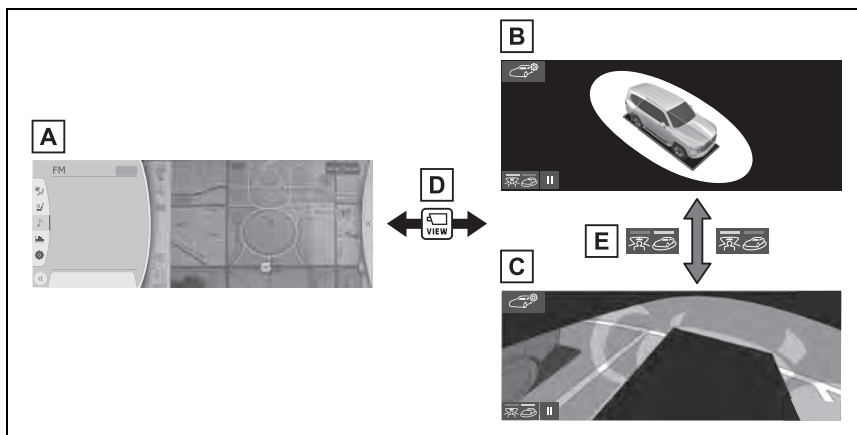

A Audio screen, etc.


B Moving view

C See-through view

D Press the VIEW switch

E Select the display mode switch

■ When the shift lever is in the D or N position

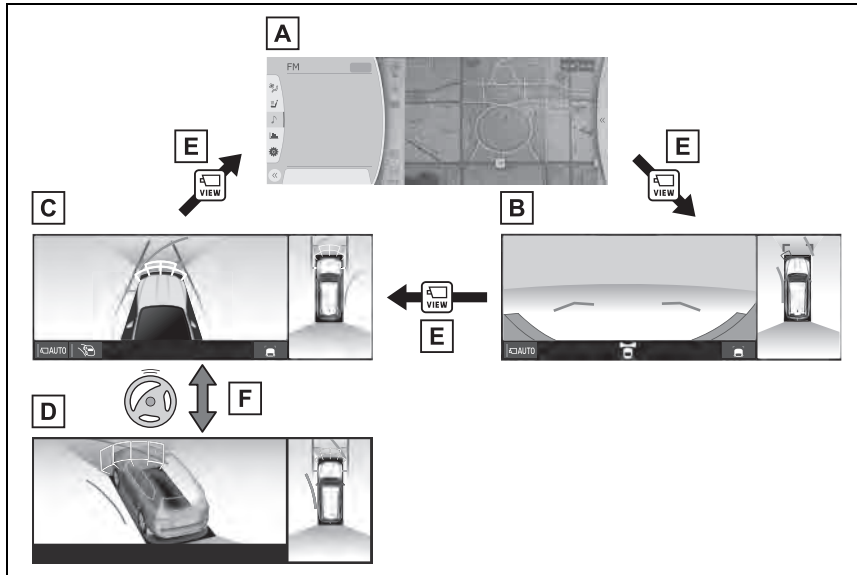

A Audio screen, etc.

B Wide front view & panoramic view


C Side Clearance View & panoramic view

D Cornering View & panoramic view

E Press the VIEW switch

F When the steering wheel is turned by 180° or more from the center (straight-line) position

■ When the shift lever is in the R position

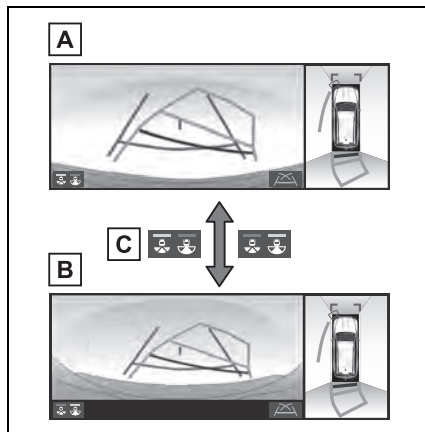

- A** Rear view & panoramic view
- B** Wide rear view & panoramic view
- C** Select the display mode switch

■ Multi-terrain Monitor screen display

The amount of time that the Multi-terrain Monitor screen is displayed changes as follows according to the vehicle speed at the time the VIEW switch was pressed.

The Multi-terrain Monitor screen is displayed if the vehicle speed is approximately 20 km/h (12 mph) or less when the VIEW switch is pressed.

If the vehicle speed exceeds approximately 20 km/h (12 mph), the Multi-terrain Monitor display is canceled.

Screen display and functions

When the four-wheel drive control

- Screen description


switch is in L4 or H4 and Multi-terrain Select is on, the various screens display information to support several different driving situations, such as when checking for obstacles when moving forward or in reverse, or when judging road surface conditions during off-road driving.

Front view & dual side views

Front view & dual side views can be used to check the area around the front of the vehicle.

To display the screen, press the VIEW switch when the shift lever is in the P, D or N position.

- In addition to an image of the front of the vehicle, guide lines are displayed in a composite view to provide reference for when deciding a direction to move forward in.
- If the front view display is selected while the screen is displayed, the screen switches from normal to magnified display. (Selecting the display again returns the screen to the normal display)
- If the steering wheel is turned 270° or more, guide lines and other features to support turning are automatically displayed.

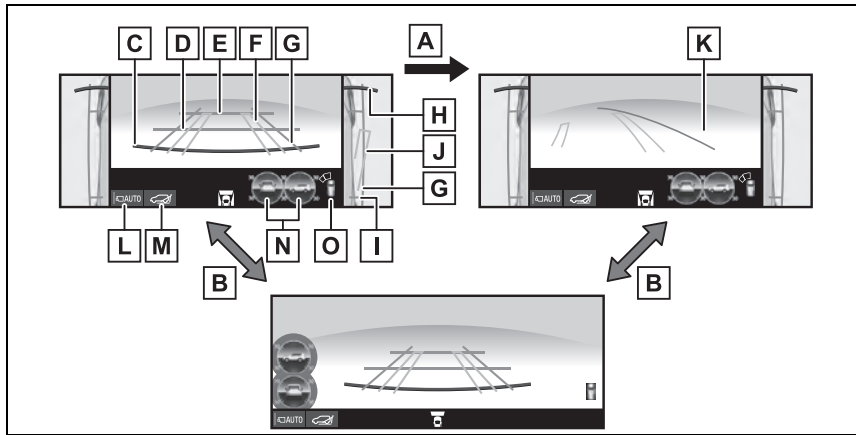

A If the steering wheel is turned 270° or more

B Selecting the display

C 0.5 m (1.5 ft.) distance guide line (red)

D 1 m (3 ft.) distance guide line (blue)

E 2 m (6 ft.) distance guide line (blue)

Items **C** to **E** indicate the estimated distance from the front end of the vehicle.

F Front tire course line (yellow)

Indicates the estimated course of the front tires according to steering wheel position.

G Vehicle width lines (blue)

Indicate the width of the vehicle including the outside rear view mirrors.

H Front tire contact line (blue)

I Rear tire contact line (blue)

Items **H** and **I** indicate estimated tire positions on the image.

J Rear tire course line (yellow)

Indicates the estimated course of the rear tires.

K Forward movement guide line (blue)

Indicates the estimated tire course of the tightest possible turn.

L Automatic display mode selection switch

→P.431

M Under vehicle terrain view (rear wheel) selection switch

Switch the under vehicle terrain view (rear wheel) & dual side views (→P.434)

N Tilt meter


Displays the vehicle's estimated degree of incline. (→P.431)

O Toyota parking assist-sensor/slip display

Displayed if an obstacle is detected while the Toyota parking assist-sensor is turned on.

■ Tilt meter

Tilt meter displays the vehicle inclination to the front, rear, left and right within a range of 0° to approximately 40°.

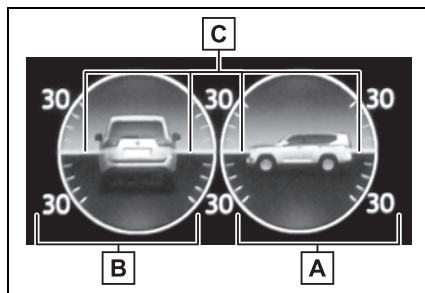**A** Degree markers of incline to the front and rear

Indicates the vehicle inclination in degrees in the front and rear directions.

B Degree markers of incline to the left and right

Indicates the vehicle inclination in degrees in the left and right directions.

C Pointer

Indicates the degree of the vehicle inclination in comparison to a parallel line.

Automatic display mode

In addition to screen switching by operating the VIEW switch, auto-

matic display mode is available. In this mode, the screen is switched automatically in response to vehicle speed.

In automatic display mode, the monitor will automatically display images in the following situations:

- When the shift lever is shifted to N or D position.
- When vehicle speed is reduced to approximately 10 km/h (6 mph) or less.

■ Front view & dual side views display

The screen can be displayed when the shift lever is in P, D or N.

■ Front view rotating display function

- The vehicle inclination displayed on the screen may differ from the actual state.
- When the rotated screen is displayed, the corners of the front bumper may not be seen on the screen.

■ Tilt meter display

- The display indicates the incline of the vehicle in degrees shown by the movement of the pointer and the rotation of the vehicle image.
- The color of the degree markers of incline to the front, rear, left and right changes according to the current incline of the vehicle.


- After the engine switch is turned to ON, the degree of incline is not displayed until such information is determined.
- The degree of incline showed on the tilt meter is only an approximate indication, and may differ from the degree of incline measured using other equipment.

Under vehicle terrain view & dual side views

Lines indicating current vehicle and tire position are displayed in a composite view on an image taken behind the current vehicle position and assists the driver to check conditions underneath the vehicle or determine the position of the front tires.

To display the screen, press the VIEW switch when the shift lever is in the P, D or N position.

- If the under vehicle terrain view display is selected while the screen is displayed, the screen switches from normal to magnified display. (Selecting the display again returns the screen to the normal display)
- The NOT LIVE icon and target area lines blink for a certain amount of time right after the under vehicle terrain view was displayed.

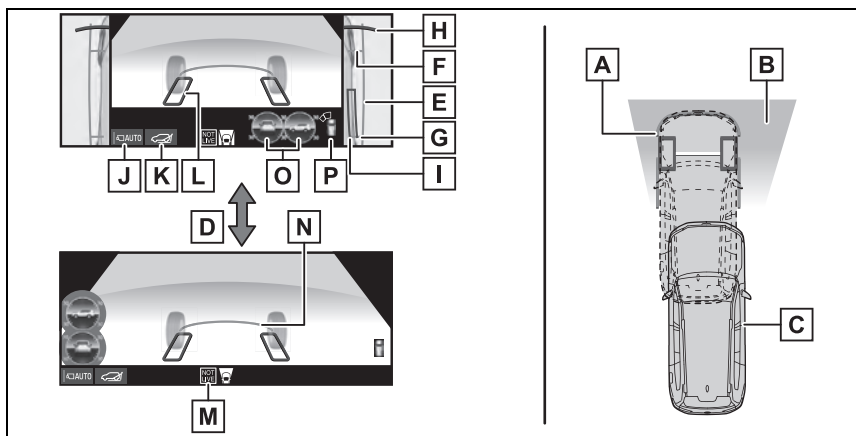

- A** Current vehicle position
- B** Image displayed in the under vehicle terrain view (image taken behind the current vehicle position)
- C** Vehicle position at the time the image was taken (behind the current vehicle position)
- D** Selecting the display

E Vehicle width lines (blue)

Indicate the width of the vehicle including the outside rear view mirrors.

F Front tire contact line (blue)**G** Rear tire contact line (blue)

Items **F** and **G** indicate estimated tire positions on the image.

H 0.5 m (1.5 ft.) distance guide line (red, black)

Indicate the estimated distance from the front end of the vehicle.

I Rear tire course line (yellow)

Indicates the estimated course of the rear tires.

J Automatic display mode selection switch

→P.433

K Under vehicle terrain view (rear wheel) selection switch

Switch the under vehicle terrain view (rear wheel) & dual side views (→P.434)

L Tire position indicator lines (black, white)

Indicates the estimated position of the front tires.

M NOT LIVE icon

Indicates that the under vehicle terrain view display is of an image taken in the past. After simultaneously blinking for a certain amount of time with the lines that indicate the area using an image taken in the past, the icon remains illuminated. (The blinking of the lines stops.)

N Vehicle position indicator lines (blue)

Indicates the estimated position of the vehicle.

O Tilt meter

Displays the vehicle's estimated degree of incline. (→P.431)

P Toyota parking assist-sensor/slip display

Displayed if an obstacle is detected while the Toyota parking assist-sensor is turned on.

Automatic display mode

In addition to screen switching by operating the VIEW switch, automatic display mode is available. In this mode, the screen is switched

automatically in response to vehicle speed.

In automatic display mode, the monitor will automatically display images in the following situations:

- When the shift lever is shifted to N or D position.
- When vehicle speed is reduced to approximately 10 km/h (6 mph) or less.

■ Under vehicle terrain view & dual side views

- The screen can be displayed when the shift lever is in P, D or N.
- While the under vehicle terrain view is displayed, if the vehicle speed reaches or exceeds approximately 20 km/h (12 mph), under vehicle terrain view is black screen displayed.
- In the following situations, under vehicle terrain view is black screen displayed.
 - After the engine starts or the system returns to normal, a fixed distance or more has not yet been driven
 - When the tires are slipping or spinning
 - ABS is activated
 - When there is a malfunction in the system
- If the outside rear view mirrors are folded while the under vehicle terrain view is being displayed, a separate screen is displayed.
- In the following situations, the system may not operate normally.
 - The road is covered with snow
 - When there are shadows due to light sources such as sunlight or illumination
 - When driving on slippery roads or tires are spinning
 - Dirt or foreign matter is adhering to the camera lens

- There is water in front of the vehicle (a river, puddle, sea water, etc.)
- Optional equipment has been installed
- When the camera is covered or there is an object in the image capture range
- Tires have been replaced
- When the back door is open
- When the steering wheel is operated at or more than a specified steering angle
- On roads that are not flat, such as slopes

⚠ WARNING

■ Guide lines

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, whether tires or suspension parts other than those specified are equipped, etc. Always drive the vehicle while confirming the safety of your surroundings.


■ Under vehicle terrain view display

The image displayed is one that was previously taken at a point behind the current vehicle position. In cases such as when objects move after the image is taken, the image displayed on the screen may differ from the actual state. In addition, when driving in the dark such as at night, there are cases when obstacles cannot be confirmed from the image.

Under vehicle terrain view (rear wheel) & dual side views

Lines indicating current vehicle and tire position are displayed in a composite view on an image taken behind the current vehicle position and assists the driver to check conditions underneath the vehicle or determine the position of the rear tires.

To display the screen, press the VIEW switch when the shift lever is in the P, D or N position, select the under vehicle terrain view (rear wheel) selection switch.

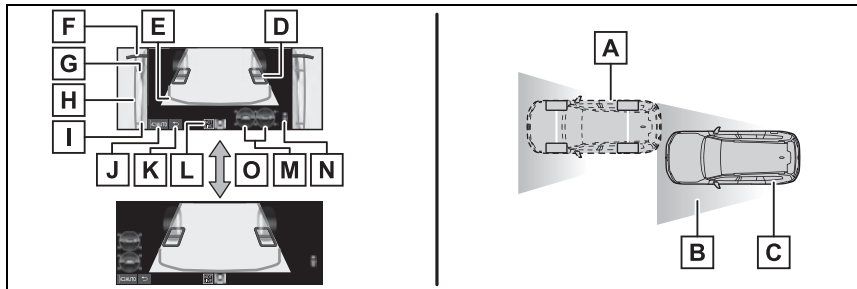

- A** Current vehicle position
- B** Image displayed in the under vehicle terrain view (rear wheel) (image taken behind the current vehicle position)
- C** Vehicle position at the time the image was taken (behind the current vehicle position)
- D** Tire position indicator lines (black, white)
Indicates the estimated position of the rear tires.
- E** Vehicle position indicator lines (blue)
Indicates the estimated position of the vehicle.
- F** 0.5 m (1.5 ft.) distance guide line (red, black)
Indicate the estimated distance from the front end of the vehicle.
- G** Front tire contact line (blue)
Indicate estimated tire positions on the image.
- H** Vehicle width lines (blue)
Indicate the width of the vehicle including the outside rear view mirrors.
- I** Rear tire contact line (blue)
Indicate estimated tire positions on the image.
- J** Automatic display mode selection switch
→P.436
- K** Return switch
Return to the previous screen
- L** NOT LIVE icon

Indicates that the under vehicle terrain view display is of an image taken in the past. After simultaneously blinking for a certain amount of time with the lines that indicate the area using an image taken in the past, the icon remains illuminated. (The blinking of the lines stops.)

M Tilt meter

Displays the vehicle's estimated degree of incline. (→P.431)

N Toyota parking assist-sensor/slip display

Displayed if an obstacle is detected while the Toyota parking assist-sensor is turned on.

O Selecting the display

Automatic display mode

In addition to screen switching by operating the VIEW switch, automatic display mode is available. In this mode, the screen is switched automatically in response to vehicle speed. In automatic display mode, the monitor will automatically display images in the following situations:

- When the shift lever is shifted to N or D position.
- When vehicle speed is reduced to approximately 10 km/h (6 mph) or less.

Under vehicle terrain view (rear wheel)

- The screen can be displayed when the shift lever is in P, D or N.
- While the under vehicle terrain view (rear wheel) is displayed, if the vehicle speed reaches or exceeds approximately 5 km/h (3 mph), the screen automatically returns to the previous display.
- In the following situations, the display of the under vehicle terrain view (rear

- wheel) ends and the screen automatically returns to the most recently used camera screen. In addition, the under vehicle terrain view (rear wheel) selection switch cannot be operated until the next screen can be displayed.
- After the engine starts or the system returns to normal, a fixed distance or more has not yet been driven
- When the tires are slipping or spinning
- ABS is activated
- When there is a malfunction in the system
- When the steering wheel is operated at or more than a specified steering angle
- If the outside rear view mirrors are folded while the under vehicle terrain view (rear wheel) is being displayed, a separate screen is displayed.
- In the following situations, the system may not operate normally or may not be able to switch to the under vehicle terrain view (rear wheel). In addition, the under vehicle terrain view (rear wheel) selection switch cannot be operated until the next screen can be displayed.
- The road is covered with snow
- When there are shadows due to light sources such as sunlight or illumination
- When driving on slippery roads or tires are spinning
- Dirt or foreign matter is adhering to the camera lens

- There is water in front of the vehicle (a river, puddle, sea water, etc.)
- Optional equipment has been installed
- When the camera is covered or there is an object in the image capture range
- Tires have been replaced
- When the back door is open
- When the steering wheel is operated at or more than a specified steering angle
- On roads that are not flat, such as slopes

**WARNING**

■ **Guide lines**

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, whether tires or suspension parts other than those specified are equipped, etc. Always drive the vehicle while confirming the safety of your surroundings.

■ **Under vehicle terrain view (rear wheel) display**


The image displayed is one that was previously taken at a point behind the current vehicle position. In cases such as when objects move after the image is taken, the image displayed on the screen may differ from the actual state. In addition, when driving in the dark such as at night, there are cases when obstacles cannot be confirmed from the image.

Rear view & dual side views/wide rear view & dual side views

The rear view & dual side views and the wide rear view & dual side views screen provide support when checking the areas of behind the vehicle and around the vehicle while backing up, for example while parking.

The screens will be displayed when the shift lever is in the R position.

Screen display

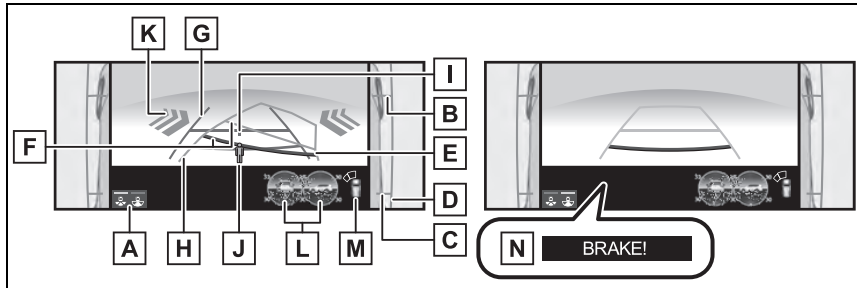

A Display mode switching button

Each time the display mode switching button is selected, the mode will change between the rear view & dual side views mode and the wide rear view & dual side views mode.

B Front tire contact line (blue)

C Rear tire contact line (blue)

Items **B** and **C** indicate estimated tire positions on the image.

D Vehicle width extension guide line (blue)

Indicates the estimated vehicle width including the outside rear view mirrors.

E Projected course lines (yellow)

Indicate the estimated course of the vehicle according to steering operations.

F Distance guide line

Shows the distance behind the vehicle when the steering wheel is turned.

- The guide lines move in conjunction with the estimated course lines.
- The guide lines display points approximately 0.5 m (1.5 ft.) (red) and approximately 1 m (3 ft.) (yellow) from the center of the edge of the bumper.

G Vehicle width guide lines

Displays a guide path when the vehicle is being backed straight up.

H Distance guide line (blue)

Shows the distance behind the vehicle.

- Displays a point approximately 0.5m (1.5 ft.) from the edge of the bumper.

I Vehicle center guide line (blue)

Indicates the estimated vehicle center on the ground.

J Rear Camera Detection

Displayed automatically when a pedestrian is detected.

K Rear Cross Traffic Alert

When a sensor detects an obstacle, the direction of obstacle is displayed and the buzzer sounds.

L Tilt meter

Displays the vehicle's estimated degree of incline. (→P.431)

M Toyota parking assist-sensor/slip display

Displayed if an obstacle is detected while the Toyota parking assist-sensor is turned on.

N Parking Support Brake*

When the system determines that the possibility of a collision with detected target objects is high, a warning message is displayed.

*: If equipped

■ **Rear view & dual side views/wide rear view & dual side views**

- The monitor is canceled when the shift lever is shifted into any position other than the "R" position.
- For details about the Toyota parking assist-sensor (→P.372), Rear Cross Traffic Alert function (→P.379) and Parking Support Brake function. (→P.388)
- The display position of the Toyota parking assist-sensor and the position of obstacles displayed in the camera image do not match.

■ **Guide lines**

If the back door is not closed, guide lines will not be displayed. If the guide lines do not display even when the back door is closed, have the vehicle inspected at your Toyota dealer.



WARNING

■ **Toyota parking assist-sensor display**

When a sensor indicator on the Toyota parking assist-sensor display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.


■ **Rear view & dual side views/wide rear view & dual side views display**

As the Toyota parking assist-sensor display and Rear Cross Traffic Alert display are displayed over the camera view, it may be difficult to see the Toyota parking assist-sensor display and Rear Cross Traffic Alert display depending on the color and brightness of the surrounding area.

Parking

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the R position.
- 2 Turn the steering wheel so that the estimated course lines are within the parking space, and back up slowly.

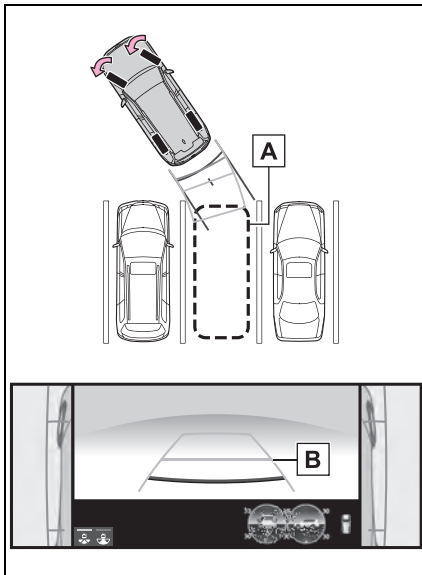


A Parking space

B Estimated course lines

- 3 When the rear position of the vehicle has entered the parking space, turn the steering wheel so that the vehicle width guide lines are within the left and right

dividing lines of the parking space.

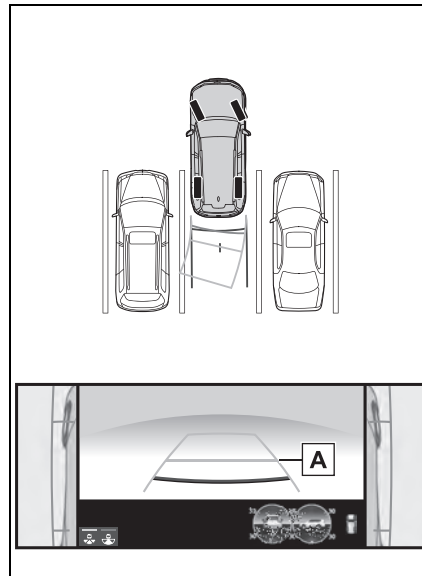

A Vehicle width guide line

- 4 Once the vehicle width guide lines and the parking space lines are parallel, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

Screen display and functions

When the four-wheel drive control switch is in H4 and Multi-terrain Select is off, the various screens display information to support several different driving situations,

such as when checking for obstacles when moving forward


Checking around the vehicle

The moving view screen and the see-through view screen provide support when checking the areas of around the vehicle while parking. These screens display an image of the vicinity of the vehicle combined from the 4 cameras. The screen will display a 360° view around the vehicle from either inside the vehicle or from a birds-eye view at an angle.

To display the moving view/see-through view screen, press the VIEW switch when the shift lever is in the “P” position and the Toyota parking assist-sensor is enabled.

Screen display


► Moving view

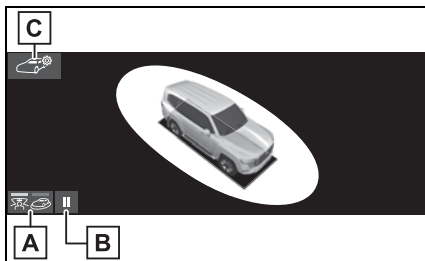

A Display mode switching button
Select to change the display mode between the moving view and the see-through view.

B Rotation pause switch
Select to pause the rotation of the


screen.

To resume rotation, select .

C Body color setting switch


Select to display the body color setting screen and change the color of the vehicle displayed on the panoramic view monitor. (→P.442)

► See-through view

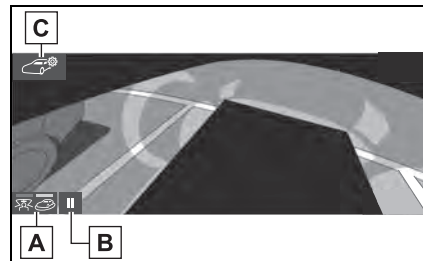

A Display mode switching button
Select to change the display mode between the moving view and the see-through view.


B Rotation pause switch
Select to pause the rotation of the screen.

To resume rotation, select .


C Body color setting switch
Select to display the body color setting screen and change the color of the vehicle displayed on the panoramic view monitor. (→P.442)

- Pressing the VIEW switch again changes the screen back to the previously displayed screen, such as the navigation screen.

Changing the body color displayed in the panoramic view monitor

- 1 Display the moving view/see-through view screen. (→P.441)
- 2 Select .

3 Select the desired color.

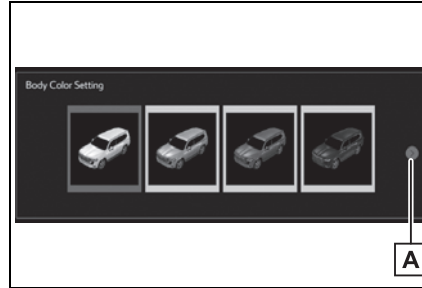

A Displays the next page


Checking the front and around the vehicle

The wide front view & panoramic view screen provides support when checking the areas in front of the vehicle and around the vehicle when taking-off at T-intersections or other intersections during poor visibility.

To display the screen, press the VIEW switch when the shift lever is in the N or D position with the vehicle moving approximately 20 km/h (13 mph) or less.

This screen will be displayed if the Toyota parking assist-sensor detects an object in front of your vehicle (Toyota parking assist-sensor linked display).

Screen display

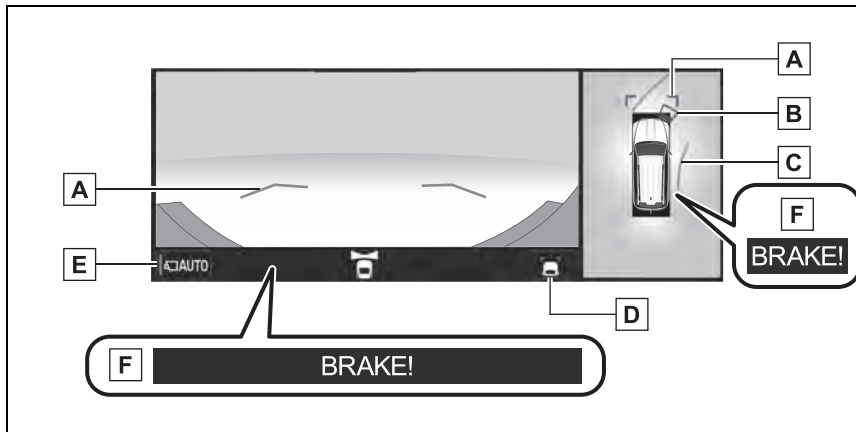

A Distance guide lines

Shows distance in front of the vehicle.

- Display points approximately 1 m (3 ft.) from the edge of the bumper.

B Toyota parking assist-sensor

When a sensor detects a stationary object, the direction of and the approximate distance to the stationary object are displayed and the buzzer sounds.

C Estimated course lines

Shows an estimated course when the steering wheel is turned.

- This line will be displayed when the steering wheel is turned by 90° or more from the center (straight-line) position.

D Guide line switching button

Select to change the guide line mode between the distance guide line mode and the estimated course line mode. (→P.444)

E Automatic display button

Select to turn automatic display mode on/off. The indicator on the button illuminates during automatic display mode. (→P.444)

F Parking Support Brake*

When the system determines that the possibility of a collision with detected target objects is high, a warning message is displayed.

*: If equipped

Wide front view & panoramic view display

- Pressing the VIEW switch changes the screen to the Side Clearance View & panoramic view screen or previously displayed screen, such as the navigation screen.
- For details about the Toyota parking assist-sensor (→P.372) and Parking Support Brake function. (→P.388)
- The display position of the Toyota parking assist-sensor and the position of target objects displayed in the camera image do not match.



WARNING


Toyota parking assist-sensor display

- When a sensor indicator on the Toyota parking assist-sensor display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.
- As the Toyota parking assist-sensor display is displayed over the camera view, it may be difficult to see the Toyota parking assist-sensor display depending on the color and brightness of the surrounding area.

Switching the guide line mode


Each time the guide line switching button is selected, the mode will change as follows:

- ▶ Distance guide line

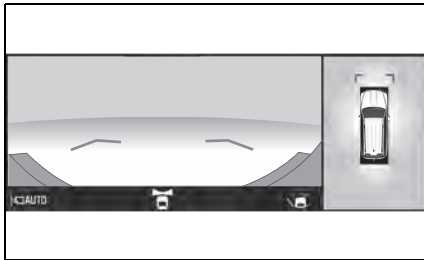

- Only the distance guide lines are displayed.

- ▶ Estimated course line

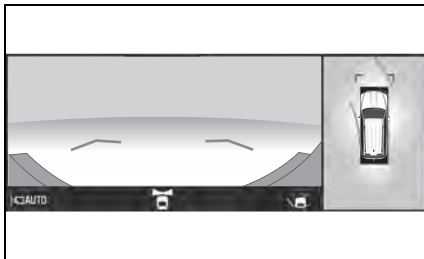

- Estimated course lines will be added to the distance guide lines.

Automatic display mode

In addition to screen switching by operating the VIEW switch, automatic display mode is available. In this mode, the screen is switched automatically in response to vehicle speed.

In automatic display mode, the monitor will automatically display images in the following situations:

- When the shift lever is shifted to N or D position.
- When vehicle speed is reduced to approximately 10 km/h (6 mph) or less.

Checking the sides of the vehicle

The Side Clearance View & panoramic view screen/Cornering View & panoramic view screen provide support to check the areas around the sides of the vehicle when driving on a narrow road.


To display the Side Clearance View & panoramic view screen, press the VIEW switch repeatedly when the shift lever is in the N or D position with the vehicle moving approximately 20 km/h (13 mph) or less.

The Cornering View & panoramic view screen will be displayed when the steering wheel is turned by 180° or more from the center (straight-line) position when automatic display mode of the Cornering View display is enabled. When the turning angle of the steering wheel becomes 90° or less from the center position, the screen will return to the Side Clearance View &

panoramic view screen.

Screen display

► Side Clearance View & panoramic view

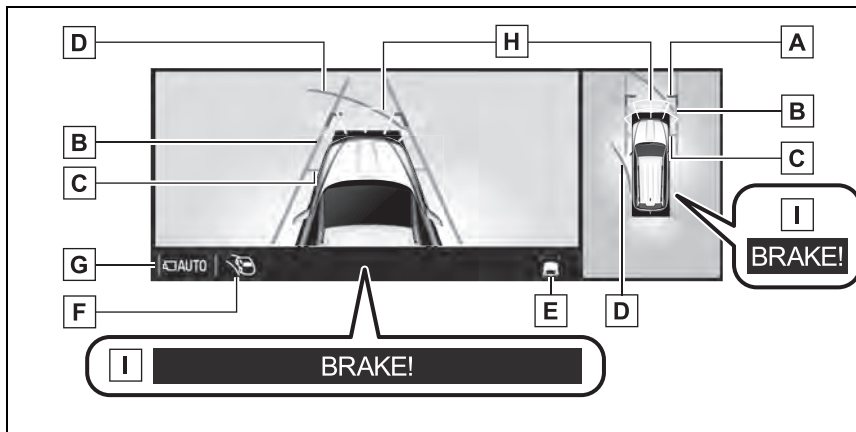

A Distance guide lines

Show distance in front of the vehicle.

- Display points approximately 1 m (3 ft.) from the edge of the bumper.

B Vehicle width guide lines

Shows guide lines of the vehicle's width including the outside rear view mirrors.

C Front tire guide lines

Shows guide lines of where the front tire touches the ground.

D Estimated course lines

Shows an estimated course when the steering wheel is turned.

- This line will be displayed when the steering wheel is turned by 90° or more from the center (straight-line) position.

E Guide line switching button

Select to change the guide line mode between the distance guide line mode and the estimated course line mode. (→P.444)

F Automatic display button of Cornering View

Select to turn automatic display mode of Cornering View on/off. The indicator on the button illuminates during automatic display mode of Cornering View. (→P.447)

G Automatic display button

Select to turn automatic display mode on/off. The indicator on the button illuminates

during automatic display mode. (→P.447)

H Toyota parking assist-sensor


When a sensor detects a stationary object, the direction of and the approximate distance to the stationary object are displayed and the buzzer sounds.

I Parking Support Brake*

When the system determines that the possibility of a collision with detected target objects is high, a warning message is displayed.

*: If equipped

► Cornering View & panoramic view

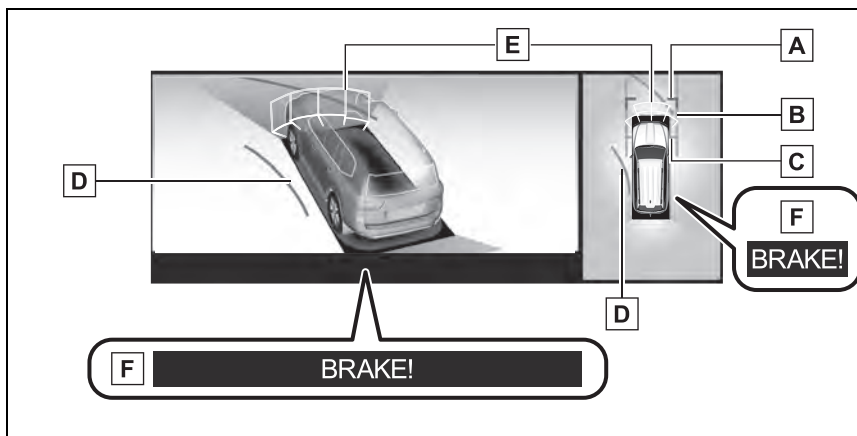

A Distance guide lines

Show distance in front of the vehicle.

- Display points approximately 1 m (3 ft.) from the edge of the bumper.

B Vehicle width guide lines

Shows guide lines of the vehicle's width including the outside rear view mirrors.

C Front tire guide lines

Shows guide lines of where the front tire touches the ground.

D Estimated course lines

Shows an estimated course when the steering wheel is turned.

- This line will be displayed when the steering wheel is turned by 90° or more from the center (straight-line) position.

E Toyota parking assist-sensor

When a sensor detects a stationary object, the direction of and the approximate distance to the stationary object are displayed and the buzzer sounds.

F Parking Support Brake*

When the system determines that the possibility of a collision with detected target objects is high, a warning message is displayed.

*: If equipped

Side Clearance View & panoramic view screen/Cornering View & panoramic view display

- Pressing the VIEW switch changes the screen to the wide front view & panoramic view screen or previously displayed screen, such as the navigation screen.
- For details about the Toyota parking assist-sensor (→P.372) and Parking Support Brake function. (→P.388)
- The display position of the Toyota parking assist-sensor and the position of target objects displayed in the camera image do not match.

**WARNING****Toyota parking assist-sensor display**

- When a sensor indicator on the Toyota parking assist-sensor display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.
- As the Toyota parking assist-sensor display is displayed over the camera view, it may be difficult to see the Toyota parking assist-sensor display depending on the color and brightness of the surrounding area.

Automatic display mode


In addition to screen switching by operating the VIEW switch, automatic display mode is available. In this mode, the screen is switched automatically in response to vehicle speed.

In automatic display mode, the monitor will automatically display images in the following situations:

- When the shift lever is shifted to N or D position.
- When vehicle speed is reduced to approximately 10 km/h (6 mph) or less.

Automatic display mode of Cornering View

When automatic display mode of the Cornering View display is enabled, the screen will change automatically between the Side Clearance View and Cornering View depending on the turning angle of the steering wheel.

Each time  is selected, automatic display mode of the Cornering View display is enabled/disabled.

In automatic display mode of Cornering View, the monitor will auto-


matically display Cornering View images in the following situations:

- When the shift lever is shifted to N or D position.
- When vehicle speed is reduced to approximately 12 km/h (7 mph) or less.
- When the steering wheel is turned by 180° or more from the center (straight-line) position.

Cornering View images will disappear when the turning angle of the steering wheel becomes 90° or less from the center (straight-line) position.


Using the vehicle width guide line

- ▶ Side Clearance View & panoramic view

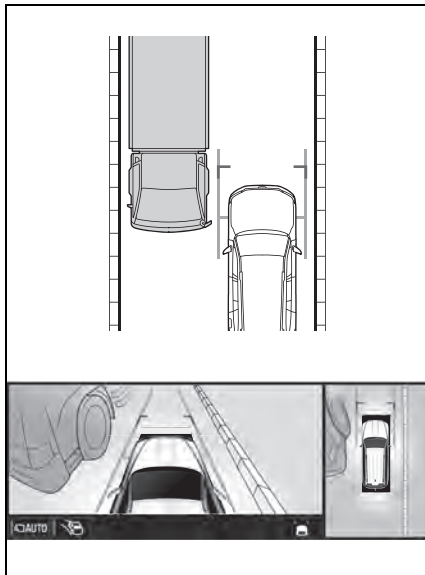

- Check the positions and distance


between the vehicle width guide line and a target object such as the obstacle or curb of the road.

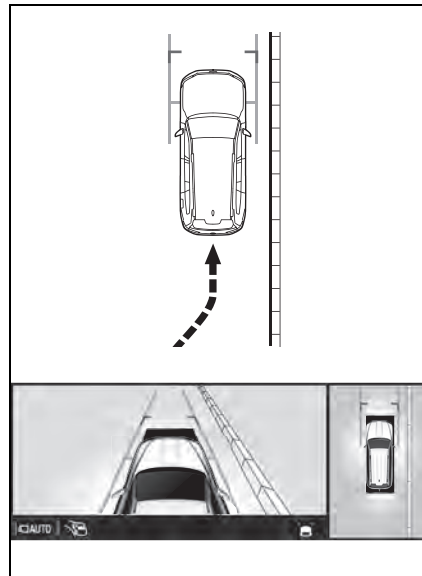

- Pull over to the curb as shown in the illustration above, taking care not to let the vehicle width guide line overlap the target object.
- Ensure that the vehicle width guide line is parallel to the target object.

Using the estimated course line

- ▶ Cornering View & panoramic view

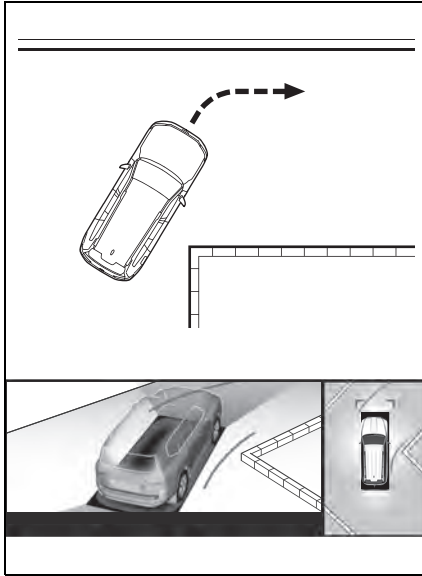

- Check the positions and distance between the inner estimated course line and a target object such as the obstacle or curb of the road.
- Take care not to let the estimated course line overlap the target object.

Checking the rear and around the vehicle


The rear view & panoramic view/wide rear view & panoramic view screen provide support when checking the areas of behind the vehicle and around the vehicle while backing up, for example while parking.

The screens will be displayed when the shift lever is in the R position.

Screen display

Each time the display mode switching button is selected, the mode will change as follows:

▶ Rear view & panoramic view

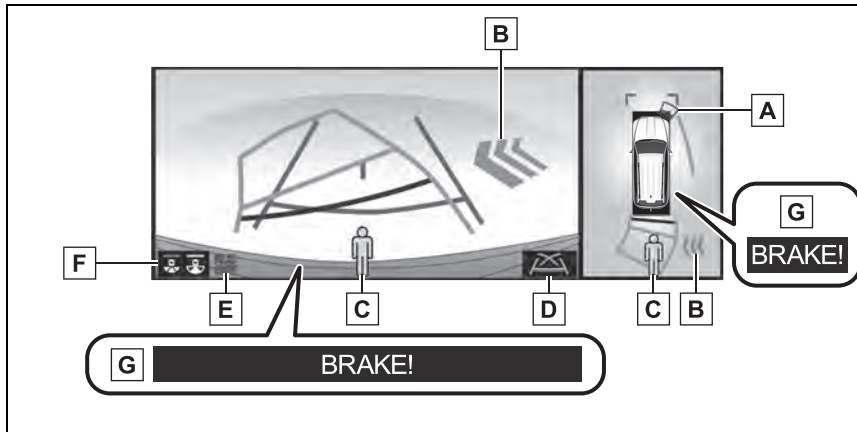

A Toyota parking assist-sensor

When a sensor detects a stationary object, the direction of and the approximate distance to the stationary object are displayed and the buzzer sounds.

B Rear Cross Traffic Alert

When a sensor detects a vehicle approaching from the rear, the direction of the vehicle approaching from the rear is displayed and the buzzer sounds.

C Rear Camera Detection*

Displayed automatically when a pedestrian is detected.

D Guide line switching button

Select to switch the guide line mode. (→P.452)

E Rear camera detection function off indicator*

Displayed or flashes when the rear camera detection function is disabled, such as when it is malfunctioning.

F Display mode switching button


Each time the display mode switching button is selected, the mode will change between the rear view & panoramic view mode and the wide rear view & panoramic view mode.

G Parking Support Brake*

When the system determines that the possibility of a collision with detected target objects is high, a warning message is displayed.

*: If equipped

► Wide rear view & panoramic view

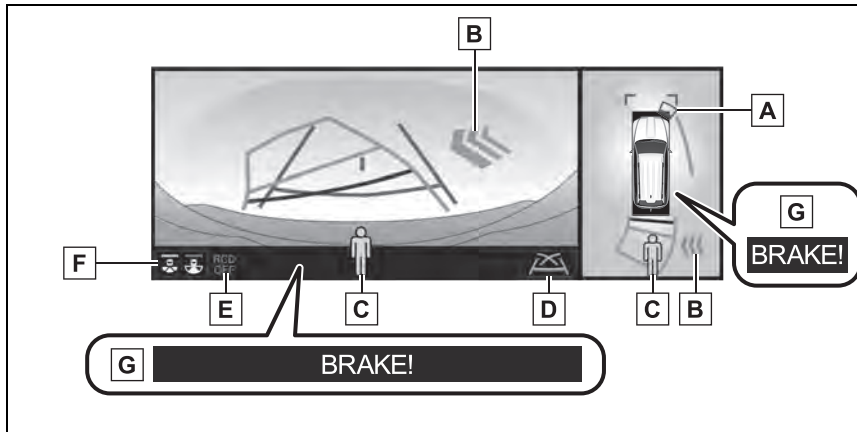

A Toyota parking assist-sensor

When a sensor detects a stationary object, the direction of and the approximate distance to the stationary object are displayed and the buzzer sounds.

B Rear Cross Traffic Alert

When a sensor detects a vehicle approaching from the rear, the direction of the vehicle approaching from the rear is displayed and the buzzer sounds.

C Rear Camera Detection*

Displayed automatically when a pedestrian is detected.

D Guide line switching button

Select to switch the guide line mode. (→P.452)

E Rear camera detection function off indicator*

Displayed or flashes when the rear camera detection function is disabled, such as when it is malfunctioning.

F Display mode switching button

Each time the display mode switching button is selected, the mode will change between the rear view & panoramic view mode and the wide rear view & panoramic view mode.

G Parking Support Brake*

When the system determines that the possibility of a collision with detected target objects is high, a warning message is displayed.

*: If equipped

■ Rear view & panoramic view/wide rear view & panoramic view display

- The monitor is canceled when the shift lever is shifted into any position other than the R position.
- For details about the Toyota parking assist-sensor (→P.372), Rear Cross Traffic Alert function (→P.379) and Parking Support Brake function. (→P.388)
- The display position of the Toyota parking assist-sensor and the position of target objects displayed in the camera image do not match.

⚠ WARNING

■ Toyota parking assist-sensor display


- When a sensor indicator on the Toyota parking assist-sensor display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.
- As the Toyota parking assist-sensor display and Rear Cross Traffic Alert display are displayed over the camera view, it may be difficult to see the Toyota parking assist-sensor display and Rear Cross Traffic Alert display depending on the color and brightness of the surrounding area.

Guide lines displayed on the screen

Each time the guide line switching button is selected, the mode will change as follows:

▶ Estimated course line

Estimated course lines are displayed which move in accordance with the operation of the steering wheel.

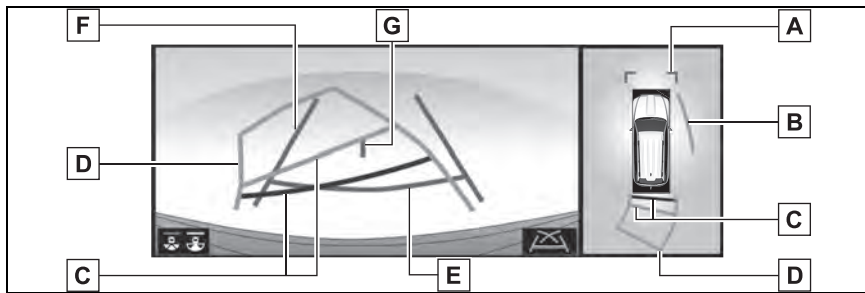

A Distance guide lines

Shows distance in front of the vehicle.

- Display points approximately 1 m (3 ft.) from the edge of the bumper.

B Estimated course line

Shows a side estimated course when the steering wheel is turned.

C Distance guide lines

Shows the distance behind the vehicle when the steering wheel is turned.

- The guide lines move in conjunction with the estimated course lines.
- The guide lines display points approximately 0.5 m (1.5 ft.) (red) and approximately 1 m (3 ft.) (yellow) from the center of the edge of the bumper.

D Estimated course line

Shows a rear estimated course when the steering wheel is turned.

E Distance guide line

Shows the distance behind the vehicle.

- Displays a point approximately 0.5 m (1.5 ft.) (red*) from the edge of the bumper.

F Vehicle width guide lines

Displays a guide path when the vehicle is being backed straight up.

G Vehicle center guide line


Indicates the estimated vehicle center on the ground.

*: In estimated course line mode, the line will turn blue.

▶ Parking assist guide line

The steering wheel return points (parking assist guide lines) are displayed.

This mode is recommended for those who are comfortable with parking the vehicle without the aid of the estimated course lines.

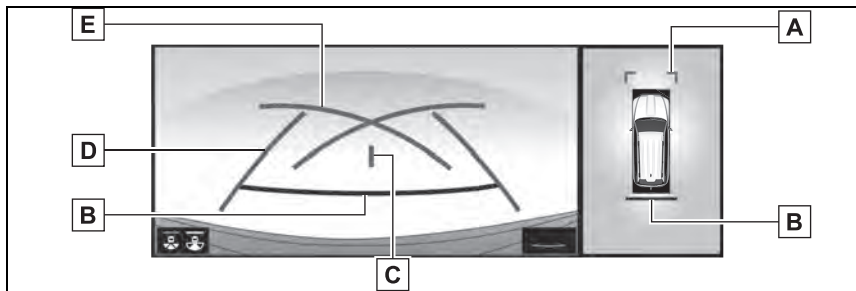**A** Distance guide lines

Shows distance in front of the vehicle.

- Display points approximately 1 m (3 ft.) from the edge of the bumper.

B Distance guide line

Shows the distance behind the vehicle.

- Displays a point approximately 0.5 m (1.5 ft.) (red*) from the edge of the bumper.

C Vehicle center guide line

Indicates the estimated vehicle center on the ground.

D Vehicle width guide lines

Displays a guide path when the vehicle is being backed straight up.

E Parking assist guide lines

Shows the path of the smallest turn possible behind the vehicle.

*: In estimated course line mode, the line will turn blue.

► Distance guide line

Only distance guide line is displayed.

This mode is recommended for those who are comfortable with parking the vehicle without the aid of the guide lines.



A Distance guide lines

Shows distance in front of the vehicle.

- Display points approximately 1 m (3 ft.) from the edge of the bumper.

B Distance guide line

Shows the distance behind the vehicle.

- Displays a point approximately 0.5 m (1.5 ft.) (red*) from the edge of the bumper.

*: In estimated course line mode, the line will turn blue.

■ **Guide lines display**

The display position of the Toyota parking assist-sensor and the position of target objects displayed in the camera image do not match.

■ **Guide lines**

If the back door is not closed, guide lines will not be displayed. If the guide lines do not display even when the back door is closed, have the vehicle inspected at your Toyota dealer.

⚠ WARNING

■ **Guide lines**

- Depending on the circumstances of the vehicle (number of passengers, amount of luggage, etc.), the position of the guide lines displayed on the screen may change. Be sure to check visually around the vehicle before proceeding.
- If the steering wheel is straight and the vehicle width guide lines and the estimated course lines are not in alignment, have the vehicle inspected by your Toyota dealer.
- Do not use the system if the display is incorrect due to an uneven (hilly) road or a non-straight (curvy) road.


Parking

Using the estimated course line

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the R position.
- 2 Turn the steering wheel so that the estimated course lines are

within the parking space, and back up slowly.

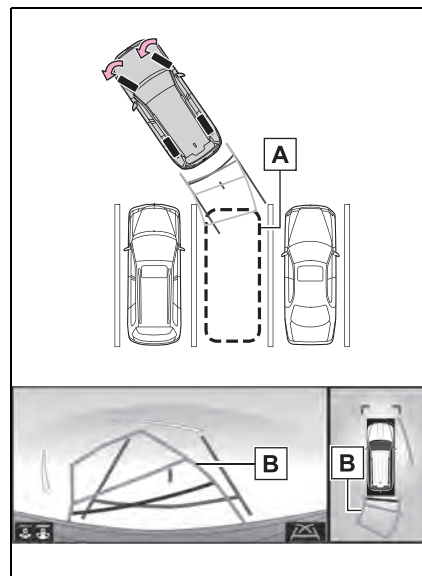


A Parking space

B Estimated course lines

- 3 When the rear position of the vehicle has entered the parking space, turn the steering wheel so that the vehicle width guide lines are within the left and right

dividing lines of the parking space.

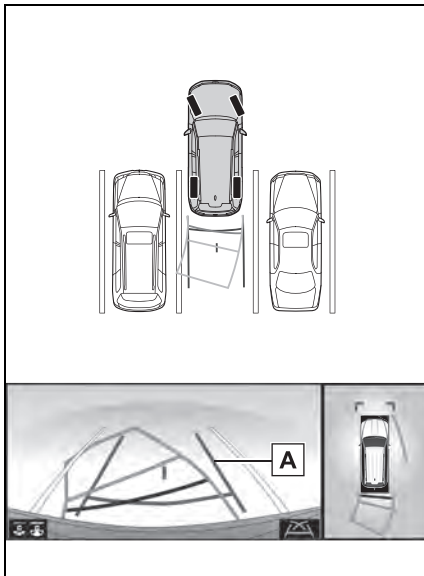


A Vehicle width guide line

- 4 Once the vehicle width guide lines and the parking space lines are parallel, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

Using parking assist guide line

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the R position.
- 2 Back up until the parking assist guide line meets the edge of the dividing line of the parking space.

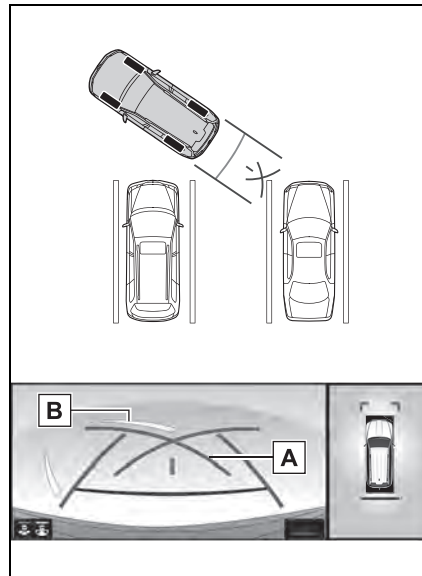

A Parking assist guide line

B Parking space dividing line


- 3 Turn the steering wheel all the way to the left, and back up slowly.
- 4 Once the vehicle is parallel with the parking space, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

When folding the outside rear view mirrors


Even when outside rear view mirrors are stored, the monitor can display various images of the vicinity of the vehicle and assist the operation in the confirming safe conditions in a narrow places, parking, etc.

Screen display


- ▶ Wide front view & dual side views

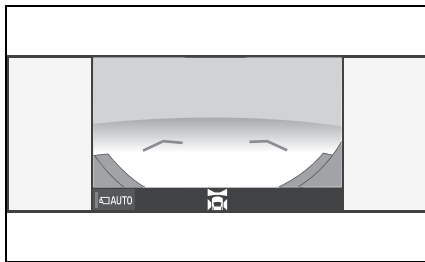

- ▶ Rear view & dual side views

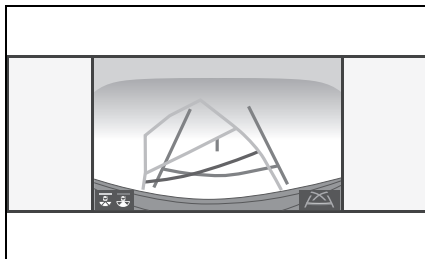

- ▶ Wide rear view & dual side views

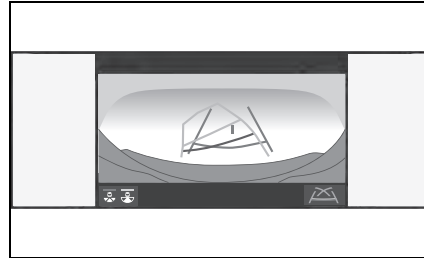

Screen display

For details about the front view and the rear view: →P.442, 449

! WARNING

Guide lines


When a sensor indicator on the Toyota parking assist-sensor display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.

Magnifying function

If displayed objects are too small to see clearly when the panoramic view is displayed, the area around the front side or rear side of the vehicle can be magnified.

Magnifying the display

- 1 Turn the Toyota parking assist-sensor on.
- 2 Select the area on the panoramic view display you wish to magnify.

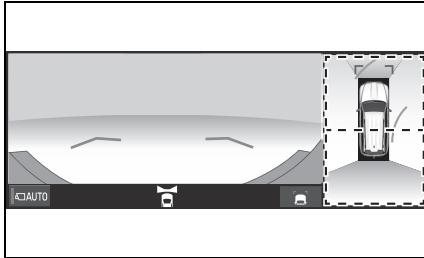

- Selecting one of the 2 areas within the dotted lines will magnify that area. (Dotted lines are not displayed on the actual display.)
- To return to the normal view, select the panoramic view display again.

■ **Magnifying the display**

- The magnifying function is enabled when all of the following conditions are met:
 - The wide front view & panoramic view/Side Clearance View & panoramic view/rear view & panoramic view/wide rear view & panoramic view is displayed.
 - The vehicle speed is below approximately 12 km/h (7 mph).
 - The Toyota parking assist-sensor is available.
- In the following situations, the magnified display will be canceled automatically:
 - The vehicle speed is approximately 12 km/h (7 mph) or higher.
 - The Toyota parking assist-sensor is unavailable.
- When the display is magnified, the guide lines will not be displayed.

When using the Multi-terrain Monitor

Observe the following precautions.

Failure to do so may result in an unexpected accident. Also, when driving, make sure to directly confirm the safety of your surroundings and the area to the rear of the vehicle.

! WARNING

■ **Conditions under which the Multi-terrain Monitor should not be used**

Do not use the Multi-terrain Monitor in the following situations. The system may not operate properly, resulting in an unexpected accident.

- When driving on an icy, snow-covered or otherwise slippery road surface
- When using tire chains or a spare tire
- When either front door or the back door is not completely closed
- When driving on an uneven road, such as a hill
- When tires or suspension parts other than those specified are equipped
When the tires are replaced, the position indicated by the guide lines displayed on the screen may differ.
- When any aftermarket parts have been installed on the bumper area which is displayed by the camera

■ **Guide lines**

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while confirming the safety of your surroundings.

**NOTICE****■ Panoramic view**

- In the panoramic view, the system combines images taken from the front, back, left and right side cameras into a single image. There are limits to the range and content that can be displayed. Understand the characteristics of this system before using.
- Image clarity may decline at the four corners of the panoramic view. However, this is not a malfunction, as these are the regions along the border of each camera image where the images are combined.
- Depending on lighting conditions near each of the cameras, bright and dark patches may appear on the panoramic view.
- The panoramic view display does not extend higher than the installation position and image capture range of each camera.
- There are blind spots around the vehicle and there are regions that are not displayed in the panoramic view.
- Three-dimensional objects displayed in wide front view or rear view may not be displayed in the panoramic view.
- People and other three-dimensional obstacles may appear differently when displayed in the panoramic view. (These differences include, among others, cases in which displayed objects appear to have fallen over, disappear near image processing areas, appear from image processing areas, or when the actual distance to an object differs from the displayed position.)
- The panoramic view will not be properly displayed when either front door or the back door is open.
- The vehicle icon displayed in the panoramic view is a computer generated image, and properties such as the color, shape and size will differ from the actual vehicle. Therefore, nearby three-dimensional objects may appear to be touching the vehicle, and actual distances to three-dimensional objects may differ from those displayed.

Area displayed on screen


Area of image of panoramic view:

The panoramic view monitor displays an image of the surrounding view of the vehicle.

Since the panoramic view processes and displays images based on flat road surfaces, it cannot depict the position of three-dimension objects (such as vehicle bumpers, etc.) that are in positions higher than the surface of the road. Even if there is room between the bumpers of the vehicles and it seems not likely to collide in the image, in reality, the both vehicles are on a

collision course.


Check the safety of the surroundings directly.

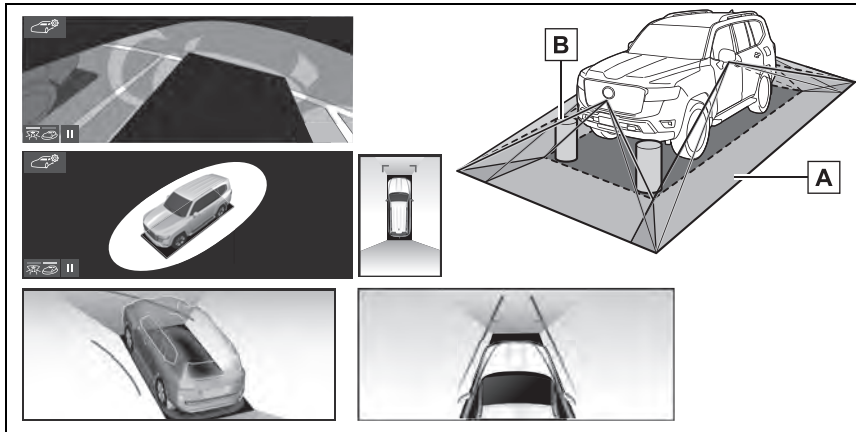

A Objects located in the shaded areas will not be displayed on the screen.

B The objects not displayed on the screen

- Objects located in the shaded areas will not be displayed on the screen.

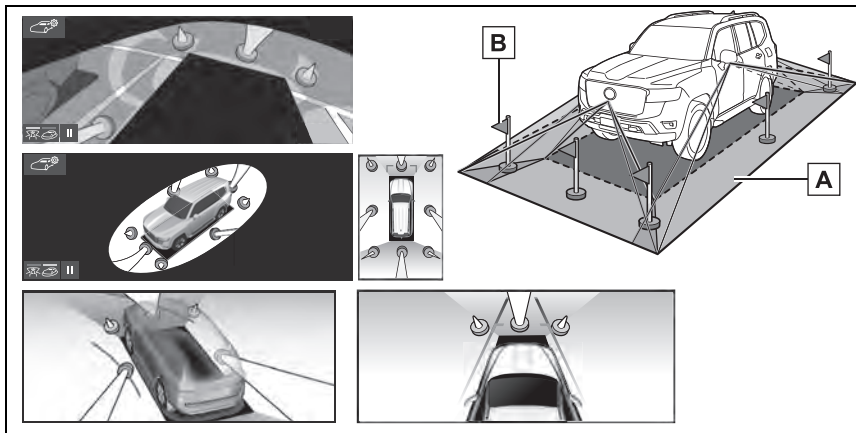


A Parts of objects which extend above a certain height cannot be displayed on the screen.

B The parts of objects not displayed on the screen

- Parts of objects which extend above a certain height cannot be displayed on the screen.


■ Area displayed on screen

- As the images obtained from four cameras are processed and displayed on the standard of a flat road surface; the panoramic view/moving view/see-through view/Side Clearance View/Cornering View may be displayed as follows.
- Objects may look collapsed; thinner or bigger than usual.
- An object with a higher position than the road surface may look farther away than it actually is or may not appear at all.
- Tall objects may appear protruding from the non-displayed areas of the image.
- Variations in the brightness of the image may appear for every camera.
- The displayed image may be shifted by inclination of the vehicle body, change in vehicle height, etc., depending on the number of passengers, amount of luggage, fuel quantity, etc.
- If the front doors or back door are not completely closed; neither the image nor the guide lines are displayed.
- The position relations of the vehicle icon and the road surface or obstacle may differ from the actual positions.
- The black areas of the vicinity of the vehicle icon are areas that are not captured by the camera.
- Images like the following are combined, thus some areas may be difficult to view.

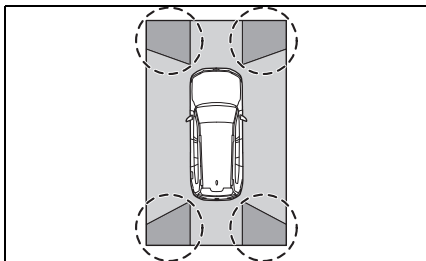


Area of the image captured by the camera

► Wide front view

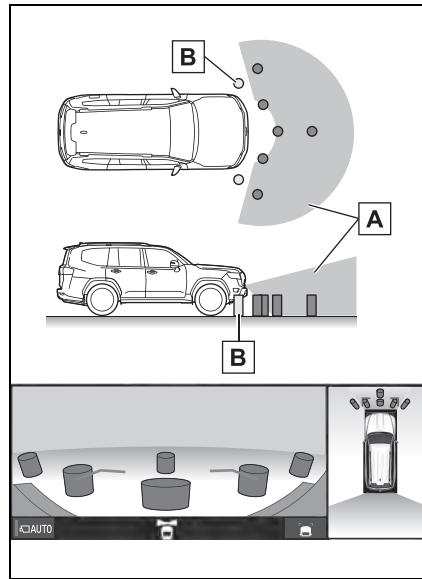


- A** The area displayed on the screen
- B** The objects not displayed on the screen

► Side view

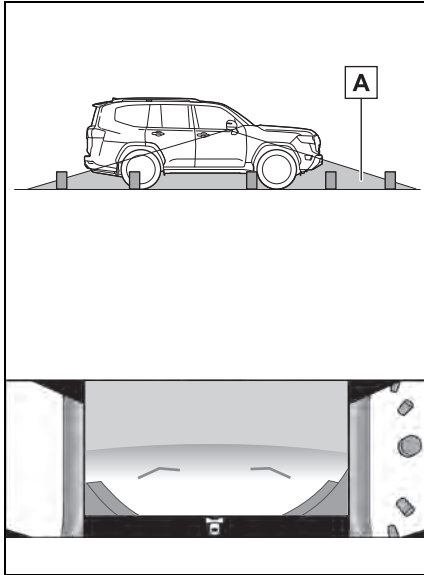

A The area displayed on the screen

► Rear view

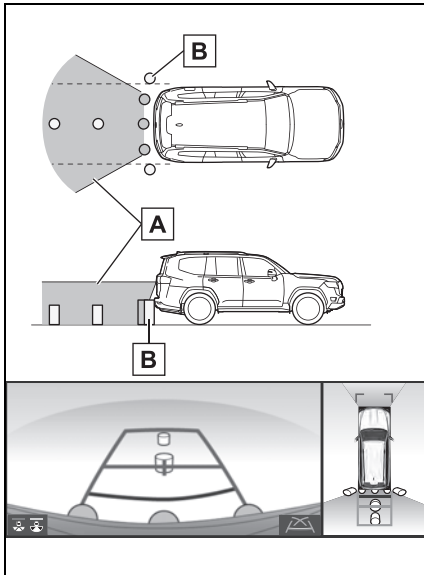


A The area around both corners of

the bumper will not be displayed.

B The objects not displayed on the screen

► Wide rear view

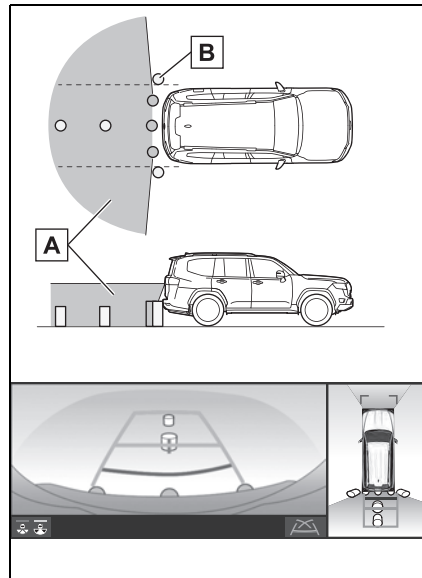

A The area around both corners of the bumper will not be displayed.

B The objects not displayed on the screen

■ Display range


- The area covered by the camera is limited. Objects which are close to either corner of the bumper or under the bumper cannot be seen on the screen.
- The area displayed on the screen may vary depending on vehicle orientation or road conditions.
- The camera uses a special lens. The distance in the image displayed on the screen will differ from the actual dis-

tance.


The camera

The cameras for the Multi-terrain Monitor are located as shown in the illustrations.


► Front camera

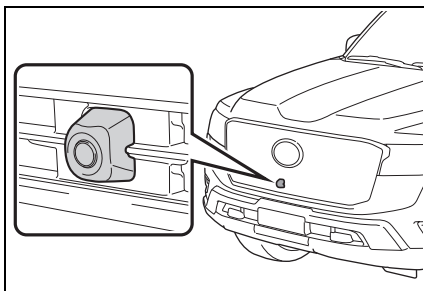

► Side cameras

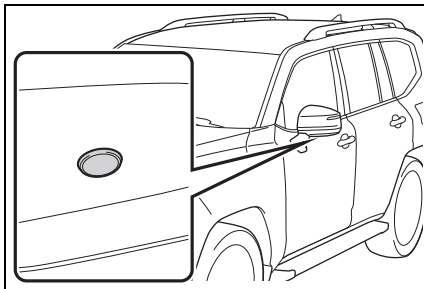

► Rear camera

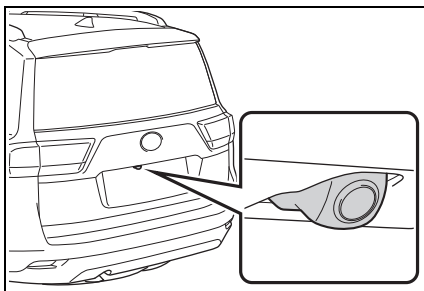

Using the camera

If dirt or foreign matter (such as


water droplets, snow, mud, etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.

Rear camera: Dirt on the camera lens can be cleaned by operating the dedicated camera cleaning washer. (→P.292)

NOTICE

How to use the cameras

- The Multi-terrain Monitor may not operate properly in the following cases.
 - If the front or the rear of the vehicle or the outside rear view mirror has been hit, the camera's position and mounting angle of the camera may change.
 - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
 - When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
 - Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
 - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.

 NOTICE


- When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- When the camera is used under fluorescent lights, sodium light or mercury light etc., the lights and the illuminated areas may appear to flicker.
- The camera can be damaged by flying rocks and other debris.
- Do not expose the camera to strong impacts as this could cause a malfunction. If this happens, have the vehicle inspected by your Toyota dealer as soon as possible.

Cleaning the rear camera with washer fluid (rear camera) (if equipped)

- When cleaning the camera, it may be difficult to see the image due to the washer fluid. When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- If washer fluid remains on the camera lens surface after cleaning, the image may be difficult to see at night due to the height or inclination of the headlights of the vehicle behind.
- Some dirt may not be removed completely after cleaning. In this case, rinse the camera lens with a large quantity of water and then wipe it clean with a soft

cloth dampened with water.

- Washer fluid is sprayed onto the camera lens surface. Therefore, the ice, snow, etc. adhering around the camera cannot be removed.

 NOTICE

■ **Cleaning the camera with washer fluid**


Do not strike or hit the washer nozzle or subject it to a strong impact, as the washer nozzle installation position and angle may be changed.

Difference between the screen and the actual road

- The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.
- The distances between the vehicle width guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.
- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

When the ground behind the vehicle slopes up sharply


The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guide lines and the actual distance/course on the road.

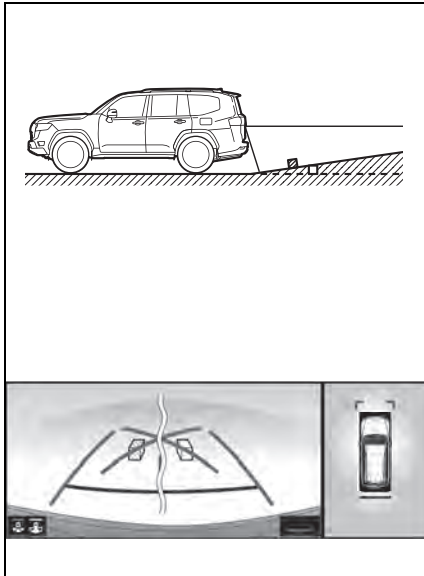

When the ground behind the vehicle slopes down sharply


The distance guide lines will appear to be farther from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guide lines and the

actual distance/course on the road.

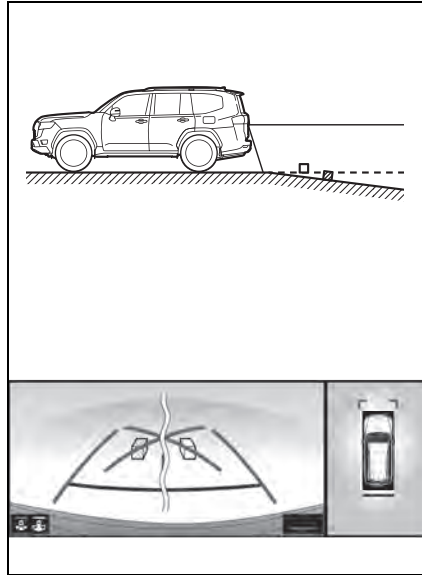

When any part of the vehicle sags

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

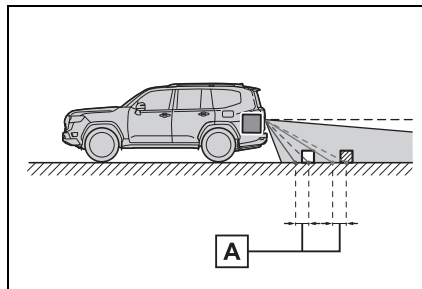

A A margin of error

Distortion of three-dimensional objects on the screen

When there are three-dimensional objects (such as vehicle bumpers, etc.) nearby in positions higher than the surface of the road, take extra care when using the following.


! WARNING

■ Toyota parking assist-sensor pop-up display

When a sensor indicator on the Toyota parking assist-sensor display illuminates in red or a buzzer sounds continuously, be sure to check the area around the vehicle immediately and do not proceed any further until safety has been ensured, otherwise an unexpected accident may occur.

Panoramic view display (including magnified display), Side Clearance View and Cornering View display

Since the panoramic view, Side Clearance View and Cornering View process and display images based on flat road surfaces, it cannot depict the position of three-dimension objects (such as vehicle bumpers, etc.) that are in positions higher than the surface of the road. For example, even though it appears that there is space between the bumpers of the two vehicles in the illustration below and they are not likely to collide, in reality, a collision is about to occur.

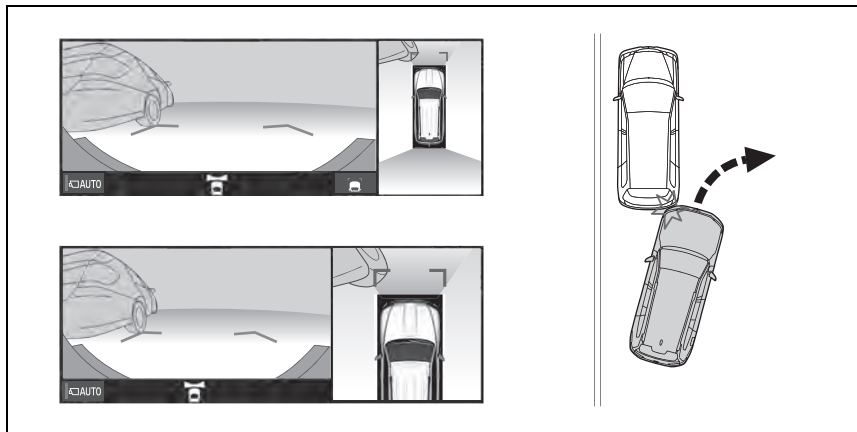


Estimated course lines

Since the estimated course line is displayed for a flat road surface, it


cannot depict the position of three-dimensional objects (such as vehicle bumpers, etc.) that are in positions higher than the surface of the

road. Even if the bumper of the vehicle is on the outside of the estimated course line in the image, in reality, the vehicles are on a collision course.

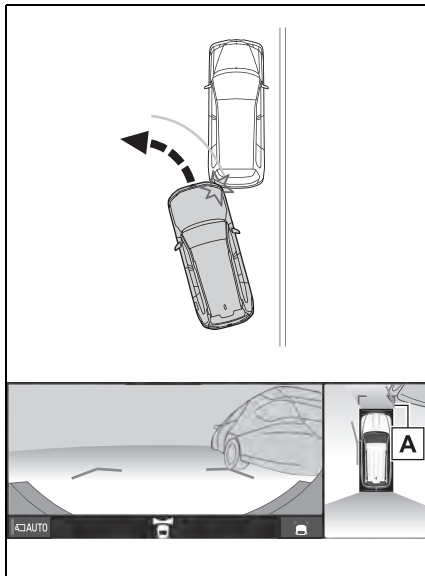


A Estimated course line

Three-dimensional objects (such as the overhang of a wall or loading platform of a truck) in high positions may not be projected on the screen. Check the safety of the surroundings directly.

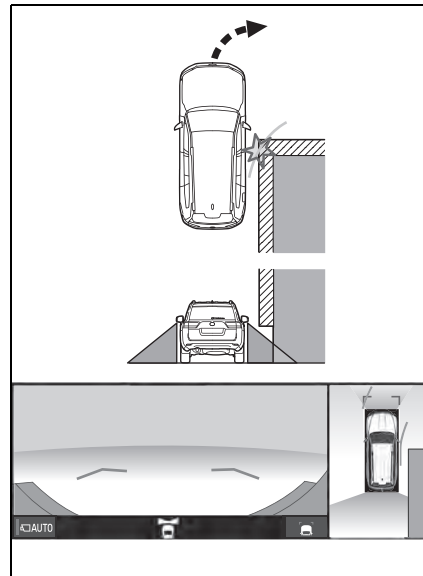


Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the estimated course lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the estimated course lines. In reality if you back up as guided by the estimated course lines, the vehicle may hit the truck.

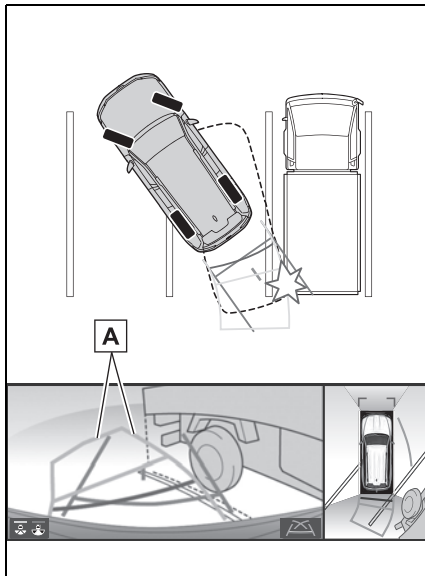

A Estimated course lines

Distance guide lines

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point **B**. However, in reality if you back up to point **A**, you will hit the truck. On the screen, it appears that **A** is closest and **C** is farthest away. However, in reality, the distance to **A** and **C** is the same, and **B** is farther than **A** and **C**.

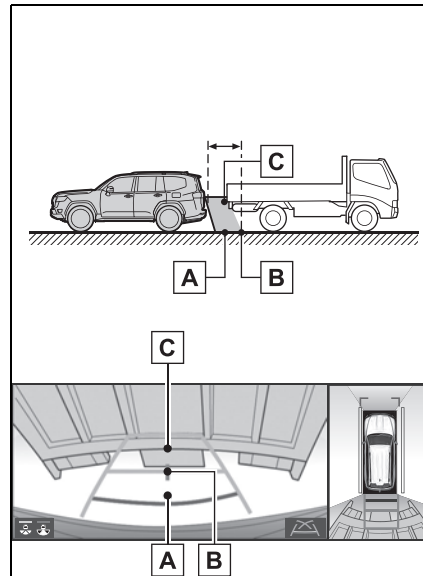

Under vehicle terrain view


The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, weight of the load, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while directly confirming the safety of your surroundings

■ Using under vehicle terrain view

- The images displayed were previously taken approximately 3 m (10 ft.) behind the current vehicle position. Therefore, actual conditions may differ from those shown on the screen in the following situations.
 - When conditions changed such as when an object moved or entered the frame after the image was taken.
 - Loose material like sand or snow has crumbled or shifted

- An obstacle has moved
- There is a puddle, tract of mud, etc., within the display range
- The vehicle slips
- In the following situations, actual tire positions and vehicle position may differ from those indicated by the tire position indicator lines and vehicle position indicator lines.
 - Tires have been replaced
 - Optional equipment has been

installed

 **WARNING**

■ Guide lines

The displayed guide lines are composed with the image that was previously taken and may differ from the actual state. Always drive the vehicle while confirming the safety of your surroundings.


Things you should know

If you notice any symptoms

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Toyota dealer.

Symptom	Likely cause	Solution
The image is difficult to see	<ul style="list-style-type: none"> • The vehicle is in a dark area • The temperature around the lens is either high or low • The outside temperature is low • There are water droplets on the camera • It is raining or humid • Foreign matter (mud, etc.) is adhering to the camera • Sunlight or headlights are shining directly into the camera • The vehicle is under fluorescent lights, sodium lights, mercury lights, etc. 	<p>Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>The procedure for adjusting the picture quality of the Multi-terrain Monitor system is the same as the procedure for adjusting the screen display. Refer to the "Navigation and Multimedia System Owner's Manual".</p>
The image is blurry	Dirt or foreign matter (such as water droplets, snow, mud, etc.) is adhering to the camera.	<p>Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.</p> <p>Operate the dedicated camera cleaning washer and clean the camera lens. (→P.292)</p>
The image is out of alignment	The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Toyota dealer.

Symptom	Likely cause	Solution
The guide lines are very far out of alignment	The camera position is out of alignment.	Have the vehicle inspected by your Toyota dealer.
	<ul style="list-style-type: none"> • The vehicle is tilted. (There is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.) • The vehicle is used on an incline. 	If this happens due to these causes, it does not indicate a malfunction. Back up while visually checking the vehicle's surroundings.
The estimated course lines move even though the steering wheel is straight	There is a malfunction in the signals being output by the steering sensor.	Have the vehicle inspected by your Toyota dealer.
Guide lines are not displayed	The back door is open.	Close the back door. If this does not resolve the symptom, have the vehicle inspected by your Toyota dealer.
 is displayed	<ul style="list-style-type: none"> • Battery has been reinstalled. • The steering wheel has been moved while the battery was being reinstalled. • Battery power is low. • The steering sensor has been reinstalled. • There is a malfunction in the signals being output by the steering sensor. 	Have the vehicle inspected by your Toyota dealer.
The panoramic view display cannot be magnified	The Toyota parking assist-sensor may be malfunctioning or dirty.	Follow the correction procedures for malfunctions of the Toyota parking assist-sensor. (→P.372)
The See-through view/Moving view/Side Clearance View/Cornering View cannot be displayed		

Product license

About Free / Open-Source Software Information

This product includes the free / open-source software.
You can obtain either or both of the licensing information and the source code of these free / open-source software from the following URL.


<https://www.denso-ten.com/support/source/oem/pvm/info-t3/>

Driving mode select switch*

*: If equipped

The driving modes can be selected to suit driving condition.

System components

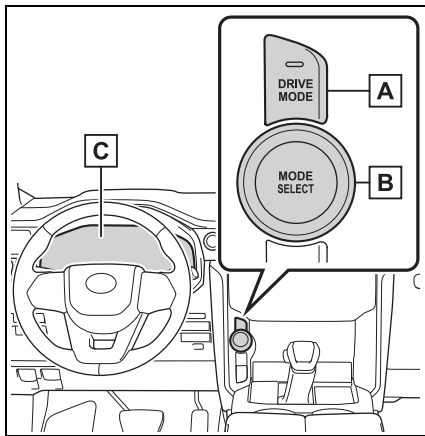


- A** DRIVE MODE switch
- B** MODE SELECT switch
- C** Multi-information display (→P.137, 146)

Selecting the driving mode

- 1 Press the DRIVE MODE switch.


The indicator **A** on the switch will turn

on.

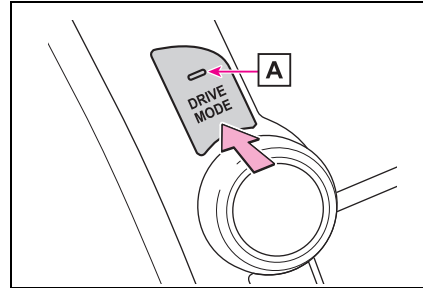

- 2 Select the driving modes on the multi-information display while turning the MODE SELECT switch left and right.

▶ Vehicles without Adaptive Variable Suspension system

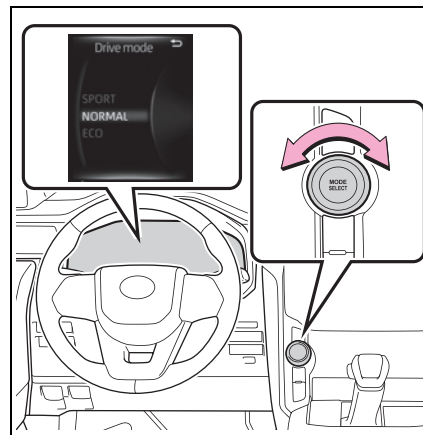

- Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

- Eco drive mode


Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling). The “ECO” indicator

comes on.

- Sport mode

Assists acceleration response by controlling the transmission, engine and steering. Suitable for when precise handling is desirable, for example when driving on mountain roads. The “SPORT” indicator comes on.

- ▶ Vehicles with Adaptive Variable Suspension system

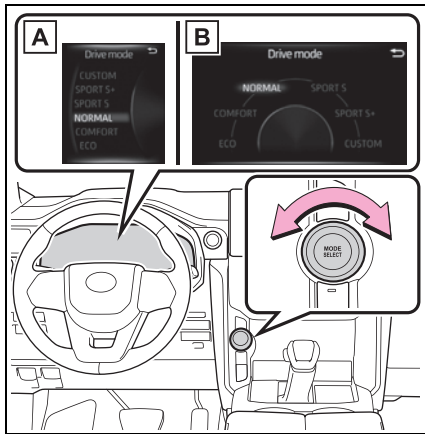

A Multi-information display (4.2-inch display model)

B Multi-information display (7-inch display model)

- Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

- Comfort mode

By controlling the suspension, riding comfort is further enhanced. Suitable for city driving. The “COMFORT” indicator comes on.

- Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel econ-

omy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling). The “ECO” indicator comes on.

- SPORT S mode

Assists acceleration response by controlling the transmission. This mode is suitable for when powerful acceleration is desired. The “SPORT S” indicator comes on.

- SPORT S+ mode

Helps to ensure the controllability and stability of the vehicle by integrally controlling the steering wheel and suspensions as well as the transmission and engine, making it suitable for sporty driving. The “SPORT S+” indicator comes on.

- Custom mode*

Allows you to drive with the power train, chassis and air conditioning system functions set to your preferred settings. Custom mode settings can only be changed on the drive mode customization display of Center Display. The “CUSTOM” indicator comes on.

*: If equipped

■ The driving mode select switch can be operated when

The four-wheel drive control switch is in H4.

■ Operation of the air conditioning system in Eco drive mode

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency. To improve air conditioning performance, perform the following operations:

- Turn off eco air conditioning mode (→P.559, 571)

- Adjust the fan speed (→P.558, 570)
- Turn off Eco drive mode (→P.473)

■ Automatic deactivation of driving mode

Driving mode is deactivated and the driving mode will be changed to normal mode in the following conditions:

- ▶ When Sport mode or Custom mode is selected
- After turning the engine switch off and then turning it to on.
- When the four-wheel drive control switch is in L4
- When the Multi-terrain Select (if equipped) is turned on
- ▶ When Sport mode or Custom mode is selected
- When the four-wheel drive control switch is in L4
- When the Multi-terrain Select (if equipped) is turned on


■ Customization

The Custom mode can be changed.
(Customizable features: →P.775)

Four-wheel drive system

Use the four-wheel drive control switch and center differential lock switch to select the following transfer and center differential modes.

Four-wheel drive control switch

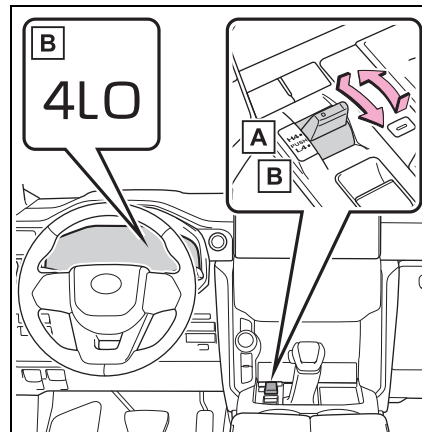

A H4 (high speed position)

Normal driving on all types of roads.

B L4 (low speed position)

Driving requiring maximum power and traction such as climbing or descending steep hills, off-road driving, and hard pulling in sand or mud, etc.

The low speed four-wheel drive indicator will come on.

Shifting between H4 and L4

■ Shifting from H4 to L4

- 1 Stop the vehicle completely.

- 2 Shift the shift lever to N.
- 3 Push and shift the four-wheel drive control switch to L4.


Maintain this condition until the low speed four-wheel drive indicator turns on.

■ **Shifting from L4 to H4**

- 1 Stop the vehicle completely.
- 2 Shift the shift lever to N.
- 3 Push and shift the four-wheel drive control switch to H4.

Maintain this condition until the low speed four-wheel drive indicator turns off.

Center differential lock switch

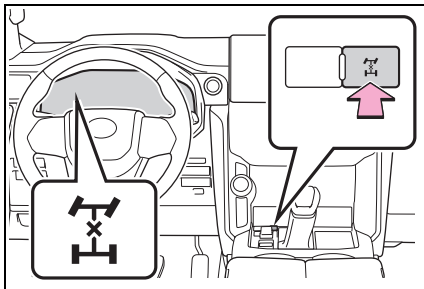

Lock the center differential when your vehicle's wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

The center differential lock indicator and indicator in the differential lock/unlock display will come on.

To unlock the center differential, push the switch again.

Unlock the center differential after the wheels have been freed, or after moving to a flat, non-slippery surface.

■ **The four-wheel drive control switch can be operated when**

- The engine switch is in ON.
- The shift lever is in the N position.
- The vehicle is stopped completely.

■ **The low speed four-wheel drive indicator light**

The indicator light blinks while shifting between "H4" and "L4".

■ **Advice for driving on slippery roads**

● If you shift the four-wheel drive control switch to L4 and the shift lever to the 2 range of M (automatic transmission with M mode) or 2 range of S (automatic transmission with S mode) while driving in steep off-road areas, the output of the brake can be controlled effectively by the Active TRC, which assists the driver to control the driving power of 4 wheels.

● Use the 1 range of M (automatic transmission with M mode) or 1 range of S (automatic transmission with S mode) of the shift lever for maximum power and traction when your wheels get stuck or when driving down a steep incline.

■ **The center differential lock indicator light**

The indicator light blinks while locking/unlocking the center differential.

■ **The center differential lock switch can be operated when**

- The engine switch is in ON.
- The vehicle speed is less than 100 km/h (62 mph).

■ **Locking/unlocking the center differential**

● When the four-wheel drive control switch is in L4 with the center differential locked, VSC is automatically turned off. (The center differential lock and VSC OFF indicator lights come on.)

- If the operation is not completed, the center differential lock indicator blinks. If the indicator light does not turn off when unlocking the center differential, drive straight ahead while accelerating or decelerating, or drive in reverse.

- Vehicles with the cruise control system: If the center differential lock/unlock is not completed within 5 seconds while the cruise control system is on, cancel the cruise control system.

■ **If the low speed four-wheel drive indicator light or the center differential lock indicator light blinks**

- If the low speed four-wheel drive indicator light continues to blink when using the four-wheel drive control switch, stop the vehicle completely, move the shift lever to N and then operate the switch again.

- If the shift lever is moved before the low speed four-wheel drive indicator turns on/off, the transfer mode may not be shifted completely. The transfer mode disengages both the front and rear driveshafts from the powertrain and allows the vehicle to move regardless of the shift position. (At this time, the indicator blinks and the buzzer sounds.)

Therefore, the vehicle is free to roll even if the shift lever is in "P". You or someone else could be seriously injured. You must complete the shifting of the transfer mode.

To complete the shifting, stop the vehicle completely, return the shift lever to N, and confirm that the shift was completed (the indicator turns on/off).

- If the engine coolant temperature is too low, the four-wheel drive control system may not be able to shift. When the engine is warmer operate the switch again.

If the low speed four-wheel drive indicator light or the center differential lock

indicator light continues to blink even after attempting the above, there may be a malfunction in the engine, the brake system or the four-wheel drive system. In this case, you may not be able to shift between H4 and L4, and the center differential lock may not be operable. Have the vehicle inspected by your Toyota dealer immediately.

 **WARNING**


■ **While driving**

Never move the four-wheel drive control switch if the wheels have lost traction. Doing so may cause an accident resulting in death or serious injury.

■ **When the vehicle is parked**

If the shift lever is moved before the low speed four-wheel drive indicator turns on/off, the transfer mode may not be shifted completely. The transfer mode disengages both the front and rear driveshafts from the powertrain and allows the vehicle to move regardless of the shift position. (At this time, the indicator blinks and the buzzer sounds.)


Therefore, the vehicle is free to roll even if the shift lever is in "P". You or someone else could be seriously injured. You must complete the shifting of the transfer mode.

 **NOTICE**

■ **To prevent damage to the center differential**

- For normal driving on dry and hard surface roads, unlock the center differential.

- Unlock the center differential after the wheels are out of the ditch or off the slippery or bumpy surface.

 NOTICE

- Do not push the center differential lock switch when the vehicle is turning or when its wheels are spinning freely off the ground.

Front differential lock system *

*: If equipped


Use the front differential lock system only when wheel spinning occurs in a ditch or on a slippery or ragged surface. This system is effective in case one of the front wheels is spinning.

Front differential lock switch

Press the switch to turn the system on/off.

At this time, the front differential lock indicator and indicator in the differential lock/unlock display will blink. Wait a few seconds for the system to complete operation. After the front differential is locked, the indicators will stop blinking and remain on.

To unlock the front differential, push the switch again.

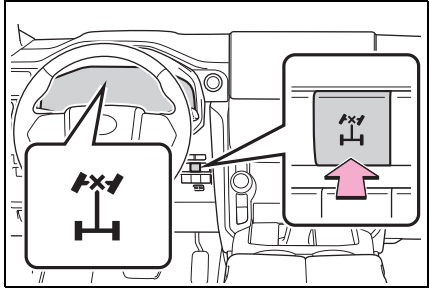

Operating tips

First turn the four-wheel drive control switch to “L4” with the center differential locked to see if you can move forward. If this does not work, use the front differential lock system also.

- Be sure to stop the wheels before locking the differential.
- Unlock the differential as soon as the vehicle moves out.

■ **Unlocking the front differential**

If the front differential lock indicator still flashes even after unlocking the front differential, check the safety of the surrounding area and slightly turn the steering wheel in either direction while the vehicle is in motion.

■ **Automatic unlocking feature**

The front differential will also unlock if you turn the four-wheel drive control switch to "H4" or unlock the center differential.

■ **After unlocking the front differential**

Check that the indicators go off.

■ **The front differential lock indicator and indicator in the differential lock/unlock display**

- The indicators blink while locking/unlocking the front differential.
- If the indicators continue to blink when you operate the front differential lock switch, check the safety of the surrounding area and turn the steering wheel in either direction while the vehicle is in motion.

If the indicators continue to blink even if doing so, have the vehicle inspected by your Toyota dealer as soon as possible. There may be a trouble in the four-wheel drive system.

■ **Locking the front differential**

The following systems do not operate when the front differential is locked.

- Multi Terrain ABS
- Brake assist system
- VSC
- Downhill assist control system (if equipped)
- Turn Assist function (if equipped)

- Active TRC*
- *: When the front and rear differentials are locked



WARNING

■ **When using the front differential lock system**

Failure to observe the following precautions may result in an accident.

- Do not lock the front differential in the conditions other than above.
- Do not lock the front differential until the wheels have stopped spinning.
- Do not drive over 8 km/h (5 mph) when the differential is locked.
- After unlocking the front differential, turn the switch off immediately and do not keep driving with the switch on.

Rear differential lock system*

*: If equipped


Use the rear differential lock system only when wheel spinning occurs in a ditch or on a slippery or ragged surface. This system is effective in case one of the rear wheels is spinning.

Rear differential lock switch

Press the switch to turn the system on/off.

At this time, the rear differential lock indicator and indicator in the differential lock/unlock display will blink. Wait a few seconds for the system to complete operation. After the rear differential is locked, the indicators will stop blinking and remain on.

To unlock the rear differential, push the switch again.

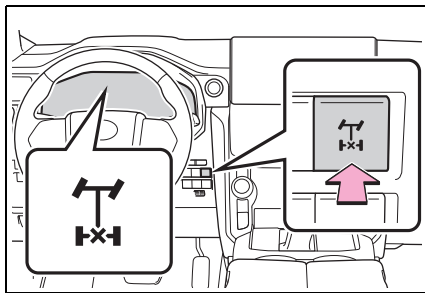

Operating tips

First turn the four-wheel drive control switch to "L4" with the center differential locked to see if you can move forward. If this does not work, use the rear differential lock system also.

- Be sure to stop the wheels before locking the differential.
- Unlock the differential as soon as the vehicle moves out.

Unlocking the rear differential

If the rear differential lock indicator still flashes even after unlocking the rear differential, check the safety of the surrounding area and slightly turn the steering wheel in either direction while the vehicle is in motion.

Automatic unlocking feature

The rear differential will also unlock if you turn the four-wheel drive control switch to "H4" or unlock the center differential.

After unlocking the rear differential

Check that the indicators go off.

The rear differential lock indicator and indicator in the differential lock/unlock display

- The indicators blink while locking/unlocking the rear differential.
- If the indicators continue to blink when you operate the rear differential lock switch, check the safety of the surrounding area and turn the steering wheel in either direction while the vehicle is in motion.


If the indicators continue to blink even if doing so, have the vehicle inspected by your Toyota dealer as soon as possible. There may be a trouble in the four-wheel drive system.

Locking the rear differential

The following systems do not operate when the rear differential is locked.

- Multi Terrain ABS
- Brake assist system
- VSC
- Downhill assist control system (if equipped)
- Turn Assist function (if equipped)
- Active TRC*

*: When the front and rear differentials are locked (if equipped)

 **WARNING**

■ **When using the rear differential lock system**


Failure to observe the following precautions may result in an accident.

- Do not lock the rear differential in the conditions other than above.
- Do not lock the rear differential until the wheels have stopped spinning.
- Do not drive over 8 km/h (5 mph) when the differential is locked.
- After unlocking the front differential, turn the switch off immediately and do not keep driving with the switch on.

Crawl Control (with Turn Assist function)*

*: If equipped

Allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal. Minimizes loss of traction or vehicle slip when driving on slippery road surfaces, allowing for stable driving.

 **WARNING**


■ **When using Crawl Control and Turn Assist function**

Do not rely solely on the Crawl Control and Turn Assist function. This function does not extend the vehicle's performance limitations. Always thoroughly check the road conditions, and drive safely.

■ **These conditions may cause the system not to operate properly**

When driving on the following surfaces, the system may not be able to maintain a fixed low speed, which may result in an accident:


- Extremely steep inclines.
- Extremely uneven surfaces.
- Snow-covered roads, or other slippery surfaces.

 **NOTICE**

■ **When using Turn Assist function**

The Turn Assist function is a function to assist turning performance when driving off road. The function may be less effective on paved road surfaces.

System components

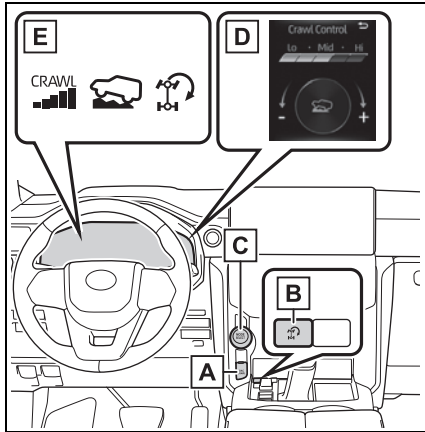


- A** DAC/CRAWL switch
- B** Turn Assist switch
- C** MODE SELECT switch
- D** Multi-information display (→P.137, 146)
- E** Indicator (→P.125)


Turning Crawl Control on

- 1** Press the DAC/CRAWL switch.

The indicator light **A** and the Crawl Control indicator on the multi-information display will come on, and the slip indicator will flash.

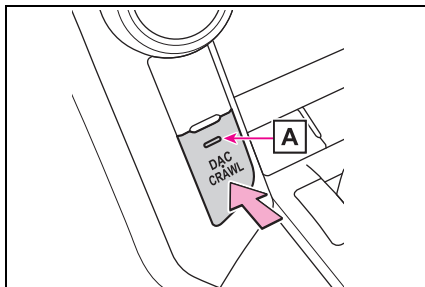


- 2** Turn the MODE SELECT switch left or right to select a mode on the multi-information display.

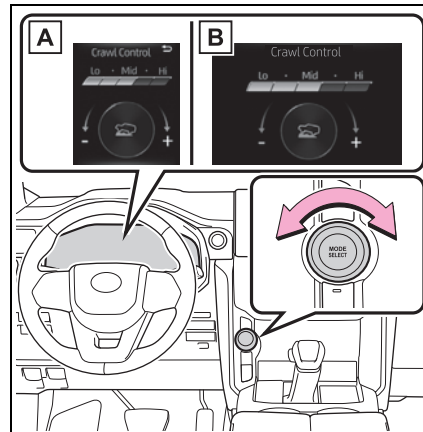

- A** Multi-information display (4.2-inch display model)
- B** Multi-information display (7-inch display model)

Selectable modes

A mode which matches the road conditions can be selected from among the following 5 modes.

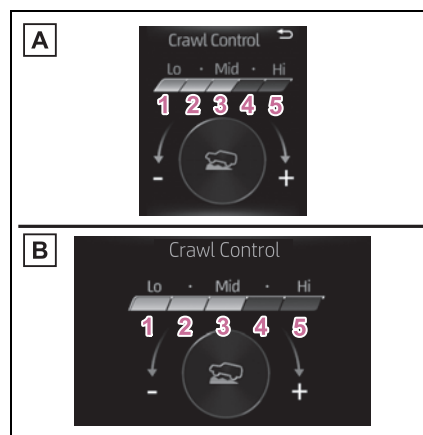

A Multi-information display (4.2-inch display model)

B Multi-information display (7-inch display model)

1 Lo

Suitable for driving on rocky roads or decline

2 Lo-Mid

Suitable for driving on rocky roads, decline or bumpy incline

3 Mid

Suitable for driving on bumpy inclines

4 Mid-Hi

Suitable for driving on bumpy inclines, debris roads, snow-covered roads, muddy roads, gravel roads and grass roads

5 Hi

Suitable for driving on bumpy inclines, debris roads, snow-covered roads, muddy roads, gravel roads and grass roads

Turning Crawl Control off

- ▶ When the DAC/CRAWL switch indicator illuminates

Press the DAC/CRAWL switch again.

- ▶ When the DAC/CRAWL switch indicator does not illuminate

Press the DAC/CRAWL switch to turn the indicator on. Press the DAC/CRAWL switch again with the indicator turned on.

If Crawl Control is turned off, the Crawl Control indicator, slip indicator and the Turn Assist indicator (when the Turn

Assist function is in use) will go off and a message stating that Crawl Control has been turned off will be displayed on the multi-information display for several seconds.

When turning off Crawl Control while driving, drive extremely carefully.

■ Operation conditions of the Crawl Control

- The engine is running.
- The shift lever is in any gear other than P or N.
- The four-wheel drive control switch is in L4.
- The driver's door is closed.

■ Automatic system cancelation of Crawl Control

In the following situations, the buzzer will sound intermittently and Crawl Control will be canceled automatically. In this event, the Crawl Control indicator will flash and then go off, the Turn Assist indicator will go off (if the Turn Assist function is in use), and a message stating that Crawl Control has been turned off will be displayed on the multi-information display for several seconds.

- When the shift lever is moved to P or N.
- When the four-wheel drive control switch is in H4.
- When the driver's door is opened.

■ Function limitations of Crawl Control

- In the following situations, brake control can be used to drive downhill at a constant speed. However, engine control is not available when driving uphill at a constant speed.
 - When switched to second start mode.
 - When the vehicle speed exceeds approximately 10 km/h (6 mph).
- In the following situation, engine con-

ontrol and brake control will stop temporarily. In this event, the Crawl Control indicator will flash.

- With the rear differential* is locked: when the vehicle speed exceeds approximately 10 km/h (6 mph).
- With the rear differential* is unlocked: when the vehicle speed exceeds approximately 25 km/h (15 mph).

*: if equipped

■ **When the Crawl Control system is operated continuously**

- If Crawl Control is used continuously for a long time, the brake system overheats. In this case, a buzzer will sound, a message stating a malfunction will be displayed on the multi-information display, and the Crawl Control indicator will flash and then go off. In this event, as Crawl Control will be temporarily inoperable, stop the vehicle immediately in a safe place, and allow the brake system to cool down sufficiently until the message goes off. (In the meantime, normal driving is possible.)
- If Crawl Control is used continuously for a long time, the automatic transmission overheats. In this case, a buzzer will sound, the system will be temporarily canceled, and a message stating a malfunction may be displayed on the multi-information display. In this event, stop the vehicle in a safe place until the message goes off.

■ **Sounds and vibrations caused by the Crawl Control system**

- A sound may be heard from the engine compartment when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in Crawl Control system.
- Either of the following conditions may occur when the Crawl Control system is operating. None of these are indicators that a malfunction has occurred.
 - Vibrations may be felt through the

vehicle body and steering.

- A motor sound may be heard after the vehicle comes to a stop.

■ **When there is a malfunction in the system**

Warning lights and/or warning messages will turn on. (→P.704, 709)

Turn Assist function


This function assists cornering performance in accordance with steering operation when driving through a tight corner. It maintains vehicle speed while driving and reduces the number of turns needed to navigate a corner that requires turning the wheel in the opposite direction.

Turning the Turn Assist function on

Press the Turn Assist switch while Crawl Control is operating.

Turn Assist indicator will come on.

To turn the system off, press the switch again.

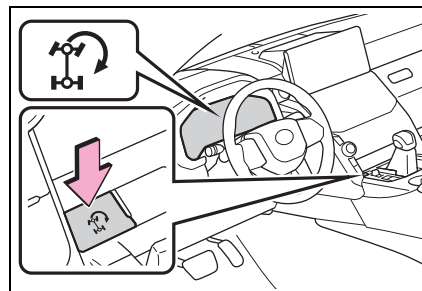

Turning the Turn Assist function off

Press the Turn Assist switch while

the Turn Assist function is operating. When the switch is pressed, the Turn Assist indicator will go off, and a message stating that the Turn Assist function has been turned off will be displayed on the multi-information display for several seconds.

a speed of approximately 35 km/h (22 mph) or more. If the Turn Assist indicator still flashes even after initializing the system, have the vehicle inspected by your Toyota dealer.

■ **Operation conditions of the Turn Assist function**

- The vehicle speed is approximately 10 km/h (6 mph) or less.
- Crawl Control is operating.
- The front and rear differentials (if equipped) are not locked.
- The brake pedal is not depressed
- The shift lever is in any gear other than P, R or N.
- The steering wheel is turned very far.

■ **Automatic system cancelation of the Turn Assist function**

When the front or rear differentials (if equipped) are locked, a buzzer will sound intermittently and the Turn Assist function will be canceled automatically. In this event, the Turn Assist indicator will go off, and a message stating that the Turn Assist function has been turned off will be displayed on the multi-information display for several seconds.

■ **Function limitations of the Turn Assist function**

In the following situations, the Turn Assist function will stop temporarily. In this event, the Turn Assist indicator will flash.

- When the vehicle speed exceeds approximately 10km/h (6 mph).
- When the shift lever is moved to R.

■ **When the battery is disconnected**

The Turn Assist indicator will flash and the system needs to be initialized. Drive the vehicle straight ahead for a while at

Multi-terrain Select*

*: If equipped

Multi-terrain Select is a system that improves drivability in off-road situations.

Select a mode that most closely matches the type of terrain on which you are driving from several modes.

Brake control, drive force control and suspension control can be optimized in accordance with the selected mode.

When AUTO mode is selected, brake control, drive force control and suspension control are optimized automatically according to the road conditions.

WARNING

■ When using the Multi-terrain Select

Observe the following precautions to avoid an accident that could result in death or serious injuries:

- Check that the selected mode indicators are illuminated before driving. Multi-terrain Select will not operate when the indicators are off.
- The road conditions listed (→P.486) are for reference only. There is a chance that the function may not be the most appropriate in terms of road conditions such as pitch, slipperiness, undulation, etc. Thoroughly check the road conditions before driving.


- Multi-terrain Select is not intended to expand the limits of the vehicle. Check the road conditions thoroughly beforehand, and drive safely and carefully.

NOTICE

■ Precaution for use

The Multi-terrain Select is intended for use during off-road driving. Do not use the system at any other time.

System components

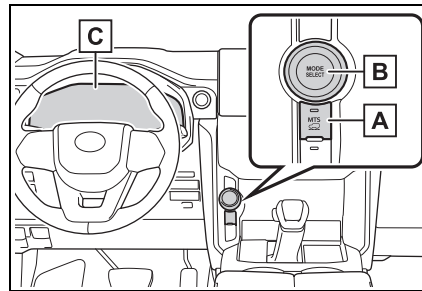

A MTS switch

B MODE SELECT switch

C Multi-information display


Selected mode is displayed.

Switching modes

- 1 Press the MTS switch.


The indicator **A** on the switch will turn

on.

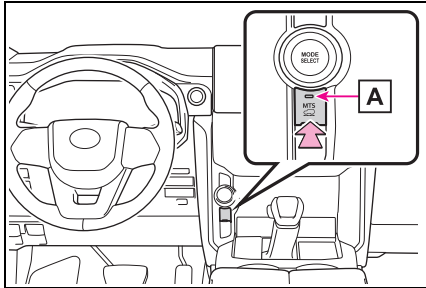

2 Select the driving modes on the multi-information display while turning the MODE SELECT switch left and right.

Depending on the positions of the four-wheel drive control switch, a mode can be selected from among the following modes.

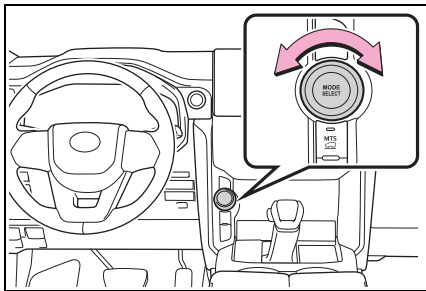

► Four-wheel drive control switch is in L4

Mode		Road Conditions
	AUTO	Suitable for the road conditions
	SAND	Suitable for sandy roads
	MUD	Suitable for muddy roads
	ROCK	Suitable for rocky terrain

If the brake control has activated, the slip indicator light will flash.

► Four-wheel drive control switch is in H4

Mode		Road Conditions
	AUTO	Suitable for the road conditions
	DIRT	Suitable for dirt roads
	SAND	Suitable for sandy roads
	MUD	Suitable for muddy roads
	DEEP SNOW	Suitable for deep snow roads

If the brake control has activated, the slip indicator light will flash.

When the vehicle is in SAND, MUD or DEEP SNOW mode, VSC is automatically turned off. (VSC OFF indicator light come on.)

■ **Multi-terrain Select**

Multi-terrain Select controls the vehicle so that it can maximize the drive force and improve drivability on rough roads. As a result, fuel efficiency may diminish when compared to driving in normal mode.

■ **Automatic system cancelation**

In the following situations, Multi-terrain Select will be canceled automatically.

- When the DRIVE MODE switch is pressed while the four-wheel drive control switch is in H4.
- When the engine switch is turned off

■ **AUTO mode**

Estimates the road conditions where the vehicle is being driven and optimizes

brake control, drive force control and suspension control.

The capability to estimate the road conditions is limited and there is a chance that the Multi-terrain Select may not be the most appropriate for road conditions such as pitch, slipperiness, undulation, etc.

In these cases, select the mode that matches the road conditions before driving.

■ Turning off Multi-terrain Select

Performing the following turns Multi-terrain Select off, and then the display on the multi-information display will disappear.

- ▶ When the MTS switch indicator is illuminated

Press the MTS switch while the system is in operation.

- ▶ When the MTS switch indicator is not illuminated

Press the MTS switch to turn the indicator on.

Press the MTS switch again with the Multi-terrain Select indicator illuminated.

■ When the vehicle is stuck

Switching the transfer and differential For the operation of the following functions, refer to the following pages.

- Four-wheel drive system (→P.475)
- Center differential lock (→P.476)
- Front differential lock* (→P.478)
- Rear differential lock* (→P.480)

*: If equipped

■ Driving in Multi-terrain Select

The following types of situations may occur, but they are not malfunctions.

- Vibrations may be felt throughout the vehicle or steering wheel.
- Operating noise may be heard from the engine compartment.

■ When an inspection at your Toyota dealer is necessary

In the following situations, the system may be malfunctioning. Have the vehicle inspected by your Toyota dealer immediately.

- When the slip indicator light illuminates.
- When the indicator for each mode does not illuminate on the multi-information display even though Multi-terrain Select is selected.

Downhill assist control system*

*: If equipped

The downhill assist control system helps to prevent excessive speed on steep downhill slopes. The system will operate when the vehicle is traveling under 30 km/h (18 mph) and transfer mode is in H4.

WARNING

■ When using downhill assist control system


Do not rely overmuch on the downhill assist control system. This function does not extend the vehicle's performance limitations. Always thoroughly check the road conditions, and drive safely.

System operation

Press the DAC/CRAWL switch.


The downhill assist control system indicator will come on and the system will operate.

When the system is in operation, the slip indicator light will flash, and the stop lights/high mounted stop lights will be lit. A sound may also occur during the operation. This does not indicate a malfunction.

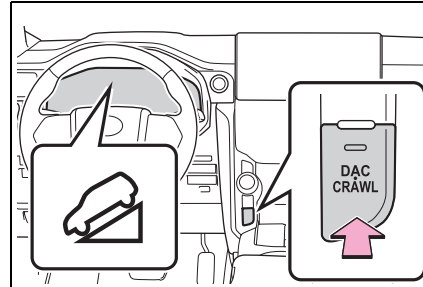

Setting the speed of the downhill assist control system

Turn the MODE SELECT switch to set the desired speed (approx. 4 to 30 km/h). The set speed is displayed on the multi-information display.

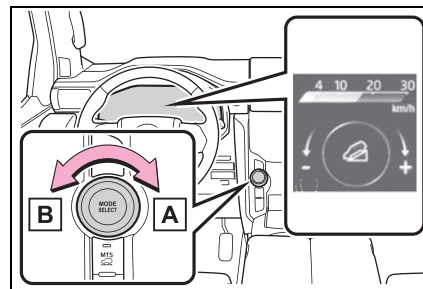

A Increases the speed

B Decreases the speed

Turning off the system

► When the DAC/CRAWL switch indicator illuminates

Press the DAC/CRAWL switch again.

- ▶ When the DAC/CRAWL switch indicator does not illuminate

Press the DAC/CRAWL switch to turn the indicator on. Press the DAC/CRAWL switch again with the indicator turned on.

The downhill assist control system indicator will flash as the system gradually ceases operation, and will turn off when the system is fully off.

Press the DAC/CRAWL switch while the downhill assist control system indicator is flashing to start the system again.

■ Operating tips

The system will operate when the shift lever is in a position other than P, however to make effective use of the system it is recommended to select a lower shift range.

■ The system will not operate when

- The rear differential is locked. (if equipped)
- The front differential is locked. (if equipped)

■ If the downhill assist control system indicator flashes

- In the following situations, the indicator flashes and the system will not operate:
 - The four-wheel drive control switch is changed to a position other than H4.
 - The shift lever is in P.
 - The vehicle speed exceeds approximately 30 km/h (18 mph).
 - The brake system overheats.
- In the following situations, the indicator flashes to alert the driver, but the system will operate:
 - The shift lever is in N.
 - The DAC/CRAWL switch is pressed while the DAC/CRAWL switch indicator illuminates.

The system will gradually ceases opera-

tion. The indicator will flash during operation, and then go off when the system is fully off.

■ When the downhill assist control system is operated continuously

If the downhill assist control system is operated for a long period of time, the brake system may abnormally overheat. To prevent that, a buzzer will sound and the function is temporarily stopped.

In this case, the downhill assist control system indicator will flash and "Traction Control Turned OFF" will be shown on the multi-information display. (The vehicle can be driven normally during this time)

When the downhill assist control system indicator switches to steadily illuminated after a short while and the "Traction Control Turned OFF" disappears, the system will become available.

■ Sounds and vibrations caused by the downhill assist control system

- A sound may be heard from the engine compartment when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in downhill assist control system.
- Either of the following conditions may occur when the downhill assist control system is operating. None of these are indicators that a malfunction has occurred.
 - Vibrations may be felt through the vehicle body and steering.
 - A motor sound may be heard after the vehicle comes to a stop.

■ System malfunction

In the following cases, have your vehicle checked by your Toyota dealer.

- The downhill assist control system indicator does not come on when the DAC/CRAWL switch is pressed.
- The slip indicator light comes on.

⚠ WARNING

■ On the following surfaces, the vehicle may be unable to maintain a constant low speed especially when the grip performance limit of the tires is exceeded or if the tires do not make sufficient contact with the ground. This could result in serious injury, or even death.

- Slippery surfaces such as wet or muddy roads
- Icy surface
- Very bumpy and rough roads

DPF (Diesel Particulate Filter) system*


*: If equipped

When the deposit collected by the filter reaches a predetermined amount, it is automatically regenerated.


⚠ WARNING**■ During regeneration**

Observe the following precautions. Failure to do so may result in serious injury such as burns caused by the hot exhaust pipe and exhaust gases, or may cause a fire.

- Do not stop the vehicle where flammable materials, such as dry grass, are near the exhaust pipe.

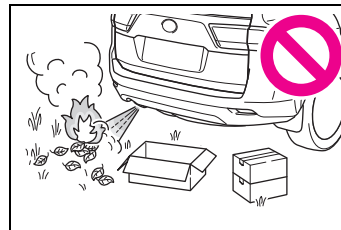

- Make sure that there are no people near the exhaust pipe.

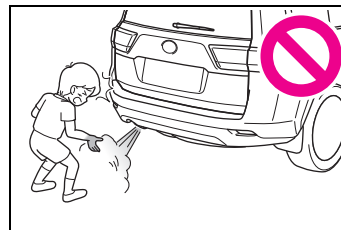

- Do not carry out regeneration when the vehicle is in an enclosed area, such as a garage.
- Do not touch the exhaust pipe and exhaust gases during regeneration.



NOTICE

■ **To prevent the DPF system from failing**

- Do not drive for long periods of time while “DPF full Visit your dealer” appears on the multi-information display
- Do not use fuel other than the specified type
- Do not use engine oil other than the recommended type
- Do not modify the exhaust pipe

Regeneration

- During normal driving, the filter is automatically regenerated every several hundred kilometers*. During regeneration, “DPF Regeneration in Progress” is displayed on the multi-information display.
- When the amount of accumulate deposit reaches a certain level, regeneration can also be performed. (→P.492)

*: Differs in accordance with weather, driving conditions, etc.

System characteristics

The DPF system has the following characteristics:


- Idle speed increases during regeneration
- The smell of the exhaust gas differs from that of a conventional diesel vehicle
- White smoke may be emitted

from the exhaust pipe during regeneration. However, this does not indicate a malfunction.

DPF deposition monitor

The amount of accumulated deposit in the DPF system can be confirmed from the DPF deposition monitor.

The DPF deposition monitor appears when the DPF system switch is pressed or the warning message is displayed. Use the displayed DPF deposition as a reference.

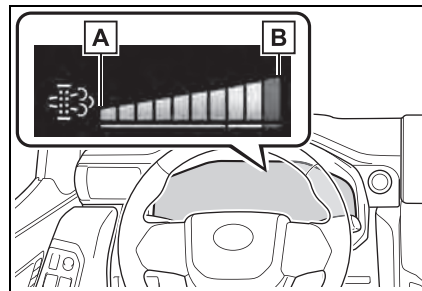

A Low

B Full

DPF system failure warning

- If “DPF FULL SEE OWNER’S MANUAL” appears on the multi-information display, follow the procedure below to regenerate.


- 1 Stop the vehicle in a safe place.
- 2 Firmly set the parking brake and shift the shift lever to P.

Do not stop the engine. Also, make sure that there are no flammable materials near the exhaust pipe. (→P.491)

Check the engine is warmed up. If the engine is cold, warm up the engine by depressing the accelerator pedal.*¹

3 Press the DPF system switch.

The “Manual regeneration in process Keep flammables away from vehicle” appears on the multi-information display, and the idling engine speed will increase.

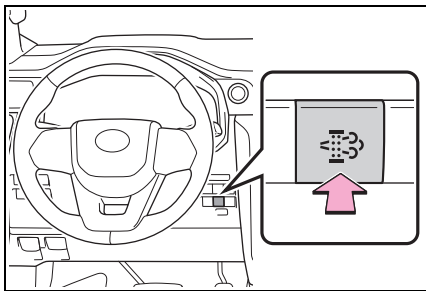

Regeneration will take around 15 - 40 minutes to complete.*²

When the warning message goes out, the idling engine speed will have finished returning to normal.

The DPF system switch may not operate when the vehicle is higher than 4000 m (13124 ft.) above sea level.

*¹: Depending on the situation, it may be necessary to depress the accelerator pedal until the engine speed is increased to 3000 rpm. If the engine coolant temperature or exhaust gas temperature is low, it may take a long time to regenerate, or regeneration may be impossible.

*²: Time required for regeneration differs in accordance with the outside temperature. Also, if the engine speed is still approximately 2000 rpm 10 minutes after pressing the DPF system switch, the exhaust gas temperature may be low. In this case, depress the accelerator pedal to run the engine at approximately 3000 rpm for a while.

- If “DPF FULL MANUAL REGENERATION REQUIRED SEE OWNER’S MANUAL” appears on the multi-information display, press the DPF system switch to regenerate the filter.
- If “DPF full Visit your dealer” appears on the multi-information display and the malfunction indicator lamp comes on, have the vehicle inspected by your Toyota dealer immediately.

■ Regeneration with the DPF system switch

- After pressing the DPF system switch, depressing the accelerator pedal will stop regeneration. If regeneration has been stopped, restart regeneration as soon as possible.
- After regeneration is finished, race the engine several time to clean the exhaust system.
- If regeneration is carried out while the exhaust pipe is hot (for example directly after driving), it will take less time than when the engine is cold.

■ Replacing the engine oil

Make sure to use an oil of the recommended grade or of matching quality. (→P.748)

■ DPF system warning

Under the following driving conditions, the warning message may appears earlier than normal.*

- When only driving at low speeds (for example 20 km/h [12 mph] or below).
- If the engine is turned on and off frequently (if the engine is not left running for more than 10 minutes at a time).

*: Differs in accordance with weather, driving conditions, etc.

**NOTICE****■ If the malfunction indicator lamp comes on**

The malfunction indicator lamp comes on if you continue driving while the warning message appears on the multi-information display. In this event, damage may be caused to the vehicle or an accident may occur. Have the vehicle inspected by your Toyota dealer immediately.

Driving assist systems

To keep driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

Summary of the driving assist systems**■ ECB (Electronically Controlled Brake System)**

The electronically controlled system generates braking force corresponding to the brake operation

■ Multi Terrain ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface, or in off-road conditions (such as rough roads, sand and mud)

Vehicles with Multi-terrain Select system: The Multi Terrain ABS operates in synchronization with the Multi-terrain Select

■ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

■ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces.

Provides cooperative control of the Multi Terrain ABS, Active TRC, VSC and steering system.

Helps to maintain directional stability when swerving on slippery road surfaces by controlling steering performance.

■ Trailer Sway Control

Helps the driver to control trailer sway by selectively applying brake pressure for individual wheels and reducing driving torque when trailer sway is detected.

■ Active TRC (Traction Control)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

■ Hill-start assist control

Helps to reduce the backward movement of the vehicle when starting on an uphill

■ Electronic-Kinetic Dynamic Suspension System (if equipped)

Electronically controls the stabilizer according to the road conditions and driving conditions such as when driving off-road or on a curve, enhancing riding comfort and driving stability.

In addition, the control is optimized

for each mode by selecting the drive mode using the driving mode select (→P.473) and multi-terrain select. (→P.486)

Control can be changed to suit off-road driving by setting the four-wheel drive control switch to L4.

■ VDIM (Vehicle Dynamics Integrated Management) (if equipped)

Comprehensively controls the Multi Terrain ABS, brake assist, Active TRC, VSC, hill-start assist control, and the steering system. Controls the braking, engine output and steering wheel operation when the steering wheel is operated suddenly such as when driving on a slippery road surface, helping to enhance vehicle stability.

■ AVS (Adaptive Variable Suspension System) (if equipped)

The damping force of the shock absorbers are independently controlled for the 4 wheels according to factors including the road surface conditions and driving operation, contributing toward enhancing smooth driving comfort and superior stability, and helping to maintain vehicle posture.

In addition, the damping force can be changed by selecting the drive mode with the driving mode select (→P.473), and driving comfort can be ensured during off-road driving by setting the four-wheel drive control switch to L4. (→P.475)

■ **Automatic Rear Flashing Hazard Lights (if equipped)**

The rear side radar sensors detect following vehicles driving in the same lane. If the system determines that the possibility of a rear-end collision is high, the emergency flashers will flash rapidly to warn the driver of the following vehicle. Simultaneously, a message will be displayed on the multi-information display to notify the driver of the approach of the following vehicle.

■ **Emergency brake signal**


When the brakes are applied suddenly, the emergency flashers automatically flash to alert the vehicle behind.

■ **Secondary Collision Brake (if equipped)**

When the SRS airbag sensor detects a collision and the system operates, the brakes and brake lights are automatically controlled to reduce the vehicle speed and help reduce the possibility of further damage due to a secondary collision.


■ **When the Active TRC/VSC/Multi Terrain ABS/Trailer Sway Control systems are operating**


The slip indicator light will flash while the Active TRC/VSC/Multi Terrain ABS/Trailer Sway Control systems are operating.

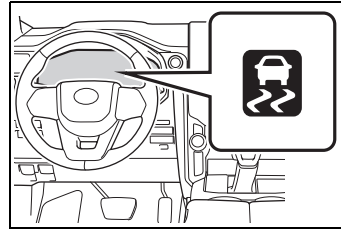


■ **Disabling the Active TRC system**


If the vehicle gets stuck in mud, dirt or snow, the Active TRC system may reduce power from the engine to the wheels.

Pressing  to turn the system off may make it easier for you to rock the vehicle in order to free it.


To turn the Active TRC system off, quickly press and release .

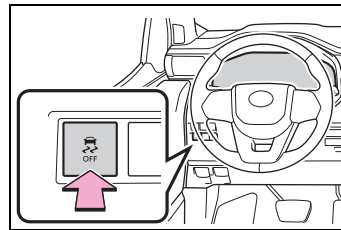


"Traction Control Turned OFF" will be shown on the multi-information display.

Press  again to turn the system back on.

■ **Turning off the Active TRC/VSC/Trailer Sway Control systems**


To turn the Active TRC/VSC/Trailer Sway Control systems off, press and hold  for more than 3 seconds while the vehicle is stopped.

The VSC OFF indicator light will come on and the "Traction Control Turned OFF" will be shown on the multi-information display.*

Press  again to turn the systems back on.

*: On vehicles with PCS (Pre-Collision

System), PCS will also be disabled (only Pre-Collision warning is available). The PCS warning light will come on and a message will be displayed on the multi-information display. (→P.314)

■ **When the message is displayed on the multi-information display showing that Active TRC has been disabled even if  has not been pressed**

Active TRC is temporary deactivated. If the information continues to show, contact your Toyota dealer.

■ **Operating conditions of hill-start assist control**

When all of the following four conditions are met, the hill-start assist control will operate:

- The shift lever is in a position other than P or N (when starting off forward/backward on an upward incline).
- The vehicle is stopped.
- The accelerator pedal is not depressed.
- The parking brake is not engaged.
- The engine switch is in ON

■ **Automatic system cancelation of hill-start assist control**

The hill-start assist control will turn off in any of the following situations:

- The shift lever is shifted to P or N.
- The accelerator pedal is depressed.
- The brake pedal is depressed and the parking brake is engaged.
- A maximum of 2 seconds have elapsed after the brake pedal is released.
- The engine switch is turned to OFF.

■ **Sounds and vibrations caused by the Multi Terrain ABS, brake assist, VSC, Trailer Sway Control, Active TRC and hill-start assist control systems**

- A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
 - Vibrations may be felt through the vehicle body and steering.
 - A motor sound may be heard also after the vehicle comes to a stop.

■ **ECB operating sound**

ECB operating sound may be heard in the following cases, but it does not indicate that a malfunction has occurred.

- Operating sound heard from the engine compartment when the brake pedal is operated.
- Motor sound of the brake system heard from the front part of the vehicle when the driver's door is opened.
- Operating sound heard from the engine compartment when one or two minutes passed after the stop of the engine.

■ **Automatic reactivation of Active TRC, Trailer Sway Control and VSC systems**

After turning the Active TRC, Trailer Sway Control and VSC systems off, the systems will be automatically re-enabled in the following situations:

- When the engine switch is turned off.
- If only the Active TRC system is turned off, the Active TRC will turn on when vehicle speed increases. If both the Active TRC and VSC systems are turned off, automatic re-enabling will not occur when vehicle

speed increases.

■ Operating conditions of Automatic Rear Flashing Hazard Lights

When the following two conditions are met, the Automatic Rear Flashing Hazard Lights will operate:

- The relative speed between your vehicle and the following vehicle is between approximately 30 and 100 km/h (19 and 62 mph).
- Your vehicle is being driven at approximately 10 km/h (7 mph) or less or at any speed with the brake pedal depressed.

■ Situations in which the Automatic Rear Flashing Hazard Lights may not operate properly

- In the following situations, the system may not detect a following vehicle properly:
 - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
 - When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
 - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
 - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
 - When the following vehicle is not approaching from straight behind your vehicle
 - When the following vehicle is approaching from an angle
 - If a vehicle suddenly cuts behind your vehicle
 - When the following vehicle is surrounded by other vehicles
 - When a bicycle carrier or other accessory is installed to the rear of your vehicle
- In the following situations, the system may operate even though there is no possibility of a collision
 - When the sensor is misaligned due to a strong impact to the sensor or its

surrounding area

- When your vehicle is surrounded by other vehicles
- When your vehicle is stopped to make a turn at an intersection, etc. and a vehicle passes your vehicle from straight behind
- When your vehicle is stopped on the roadside, etc. and a vehicle passes close to the side of your vehicle
- When a following vehicle closely approaches your vehicle before overtaking
- When a following vehicle suddenly approaches to close to your vehicle

■ When “Flashing Hazard Lights Unavailable” is shown on the multi-information display

The Automatic Rear Flashing Hazard Lights function is suspended.

In this case, ice, snow, mud, etc., may be attached to the bumper in the area around the sensor. (→P.368) The system should return to normal operation after removing the ice, snow, mud, etc. from the rear bumper. Additionally, the sensors may not operate normally when driving in extremely hot or cold environments.

■ Operating conditions of emergency brake signal

When the following conditions are met, the emergency brake signal will operate:

- The emergency flashers are off.
- Actual vehicle speed is over 55 km/h (35 mph).
- The system judges from the vehicle deceleration that it is a sudden braking operation.

■ Automatic system cancelation of emergency brake signal

The emergency brake signal will be canceled in any of the following situations:

- The emergency flashers are turned on.
- The system judges from the vehicle deceleration that is not a sudden braking operation.

■ Secondary Collision Brake operating conditions

The system operates when the SRS air-bag sensor detects a collision while the vehicle is in motion. However, the system does not operate when the components are damaged.

■ Secondary Collision Brake automatic cancellation

The system is automatically canceled in any of the following situations.

- The vehicle speed drops to approximately 0 km/h (0 mph).
- A certain amount of time elapses during operation
- The accelerator pedal is depressed a large amount



WARNING

■ The Multi Terrain ABS does not operate effectively when

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on wet or slick roads.

■ Stopping distance when the Multi Terrain ABS is operating may exceed that of normal conditions

The Multi Terrain ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

■ Active TRC/VSC may not operate effectively when

Directional control and power may not be achievable while driving on slippery road surfaces, even if the Active TRC/VSC system is operating. Drive the vehicle carefully in conditions where stability and power may be lost.

■ Hill-start assist control does not operate effectively when

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on steep inclines and roads covered with ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline, as doing so may lead to an accident.

■ When the Active TRC/VSC/Trailer Sway Control is activated

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

■ When the Active TRC/VSC/Trailer Sway Control systems are turned off

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help enhance vehicle stability and driving force, do not turn the Active TRC/VSC/Trailer Sway Control systems off unless necessary.

Trailer Sway Control is part of the VSC system and will not operate if VSC is turned off or experiences a malfunction.



WARNING

■ **Replacing tires**

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The Multi Terrain ABS, Active TRC, Trailer Sway Control and VSC systems will not function correctly if different tires are installed on the vehicle.

Contact your Toyota dealer for further information when replacing tires or wheels.

■ **Handling of tires and the suspension**

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

■ **Trailer Sway Control precaution**

The Trailer Sway Control system is not able to reduce trailer sway in all situations. Depending on many factors such as the conditions of the vehicle, trailer, road surface and driving environment, the Trailer Sway Control system may not be effective. Refer to your trailer owner's manual for information on how to tow your trailer properly.

■ **If trailer sway occurs**

Observe the following precautions. Failing to do so may cause death or serious injury.

- Firmly grip the steering wheel. Steer straight ahead. Do not try to control trailer swaying by turning the steering wheel.

- Begin releasing the accelerator pedal immediately but very gradually to reduce speed. Do not increase speed. Do not apply vehicle brakes.

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize.

(→P.239)

■ **Secondary Collision Brake**

Do not rely solely upon the Secondary Collision Brake. This system is designed to help reduce the possibility of further damage due to a secondary collision, however, that effect changes according to various conditions. Overly relying on the system may result in death or serious injury.

■ **Handling the rear side radar sensor (vehicles with Automatic Rear Flashing Hazard Lights)**

→P.368



NOTICE

■ **Electronic-Kinetic Dynamic Suspension System precautions (if equipped)**

In the following cases, the system may be malfunctioning and driving comfort or drivability on rough roads may be impaired. Have the vehicle inspected by your Toyota dealer immediately.

- When there is a feeling that the incline of the vehicle has become larger than usual when turning at a corner.

**NOTICE**

- When the incline of the vehicle does not return even after the vehicle has continued to drive after being left on an inclined position such as on a curb or slope for a long time (the vehicle may remain in an inclined condition immediately after it is returned to on a level surface).

Off-road precautions

This vehicle belongs to the utility vehicle class, which has higher ground clearance and narrower tread in relation to the height of its center of gravity to make it capable of performing in a wide variety of off-road applications.

Off-road vehicle features

- Specific design characteristics give it a higher center of gravity than ordinary passenger cars. This vehicle design feature causes this type of vehicle to be more likely to rollover. And, utility vehicles have a significantly higher rollover rate than other types of vehicles.
- An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems.
- It is not designed for cornering at the same speeds as ordinary passenger cars any more than low-slung sports cars are designed to perform satisfactorily under off-road conditions. Therefore, sharp turns at excessive speeds may cause the vehicle to rollover.



WARNING

Off-road vehicle precautions

Always observe the following precautions to minimize the risk of death, serious injury or damage to your vehicle:

- In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Therefore, the driver and all passengers should always fasten their seat belts.
- Avoid sharp turns or abrupt maneuvers, if at all possible. Failure to operate this vehicle correctly may result in loss of control or vehicle rollover causing death or serious injury.
- Loading cargo on the roof luggage carrier will make the center of the vehicle gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly.
- Always slow down in gusty crosswinds. Because of its profile and higher center of gravity, your vehicle is more sensitive to side winds than an ordinary passenger car. Slowing down will allow you to have better control.
- Do not drive horizontally across steep slopes. Driving straight up or straight down is preferred. Your vehicle (or any similar off-road vehicle) can tip over sideways much more easily than forward or backward.

Off-road driving

When driving your vehicle off-road, please observe the following pre-

cautions to ensure your driving enjoyment and to help prevent the closure of areas to off-road vehicles:

- Drive your vehicle only in areas where off-road vehicles are permitted to travel.
- Respect private property. Get owner's permission before entering private property.
- Do not enter areas that are closed. Honor gates, barriers and signs that restrict travel.
- Stay on established roads. When conditions are wet, driving techniques should be changed or travel delayed to prevent damage to roads.

 **WARNING**

■ **Off-road driving precautions**

Always observe the following precautions to minimize the risk of death, serious injury or damage to your vehicle:

- Drive carefully when off the road. Do not take unnecessary risks by driving in dangerous places.
- Do not grip the steering wheel spokes when driving off-road. A bad bump could jerk the wheel and injure your hands. Keep both hands and especially your thumbs on the outside of the rim.
- Always check your brakes for effectiveness immediately after driving in sand, mud, water or snow.

- After driving through tall grass, mud, rock, sand, rivers, etc., check that there is no grass, bush, paper, rags, stone, sand, etc. adhering or trapped on the underbody. Clear off any such matter from the underbody. If the vehicle is used with these materials trapped or adhering to the underbody, a breakdown or fire could occur.
- When driving off-road or in rugged terrain, do not drive at excessive speeds, jump, make sharp turns, strike objects, etc. This may cause loss of control or vehicle rollover causing death or serious injury. You are also risking expensive damage to your vehicle's suspension and chassis.



NOTICE

■ **To prevent the water damage**

Take all necessary safety measures to ensure that water damage to the engine or other components does not occur.

- Water entering the engine air intake will cause severe engine damage.
- Water entering the automatic transmission will cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage.
- Water can wash the grease from wheel bearings, causing rusting and premature failure, and may also enter the differentials, transmission and transfer case, reducing the gear oil's lubricating qualities.

■ **When you drive through water**

If driving through water, such as when crossing shallow streams, first check the depth of the water and the bottom of the riverbed for firmness. Drive slowly and avoid deep water.



NOTICE

■ Inspection after off-road driving

- Sand and mud that has accumulated in brake drums and around brake discs may affect braking efficiency and may damage brake system components.
- Always perform a maintenance inspection after each day of off-road driving that has taken you through rough terrain, sand, mud, or water. For scheduled maintenance information, refer to the scheduled Maintenance (→P.628).

Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter.

Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

Pre-winter preparations

- Use fluids that are appropriate to the prevailing outside temperatures.
 - Engine oil
 - Engine coolant
 - Intercooler coolant (if equipped)
 - Washer fluid
- Have a service technician inspect the condition of the battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the rear tires.

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

■ Fuel for diesel engine at low temperatures

Use winter diesel fuel during low temperatures. Usage of summer diesel fuel at low temperatures may lead to incorrect operation of the fuel system and engine malfunction. Reduce as much as possible amount of summer diesel fuel in the fuel tank during usage at low temperatures, and refuel with winter

diesel fuel as soon as possible. Check information about type and features of usage of diesel fuel at the gas stations.

WARNING

■ **Driving with snow tires**

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being used.
- Use snow tires on all, not just some wheels.

■ **Driving with tire chains**

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LTA (Lane Tracing Assist) system (if equipped).

- Do not use LDA (Lane Departure Alert with Yaw Assist Function) system (if equipped).

NOTICE

■ **Repairing or replacing snow tires (vehicles with tire pressure warning system)**

Request repairs or replacement of snow tires from your Toyota dealer or legitimate tire retailers.

This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

When driving the vehicle

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

When parking the vehicle (in the winter time or in the cold latitudes)

- Park the vehicle and move the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is parked without setting the parking brake, make sure to block the wheels.

Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.

When the parking brake is in automatic mode, release the parking brake after shifting the shift lever to P. (→P.262, 266)

- If the vehicle is parked without setting the parking brake, confirm that the shift lever cannot be moved out of P*.

*: The shift lever will be locked if it is attempted to be shifted from P to any other position without depressing the brake pedal. If the shift lever can be shifted from P, there may be a problem with the shift lock system. Have the vehicle inspected by your Toyota dealer immediately.


! WARNING

When parking the vehicle

When parking the vehicle without applying the parking brake, make sure to chock the wheels. If you do not chock the wheels, the vehicle may move unexpectedly, possibly resulting in an accident.

Selecting tire chains

Use the correct tire chain size when mounting the snow chains. Chain size is regulated for each tire size.

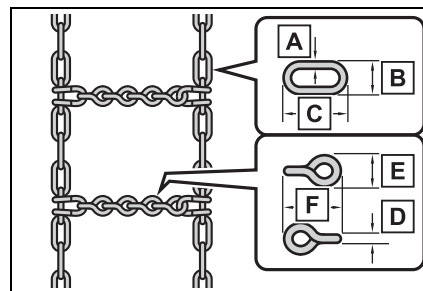

Side chain:

- A** 5 mm [0.20 in.] in diameter
- B** 18 mm [0.71 in.] in width
- C** 46 mm [1.81 in.] in length

Cross chain:

- D** 6.3 mm [0.25 in.] in diameter
- E** 22.6 mm [0.89 in.] in width
- F** 38.1 mm [1.50 in.] in length

Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check

local regulations before installing chains.

■ Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the rear tires only. Do not install tire chains on the front tires.
- Install tire chains on rear tires as tightly as possible. Retighten chains after driving 0.5 - 1.0 km (1/4 - 1/2 mile).
- Install tire chains following the instructions provided with the tire chains.



NOTICE

■ Fitting tire chains (vehicles with tire pressure warning system)

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

Eco-friendly driving tips

For improved fuel economy and reduced CO₂ emissions, pay attention to the following points:

Using Eco drive mode

When using Eco drive mode, the torque corresponding to the accelerator pedal depression amount can be generated more smoothly than it is in normal conditions. In addition, the operation of the air conditioning system (heating/cooling) will be minimized, improving the fuel economy. (→P.473)

Use of Eco Driving Indicator

The Eco-friendly driving is possible by keeping the Eco Driving Indicator Light on and keeping the bar display of the Eco Driving Indicator shown in the multi-information display within the Zone of Eco driving. (→P.139)

Accelerator pedal/brake pedal operation

Drive your vehicle smoothly. Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will help reduce excessive fuel consumption.

When braking

Observe conditions in front of and around the vehicle, and estimate your stopping position. Release the accelerator pedal early and continue coasting. Use the brake pedal to adjust your stopping position. Make sure to operate the brake pedal gently.

Delays

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel economy. Check traffic reports before leaving and avoid delays as much as possible.

Highway driving

Control and maintain the vehicle at a constant speed. Before stopping at a toll booth or similar, allow plenty of time to release the accelerator pedal and gently apply the brakes.

Air conditioning

Use the air conditioning only when necessary. Doing so can help reduce excessive fuel consumption.

In summer: When the ambient temperature is high, use the recirculated air mode. Doing so will help to reduce the burden on the air condi-

tioning system and reduce fuel consumption as well.

In winter: Turn the A/C switch on only when both heating and dehumidifying are needed, and if only heating is needed, turn the A/C switch off. Turning the A/C switch on when unnecessary leads to excessive fuel consumption.

Performing idling stops

- Avoid unnecessary idling. Stop the engine when parking the vehicle to reduce excessive fuel consumption, even if only for a short period of time.
- Except in severe environment, such as when the outside temperature is extremely low, warming up the engine before driving is unnecessary. Rather than idling, it is more efficient to drive the vehicle gently to warm up each part while avoiding increasing the engine revolutions unnecessarily and accelerating or decelerating suddenly.
- The followings are performed to maintain the functions, not unnecessary idling.
- Idling before stopping the engine with turbocharger (→P.232)

Luggage

Carrying heavy luggage will lead to poor fuel economy. Avoid carrying unnecessary luggage. Installing a

large roof rack will also cause poor fuel economy.

Regular maintenance

- Make sure to check the tire inflation pressure frequently. Improper tire inflation pressure can cause poor fuel economy. Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel economy. Use tires that are appropriate for the season and road conditions.
- Use oil and fluid of the recommended quality, which affect fuel consumption and the life of the vehicle. Also, check oil and fluid periodically. (→P.628)


- 5-1. Basic Operations**
 - Audio system types512
 - Using the steering wheel audio switches.....513
 - AUX port/USB port514
- 5-2. Using the audio system**
 - Optimal use of the audio system515
- 5-3. Using the radio**
 - Radio operation517
- 5-4. Playing an audio CD and MP3/WMA/AAC discs**
 - CD player operation.....518
- 5-5. Using an external device**
 - Listening to an iPod524
 - Listening to USB memory device529
 - Using the AUX port.....533
- 5-6. Using Bluetooth® devices**
 - Bluetooth® audio/phone....534
 - Using the steering wheel switches.....538
 - Register a Bluetooth® device538
- 5-7. “SETUP” menu**
 - Using the “SETUP” menu (“Bluetooth” menu).....540
 - Using the “SETUP” menu (“PHONE” menu).....543
- 5-8. Bluetooth® Audio**
 - Operating a Bluetooth® enabled portable player ..548
- 5-9. Bluetooth® Phone**
 - Making a phone call.....550
 - When receiving a phone call551
 - Speaking on the phone.....551
- 5-10. Bluetooth®**
 - Bluetooth®553

Audio system types *

*: If equipped

Overview

- ▶ Vehicles with navigation system or multimedia system
Refer to the “Navigation and Multimedia System Owner’s Manual”.
- ▶ Vehicles without navigation system or multimedia system
CD player with AM/FM radio

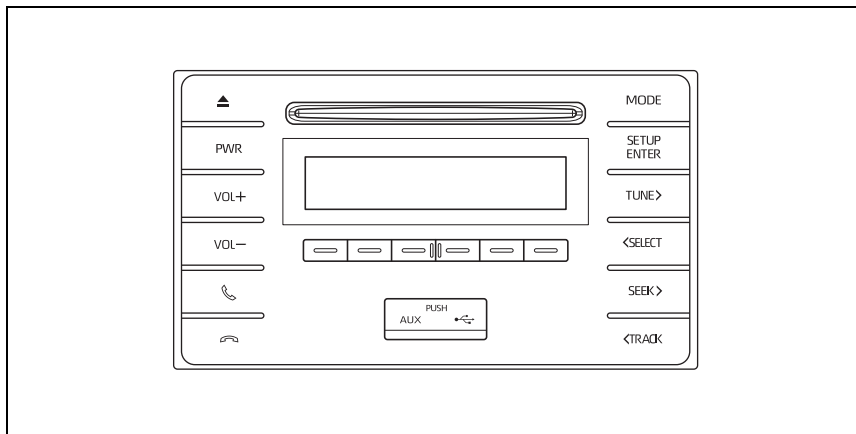


■ Using cellular phones

Interference may be heard through the audio system’s speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.

■ Trademarks and registered trademarks

The company names and product names regarding the audio system are the trademarks or registered trademarks of their respective companies.


	<p>NOTICE</p> <p>■ To prevent battery discharge Do not leave the audio system ON longer than necessary while the engine is stopped.</p> <p>■ To avoid damaging the audio system Be careful not to spill drinks or other fluids over the audio system.</p>
---	--

Using the steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.

Operation may differ depending on the type of audio system or navigation system. For details, refer to the manual provided with the audio system or navigation system.

Operating the audio system using the steering wheel switches

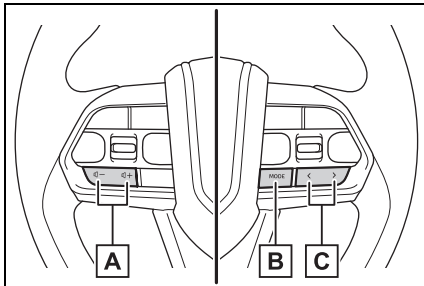

A Volume switch

- Press: Increases/decreases volume
- Press and hold until you hear a beep: Continuously increases/decreases volume

B "MODE" switch

- Press: Turn the power on, select an audio source
- Press and hold until you hear a beep: Radio or AUX mode: Mute
CD, MP3/WMA/AAC disc, iPod, USB or Bluetooth® audio mode: Pause the current operation.

To cancel the mute or pause, press and hold the switch again.

C Select switch

Radio mode:

- Press: Select a radio station saved in preset stations
- Press and hold until you hear a beep: Seek up/down

CD, MP3/WMA/AAC disc, iPod, USB or

Bluetooth® audio mode:

- Press: Select a track/file
- Press and hold until you hear a beep: Select a folder or album

Changing the audio source

Press the "MODE" switch when the audio system is turned on. The audio source changes as follows each time the button is pressed. If disc, USB/iPod, or AUX is not loaded or connected, it will be skipped.

AM→FM1→FM2→CD mode→iPod or USB memory→Bluetooth® audio→AUX

WARNING

To reduce the risk of an accident

Exercise care when operating the audio switches on the steering wheel.

AUX port/USB port*

*: If equipped


Connect an iPod, USB memory device or portable audio player to the AUX port/USB port as indicated below. Press the “MODE” button to select “iPod”, “USB” or “AUX”.

Connecting using the AUX port/USB port

■ **iPod**

Open the cover and connect an iPod using an iPod cable.

Turn on the power of the iPod if it is not turned on.

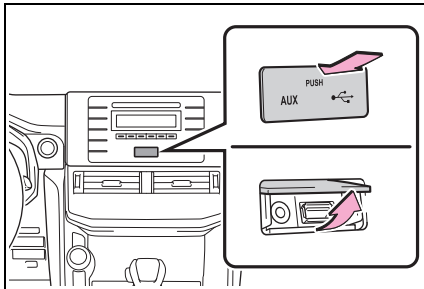

■ **USB memory**

Open the cover and connect the USB memory device.

Turn on the power of the USB memory device if it is not turned on.

■ **Portable audio player**

Open the cover and connect the portable audio player using an AUX cable.

Turn on the power of the portable audio

player if it is not turned on.

■ **AUX port**

The AUX port only supports audio input.

! WARNING

■ **While driving**


Do not connect a device or operate the device controls.

Optimal use of the audio system*

*: If equipped

The sound quality, volume balance and ASL settings can be adjusted.

Operation method

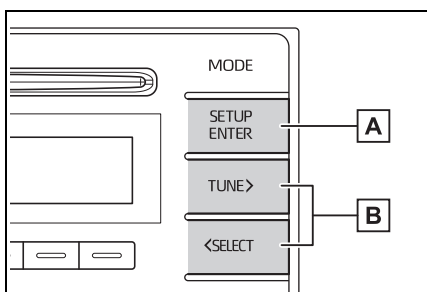

A Displays the "SETUP" menu/Selects the mode

B Changes the following settings

- "Sound Setting"

→P.515

Adjusting sound quality

Pressing the "TUNE >" or "< SELECT" button adjusts the level.

Sound quality mode	Mode displayed	Level	Press the "< SELECT"	Press the "TUNE >"
Bass*	"BASS"	-5 to 5	Low	High
Treble*	"TREBLE"	-5 to 5		
Front/rear volume balance	"FADER"	R7 to F7	Shifts to rear	Shifts to front
Left/right volume balance	"BALANCE"	L7 to R7	Shifts to left	Shifts to right


*: The sound quality level is adjusted individually in each audio mode.

- "Bluetooth"
- P.540
- "PHONE"
- P.543

Using the audio control function

Changing sound quality modes

- 1 Press the "SETUP ENTER" button.
 - 2 Press the "TUNE >" or "< SELECT" button to select "Sound Setting".
 - 3 Press the "SETUP ENTER" button.
 - 4 Press the "TUNE >" or "< SELECT" button as corresponds to the desired mode.
- "BASS", "TREBLE", "FADER", "BALANCE", or "ASL" can be selected.
- 5 Press the "SETUP ENTER" button.


Press the “SETUP ENTER” button or  (BACK) to return to the sound setting menu.

■ **Adjusting the Automatic Sound Levelizer (ASL)**

When ASL is selected, press the “TUNE >” or “< SELECT” button to change the amount of ASL.

“LOW”, “MID”, “HIGH”, or “OFF” can be selected.

ASL automatically adjusts the volume and tone quality according to vehicle speed.

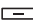
Press the “SETUP ENTER” button or  (BACK) to return to the sound setting menu.

Radio operation*

*: If equipped

Press the “MODE” button until “AM” or “FM” is displayed.

Control panel

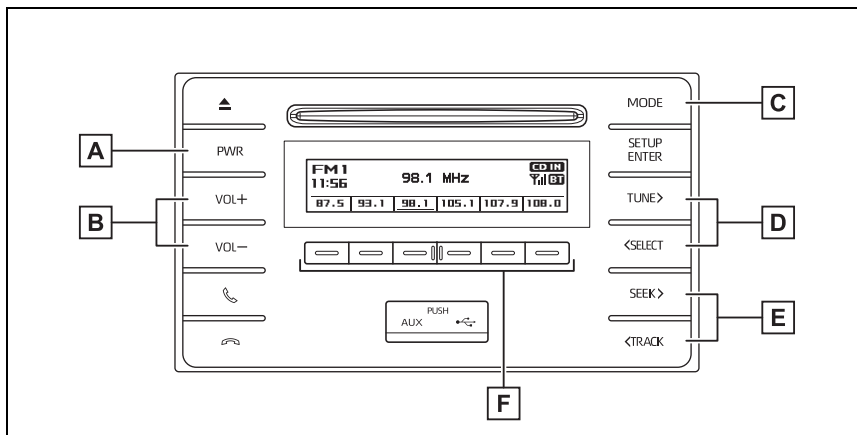

- A** POWER
- B** VOLUME
- C** AM/FM mode button
- D** Adjusting the frequency
- E** Seeking the frequency
- F** Station selectors

Setting station presets

- 1 Search for the desired stations by pressing the “TUNE >”, “< SELECT”, “SEEK >” or “< TRACK” button.
- 2 Press and hold one of the station selectors to be set until you hear a beep.

Reception sensitivity


- Maintaining perfect radio reception at all times is difficult due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains, transmitters, etc.
- The radio antenna is mounted inside the rear quarter window.

CD player operation*

*: If equipped

Insert a disc or press the “MODE” button (CD is already loaded) to begin listening to a CD.

Control panel

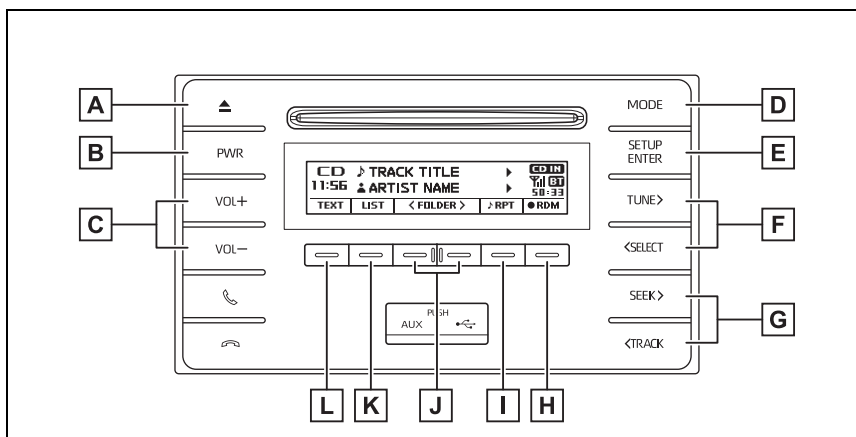

- A** Disc eject
- B** POWER
- C** VOLUME
- D** Changing the audio source/playback
- E** Selecting a track/file
- F** Moving the cursor to select a desired item from the list
- G** Selecting a track, fast-forwarding or rewinding
- H** Random play or back button
- I** Repeat play
- J** Selecting a folder (MP3/WMA/AAC discs only)
- K** Displaying track/folder list
- L** Displaying text message

Loading a CD or MP3/WMA/AAC disc

Insert a disc.

Ejecting a CD or MP3/WMA/AAC disc

Press the disc eject button and remove the disc.

Using the CD player

■ Selecting a track

Press the “SEEK >” or “< TRACK” button to move up or down until the desired track number is displayed.

■ Selecting a track from a track list

- 1 Press \square (LIST).

The track list will be displayed.

- 2 Press the “TUNE >” or “< SELECT” button to select a track, and press the “SETUP ENTER” button.

To return to the previous display, press \square (BACK).

■ Fast-forwarding and rewinding tracks

Press and hold the “SEEK >” or “< TRACK” button until you hear a beep.

■ Random play

Press \square (RDM).

To cancel, press \square (RDM) again.

■ Repeat play

Press \square (RPT).

To cancel, press \square (RPT) again.

■ Switching the display

Press \square (TEXT) to display or hide the CD title.

If there are continuing texts, \blacktriangleright is displayed.

Press and hold \square (TEXT) until you hear a beep to display the remaining texts.

Playing back MP3/WMA/AAC disc

■ Selecting folders one at a time

Press \square (<FOLDER) or \square (FOLDER>) to select the desired folder.

■ Selecting a folder and file from folder list

- 1 Press \square (LIST).

The folder list will be displayed.

- 2 Press the “TUNE >” or “< SELECT” button to select a folder and file, and press the “SETUP ENTER” button.

To return to the previous display, press \square (BACK).

■ Returning to the first folder

Press and hold \square (<FOLDER) until you hear a beep.


■ **Selecting a file**

Press the “SEEK >” or “< TRACK” button to move up or down to select the desired file.


■ **Fast-forwarding and rewinding files**

Press and hold the “SEEK >” or “< TRACK” button until you hear a beep.

■ **Random play**


Pressing  (RDM) changes modes in the following order: Folder random→Disc random→Off


■ **Repeat play**

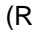
Pressing  (RPT) changes modes in the following order: File repeat→Folder repeat*→Off

*: Available except when “RDM” (random play) is selected

■ **Switching the display**

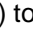Press  (TEXT) to display or hide the album title.

If there are continuing texts,  is displayed.

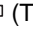Press and hold  (TEXT) until you hear a beep to display the remaining texts.

■ **Display**

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

■ **Error messages**

If an error message is displayed, refer to the following table and take the appropriate measures. If the problem is not

rectified, take the vehicle to your Toyota dealer.

Message	Cause/Correction procedures
“CD CHECK”	The disc may be dirty, damaged or inserted upside-down. Clean the disc or insert it correctly.
“ERROR 3”	There is a trouble inside the system. Eject the disc.
“ERROR 4”	An over current error has occurred. Turn the engine switch to off.
“WAIT”	Operation has stopped due to a high temperature inside the player. Wait for a while and then press the “MODE” button. If the CD still cannot be played back, contact your Toyota dealer.
“NO SUPPORT”	This indicates that the MP3, WMA or AAC file is not included in the CD. Eject the disc.

■ **Discs that can be used**

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



CDs with copy-protect features may not play correctly.

■ CD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected while the CD player is being used.

■ If a CD is left inside the CD player or in the ejected position for extended periods

The CD may be damaged and may not play properly.

■ Lens cleaners

Do not use lens cleaners. Doing so may damage the CD player.

■ MP3, WMA and AAC files

MP3 (MPEG Audio LAYER3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

There is a limit to the MP3, WMA and AAC file standards and to the media/formats recorded by them that can be used.

- MP3 file compatibility
- Compatible standards

MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)

- Compatible sampling frequencies
- MPEG1 LAYER3: 32, 44.1, 48 (kHz)
- MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with

VBR)

MPEG1 LAYER3: 32—320 (kbps)

MPEG2 LSF LAYER3: 8—160 (kbps)

- Compatible channel modes: stereo, joint stereo, dual channel and monaural

- WMA file compatibility
- Compatible standards

WMA Ver. 7, 8, 9 (9.1/9.2)

- Compatible sampling frequencies
- 32, 44.1, 48 (kHz)

- Compatible bit rates (only compatible with 2-channel playback)

Ver. 7, 8: CBR 48-192 (kbps)

Ver. 9 (9.1/9.2): CBR 48-320 (kbps)

- AAC file compatibility
- Compatible standards

MPEG4/AAC-LC

- Compatible sampling frequencies
- 11.025/12/16/22.05/24/32/44.1/48 (kHz)

- Compatible bit rates (compatible with VBR)

8-320 (kbps)

- Compatible channel modes

1ch, 2ch (Dual channel is not supported)

- Compatible media

Media that can be used for MP3, WMA and AAC playback are CD-ROMs CD-Rs and CD-RWs.

Playback in some instances may not be possible, depending on the status of the CD-ROM, CD-R or CD-RW. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

- Compatible disc formats

The following disc formats can be used.

- Disc formats:
 - CD-ROM Mode 1 and Mode 2
 - CD-ROM XA Mode 2, Form 1 and Form 2
- File formats:
 - ISO9660 Level 1, Level 2, (Romeo,

Joliet)
UDF (2.01 or lower)

MP3, WMA and AAC files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows.

- Maximum directory hierarchy: 8 levels (including the root)
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

● File names

The only files that can be recognized as MP3/WMA/AAC and played are those with the extension .mp3, .wma or .m4a.

● Multi-sessions

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3, WMA and AAC files. However, only the first session can be played.

● ID3, WMA and AAC tags

ID3 tags can be added to MP3 files, making it possible to record the track title and artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

AAC tags can be added to AAC files, making it possible to record the track title and artist name in the same way as with artist ID3 tags.

● MP3, WMA and AAC playback

When a disc containing MP3, WMA or AAC files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3, WMA or AAC file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3, WMA or AAC files or create any unnecessary folders.

If the discs contain a mixture of music data and MP3, WMA or AAC format data, only music data can be played.

● Extensions

If the file extensions .mp3, .wma and .m4a. are used for files other than MP3, WMA and AAC files, they will be mistakenly recognized and played as MP3, WMA and AAC files. This may result in large amounts of interference and damage to the speakers.

● Playback

- To play MP3 file with steady sound quality, we recommend a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz.
- CD-ROM, CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3, WMA and AAC files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3, WMA or AAC files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

 NOTICE


■ Discs and adapters that cannot be used

Do not use the following types of discs.


Also, do not use 8 cm (3 in.) disc adapters, DualDiscs or printable discs.

Doing so may damage the player and/or the disc insert/eject function.


- Discs that have a diameter that is not 12 cm (4.7 in.)

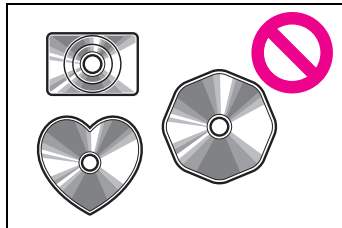


- Low-quality and deformed discs

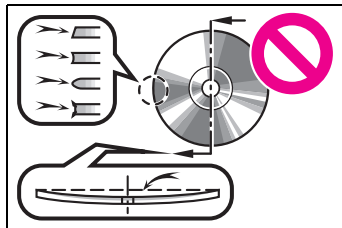

- Discs with a transparent or translucent recording area

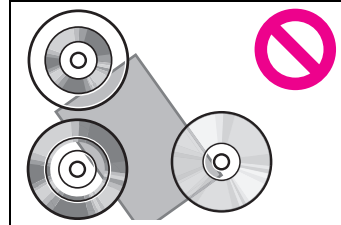

- Discs that have tape, stickers or CD-R labels attached to them, or that have had the label peeled off

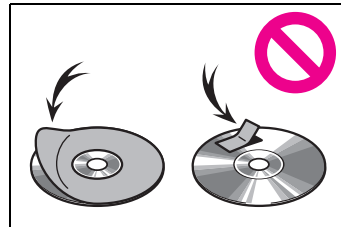

■ Player precautions

Failure to follow the precautions below may result in serious damage to the discs or the player itself.

- Do not insert anything other than discs into the disc slot.
- Do not apply oil to the player.
- Store discs away from direct sunlight.
- Never try to disassemble any part of the player.

Listening to an iPod*


*: If equipped

Connecting an iPod enables you to enjoy music from the vehicle speakers. Press the "MODE" button until "iPod" is displayed.

Connecting an iPod


→P.514

Control panel

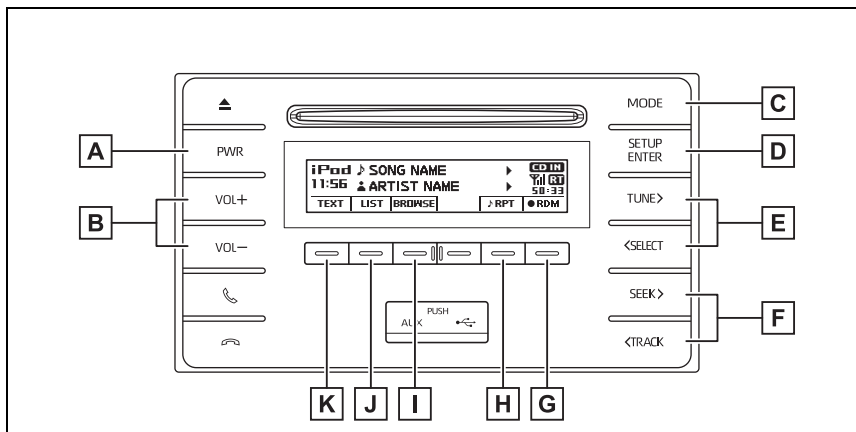

- A** POWER
- B** VOLUME
- C** Changing the audio source/playback
- D** Displaying list of the current folder
- E** Selecting an iPod menu/song
- F** Selecting a song, fast-forwarding or rewinding
- G** Random play or back button
- H** Repeat play
- I** Displaying play mode
- J** Displaying the current play list

K Displaying text message**Selecting a play mode**

- 1 Press  (BROWSE) to select iPod play mode.
- 2 Pressing the “TUNE >” button changes the play mode in the following order: “Playlists” →

“Artists” → “Albums” → “Songs”
→ “Genres” → “Composers” →
“Radio” → “Audiobooks” →
“Podcasts” → “iTunes U”


- 3 Press the “SETUP ENTER” button to select the desired play mode.


■ Play mode list

Play mode	First selection	Second selection	Third selection	Fourth selection
“Playlists”	Playlists select	Songs select	-	-
“Artists”	Artists select	Albums select	Songs select	-
“Albums”	Albums select	Songs select	-	-
“Songs”	Songs select	-	-	-
“Genres”	Genre select	Artists select	Albums select	Songs select
“Composers”	Composers select	Albums select	Songs select	-
“Radio”	Stations	-	-	-
“Audiobooks”	Audiobooks select	Chapter select	-	-
“Podcasts”	Programs	Episodes select	-	-
“iTunes U”	Courses	Episodes select	-	-

■ Selecting a list

- 1 Press the “TUNE >” or “< SELECT” button to display the first selection list.
- 2 Press the “SETUP ENTER” button to select the desired item and display the second selection list.
- 3 Repeat the same procedure to select the desired item.


To return to the previous selection list, press  (BACK).


Press  (PLAY) to play the desired selection or press the “SETUP ENTER” button when in the last hierarchy selection.

Selecting songs

Press the “SEEK >” or “< TRACK” button to select the desired song.

Selecting a song from the song list


- 1 Press  (LIST).
The song list will be displayed.
- 2 Press the “TUNE >” or “< SELECT” button to select a song.
- 3 Press the “SETUP ENTER” button to play the song.

To return to the previous display, press  (BACK).

Fast-forwarding and rewinding songs


Press and hold the “SEEK >” or “< TRACK” button until you hear a beep.

Repeat play

Pressing  (RPT) changes modes in the following order: Track repeat → Album repeat* → Off.

*: Album repeat mode may not be available depending on the iPod devices you have.


Random play


Pressing  (RDM) changes modes in the following order: Track shuffle → Album shuffle → Off.

Switching the display

Press the  (TEXT) to display or

hide the album title.

If there are continuing texts,  is displayed.

Press and hold  (TEXT) until you hear a beep to display the remaining texts.

About iPod



- Use of the “Made for Apple” badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- iPhone, iPod, iPod touch, and iPod nano are trademarks of Apple Inc., registered in the U.S. and other countries.

iPod functions

- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available. Disconnecting the device and reconnecting it once again may resolve some malfunctions.

- While connected to the system, the iPod cannot be operated with its own controls. It is necessary to use the controls of the vehicle's audio system instead.

■ **iPod problems**

To resolve most problems encountered when using your iPod, disconnect your iPod from the vehicle iPod connection and reset it.

For instructions on how to reset your iPod, refer to your iPod Owner's Manual.

■ **Display**

→P.520

■ **Error messages**

If an error message is displayed, refer to the following table and take the appropriate measures. If the problem is not rectified, take the vehicle to your Toyota dealer.

Message	Cause/Correction procedures
"iPod ERROR"	This indicates that the data in the iPod cannot be read.
"ERROR 3"	This indicates that the iPod may be malfunctioning.
"ERROR 4"	This indicates that an over current error has occurred.
"ERROR 5"	This indicates that an iPod communication error has occurred.
"ERROR 6"	This indicates that an authentication error has occurred.

Message	Cause/Correction procedures
"NO SONGS"	This indicates that there is no music data in the iPod.
"NO PLAYLISTS"	This indicates that the selected playlist has no songs.
"UPDATE YOUR iPod"	This indicates that the version of the iPod is not compatible. Upgrade your iPod software to the latest version.

■ **Compatible models**

The following devices can be used with this system.

- Made for
 - iPhone 7
 - iPhone 7 Plus
 - iPhone SE
 - iPhone 6s
 - iPhone 6s Plus
 - iPhone 6
 - iPhone 6 Plus
 - iPhone 5s
 - iPhone 5c
 - iPhone 5
 - iPhone 4s
 - iPod touch (6th generation)
 - iPod touch (5th generation)
 - iPod nano (7th generation)

This system only supports audio playback.

Depending on differences between models or software versions etc., some models might be incompatible with this system.



WARNING

■ **While driving**

Do not connect iPod or operate the controls. Doing so may cause an accident, resulting in death or serious injury.



NOTICE

■ **To prevent damage to iPod**

- Do not leave iPod in the vehicle.
The temperature inside the vehicle may become high, resulting in damage to the iPod.
- Do not push down or apply unnecessary pressure to the iPod while it is connected as this may damage the iPod or its terminal.
- Do not insert foreign objects into the port as this may damage the iPod or its terminal.

Listening to USB memory device*


*: If equipped

Connecting a USB memory enables you to enjoy music from the vehicle speakers. Press the “MODE” button until “USB” is displayed.

Connecting a USB memory

→P.514

Control panel

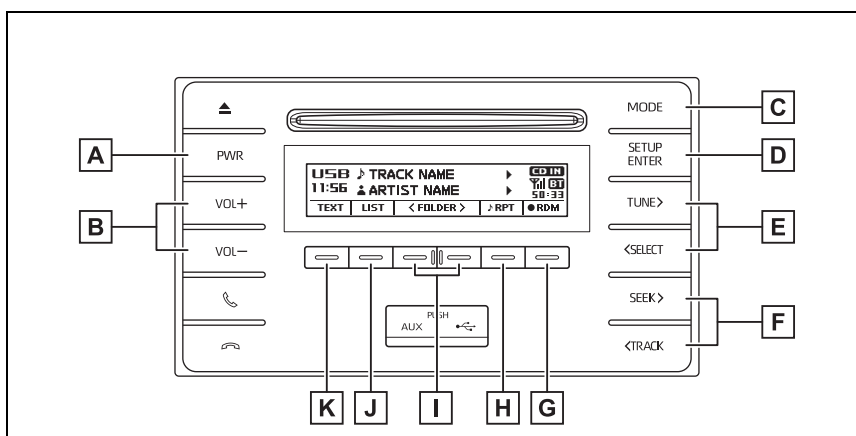

- A** POWER
- B** VOLUME
- C** Changing the audio source/playback
- D** Selecting a file
- E** Moving the cursor to select a desired item from the list
- F** Selecting a file, fast-forwarding or rewinding
- G** Random play or back button
- H** Repeat play
- I** Selecting a folder

J Displaying folder list

K Displaying text message

Using a USB memory

■ Selecting folders one at a time

Press \square (<FOLDER) or \square (FOLDER>) to select the desired folder.

■ Selecting a folder and file from folder list

1 Press \square (LIST).

The folder list will be displayed.

2 Press the “TUNE >” or “< SELECT” button to select a folder and file, and press the “SETUP ENTER” button.

To return to the previous display, press \square (BACK).

■ Returning to the first folder

Press and hold \square (<FOLDER) until you hear a beep.

■ Selecting a file

Press the “SEEK >” or “< TRACK” button to move up or down to select the desired file.

■ Fast-forwarding and rewinding files

Press and hold the “SEEK >” or “< TRACK” button until you hear a beep.

■ Random play

Pressing \square (RDM) changes modes in the following order:

Folder random→All folder random→Off

■ Repeat play

Pressing \square (RPT) changes modes in the following order: File repeat→Folder repeat*→Off

*: Available except when “RDM” (random play) is selected

■ Switching the display

Press \square (TEXT) to display or hide the album title.

If there are continuing texts, \blacktriangleright is displayed.

Press and hold \square (TEXT) until you hear a beep to display the remaining texts.

■ USB memory functions

● Depending on the USB memory that is connected to the system, the device itself may not be operable and certain functions may not be available. If the device is inoperable or a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.

● If the USB memory still does not begin operation after being disconnected and reconnected, format the memory.

■ Display

→P.520

■ Error messages

If an error message is displayed, refer to the following table and take the appro-

appropriate measures. If the problem is not rectified, take the vehicle to your Toyota dealer.

Message	Cause/Correction procedures
"USB ERROR"	This indicates that the data in the USB memory cannot be read or that the connected USB device is not supported.
"ERROR 3"	This indicates that the USB memory may be malfunctioning.
"ERROR 4"	This indicates that an over current error has occurred.
"ERROR 5"	This indicates that a USB memory error (communication or version error) has occurred or that there was no response when USB memory was inserted (enumeration error).
"NO MUSIC"	This indicates that no MP3/WMA/AAC files are included on the USB memory device.
"Hubs are not supported"	This indicates that the hub connect error occurs.

- **USB memory**
- **Compatible devices**

USB memory that can be used for MP3, WMA and AAC playback

● **Compatible device formats**

The following device formats can be used:

- USB communication formats: USB2.0 FS (12Mbps)
- File formats: FAT16/32 (Windows)
- Correspondence class: Mass storage class

MP3, WMA and AAC files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels (including the ROOT)
- Maximum number of folders in a device: 3000 (including the root)
- Maximum number of files in a device: 9999
- Maximum number of files per folder: 255

● **MP3, WMA and AAC files**

MP3 (MPEG Audio LAYER3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

There is a limit to the MP3, WMA and AAC file standards and to the media/formats recorded by them that can be used.

- MP3 file compatibility
- Compatible standards
MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies
MPEG1 LAYER3: 32, 44.1, 48 (kHz)
MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)
MPEG1 LAYER3: 32-320 (kbps)
MPEG2 LSF LAYER3: 8-160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

- WMA file compatibility
- Compatible standards
WMA Ver. 7, 8, 9 (9.1/9.2)
- Compatible sampling frequencies
32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)
Ver. 7, 8: CBR 48-192 (kbps)
Ver. 9 (9.1/9.2): CBR 48-320 (kbps)

- AAC file compatibility
- Compatible standards
MPEG4/AAC-LC
- Compatible sampling frequencies
11.025/12/16/22.05/24/32/44.1/48(kHz)
- Compatible bit rates (compatible with VBR)
8-320(kbps)
- Compatible channel modes
1ch, 2ch (Dual channel is not supported)

- File names

The only files that can be recognized as MP3/WMA/AAC and played are those with the extension .mp3, .wma or .m4a.

- ID3, WMA and AAC tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3, 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title, artist, and album name in the same way as with ID3 tags.

AAC tags can be added to AAC files, making it possible to record the track title, artist, and album name in the same way as with ID3 tags.

- MP3, WMA and AAC playback
- When a device containing MP3, WMA or AAC files is connected, all files in the USB memory device are checked. Once the file check is finished, the first MP3, WMA or AAC file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3, WMA or AAC files or create any unnecessary folders.
- When the USB device is connected and the audio source is changed to USB memory mode, the USB device will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB memory will resume play from the same point in which it was last used.

- Extensions

If the file extensions .mp3, .wma and .m4a. are used for files other than MP3, WMA and AAC files, they will be skipped (not played).

- Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- There is a wide variety of freeware and other encoding software for MP3, WMA and AAC files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are registered trademarks of

Microsoft Corporation in the U.S.A. and other countries. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

**WARNING**

■ **While driving**

Do not connect USB memory or operate the controls. Doing so may cause an accident, resulting in death or serious injury.

**NOTICE**

■ **To prevent damage to USB memory**

- Do not leave USB memory in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the USB memory.
- Do not push down or apply unnecessary pressure to the USB memory while it is connected as this may damage the USB memory or its terminal.
- Do not insert foreign objects into the port as this may damage the USB memory or its terminal.

Using the AUX port*

*: If equipped

This port can be used to connect a portable audio device and listen to it using the vehicle's speakers. Press the "MODE" button until "AUX" is displayed.

Connecting a portable player

→P.514

■ **Operating portable audio devices connected to the audio system**

The volume can be adjusted using the vehicle's audio controls. All other adjustments must be made on the portable audio device itself.

■ **When using a portable audio device connected to the power outlet**

Noise may occur during playback. Use the power source of the portable audio device.

Bluetooth® audio/phone*

*: If equipped

The following can be performed using Bluetooth® wireless communication:

Bluetooth® audio

The Bluetooth® audio system enables you to enjoy music played on a portable digital audio player (portable player) from the vehicle speakers via wireless communication.

This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.


Bluetooth® phone (hands-free phone system)

This system supports Bluetooth®, which allows you to make or receive calls without using cables to connect a cellular phone and the system, and without operating the cellular phone.

Device registration/connection flow

- 1 Register the Bluetooth® device to be used with audio system (→P.538)
- 2 Select the Bluetooth® device to be used (→P.540)
- 3 Set automatic connection of the device (→P.542)
- 4 Check Bluetooth® connection condition (→P.534)
 - To be used for audio: →P.548
 - To be used for hands-free phone: →P.550

Audio unit

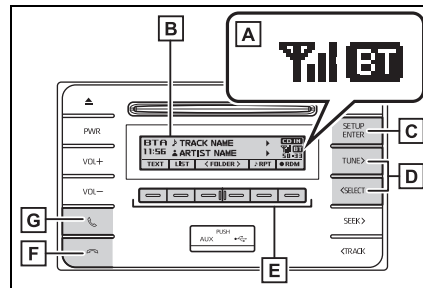

A Bluetooth® connection condition

If “BT” is not displayed, the Bluetooth® audio/phone cannot be used.

B Display

A message, name, number, etc. is displayed.

C “SETUP ENTER” button

Displays set up menu or inputs the selected item

D “TUNE >” or “< SELECT” button


Selects items such as menu and number

E Function button**F** On-hook button

Turns the hands-free system off/ends a call/refuses a call

G Off-hook button

Turns the hands-free system on/starts a call

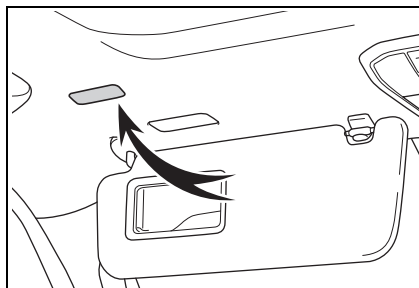Microphone**Menu list of the Bluetooth® audio/phone**

Press the “SETUP ENTER” button. To enter a menu, press the “TUNE >” or “< SELECT” button and navigate menus by using the “SETUP ENTER” button.

▶ “Bluetooth” menu

First menu	Second menu	Third menu	Operation details
“Bluetooth”	“Pairing”	-	Registering a Bluetooth® device (→P.538)
	“List phone”	-	Listing the registered cellular phones (→P.540)
	“List audio”	-	Listing the registered portable players (→P.540)
	“Passkey”	-	Changing the passkey (→P.541)
	“BT power On” “BT power Off”	-	Setting automatic connection of the device on or off (→P.542)
	“Bluetooth info”	“Device name” “Device address”	Displaying the device status (→P.542)
	“Display setting On” “Display setting Off”	-	Setting the automatic connection confirmation display to on or off (→P.542)
	“Initialize”	-	Initializing the settings (→P.542)

▶ “PHONE” menu

First menu	Second menu	Third menu	Operation details
“PHONE”	“Phonebook”	“Auto transfer On” “Auto transfer Off”	Setting automatic contact/history transfer on or off (→P.543)
		“Add contacts”	Adding a new number (→P.543)
		“Delete contacts”*	Deleting a contact stored in the phonebook (→P.543)
		“Sort contacts”	Sorting contacts by the first name or last name field (→P.544)
		“Transfer history”	Transferring the call histories (→P.544)
		“Delete call history”*	Deleting a number stored in the call history (→P.544)
“PHONE”	“Favorites”	“Add favorites”	Adding a new contact to the favorite list (→P.545)
		“Delete favorites”	Deleting a contact from the favorite list (→P.546)
	“HF sound setting”	“Call volume”	Setting call volume (→P.546)
		“Ringtone volume”	Setting ring tone volume (→P.547)
		“Ringtone”	Setting the ring tone (→P.547)

*: For PBAP compatible Bluetooth® phones, this function is available when “Automatic transfer” is set to off.


■ Bluetooth® audio/phone system functions

Depending on the Bluetooth® device, certain functions may not be available.

Using the steering wheel switches

The steering wheel switches can be used to operate a connected cellular phone, or portable digital audio player (portable player).

Operating Bluetooth® phone using the steering wheel switches

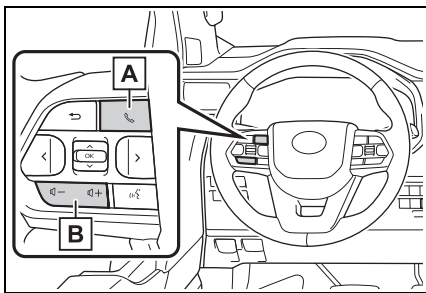

A Phone switch

- If the switch is pressed during a call, the call will end.
- If the switch is pressed when an incoming call is received, the call will be answered.
- If the switch is pressed when a call waiting call is received, the waiting call will be answered.

B Volume control switch

- Press the “+” button to increase the volume.
- Press the “-” button to decrease the volume.

Register a Bluetooth® device

Before using the Bluetooth® audio/phone, it is necessary to register a Bluetooth® device in the system. You can register up to 5 Bluetooth® devices.

How to register a Bluetooth® device

- 1 Press the “SETUP ENTER” button.
- 2 Select “Bluetooth” using the “TUNE >” or “< SELECT” button, and press the “SETUP ENTER” button.
- 3 Select “Pairing” using the “TUNE >” or “< SELECT” button, and press the “SETUP ENTER” button.

A passkey will be displayed.

- 4 SSP (Secure Simple Pairing) incompatible Bluetooth® devices: Input the passkey into the device.
- 4 SSP (Secure Simple Pairing) compatible Bluetooth® devices: Select “Yes” to register the device. Depending on the type of device, it may register automatically.

If a Bluetooth® device has both music player and cellular phone

functions, both functions will be registered at the same time. When deleting the device, both functions will be deleted at the same time.

If the off-hook button is pressed and the "PHONE" mode is entered when no phones have been registered, the registration screen will be automatically displayed.

Using the "SETUP" menu ("Bluetooth" menu)*

*: If equipped

Registering a Bluetooth® device in the system allows the system to function. The following functions can be used for registered devices. To enter the set up menu, press the "SETUP ENTER" button. Select "Bluetooth" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

Registering a Bluetooth® device

Select "Pairing" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button, and perform the procedure for registering a device. (→P.538)

Listing the registered cellular phones

Select "List phone" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button. The list of registered cellular phones will be displayed.

- ▶ Connecting the registered cellular phone to the audio system
- 1 Select the name of the cellular phone to be connected using the "TUNE >" or "< SELECT"

button, and press the "SETUP ENTER" button.

- 2 Select "Select" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

- ▶ Deleting a registered cellular phone

- 1 Select the name of the cellular phone to be deleted using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

- 2 Select "Delete" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

- 3 Press (YES).

- ▶ Disconnecting the registered cellular phone from the audio system

- 1 Select the name of the cellular phone to be disconnected using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

- 2 Select "Disconnect" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

- 3 Press (YES).

Listing the registered portable players

Select "List audio" using the "TUNE

>" or "< SELECT" button, and press the "SETUP ENTER" button. The list of registered portable players will be displayed.

▶ Connecting the registered portable player to the audio system

1 Select the name of the portable player to be connected using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

2 Select "Select" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

▶ Deleting the registered portable player

1 Select the name of the portable player to be deleted using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

2 Select "Delete" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

3 Press (YES).

▶ Disconnecting the registered portable player from the audio system

1 Select the name of the portable player to be disconnected using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

2 Select "Disconnect" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

3 Press (YES).

▶ Selecting the connection method

1 Select the name of the desired portable player using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

2 Select "Connection Method" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

3 Select "From vehicle" or "From audio" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

Changing the passkey

1 Select "Passkey" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

2 Select a 4 to 8-digit passkey using the "TUNE >", "< SELECT" and "SETUP ENTER" button.

Input the number 1 digit at a time.

3 When the entire number to be registered as a passkey has been input, press (ENTER).

If the passkey to be registered has 8 digits, pressing (ENTER) is not necessary.

Setting automatic connection of the device on or off

If "BT power" is set to on, the registered device will be connected automatically when the engine switch is turned to ACC.

Select "BT power ON" or "BT power OFF" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

Displaying the device status

Select "Bluetooth info" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

▶ Displaying the device name

Select "Device name" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

▶ Displaying the device address

Select "Device address" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

Setting the automatic connection confirmation display to on or off

If the "Display setting" is set to on, the portable player connection status will be displayed when the engine switch is turned to ACC.

Select "Display setting ON" or "Dis-


play setting OFF" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

Initialization

Select "Initialize" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

▶ Initializing the HF sound settings


Select "HF Sound setting" using the "TUNE >" or "< SELECT" button

and press  (YES).

For details about HF sound settings: →P.546

▶ Initializing the device information


Select "Car device info" using the "TUNE >" or "< SELECT" button

and press  (YES).

Automatic connection of a portable device, automatic connection confirmation display and the passkey will be initialized.

▶ Initializing all settings

Select "All initialize" using the "TUNE >" or "< SELECT" button

and press  (YES).

Using the "SETUP" menu ("PHONE" menu)*

*: If equipped

To enter the set up menu, press the "SETUP ENTER" button. Select "PHONE" using the "TUNE >" or "< SELECT" button and press the "SETUP ENTER" button.

Setting automatic contact/history transfer

The automatic transfer function is available for PBAP compatible Bluetooth® phones only.

- 1** Select "Phonebook" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2** Select "Auto transfer ON" or "Auto transfer OFF" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

When set to on, the phone's contact data and call history are automatically transferred.

Adding a new phone number

- 1** Select "Phonebook" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

- 2** Select "Add contacts" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
 - ▶ Transferring all contacts from the cellular phone
- 3** Select "Overwrite all" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button and press (YES).
 - ▶ Transferring one contact from the cellular phone
- 3** Select "Add one contact" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button and press (YES).

Deleting a registered phone number

- 1** Select "Phonebook" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2** Select "Delete contacts" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 3** Select the desired phone number using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button and press (YES).

To delete all the registered phone numbers, press (ALL) and then

press \square (YES).

Press \square (A-Z) to display the registered names in alphabetical order of the initial.

Changing the sorting order of the contacts

- 1 Select "Phonebook" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2 Select "Sort contacts" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 3 Select "Sort by first" or "Sort by last" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

Transferring call histories

This function is available for PBAP compatible Bluetooth® phones only.

- 1 Select "Phonebook" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2 Select "Transfer history" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button and press \square (YES).

Deleting call histories

- 1 Select "Phonebook" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2 Select "Delete call history" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
 - ▶ Deleting outgoing call history
- 3 Select "Outgoing calls" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 4 Select the desired phone number using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button and press \square (YES).

To delete all outgoing call history data, press \square (ALL) and then press \square (YES).

- ▶ Deleting incoming call history
- 3 Select "Incoming calls" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
 - 4 Select the desired phone number using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button and press \square (YES).

To delete all incoming call history data, press \square (ALL) and then press \square (YES).

- ▶ Deleting missed call history
- 3** Select "Missed calls" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 4** Select the desired phone number using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button and press \square (YES).

To delete all missed call history data, press \square (ALL) and then press \square (YES).

- ▶ Deleting a number from all call histories (Outgoing calls, Incoming calls and Missed calls)
- 3** Select "All calls" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 4** Select the desired phone number using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button and press \square (YES).

To delete all of the call histories data, press \square (ALL) and then press \square (YES).

Registering favorites

Up to 15 contacts can be registered in the favorites list.

■ Registering the contacts from the "SETUP" mode

- 1** Press the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2** Select "PHONE" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 3** Select "Favorites" using "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 4** Select "Add favorites" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

Press \square (A-Z) to display the registered names in alphabetical order of the initial.

- 5** Select desired contact using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

■ Registering the contacts from the "PHONE" mode

- 1** Press the off-hook button.
- 2** Select "Phonebook", "All calls", "Missed calls", "Incoming calls" or "Outgoing calls" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 3** Select a desired number using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

- 4 Press \square (ADD FAVORITE).
- When 15 contacts have already been registered to the favorites list, a registered contact needs to be replaced.
- 1 Select the contact to be replaced using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2 Select \square (YES) when the confirmation screen appears.

Deleting favorites

■ Deleting the contacts from the "SETUP" mode

- 1 Press the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2 Select "PHONE" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 3 Select "Favorites" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 4 Select "Delete favorites" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 5 Select desired contact using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

You can select all contacts by selecting

\square (ALL).

- 6 Select \square (YES) when the confirmation screen appears.

■ Deleting the contacts from the "PHONE" mode

- 1 Press the off-hook button.
- 2 Select "Favorites" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 3 Select a desired contact using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 4 Press \square (DELETE FAVORITE).
- 5 Select \square (YES) when the confirmation screen appears.

Setting call volume

- 1 Select "HF sound setting" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2 Select "Call volume" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 3 Change the call volume.

To decrease the volume: Press the "< SELECT" button.

To increase the volume: Press the "TUNE >" button.


To set the volume, press \square (BACK).

Setting ring tone volume


- 1** Select "HF sound setting" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2** Select "Ringtone volume" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 3** Change the ring tone volume.

To decrease the volume: Press the "< SELECT" button.

To increase the volume: Press the "TUNE >" button.

To set the volume, press  (BACK).

Setting ring tone

- 1** Select "HF sound setting" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2** Select "Ringtone" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 3** Select a ring tone (1 - 3 or "From phone") using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button. To set the selected ring tone, press  (BACK).

Phone number

Up to 5000 names (maximum of 1000 names per device) can be stored.

Call history

Up to 10 numbers can be stored in each of the outgoing, incoming and missed call history memories.

Limitation of number of digits

A phone number that exceeds 24 digits cannot be registered.


Bluetooth® phone system functions

Certain functions may not be available during driving.

Operating a Bluetooth® enabled portable player*

*: If equipped

Control panel

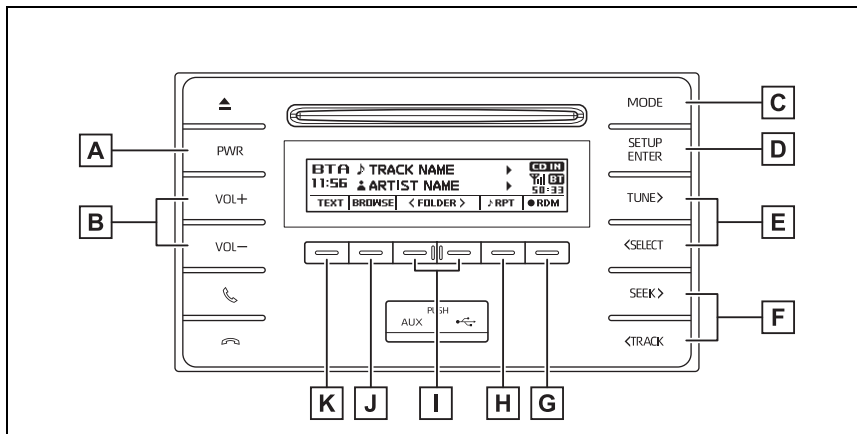

- A** POWER
- B** VOLUME
- C** Changing the audio source/playback
- D** Selecting an item
- E** Displaying list of the current folder
- F** Selecting a track, fast-forwarding or rewinding
- G** Random play or back button
- H** Repeat play
- I** Selecting an album
- J** Displaying play mode
- K** Displaying text message

Selecting an album

(FOLDER>) to select desired album.

Press (<FOLDER) or


Selecting a track

Press the “SEEK >” or “< TRACK” button to move up or down.

Fast-forwarding and rewinding tracks


Press and hold the “SEEK >” or “< TRACK” button until you hear a beep.

Repeat play


Pressing  (RPT) changes modes in the following order: Track repeat* → Album repeat → Off.


*: Available except when “RDM” (random play) is selected

Random play


Pressing  (RDM) changes modes in the following order: Album random → All track random → Off.


Selecting a play mode


- 1 Press  (BROWSE). The playlist will be displayed.
- 2 Press the “TUNE >” or “< SELECT” button to display the folder/file list.
- 3 Press the “SETUP ENTER” button to select the desired item.
- 4 Repeat the same procedure to select the desired file.

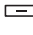To return to the previous display, press  (BACK).

Switching the display

Press  (TEXT) to display or hide the album title.

If there are continuing texts,  is displayed.

Press and hold  (TEXT) until you hear a beep to display the remaining texts.

Bluetooth® audio system functions

Depending on the portable player that is connected to the system, certain functions may not be available.

Display

→P.520

Making a phone call*

*: If equipped

To enter the "PHONE" mode, press the off-hook button.

Dialing from the phonebook

- 1 Select "Phonebook" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2 Select the desired name using the "TUNE >" or "< SELECT" button, and press the off-hook button.

Press \square (A-Z) to display the registered names in alphabetical order of the initial.

Dialing from favorites

- 1 Select "Favorites" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2 Select the desired name using the "TUNE >" or "< SELECT" button, and press the off-hook button.

Dialing by entering the number

- 1 Select "Dial by number" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.

- 2 Enter the phone number and press the off-hook button.

Dialing from call histories

- 1 Select "All calls", "Missed calls", "Incoming calls" or "Outgoing calls" using the "TUNE >" or "< SELECT" button, and press the "SETUP ENTER" button.
- 2 Select a desired number using the "TUNE >" or "< SELECT" button, and press the off-hook button.

The following operations can be performed:

- Registering a number as a Favorite
→P.545
- Deleting the selected number

Press \square (DELETE) and press \square (YES).

When receiving a phone call*

*: If equipped

Answering the phone

Press the off-hook button.

Refusing the call

Press the on-hook button.

Receiving a call when on another call

Press the off-hook button.

Pressing the off-hook button again returns you to the previous call.

Adjusting the ring tone volume when receiving a call

To decrease the volume: Press the "VOL-" button.

To increase the volume: Press the "VOL+" button.

Speaking on the phone*

*: If equipped

Transferring a call

A call can be transferred between the cellular phone and system while dialing, receiving a call, or during a call. Use one of the following methods:


a. Operate the cellular phone.


Refer to the manual that comes with the cellular phone for the operation of the phone.

b. Press  (PHONE).*

*: This operation can be performed only when transferring a call from the cellular phone to the system during a call.


Muting your voice


Press  (MUTE).


Press  (UNMUTE) to cancel the mute.


Inputting tones

This operation cannot be performed while driving.

- 1** Press  ("0-9")
- 2** Press the "TUNE >" or "<" SELECT" button to select the desired number.
- 3** Press the "SETUP ENTER" to decide the number.

- 4 Press  (SEND) to send tones.

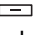
Pressing  (BACK) preserves the number and returns to the previous screen.

Pressing  (EXIT) deletes the number and go to “Entering a number” screen.

- ▶ Phone number containing a “p” symbol

When the “p” symbol is dialed in an outgoing call, there will be a pause for 2 seconds before the following digits are dialed automatically.


- ▶ Phone number containing a “w” symbol

When the “w” symbol is dialed in an outgoing call, you need to press  (SEND) again to dial following digits.

This operation can be performed while driving.

Adjusting the outgoing volume

Your voice volume that the other party hears from their speaker can be adjusted.

- 1 Press  (Send Vol)
- 2 Use the “TUNE >” or “< SELECT” button to adjust the volume. (-5 to +5)
- 3 Press the “SETUP ENTER” button.

Setting call volume

To decrease the volume: Press the “VOL-” button.

To increase the volume: Press the “VOL+” button.

■ When talking on the phone

- Do not talk simultaneously with the other party.
- Keep the volume of the received voice down. Otherwise, voice echo will increase.

■ Automatic volume adjustment

When vehicle speed is 80 km/h (50 mph) or more, the volume automatically increases. The volume returns to the previous volume setting when vehicle speed drops to 70 km/h (43 mph) or less.

■ Phone call system functions

Depending on the cellular phone, certain functions may not be available.

■ Situations where the system may not recognize your voice

- When driving on a rough road
- When driving at high speeds
- When air is blowing out of the vents onto the microphone
- When the air conditioning fan emits a loud noise

Bluetooth®

Overview

■ When using the Bluetooth® audio/phone

- In the following situations, the system may not function.
 - The portable player does not support Bluetooth®
 - The cellular phone is located outside the service area
 - The Bluetooth® device is switched off
 - The Bluetooth® device has a low battery
 - The Bluetooth® device is not connected to the system
 - The Bluetooth® device is behind the seat or in the glove box or console box, or metal material covers or touches the device
- There may be a delay if a cellular phone connection is made during Bluetooth® audio play.
- Depending on the type of portable audio player that is connected to the system, operation may differ slightly and certain functions may not be available.
- This system is not guaranteed to operate with all Bluetooth® devices.

■ When transferring ownership of the vehicle

Be sure to initialize the system to prevent personal data from being improperly accessed. (→P.542)

■ About Bluetooth®

Bluetooth is a registered trademark of Bluetooth SIG, Inc.



■ Compatible models

The Bluetooth® audio system supports portable audio players with the following specifications

- Bluetooth® specifications:
 - Ver. 1.1 or higher (Recommended: Ver. 4.1)
- Profiles:
 - A2DP (Advanced Audio Distribution Profile) Ver. 1.0, or higher (Recommended: Ver. 1.3)
 - AVRCP (Audio/Video Remote Control Profile) Ver. 1.0 or higher (Recommended: Ver. 1.6)

This is a profile to transmit stereo audio or high quality sound to the audio system.

This is a profile to allow remote control the A/V equipment. However, please note that some functions may be limited depending on the type of portable audio player connected.

The hands-free system supports cellular phones with the following specifications.

- Bluetooth® specifications: Ver. 2.0 or higher (Recommended: Ver. 4.1 +EDR or higher)
- Profiles:
 - HFP (Hands Free Profile) Ver. 1.0 or higher (Recommended: Ver. 1.7)

This is a profile to allow hands-free phone calls using a cellular phone. It has outgoing and incoming call functions.


- OPP (Object Push Profile) Ver. 1.1 or higher (Recommended: Ver. 1.2)

This is a profile to transfer phonebook data. When a Bluetooth® compatible cellular phone has both PBAP and OPP, OPP cannot be used.

- PBAP (Phone Book Access Profile) Ver. 1.0 or higher (Recommended: Ver. 1.2)

This is a profile to transfer phonebook data.

- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

 NOTICE

■ **When leaving the vehicle**

Do not leave your portable audio player or cellular phone in the vehicle. The inside of the vehicle may become hot, causing damage to the portable audio player or cellular phone.

 **WARNING**

■ **While driving**

Do not operate the portable audio player, cellular phone or connect a device to the Bluetooth® system.

■ **Caution regarding interference with electronic devices**

- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.

Interior features

6

- 6-1. Using the air conditioning system and defogger**
- Front automatic air conditioning system (vehicles without 12.3-inch display) **556**
 - Front automatic air conditioning system (vehicles with 12.3-inch display)..... **567**
 - Rear cooler system..... **578**
 - Rear air conditioning system **580**
 - Heated steering wheel/seat heaters/seat ventilators .. **583**
- 6-2. Using the interior lights**
- Interior lights list..... **589**
- 6-3. Using the storage features**
- List of storage features **593**
 - Luggage compartment features **598**
- 6-4. Using the other interior features**
- Toyota multi-operation touch (vehicle with the 12.3-inch display) **602**
 - Other interior features..... **605**


Front automatic air conditioning system (vehicles without 12.3-inch display)

Air outlets and fan speed are automatically adjusted according to the temperature setting.


Air conditioning controls

► Vehicles without rear air conditioning system

Left-hand drive vehicles:

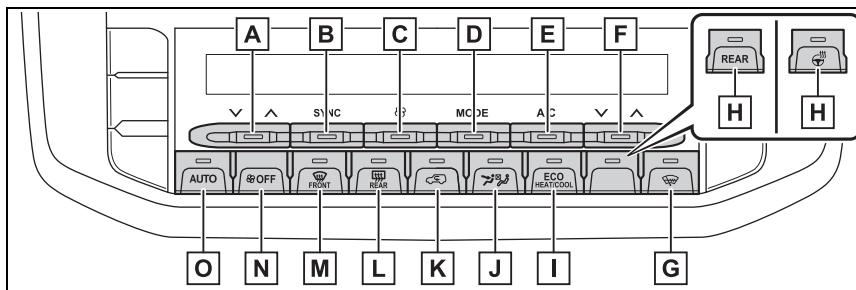

Right-hand drive vehicles:

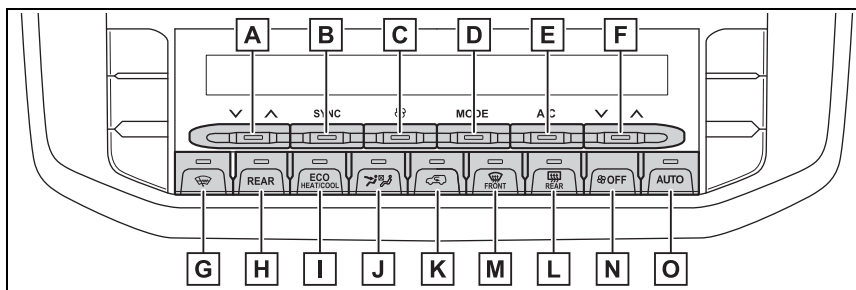

- A** Left-hand side temperature control switch
- B** “SYNC” switch
- C** Fan speed control switch
- D** Airflow mode control switch
- E** “A/C” switch
- F** Right-hand side temperature control switch
- G** Windshield wiper de-icer switch (if equipped)

Heated Windshield Defroster switch (if equipped)

H “REAR” switch (if equipped) (→P.578)

Heated steering wheel (if equipped) (→P.584)

I Eco air conditioning mode switch

J Front seat concentrated airflow mode (S-FLOW) switch

K Outside/recirculated air mode switch

L Rear window and outside rear view mirror defoggers switch (if equipped)


M Windshield defogger switch

N “OFF” switch


O Automatic mode switch

▶ Vehicles with rear air conditioning system

Left-hand drive vehicles:

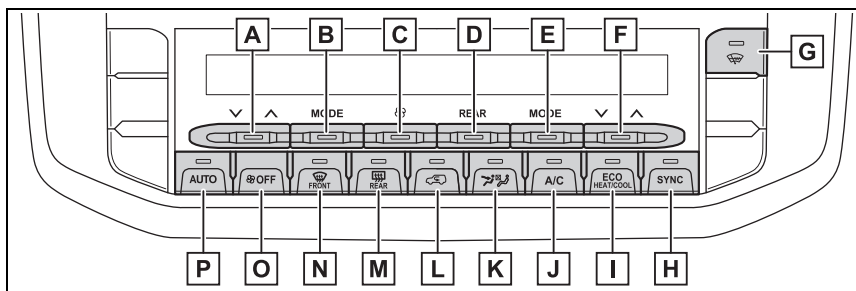

Right-hand drive vehicles:

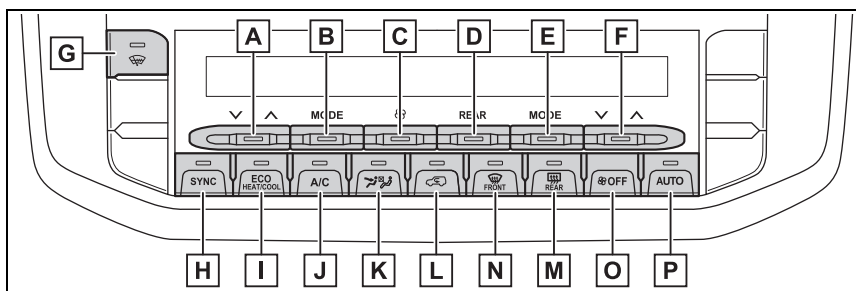

A Left-hand side temperature control switch

B Left-hand side airflow mode control switch

- C** Fan speed control switch
- D** “REAR” switch
- E** Right-hand side airflow mode control switch
- F** Right-hand side temperature control switch
- G** Windshield wiper de-icer switch (if equipped)
Heated Windshield Defroster switch (if equipped)
- H** “SYNC” switch
- I** Eco air conditioning mode switch
- J** “A/C” switch
- K** Front seat concentrated airflow mode (S-FLOW) switch
- L** Outside/recirculated air mode switch
- M** Rear window and outside rear view mirror defoggers switch (if equipped)
- N** Windshield defogger switch
- O** “OFF” switch
- P** Automatic mode switch

■ **Adjusting the temperature setting**

Operate the temperature control switch upwards to increase the temperature and downwards to decrease the temperature.

If the “A/C” switch is not pressed, the system will blow ambient temperature air or heated air.

■ **Adjusting the fan speed setting**

Operate the fan speed control switch upwards to increase the fan speed and downwards to decrease the fan speed.

The fan speed is shown on the display.


(7 levels)

Press the “OFF” switch to turn the fan off.

■ **Change the airflow mode**

Press the airflow mode control switch.

The airflow mode changes as follows each time the switch is pressed.

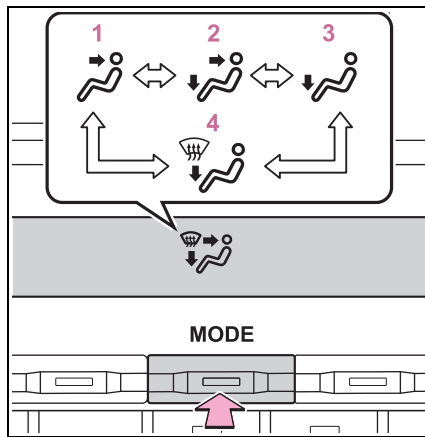

- 1 Upper body.
- 2 Upper body and feet.
- 3 Feet.
- 4 Feet and the windshield defogger operates.*

*: Driver's side only

■ Switching between outside air and recirculated air modes

Press the outside/recirculated air mode switch.

The mode switches between outside air mode and recirculated air mode each time the switch is operated.

When recirculated air mode is selected, the indicator illuminates on the outside/recirculated air mode switch.

■ Set cooling and dehumidification function

Press the "A/C" switch.

When the function is on, the indicator illuminates on display.

■ Eco air conditioning mode

The air conditioning is controlled with low fuel consumption priori-

tized such as reducing fan speed, etc.

Press the eco air conditioning mode switch.

When the eco air conditioning mode is on, the indicator illuminates on the eco air conditioning mode switch.

■ Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Press the windshield defogger switch.

Set the outside/recirculated air mode switch to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows quickly, turn the air flow and temperature up.

To return to the previous mode, press the windshield defogger switch again when the windshield is defogged.

When the windshield defogger switch is on, the indicator illuminates on the windshield defogger switch.

■ Defogging the rear window and outside rear view mirrors (if equipped)

Defoggers are used to defog the rear window and to remove raindrops, dew and frost from the outside rear view mirrors.

Press the rear window and outside rear view mirror defoggers switch.

The defoggers will automatically turn off after 15 minutes.

When the rear window and outside rear

view mirror defoggers switch is on, the indicator illuminates on the rear window and outside rear view mirror defoggers switch.

■ Fogging up of the windows

- The windows will easily fog up when the humidity in the vehicle is high. Turning the cooling and dehumidification function on will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn the cooling and dehumidification function off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

■ When driving on dusty roads

Close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake mode be set to outside air mode and the fan speed to any setting except off.

■ Outside/recirculated air mode

- Setting to the recirculated air mode temporarily is recommended in preventing dirty air from entering the vehicle interior and helping to cool the vehicle when the outside air temperature is high.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

■ When the outside temperature falls to nearly 0°C

The dehumidification function may not operate even when "A/C" switch is pressed.

■ Operation of the air conditioning system in Eco drive mode

- In Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:
 - Engine speed and compressor operation

controlled to restrict heating/cooling capacity

- Fan speed restricted when automatic mode is selected
- To improve air conditioning performance, perform the following operations:
 - Adjust the fan speed
 - Turn off Eco drive mode (→P.473)
 - Turn off Eco air conditioning mode
- When the driving mode is set to Eco drive mode, the Eco air conditioning mode will be turned on automatically. Even in this case, the Eco air conditioning mode can be turned off by pressing the Eco air conditioning mode switch.

■ nanoe™ X^{*1, 2} (if equipped)

The air conditioning system adopts nanoe™ generator. This helps to fill the cabin with refreshing air by emitting slightly acidic nanoe™ coated with water particles through the front center vent^{*3}.

- When the fan is turned on, the nanoe™ X is activated.
- When the fan is operated in the following conditions, system performance will be maximized. If the following conditions are not met, performance will be limited.
 - The upper body, upper body and feet, feet air outlets are being used.
 - The air outlets are open.
- When nanoe™ X is generated, a small amount of ozone is emitted and may be faintly smelled in some situations. However, this is approximately the same as the amount that already exists in nature, such as in forests, and it has no affect on the human body.
- A slight noise may be heard during operation. This is not a malfunction.

*1: nanoe™ X is a nanoe™ generator.

*2: nanoe™ and the nanoe™ mark are trademarks of Panasonic Corporation.

*3: According to temperature and humidity conditions, fan speed and direction of the air flow, the nanoe™ system may not operate at full capacity.

■ Ventilation and air conditioning odors

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- In order to suppress odors that occur when the air conditioning system starts, the air flow mode may change to blow air to the feet or air may stop blowing for a short period of time immediately after the air conditioning system is started in automatic mode.
- On some models: When parking, the system automatically switches to outside air mode to encourage better air circulation throughout the vehicle, helping to reduce odors that occur when starting the vehicle.
- To reduce potential odors from occurring:
 - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
 - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

■ Air conditioning filter

→P.677

■ Air conditioning system operations when the engine is stopped due to the Stop & Start system (vehicles with Stop & Start system)

When the engine is stopped due to the Stop & Start system operations, the air conditioning cooling, heating and dehumidification functions turn off and only ambient temperature air is blown, and there is a possibility that the blowing of

ambient temperature air will stop. To prevent the air conditioning system from turning off, press the Stop & Start cancel switch to deactivate the system.

■ When the windshield is fogged up and the engine is stopped due to the Stop & Start system (vehicles with Stop & Start system)

Press the windshield defogger switch to restart the engine and defog the windshield. If the windshield continuously fogs up, press the Stop & Start cancel switch and refrain from using the Stop & Start system.

■ When an odor comes from the air conditioning system while the engine is stopped due to the Stop & Start system (vehicles with Stop & Start system)

Press the Stop & Start cancel switch to restart the engine.

■ While the cool box is on (vehicles with cool box)

- ▶ GCC countries*, Lebanon, Jordan, Yemen, Iraq

The front air conditioning system cannot be turned off. However, air flow to the occupants can be stopped by pressing the "OFF" button on the air conditioning control panel.

Also, a very small amount of air is blown from the windshield air vent to protect the air conditioning system.

- ▶ Except GCC countries*, Lebanon, Jordan, Yemen, Iraq

The front air conditioning system cannot be turned off.

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

■ Customization

Some functions can be customized. (Customizable features: →P.774)

**WARNING****■ To prevent the windshield from fogging up**

Do not use the windshield defogger switch during cool air operation in extremely humid weather.

The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

■ When the outside rear view mirror defoggers (if equipped) are operating

Do not touch the rear view mirror surfaces when the outside rear view mirror defoggers are on.

■ nanoe™ X generator (if equipped)

Do not disassemble or repair the generator because it contains high voltage parts. Contact your Toyota dealer if the generator needs repair.

**NOTICE****■ To prevent battery discharge**

Do not leave the air conditioning system on longer than necessary when the engine is not running.

■ To prevent damage to the nanoe™ X (if equipped)

Do not insert anything into the air outlets, attach anything to it, or use sprays around the air outlets. These things may cause the generator not to work properly.

Using automatic mode

- 1 Press the "AUTO" switch.
- 2 Adjust the temperature setting.
- 3 To stop the operation, press the "OFF" switch.

If the fan speed setting or air flow modes are operated, the automatic mode indicator goes off. However, automatic mode for functions other than that operated is maintained.

■ Using automatic mode

Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after the automatic mode switch is pressed.

Cool air may blow around the upper body even when the heater is on due to sunlight.

Adjusting the temperature and airflow for driver and passenger seats simultaneously ("SYNC" mode)


To turn on the "SYNC" mode, press the "SYNC" switch.

The driver's side temperature control switch can be used to adjust the temperature for the driver's and passenger's side. To enter individual mode, operate the passenger's side temperature control switch or press the "SYNC" switch again.

When the "SYNC" mode is on, the indicator illuminates on the display (vehicles without rear air conditioning system) or the indicator illuminates on the "SYNC" switch (vehicles with rear air conditioning system).

Using front seat concentrated airflow mode (S-FLOW)

Directing airflow to the front seats only and to all seats can be switched via switch operation. Unnecessary air conditioning is suppressed, contributing to increased fuel efficiency.

Press  on the air conditioning operation panel and switch the airflow.

Indicator illuminated: Airflow to the front seats only

Indicator off: Airflow to all the seats

Even if the function is switched to directing airflow to only the front seats, when a rear seat is occupied, it may automatically direct airflow to all seats.

Changing the rear seat settings from the front seat (vehicles with rear air conditioning system)

Press the "REAR" switch.

If the system is left untouched for a few seconds after changing to the rear air conditioning system, the control mode in the front control panel returns to the front.

- Adjusting the temperature setting
→P.558
- Adjusting the fan speed setting
→P.558

- Change the airflow mode
→P.558

Windshield wiper de-icer (if equipped)/Heated Windshield Defroster (if equipped)

This feature is used to prevent ice from building up on the windshield and wiper blades.


Press the switch to turn the system on/off.

The indicator comes on when the system is on.


Vehicles with windshield wiper de-icer: The windshield wiper de-icer will automatically turn off after a period of time.

Vehicles with Heated Windshield Defroster:


- The Heated Windshield Defroster will automatically turn off.
- The Heated Windshield Defroster will not operate if the outside temperature is 5°C (41°F) or higher.
- ▶ Vehicles with rear air conditioning system

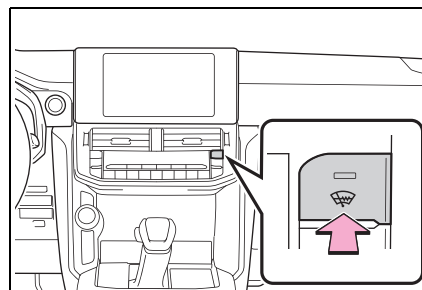


- ▶ Vehicles without rear air conditioning system

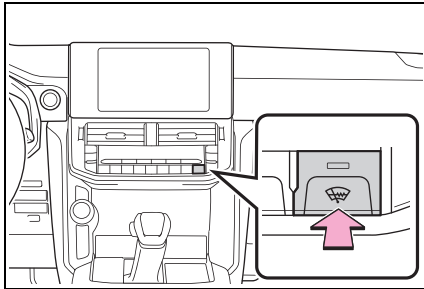

- ▶ Left-hand drive vehicles

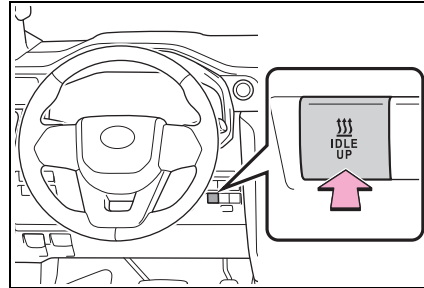

- ▶ Right-hand drive vehicles

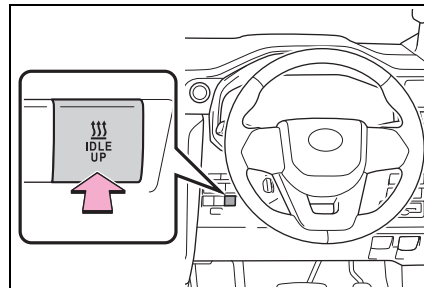

⚠ WARNING

■ **To prevent burns**

- Vehicles with windshield wiper de-icer: Do not touch the glass at lower part of the windshield or to the side of the front pillars when the windshield wiper de-icer is on.
- Vehicles with Heated Windshield Defroster: Do not touch the windshield (especially the lower part) as the surfaces can become very hot when the Heated Windshield Defroster is on.

Heater idle up (if equipped)/Power heater (if equipped)

■ **Heater idle up**


This feature is used to boost heating effect in extremely cold conditions when the vehicle is not moving.

Press the switch to increase engine speed.

Press the switch again to return the engine to the normal idle speed. If you do not turn the switch to off, the engine speed is increased whenever the engine is started.

■ **Power heater**

This feature is used to heat the engine coolant, speed up warming of the cab in cold weather, and keep the cab warm.

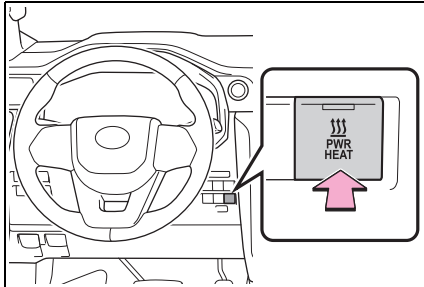


Turns the power heater on/off

If you do not turn the switch to off, the engine speed is increased whenever the engine is started.

Air outlet layout and operations


Location of air outlets

The air outlets and air volume change according to the selected air flow mode.

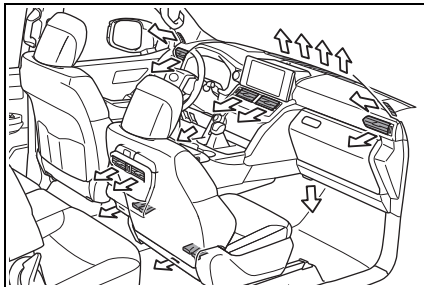


Adjusting the air flow direction and opening/closing the air outlets

Front

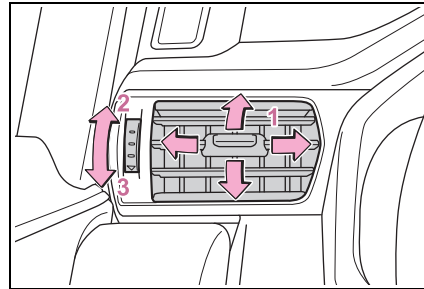

- 1 Direct air flow to the left or right, up or down
- 2 Open the vent
- 3 Close the vent

Rear (if equipped)

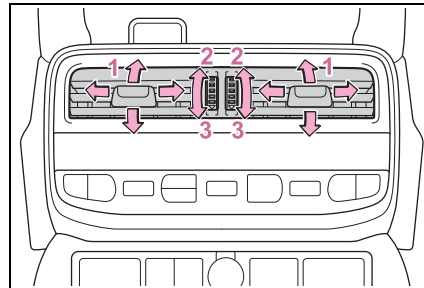


- 1 Direct air flow to the left or right, up or down
- 2 Open the vent
- 3 Close the vent

 **WARNING**

■ **To not interrupt the windshield defogger from operating**

Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.

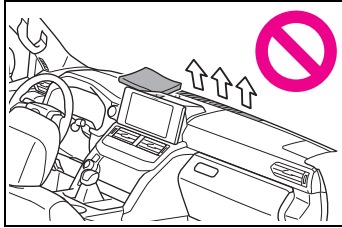

Front automatic air conditioning system (vehicles with 12.3-inch display)

Air outlets and fan speed are automatically adjusted according to the temperature setting.


The air conditioning system can be operated using the air conditioning control panel and air conditioning control screen on the Toyota multi-operation touch.

For details about Toyota multi-operation touch, refer to P.602.


Air conditioning controls

- ▶ Vehicles with rear air conditioning system

Left-hand drive vehicles:

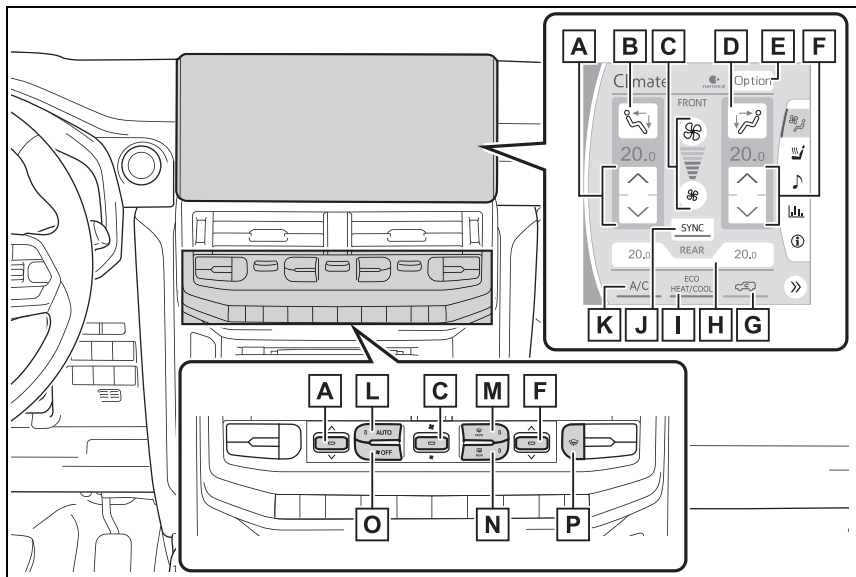


Right-hand drive vehicles:

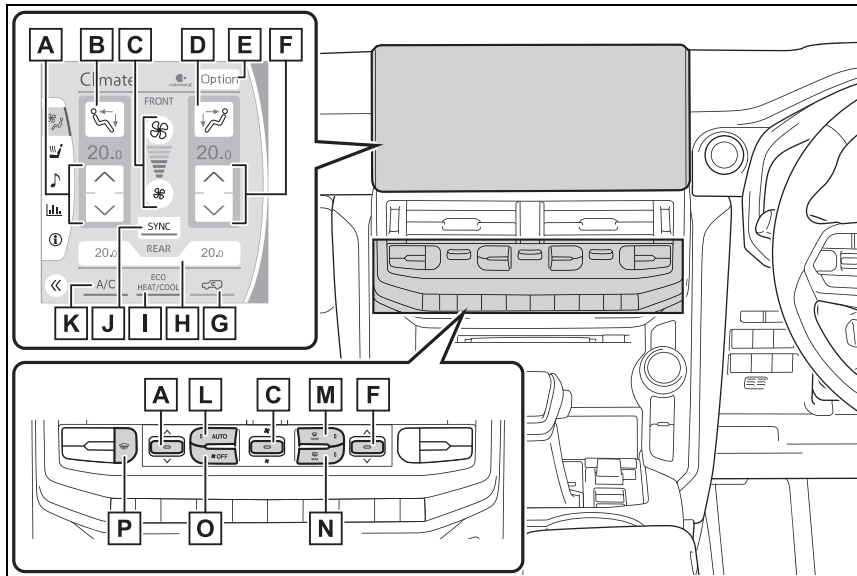

- A** Left-hand side temperature control switches
- B** Left-hand side airflow mode control switch
- C** Fan speed control switches
- D** Right-hand side airflow mode control switch
- E** "Option" switch
- F** Right-hand side temperature control switches
- G** Outside/recirculated air mode switch
- H** Rear air conditioning control screen
- I** Eco air conditioning mode switch
- J** "SYNC" switch
- K** "A/C" switch
- L** Automatic mode switch
- M** Windshield defogger switch
- N** Rear window and outside rear view mirror defoggers switch
- O** "OFF" switch

- P** Windshield wiper de-icer switch (if equipped)
- Heated Windshield Defroster switch (if equipped)
- Vehicles without rear air conditioning system

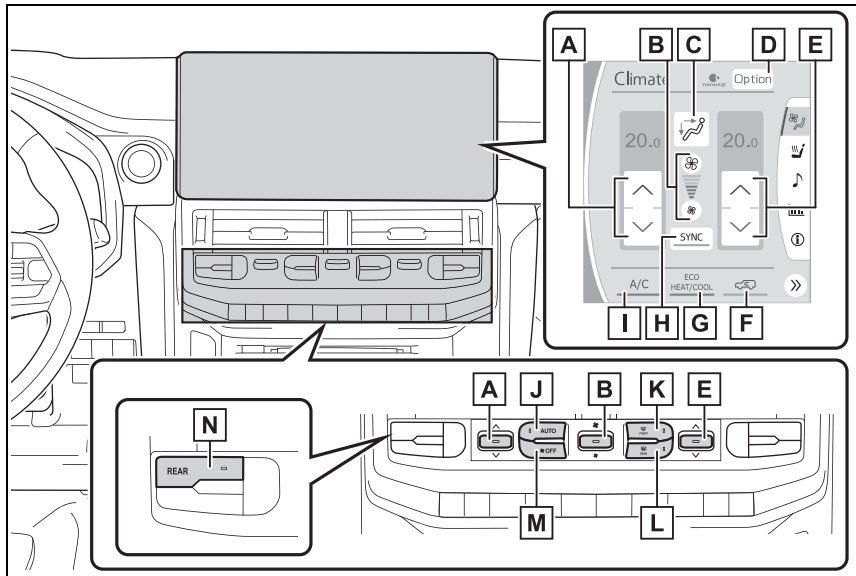


- A** Left-hand side temperature control switches
- B** Fan speed control switches
- C** Airflow mode control switch
- D** “Option” switch
- E** Right-hand side temperature control switches
- F** Outside/recirculated air mode switch
- G** Eco air conditioning mode switch
- H** “SYNC” switch
- I** “A/C” switch
- J** Automatic mode switch
- K** Windshield defogger switch
- L** Rear window and outside rear view mirror defoggers switch
- M** “OFF” switch


N “Rear” switch (if equipped) (→P.578)

■ **Adjusting the temperature setting**

Operate the temperature control switches on the air conditioning control panel upwards or select

 of the temperature control switches on the air conditioning control screen to increase the temperature.

Operate the temperature control switches on the air conditioning control panel downwards or select

 of the temperature control switches on the air conditioning control screen to decrease the temperature.

If the switch is pressed and held or selected and held, the temperature will continuously change.

If the indicator on the “A/C” switch does not illuminate, the system will blow ambient temperature air or heated air.

■ **Adjusting the fan speed setting**

Operate the fan speed control switch on the air conditioning control panel upwards or select the fan speed control switch on the air conditioning control screen to increase the fan speed.

Operate the fan speed control switch on the air conditioning control panel downwards or select the fan speed control switch on the air

conditioning control screen to decrease the fan speed.


The fan speed is shown on the display. (7 levels)


Press the “OFF” switch on the air conditioning control panel to turn the fan off.

■ **Change the airflow mode**


Select the airflow mode control switch on the air conditioning control screen.

The airflow mode changes each time the switch is selected.

 : Air flows to the upper body

 : Air flows to the upper body and feet

 : Air flows to the feet

 : Air flows to the feet and the windshield defogger operates

■ **Switching between outside air and recirculated air modes**

Select the outside/recirculated air mode switch on the air conditioning control screen.

The mode switches between outside air mode and recirculated air mode each time the switch is selected.

When recirculated air mode is selected, the indicator illuminates on the outside/recirculated air mode switch.

■ **Set cooling and dehumidification function**

Select the “A/C” switch on the air conditioning control screen.

When the function is on, the indicator illuminates on the "A/C" switch.

■ Eco air conditioning mode

The air conditioning is controlled with low fuel consumption prioritized such as reducing fan speed, etc.

Select the eco air conditioning mode switch on the air conditioning control screen.

When the eco air conditioning mode is on, the indicator illuminates on the eco air conditioning mode switch.

■ Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Press the windshield defogger switch.

Set the outside/recirculated air mode switch to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows quickly, turn the air flow and temperature up.

To return to the previous mode, press the windshield defogger switch again when the windshield is defogged.

When the windshield defogger switch is on, the indicator illuminates on the windshield defogger switch.

■ Defogging the rear window and outside rear view mirrors (if equipped)

Defoggers are used to defog the rear window and to remove raindrops, dew and frost from the outside rear view mirrors.

Press the rear window and outside rear view mirror defoggers switch.

The defoggers will automatically turn off after 15 minutes.


When the rear window and outside rear view mirror defoggers switch is on, the indicator illuminates on the rear window and outside rear view mirror defoggers switch.

■ Option control screen

Select the "Option" switch to display the option control screen.

The functions can be switched on and off.

When the function is on, the indicator illuminates on the screen.

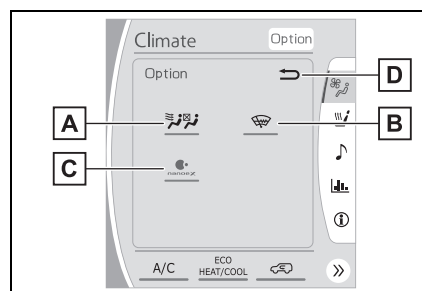

A Front seat concentrated airflow mode (S-FLOW) (→P.575)

B Windshield wiper de-icer (if equipped)/Heated Windshield Defroster (if equipped) (→P.575)

C nanoe™ X* (if equipped) (→P.572)

D Select to display the previous screen.

*: nanoe™ and the nanoe™ mark are trademarks of Panasonic Corpora-

tion.

■ Fogging up of the windows

- The windows will easily fog up when the humidity in the vehicle is high. Turning the cooling and dehumidification function on will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn the cooling and dehumidification function off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

■ When driving on dusty roads

Close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake mode be set to outside air mode and the fan speed to any setting except off.

■ Outside/recirculated air mode

- Setting to the recirculated air mode temporarily is recommended in preventing dirty air from entering the vehicle interior and helping to cool the vehicle when the outside air temperature is high.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

■ When the outside temperature falls to nearly 0°C

The dehumidification function may not operate even when "A/C" switch is selected.

■ Operation of the air conditioning system in Eco drive mode

- In Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:
 - Engine speed and compressor operation controlled to restrict heating/cooling capacity
 - Fan speed restricted when automatic mode is selected

- To improve air conditioning performance, perform the following operations:

- Adjust the fan speed
- Turn off Eco drive mode (→P.473)
- Turn off Eco air conditioning mode
- When the driving mode is set to Eco drive mode, the Eco air conditioning mode will be turned on automatically. Even in this case, the Eco air conditioning mode can be turned off by selecting the Eco air conditioning mode switch.

■ nanoe™ X*1 (if equipped)

The air conditioning system adopts nanoe™ generator. This helps to fill the cabin with refreshing air by emitting slightly acidic nanoe™ coated with water particles through the front center vent*2.

- When the fan is turned on and nanoe™ X on the option control screen is selected, the nanoe™ X system is activated.
- When the fan is operated in the following conditions, system performance will be maximized. If the following conditions are not met, performance will be limited.
 - The upper body, upper body and feet, feet air outlets are being used.
 - The air outlets are open.
- When nanoe™ X is generated, a small amount of ozone is emitted and may be faintly smelled in some situations. However, this is approximately the same as the amount that already exists in nature, such as in forests, and it has no affect on the human body.
- A slight noise may be heard during operation. This is not a malfunction.

*1: nanoe™ X is a nanoe™ generator.

*2: According to temperature and humidity conditions, fan speed and direction of the air flow, the nanoe™ system may not operate at full capacity.

■ Ventilation and air conditioning odors

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- In order to suppress odors that occur when the air conditioning system starts, the air flow mode may change to blow air to the feet or air may stop blowing for a short period of time immediately after the air conditioning system is started in automatic mode.
- On some models: When parking, the system automatically switches to outside air mode to encourage better air circulation throughout the vehicle, helping to reduce odors that occur when starting the vehicle.
- To reduce potential odors from occurring:
 - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
 - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

■ Air conditioning filter

→P.677

■ Air conditioning system operations when the engine is stopped due to the Stop & Start system (vehicles with Stop & Start system)

When the engine is stopped due to the Stop & Start system operations, the air conditioning cooling, heating and dehumidification functions turn off and only ambient temperature air is blown, and there is a possibility that the blowing of ambient temperature air will stop. To prevent the air conditioning system from turning off, press the Stop & Start cancel switch to deactivate the system.

■ When the windshield is fogged up and the engine is stopped due to the Stop & Start system (vehicles with Stop & Start system)

Press the windshield defogger switch to restart the engine and defog the windshield. If the windshield continuously fogs up, press the Stop & Start cancel switch and refrain from using the Stop & Start system.

■ When an odor comes from the air conditioning system while the engine is stopped due to the Stop & Start system (vehicles with Stop & Start system)

Press the Stop & Start cancel switch to restart the engine.

■ While the cool box is on (vehicles with cool box)

- ▶ GCC countries*, Lebanon, Jordan, Yemen, Iraq

The front air conditioning system cannot be turned off. However, air flow to the occupants can be stopped by pressing the "OFF" button on the air conditioning control panel.

Also, a very small amount of air is blown from the windshield air vent to protect the air conditioning system.

- ▶ Except GCC countries*, Lebanon, Jordan, Yemen, Iraq

The front air conditioning system cannot be turned off.

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

■ Customization

Some functions can be customized. (Customizable features: →P.774)

**WARNING****■ To prevent the windshield from fogging up**

Do not use the windshield defogger switch during cool air operation in extremely humid weather.

The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

■ When the outside rear view mirror defoggers (if equipped) are operating

Do not touch the rear view mirror surfaces when the outside rear view mirror defoggers are on.

■ nanoe™ X generator (if equipped)

Do not disassemble or repair the generator because it contains high voltage parts. Contact your Toyota dealer if the generator needs repair.

**NOTICE****■ To prevent battery discharge**

Do not leave the air conditioning system on longer than necessary when the engine is not running.

■ To prevent damage to the nanoe™ X (if equipped)

Do not insert anything into the air outlets, attach anything to it, or use sprays around the air outlets. These things may cause the generator not to work properly.

Using automatic mode

- 1 Press the "AUTO" switch on the air conditioning control panel.
- 2 Adjust the temperature setting.

- 3 To stop the operation, press the "OFF" switch on the air conditioning control panel.

If the fan speed setting or air flow modes are operated, the automatic mode indicator goes off. However, automatic mode for functions other than that operated is maintained.

■ Using automatic mode

Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after the automatic mode switch is pressed.

Cool air may blow around the upper body even when the heater is on due to sunlight.

Adjusting the temperature and airflow for driver and passenger seats simultaneously ("SYNC" mode)


To turn on the "SYNC" mode, select the "SYNC" switch on the air conditioning control screen.

The driver's side temperature control switches can be used to adjust the temperature for the driver's and passenger's side. To enter individual mode, operate the passenger's side temperature control switches or select the "SYNC" switch again.

When the "SYNC" mode is on, the indicator illuminates on display.

Using front seat concentrated airflow mode (S-FLOW)

Directing airflow to the front seats only and to all seats can be switched via switch operation. Unnecessary air conditioning is suppressed, contributing to increased fuel efficiency.

Select  on the option control screen of the air conditioning control screen and switch the airflow.

Indicator illuminated: Airflow to the front seats only

Indicator off: Airflow to all the seats

Even if the function is switched to directing airflow to only the front seats, when a rear seat is occupied, it may automatically direct airflow to all seats.

Windshield wiper de-icer (if equipped)/Heated Windshield Defroster (if equipped)

This feature is used to prevent ice from building up on the windshield and wiper blades.

Press the switch to turn the system on/off.

The indicator comes on when the system is on.


Vehicles with windshield wiper de-icer: The windshield wiper de-icer will automatically turn off after a period of time.

Vehicles with Heated Windshield


Defroster:

- The Heated Windshield
Defroster will automatically turn off.
- The Heated Windshield
Defroster will not operate if the outside temperature is 5°C (41°F) or higher.

► Option control screen

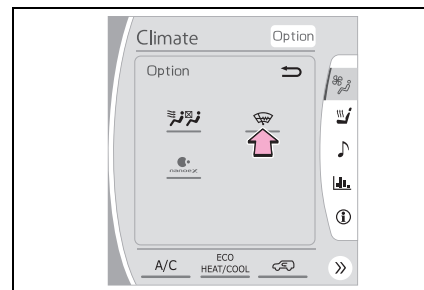

► Air conditioning control panel

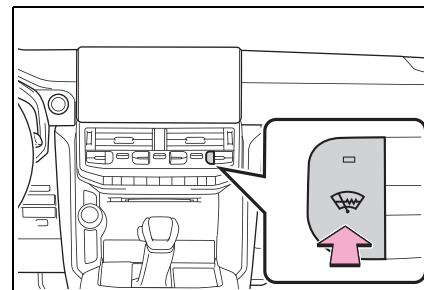

WARNING

■ To prevent burns

- Vehicles with windshield wiper de-icer: Do not touch the glass at lower part of the windshield or to the side of the front pillars when the windshield wiper de-icer is on.

! WARNING


● Vehicles with Heated Windshield Defroster: Do not touch the windshield (especially the lower part) as the surfaces can become very hot when the Heated Windshield Defroster is on.

Heater idle up (if equipped)/Power heater (if equipped)


■ **Heater idle up**

This feature is used to boost heating effect in extremely cold conditions when the vehicle is not moving.

► Left-hand drive vehicles

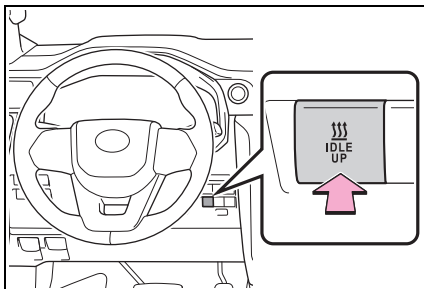

► Right-hand drive vehicles

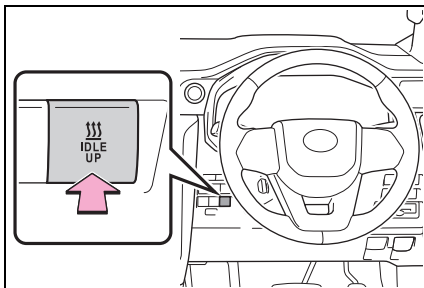


Press the switch to increase engine speed.

Press the switch again to return the engine to the normal idle speed. If you do not turn the switch to off, the engine speed is increased whenever the engine is started.

■ **Power heater**

This feature is used to heat the engine coolant, speed up warming of the cab in cold weather, and keep the cab warm.

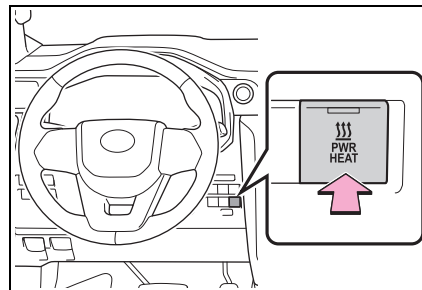


Turns the power heater on/off

If you do not turn the switch to off, the engine speed is increased whenever the engine is started.

Air outlet layout and operations


■ **Location of air outlets**

The air outlets and air volume change according to the selected air flow mode.

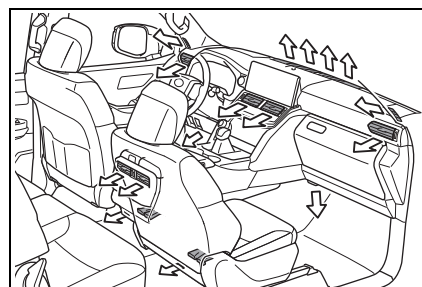


■ **Adjusting the air flow direction and opening/closing the air outlets**

► Front

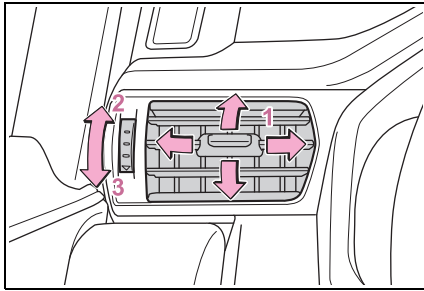

- 1 Direct air flow to the left or right, up or down
- 2 Open the vent
- 3 Close the vent

► Rear

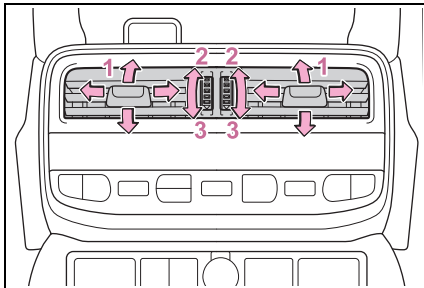

- 1 Direct air flow to the left or right, up or down
- 2 Open the vent
- 3 Close the vent

! WARNING

■ **To not interrupt the windshield defogger from operating**

Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.




Rear cooler system *

*: If equipped


Press the “REAR” switch on the front air conditioning control panel to use the rear cooler system.

Rear cooler controls

► Vehicles without 12.3-inch display

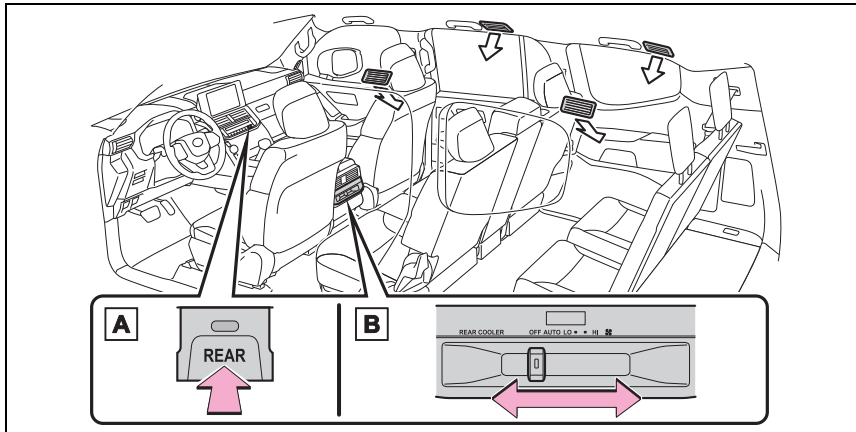

► Vehicles with 12.3-inch display

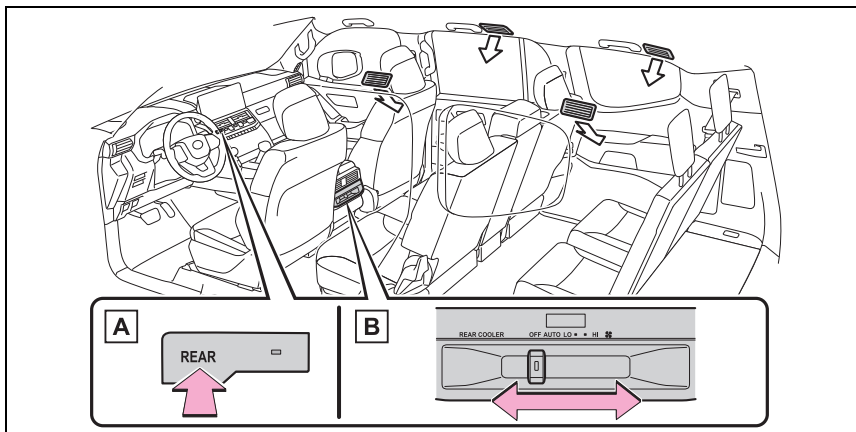

A “REAR” switch


B Fan speed control knob

Adjusting the fan speed setting

- 1 Press the “REAR” switch to turn on the system.
- 2 Use the fan speed control knob to adjust the desired fan speed.

Press the “REAR” switch again or set the fan speed control knob to “OFF” to turn the fan off.

Adjusting the air flow direction and opening/closing the air outlets

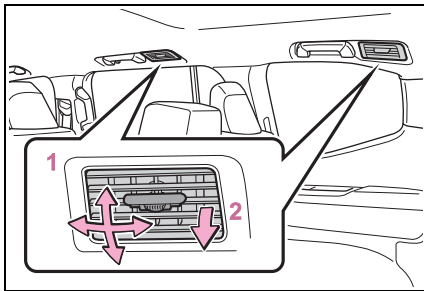

- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob down fully to close the vent.

■ Using “AUTO” mode

The fan speed is adjusted automatically according to the temperature setting of the front air conditioning system and the ambient conditions.



NOTICE

■ To prevent battery discharge

Do not leave the air conditioning system on longer than necessary when the engine is not running.


Rear air conditioning system*

*: If equipped

Air outlets and fan speed are automatically adjusted according to the temperature setting.


Rear air conditioning controls

► Air conditioning control panel

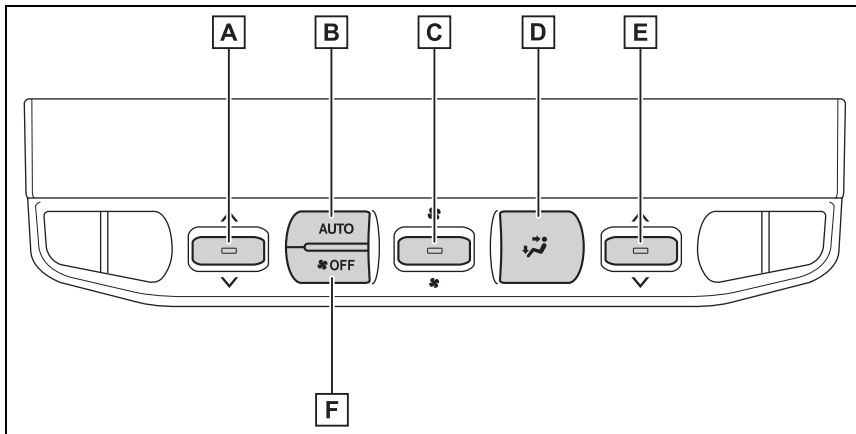

- A** Left-hand side temperature control switch
- B** Automatic mode switch
- C** Fan speed control switch
- D** Airflow mode control switch
- E** Right-hand side temperature control switch
- F** "OFF" switch

- Air conditioning control screen (vehicles with 12.3-inch display)

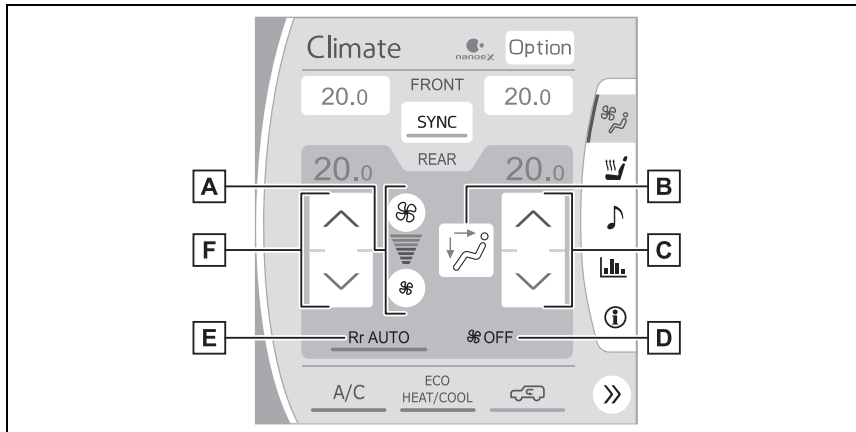

- A** Fan speed control switches
- B** Airflow mode control switch
- C** Right-hand side temperature control switch
- D** “OFF” switch
- E** “Rr AUTO” switch (automatic mode)
- F** Left-hand side temperature control switch

■ Adjusting the temperature setting

Operate the temperature control switches on the air conditioning control panel upwards or select



of the temperature control switches on the air conditioning control screen to increase the temperature.

Operate the temperature control switches on the air conditioning control panel downwards or select



of the temperature control switches on the air conditioning

control screen to decrease the temperature.

The temperature for the right-hand and left-hand seats can be set separately.

■ Adjusting the fan speed setting

Operate the fan speed control switch on the air conditioning control panel upwards or select the fan speed control switch on the air conditioning control screen to increase the fan speed.

Operate the fan speed control switch on the air conditioning control panel downwards or select the fan speed control switch on the air

conditioning control screen to decrease the fan speed.


The fan speed is shown on the display. (7 levels)

Press the "OFF" switch to turn off the fan.

■ **Change the airflow mode**

Press the airflow mode control switch.


The airflow mode changes as follows each time the switch is pressed.

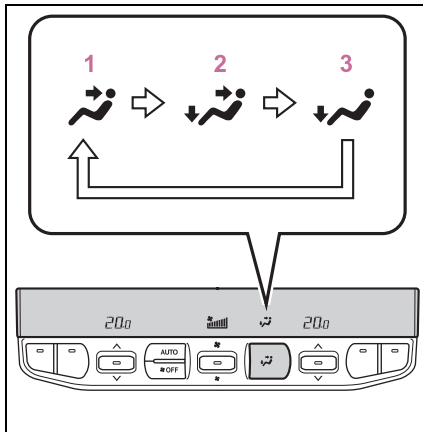

- 1 Upper body
- 2 Upper body and feet
- 3 Feet

- The rear air conditioning can be operated from the front seats by operate the "REAR" switch.
- When the front air conditioning system is off, only air blows without the cooling function activated.
- During use, various odors from inside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring: The start timing of the blower

may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

 NOTICE

■ **To prevent battery discharge**

Do not leave the rear air conditioning system on longer than necessary when the engine is not running.

Using the automatic mode

- 1 Press the "AUTO" switch.
- 2 Adjust the temperature setting.


If the fan speed setting or air flow modes are operated, the automatic mode indicator on the display goes off. However, automatic mode for functions other than that operated is maintained.

To stop the operation, press the "OFF" switch.


Air outlet layout and operations

■ **Location of air outlets**

The air outlets and air volume changes according to the selected air flow mode.

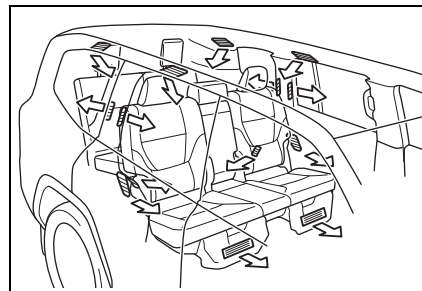

■ **Adjusting the air flow direction and opening/closing the air outlets (side ceiling)**

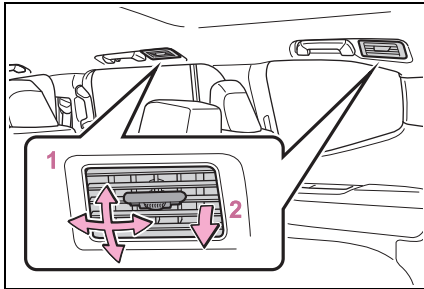

- 1** Direct air flow to the left or right, up or down.
- 2** Turn the knob down fully to close the vent.

Heated steering wheel* /seat heaters* /seat ventilators*

*: If equipped

● **Heated steering wheel**

Warm up the side grips of the steering wheel

● **Seat heaters**

Warm up the seat upholstery

● **Seat ventilators**

Maintain good ventilation by pulling air through the seat upholstery

⚠ WARNING

■ **To prevent minor burn injuries**


Care should be taken if anyone in the following categories comes in contact with the steering wheel or seats when the heater is on:

- Babies, small children, the elderly, the sick and the physically challenged
- Persons with sensitive skin
- Persons who are fatigued
- Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)

⚠ NOTICE


■ **To prevent damage to the seat heaters and seat ventilators**

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.


 **NOTICE**
■ To prevent battery discharge
 Do not use the functions when the engine is not running.

Heated steering wheel (if equipped)


▶ Vehicles without 12.3-inch display (type A)
 Turns the heated steering wheel on/off
 The indicator light **A** comes on when the heated steering wheel is operating.

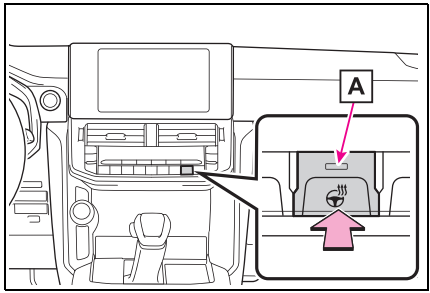

▶ Vehicles without 12.3-inch display (type B)
 Turns the heated steering wheel on/off
 The indicator light **A** comes on when the heated steering wheel is operating.

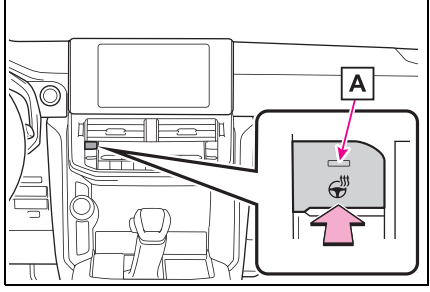

▶ Vehicles with 12.3-inch display
 Turns the heated steering wheel on/off
 The indicator light **A** comes on when the heated steering wheel is operating.

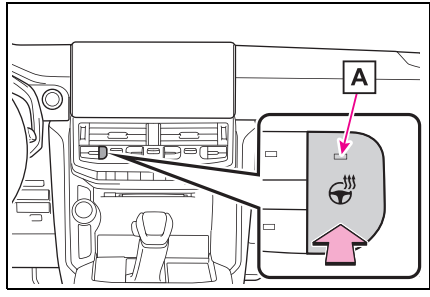


■ **Operation condition**
 The engine switch is in ON.
 ■ **If the indicator light flashes**
 Press the switch to turn the heated steering wheel off and then press the switch again. If the indicator light still flashes, a malfunction may be occurring. Turn the heated steering wheel off and have the vehicle inspected by your Toyota dealer.

Seat heaters (if equipped)

■ **Front**
 ▶ Vehicles without 12.3-inch display
 Turns the seat heaters on/off
 Each time the switch is pressed, the operation condition changes as follows.
 AUTO (lit) → Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off
 The AUTO indicator **B** and/or level indicator **A** illuminates during operation.

When in the AUTO mode, the seat heaters or seat ventilators automatically operate according to circumstances.

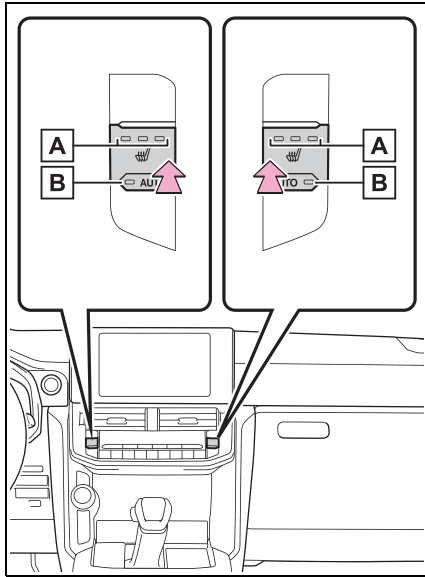

► Vehicles with 12.3-inch display


Turns the seat heaters on/off

Each time the switch is pressed, the operation condition changes as follows.

AUTO (lit) → Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

The AUTO indicator **B** and/or level indicator **A** illuminates during operation.

When in the AUTO mode, the seat heaters or seat ventilators automatically operate according to circumstances.

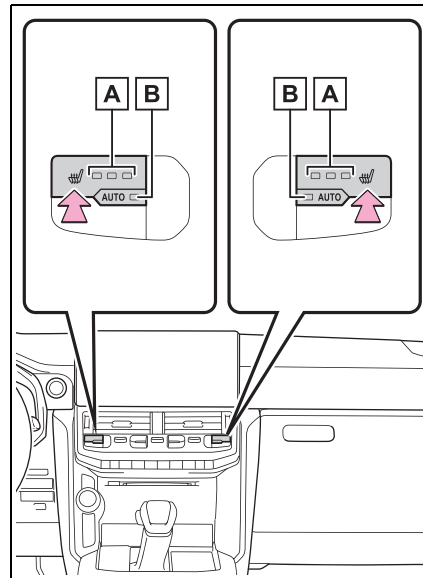

■ Rear (outboard rear seats) (if equipped)


Turns the seat heaters on/off

Each time the switch is pressed, the operation condition changes as follows.

AUTO (lit) → Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

While the rear seat heaters are operating, the indicator **A** on the seat heater switch and level indicator **B** illuminate, or the indicator **A** on the seat heater switch, level indicator **B** and "AUTO" indicator **C** illuminate.

When in the AUTO mode, the seat heaters or seat ventilators automatically operate according to circumstances.

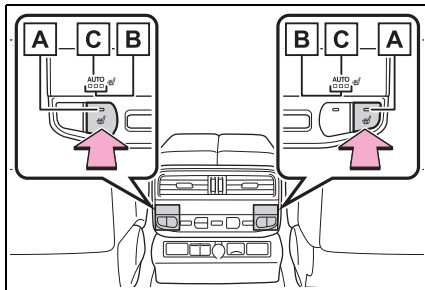

■ **The seat heaters can be used when**
The engine switch is in ON.

■ **Customization**

Settings for the seat heaters can be changed. (Customizable features: →P.774)

⚠ WARNING

■ **To prevent causes of overheating and minor burn injuries**

Observe the following precautions when using a seat heater

- Do not cover the seat with a blanket or cushion when using the seat heater.
- Do not use seat heater more than necessary.

Seat ventilators (if equipped)

■ **Front**


▶ Vehicles without 12.3-inch display

Turns the seat ventilators on/off
Each time the switch is pressed, the operation condition changes as follows.
AUTO (lit) → Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

The AUTO indicator **A** and/or level

indicator **B** illuminates during operation.

When in the AUTO mode, the seat heaters or seat ventilators automatically operate according to circumstances.

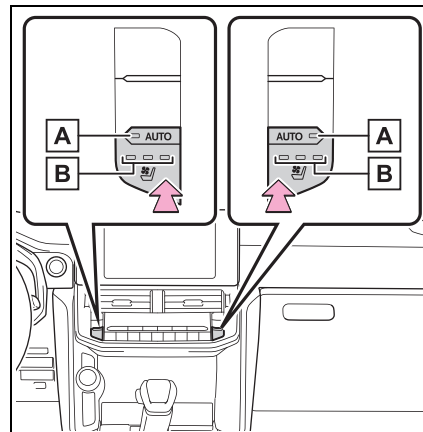


▶ Vehicles with 12.3-inch display

Turns the seat ventilators on/off
Each time the switch is pressed, the operation condition changes as follows.

AUTO (lit) → Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

The AUTO indicator **A** and/or level indicator **B** illuminates during operation.

When in the AUTO mode, the seat heaters or seat ventilators automatically operate according to circumstances.

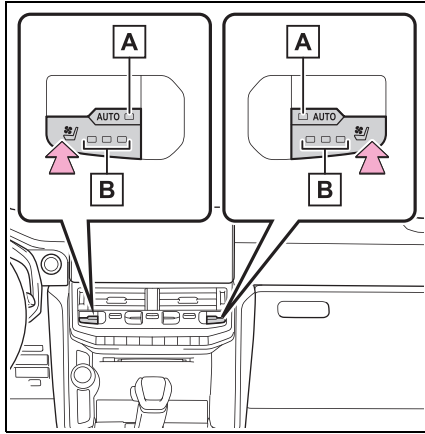

■ Rear (outboard rear seats) (if equipped)

Turns the seat ventilators on/off


Each time the switch is pressed, the operation condition changes as follows.

AUTO (lit) → Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

While the rear seat ventilators are operating, the indicator **A** on the seat ventilator switch and level indicator **B**

illuminate, or the indicator **A** on the seat ventilator switch, level indicator **B** and "AUTO" indicator **C** illuminate.

When in the AUTO mode, the seat heaters or seat ventilators automatically operate according to circumstances.

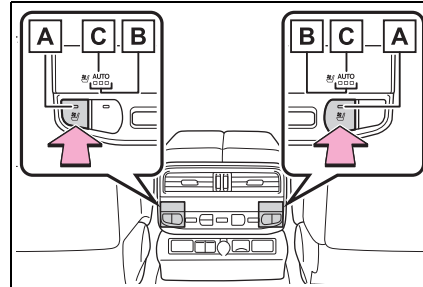

■ The seat ventilators can be used when

The engine switch is in ON.


■ Air conditioning system-linked control mode

When the seat ventilator fan speed level is Hi, the seat ventilator fan speed becomes higher according to the fan speed of the air conditioning system.


■ Customization

Settings for the seat ventilators can be changed. (Customizable features: →P.774)

Control screen (vehicle with 12.3-inch display)

When  is selected on the Toyota multi-operation touch screen, heated steering wheel, front seat heaters and front seat ventilators control screen will be displayed.

The switch on the screen can be selected by operating Toyota multi-operation touch.

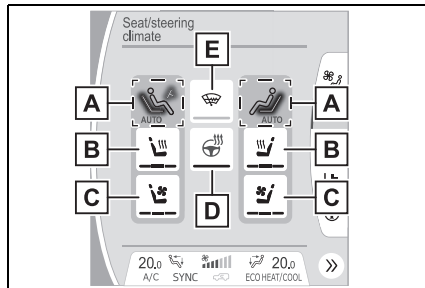

A Operation condition display of the heated steering wheel, front seat heaters and front seat ventilators

The operation conditions of the heated steering wheel, front seat heaters and front seat ventilators are displayed. When the seat heater or seat ventilator are in the AUTO mode, the "AUTO" indicator illuminates.

B Adjust the front seat heater temperature level

Each time the switch is selected, the temperature level and level indicator change as follows:

AUTO → Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

When in the AUTO mode, the seat heaters or seat ventilators automatically operate according to circumstances.

C Adjust the front seat ventilator fan speed level

Each time the switch is selected, the fan speed level and level indicator change as follows:

AUTO → Hi (3 segments lit) → Mid (2 segments lit) → Lo (1 segment lit) → Off

When in the AUTO mode, the seat

heaters or seat ventilators automatically operate according to circumstances.


D Turns the heated steering wheel on/off

The indicator light comes on when the heated steering wheel is operating.

E Windshield wiper de-icer switch (if equipped) (→P.575)
Heated Windshield Defroster switch (if equipped) (→P.575)

Interior lights list

Location of the interior lights

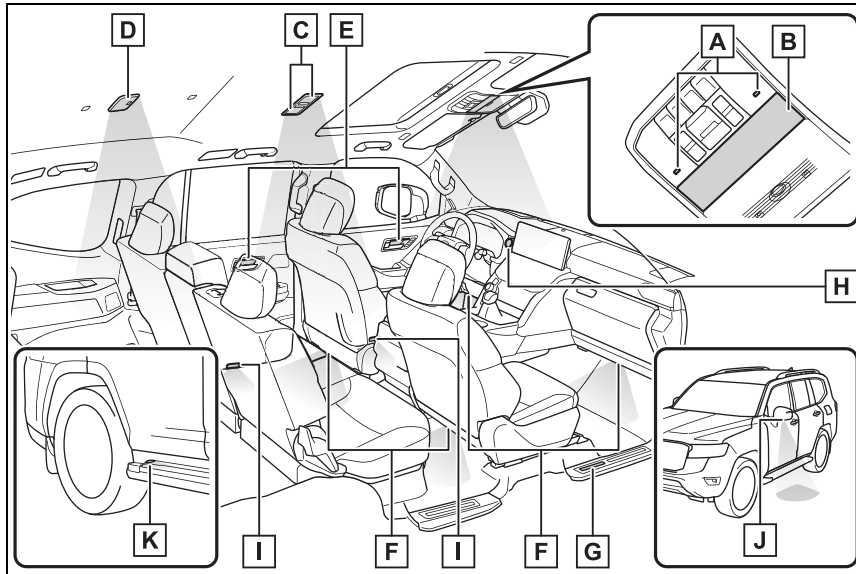


- A** Shift lever lights
- B** Front interior lights^{*}/front personal lights^{*} (→P.590)
- C** Rear interior lights^{*}/rear personal lights^{*} (→P.590)
- D** Rear personal lights (→P.590)
- E** Inside door handle lights^{*}
- F** Footwell lights^{*}
- G** Scuff lights^{*}
- H** Engine switch light
- I** Door courtesy lights^{*}
- J** Outer foot lights^{*}
- K** Running board lights^{*}

^{*}: If equipped

Operating interior lights

■ **Front interior lights (if equipped)**

- Turning the door position on

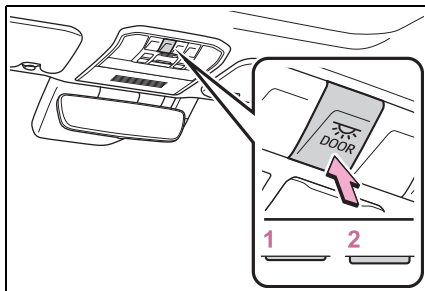

- 1 Turns the door-linked function on (door position)

The lights turn on/off according to the opening/closing of the doors.


- 2 Turns the door-linked function off

- Turning the lights on/off


Turns the lights on/off

The rear personal lights will turn on linked with the front interior lights operation.

When a door is opened while the door position is on, the lights turn on.

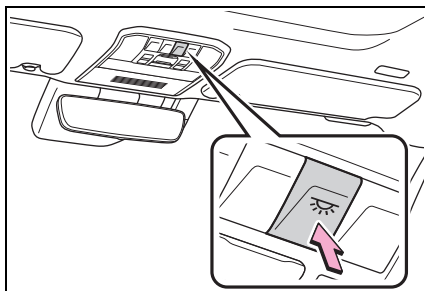

■ **Rear interior lights (if equipped)**

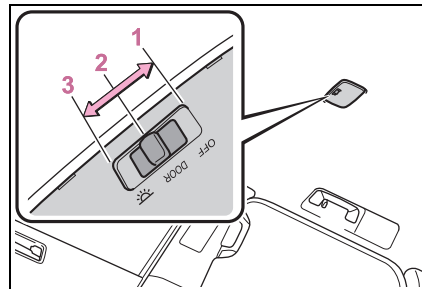

- 1 Turns the light off
- 2 Turns the door-linked function on (door position)

The lights turn on/off according to the opening/closing of the doors.

- 3 Turns the light on


The rear personal lights will turn on linked with the rear interior lights operation.

Operating personal lights

■ **Front personal lights (if equipped)**

Turns the lights on/off

When the front personal lights illuminate with the door-linked function on (door position), they will not turn off even if the switch is pressed.

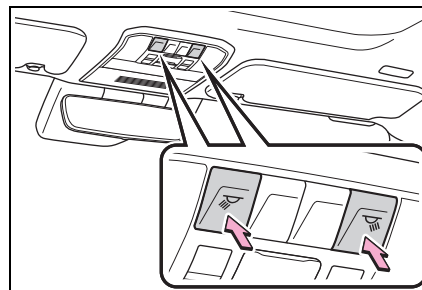


■ **Rear personal lights**

▶ **Second seats (if equipped)**

Turns the lights on/off


When the rear personal lights illuminate linked with the interior lights operation or when they illuminate with the door-linked function on (door position), they will not turn off even if the switch is pressed.

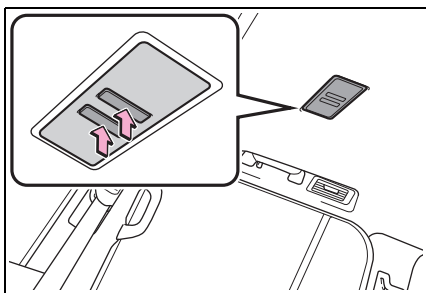


▶ **Third seats (type A)**

Turns the lights on/off

When the rear personal lights illuminate linked with the interior lights operation or when they illuminate with the door-linked function on (door position), they will not turn off even if the switch is pressed.

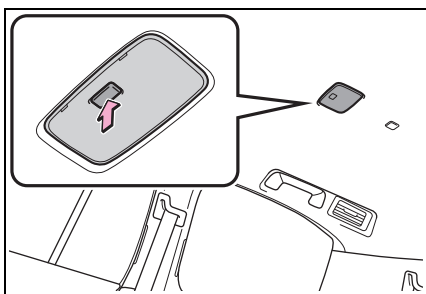

▶ **Third seats (type B)**

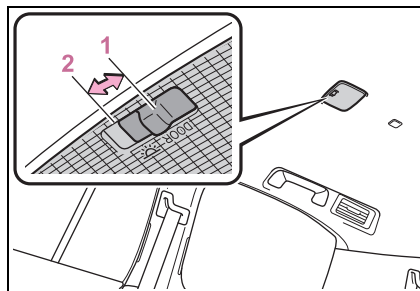


1 Turns the door-linked function on (door position)

When the door is opened or closed while the front interior light door position is on, the lights turn on or off accordingly.

2 Turns the light on

▶ **Third seats (type C)**

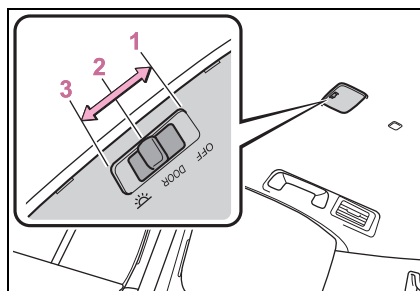

1 Turns the light off

2 Turns the door-linked function on (door position)

When the door is opened or closed while the rear interior light door position is on, the lights turn on or off accordingly.

3 Turns the light on

■ **Illuminated entry system**

The lights automatically turn on/off according to the engine switch mode, the presence of the electronic key,

whether the doors are locked/unlocked, and whether the doors are opened/closed.

■ **To prevent the battery from being discharged**

If the interior lights remain on when the engine switch is turned to OFF, the lights will go off automatically after 20 minutes.

■ **The interior lights may turn on automatically when**

If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the interior lights will turn on automatically.

The interior lights will turn off automatically after approximately 20 minutes. The interior lights can be turned off manually. However, in order to help prevent further collisions, it is recommended that they be left on until safety can be ensured.

(The interior lights may not turn on automatically depending on the force of the impact and conditions of the collision.)

■ **Customization**

Setting (e.g. the time elapsed before the lights turn off) can be changed. (Customizable features: →P.774)




NOTICE

■ **To prevent battery discharge**

Do not leave the lights on longer than necessary when the engine is not running.

List of storage features

Location of the storage features

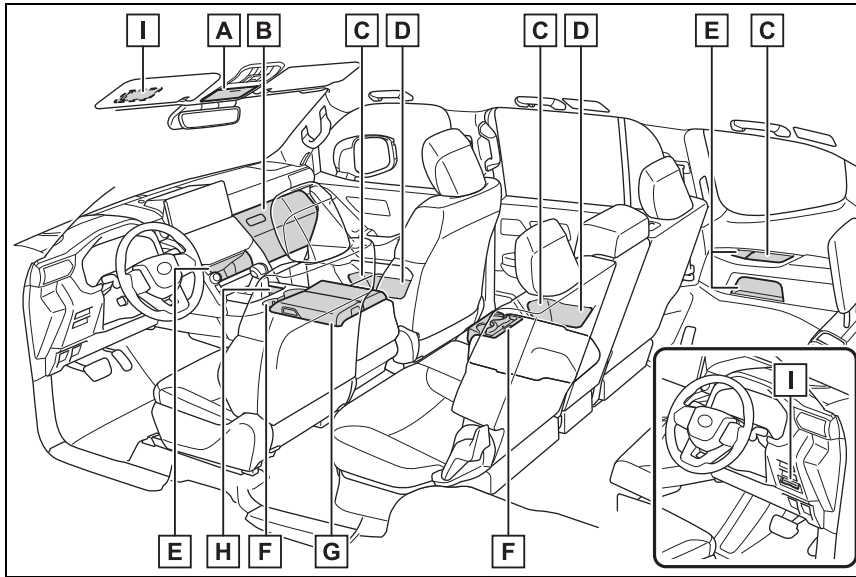


- A** Overhead console (if equipped) (→P.595)
- B** Glove box (→P.594)
- C** Bottle holders (→P.596)
- D** Door pockets
- E** Auxiliary boxes (if equipped) (→P.597)
- F** Cup holders (→P.595)
- G** Console box (if equipped) (→P.594)/cool box (if equipped) (→P.605)
- H** Open tray (if equipped) (→P.598)/wireless charger (if equipped) (→P.610)
- I** Card holders (if equipped) (→P.597)

WARNING

Items that should not be left in the storage spaces

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.

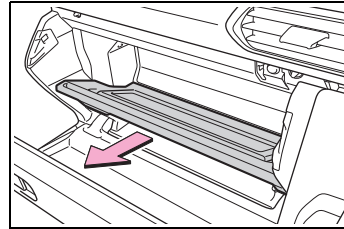


WARNING

Caution while driving

Keep the glove box closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open glove box or the items stored inside.

Glove box

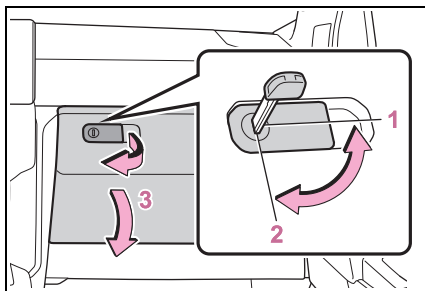

- 1 Unlock with the mechanical key
- 2 Lock with the mechanical key
- 3 Open (pull up the lever)

Glove box light

The glove box light turns on when the tail lights are on.

Removing the partition

The partition inside the glove box can be removed by pulling it.


Console box (if equipped)

Your vehicle is equipped with either a console box or cool box.

For vehicles with the cool box, refer to P.605.


While pressing the button, lift up and open the lid.

The console box can be opened from right, left or back side of the console box.

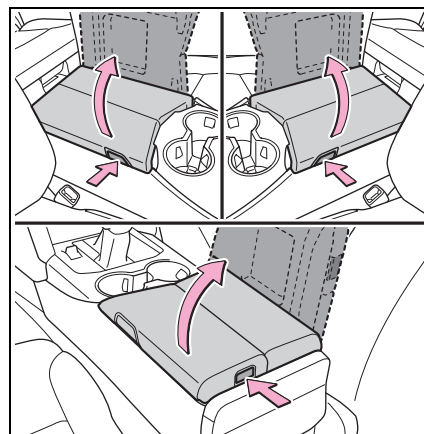


■ Tray in the console box

The tray in the console box can be moved left or right, or can be removed.

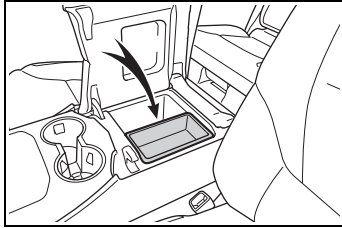**■ Console box insert**

The insert in the console box can be removed.

Remove the insert.

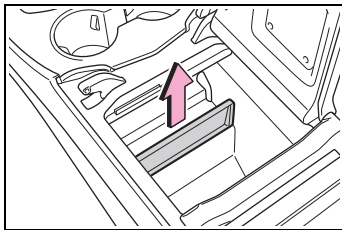**⚠ WARNING****■ Caution while driving**


Keep the console box closed.
Injuries may result in the event of an accident or sudden braking.

■ When opening and closing the console box

Take care to prevent your fingers etc. from being caught.

Overhead console (if equipped)

Press the lid.

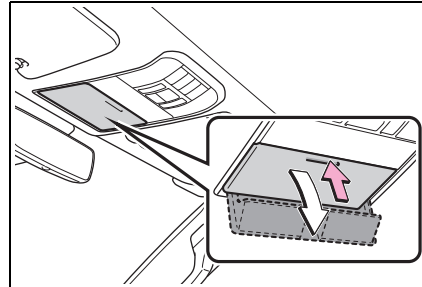**⚠ WARNING****■ Items unsuitable for storing**


Do not store items heavier than 0.2 kg (0.4 lb.).

Doing so may cause the overhead console to open and the items inside may fall out, resulting in an accident.


■ Caution while driving

Keep the overhead console closed.

Injuries may result in the event of an accident or sudden braking.

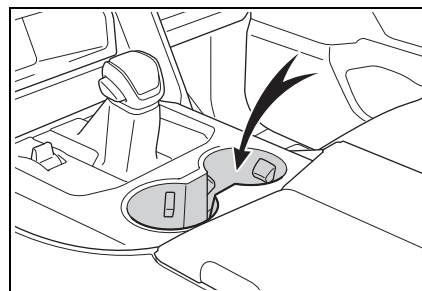Cup holders**► Front****► Rear (if equipped)**


To open, pull down the armrest and press in and release the rear cup holder on the armrest.

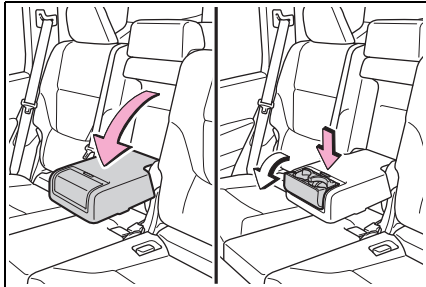


■ Front cup holder

- The tray in the driver's side cup holder can be removed.

When the tray is removed, the cup holder can be used as a bottle holder.

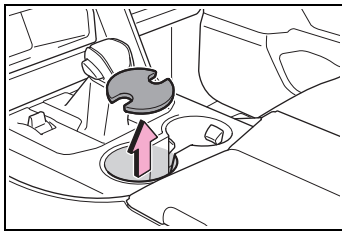

- The tray removed can be stored in the front passenger's side cup holder.

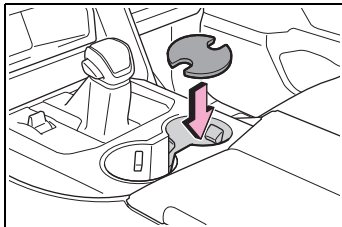

⚠ WARNING

■ Items unsuitable for the cup holders

- Do not place anything other than cups or beverage cans in the cup holders.

Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent burns.

- Do not place anything tall such as plastic bottle in the cup holder with the tray. It may prevent the shift operation.


⚠ NOTICE

- To prevent damage to the cup holders (vehicles with a rear cup holder)


Stow the cup holders before stowing the rear armrest.

Bottle holders


▶ Front seats

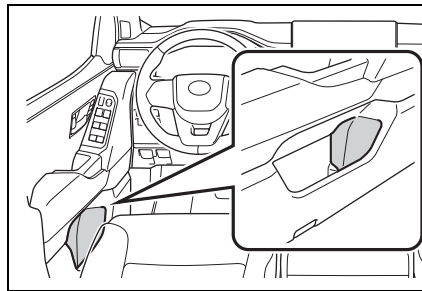

▶ Rear seats

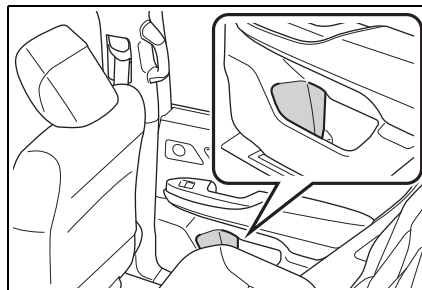


► Side of the third seat

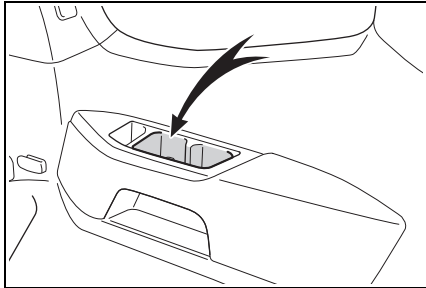

■ **Bottle holders**

- When storing a bottle, close the cap.
- The bottle may not be stored depending on its size or shape.


 **NOTICE**

■ **Items that should be not stowed in the bottle holders**


Do not place open bottles or glass and paper cups containing liquid in the bottle holders. The contents may spill and glasses may break.

■ **Card holders (if equipped)**

- Inside of the sun visors (if equipped)

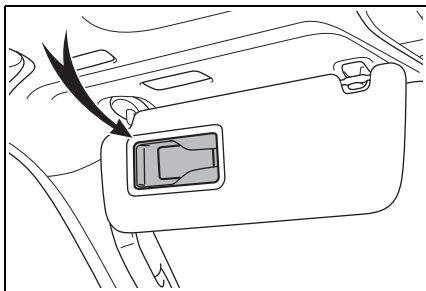


► Instrument panel (if equipped)

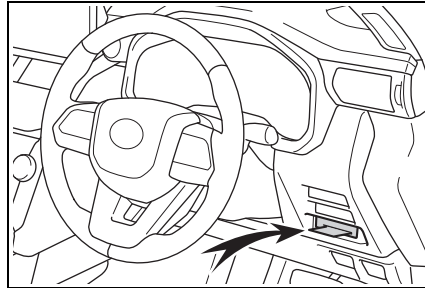


■ **Auxiliary boxes**

- Front (if equipped)

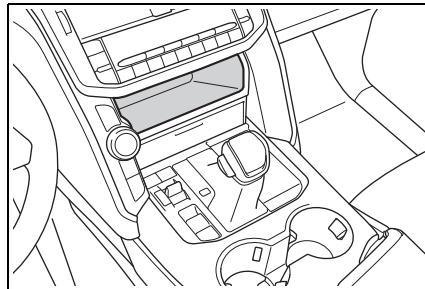

- Side of the third seat (if equipped)

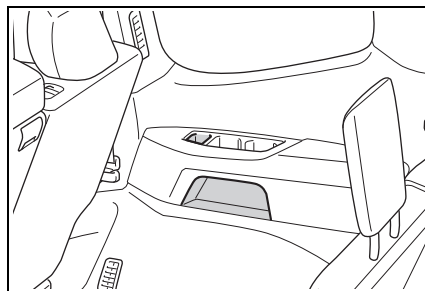


⚠ WARNING

■ **Caution while driving**

Do not leave the auxiliary box open while driving.
Items stored in it may fall out and cause death or serious injury in case of an accident or sudden stop.

Open tray (if equipped)

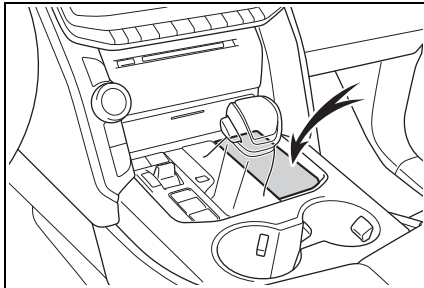

⚠ WARNING

■ **Items unsuitable for the open tray**

Observe the following precautions when putting items in the open tray. Failure to do so may cause items to be thrown out of the tray in the event of sudden braking or steering. In these cases, the items may interfere with pedal operation or cause driver distraction, resulting in an accident.

- Do not store items in the tray that can easily shift or roll out.
- Do not stack items in the tray higher than the tray's edge.
- Do not put items in the tray that may protrude over the tray's edge.

Luggage compartment features

⚠ WARNING

■ **Caution while driving**


Keep the auxiliary box closed.
In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by an open auxiliary box or the items stored inside.

Cargo hooks


Raise the hook to use.

The cargo hooks are provided for securing loose items.

► 5-passenger models

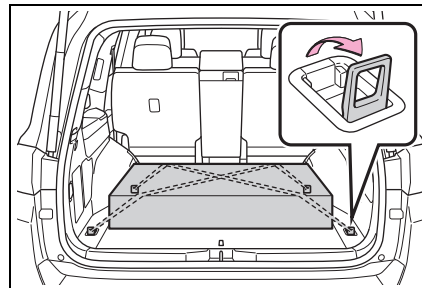

► 7-passenger models

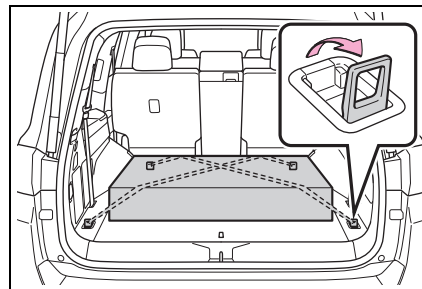


⚠ WARNING**■ When cargo hooks are not in use**

To avoid injury, always return the hooks to their stowed positions when not in use.

Storage compartment


- ▶ Side of the luggage compartment (if equipped)

Remove the cover.

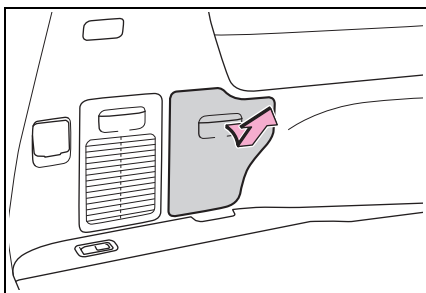

- ▶ Luggage compartment (5-passenger models)


Open the deck board.

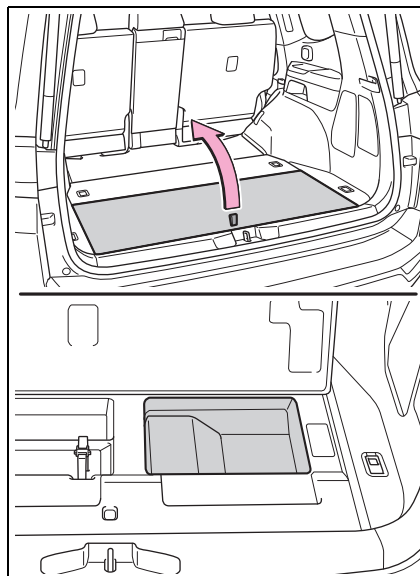**Warning reflector holder**


Open the deck board.

The warning reflector itself is not included as an original equipment.

► 5-passenger models

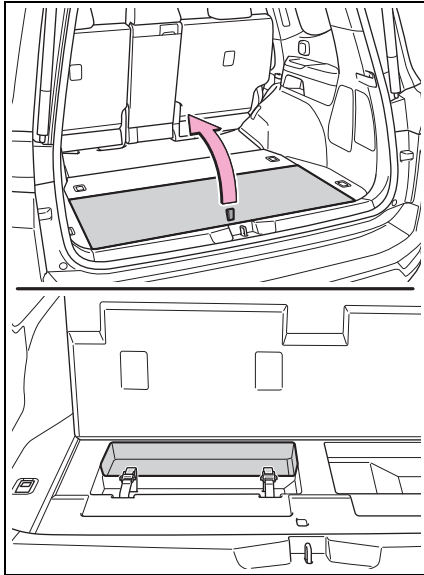

► 7-passenger models

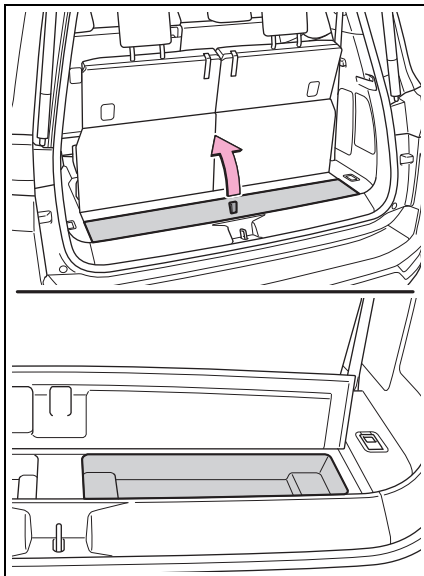


able to store it.


Luggage cover (if equipped)

■ **Installing the luggage cover**

- 1 Install one side of the luggage cover to the holder. While pushing that side in, install the other side to the opposite holder.

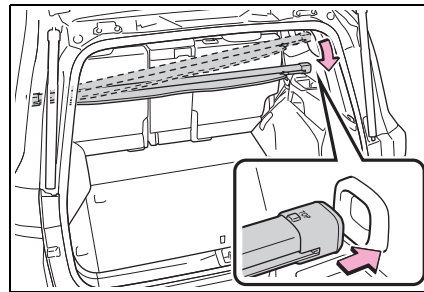

- 2 Pull out the luggage cover and secure it to the hook brackets.

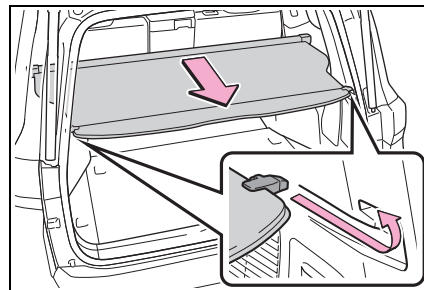


■ **Warning reflector**

Depending on the size and shape of the warning reflector case, you may not be


■ Removing the luggage cover

- 1 Detach the both ends of the luggage cover from the holder and retract it.

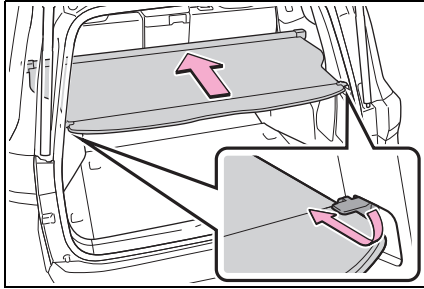


- 2 Push one end of the luggage cover inward and remove it from the holder.

After remove the luggage cover, remove it from the vehicle.

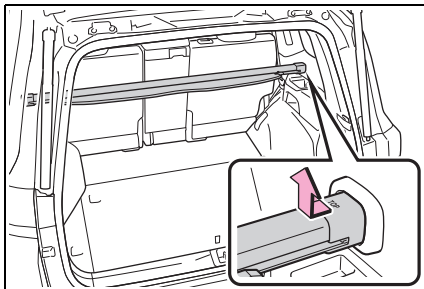

■ When installing the luggage cover

Keep the "TOP" mark on the luggage cover ends upward.

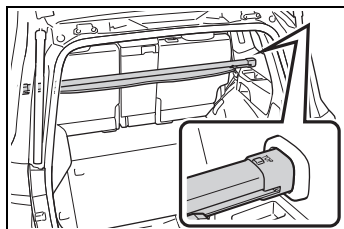

⚠ WARNING

■ Luggage cover

Do not allow children to climb on the luggage cover. Climbing on the luggage cover could result in damage to the luggage cover, possibly causing death or serious injury to the child.

Toyota multi-operation touch (vehicle with the 12.3-inch display)

The Toyota multi-operation touch allows a screen, such as the air conditioning control screen, and the navigation screen to be displayed and operated simultaneously.


For details about the operation of the Toyota multi-operation touch, refer to “Navigation and Multimedia System Owner’s Manual”.

Toyota multi-operation touch overview

The following functions can be displayed and operated on the Toyota multi-operation touch.

Operate each switch to change the displayed function screen.

The displayed function can also be changed by flicking the Toyota multi-operation touch screen up or down.

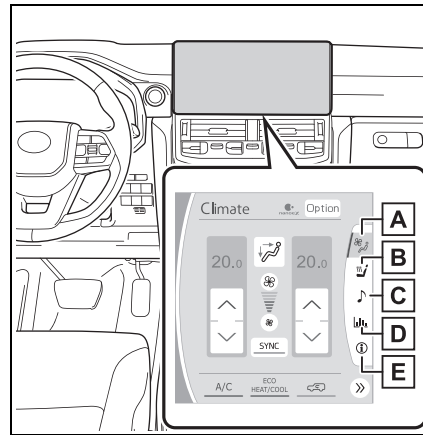

- A** Select to display the air conditioning control screen. (→P.567)
- B** Select to display the heated steering wheel, front seat heaters and front seat ventilators control screen. *1 (→P.587)
- C** Select to display the audio control screen.*2
- D** Select to display the fuel consumption screen. (→P.161)
- E** Select to display the off-road driving information display screen.

*1: If equipped

*2: Refer to the “Navigation and Multimedia System Owner’s Manual”.

Toyota multi-operation touch operation

■ Moving screens on the Toyota multi-operation touch

Selecting << or >> to change its

position of the screens on the Toyota multi-operation touch.

The screen position can also be changed by perform a left or right flick operation on a screen.

■ **Displaying a screen in full screen**

Selecting < or > on the con-


sumption screen or off-road driving information display screen will display that screen in full screen.

Select < or > to return to the split-screen display.

Off-road driving information display screen

Information related to off-road driving is shown on the display.

► When the Multi-terrain Select is turned on

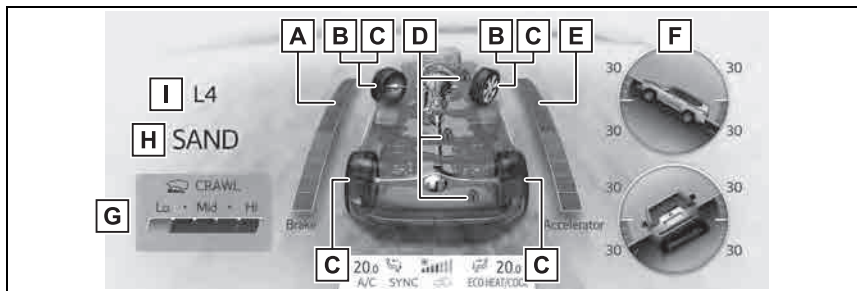


- A** Brake pedal display
Displays the amount of depression of the brake pedal.
- B** Front tire direction display
Displays the estimated direction of the front tires.
- C** Active TRC operation display
The tires with Active TRC operating are shown in orange.
- D** Differential lock operation display
- E** Accelerator pedal display
Displays the amount of depression of the accelerator pedal.
- F** Inclinometer display
Displays the vertical and horizontal tilt angles of the vehicle.
- G** Crawl Control mode display
Downhill assist control system set speed display

H Multi-terrain Select mode display

I Transfer mode display

► When the Multi-terrain Select is turned off

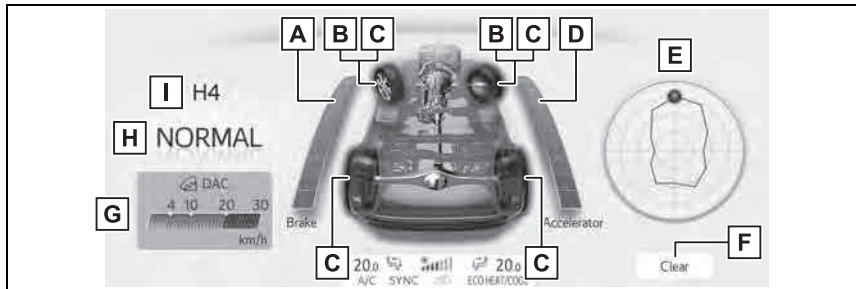

A Brake pedal display

Displays the amount of depression of the brake pedal.

B Front tire direction display

Displays the estimated direction of the front tires.

C Active TRC operation display

The tires with Active TRC operating are shown in orange.

D Accelerator pedal display

Displays the amount of depression of the accelerator pedal.

E G-force display

Displays the G (acceleration) in the front, rear, right and left directions that is applied to the vehicle.

F Resetting the lateral G-forces

The record of the G (acceleration) in the front, rear, right and left directions that is applied to the vehicle can be reset.

G Crawl Control mode display

Downhill assist control system set speed display


H Driving mode select display

I Transfer mode display

Toyota multi-operation touch settings

Settings of the split-screen can be changed.

With the off-road driving information display screen displayed on the split screen, select "Settings" to display the setting screen.

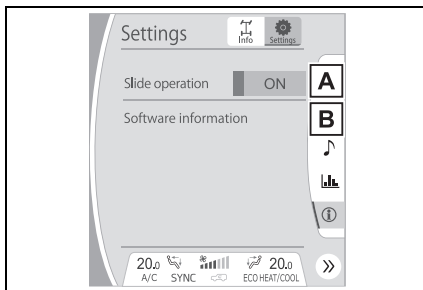

- A** Select slide operation on/off
- B** Display the software information

Software license

©1982-2013, QNX Software Systems Limited. All rights reserved.


Other interior features

Cool box (if equipped)

While the engine is running, the cool box, which is cooled by the air conditioning, can be used.

- 1** While pressing the button, lift up and open the lid.

The console box can be opened from right, left or back side of the console box.

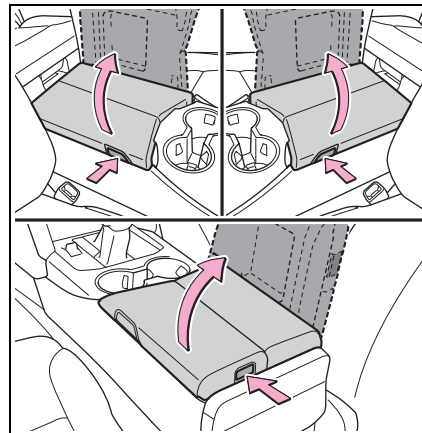


- 2** Turns the cool box on/off

When on, the indicator light **A** comes on.

Except GCC countries*, Lebanon, Jordan, Yemen, Syria and Iraq: If the front air conditioning system is not in use, the front air conditioning system is automatically turned on when the cool box is turned on.

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates,

Qatar, Kuwait

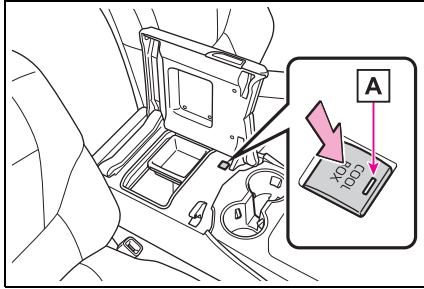

■ If the front air conditioning system is not in use

- ▶ Except GCC countries*, Lebanon, Jordan, Yemen, Syria and Iraq

When the cool box is turned on, the front air conditioning system is automatically turned on.

- ▶ GCC countries*, Lebanon, Jordan, Yemen, Syria and Iraq

When the cool box is turned on, a very small amount of air is blown from the windshield air vent to protect the air conditioning system.

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

■ While the cool box is on

- ▶ Except GCC countries*, Lebanon, Jordan, Yemen, Syria and Iraq
- The front air conditioning system cannot be turned off.
- To adjust the temperature of the cool box, the cool box may stop operating temporarily.
- ▶ GCC countries*, Lebanon, Jordan, Yemen, Syria and Iraq
- The front air conditioning system cannot be turned off. However, air flow to the occupants can be stopped by pressing the "OFF" button on the air conditioning control panel.

Also, a very small amount of air is blown from the windshield air vent to protect

the air conditioning system.

- To adjust the temperature of the cool box, the cool box may stop operating temporarily.


*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

■ When the outside temperature is 0°C (32°F) or below

The cool box may not operate.

■ Tray in the cool box

The tray in the cool box can be moved left or right, or can be removed.

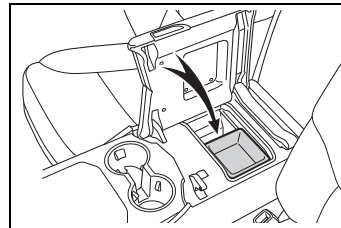

■ Items unsuitable for the cool box

- Drinks in unsealed containers
- Fragile items, perishables or anything with strong odor
- Owner's manual, electronic devices, CDs, etc.

■ When cleaning the inside of the cool box

Wipe dirt off with a cloth dampened with water. Directly applying water may cause a malfunction.

⚠ WARNING

■ Caution while driving

Keep the cool box closed while driving.


Injuries may result in the event of sudden braking, sudden swerving or an accident.

⚠ WARNING**■ When opening and closing the cool box**

Take care to prevent your fingers etc. from being caught.

⚠ NOTICE**■ To prevent battery discharge**

Do not leave the cool box on longer than necessary when the engine is not running.

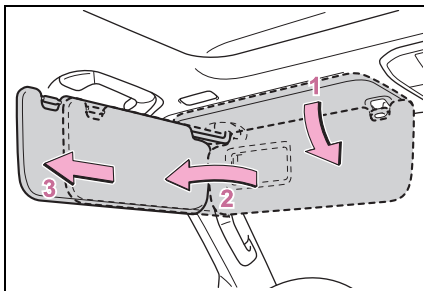
Sun visors

- 1** To set the visor in the forward position, flip it down.
- 2** To set the visor in the side position, flip down, unhook, and swing it to the side.
- 3** To use the side extender (if equipped), place the visor in the side position, then slide it backward.

Vanity mirrors (if equipped)

Slide the cover to open.

The light turns on when the cover is opened.

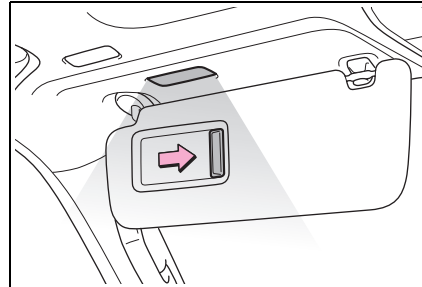**■ Automatic light off to prevent battery discharge**

If the vanity lights remain on when the engine switch is turned to OFF, the lights will go off automatically after 20 minutes.

⚠ NOTICE**■ To prevent battery discharge**

Do not leave the vanity lights on for extended periods while the engine is off.

Power outlet**■ 12 V DC**


Please use a power supply for electronic goods that use less than 12 VDC/10 A (power consumption of 120 W).

When using electronic goods, make sure that the power consumption of all the connected power outlets is less than 120 W.


► Front

Press the lid.


Make sure that a small object does not enter into a gap between the lid and instrument panel.

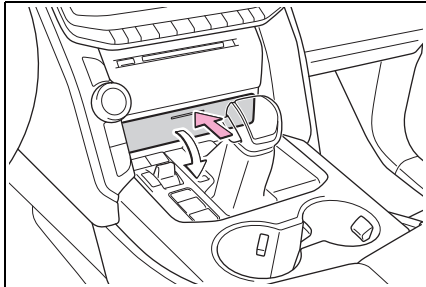


Open the lid.

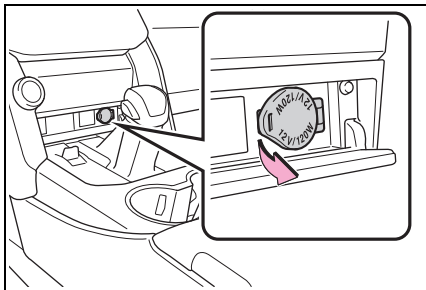

► Rear side of the console box
Open the lid.

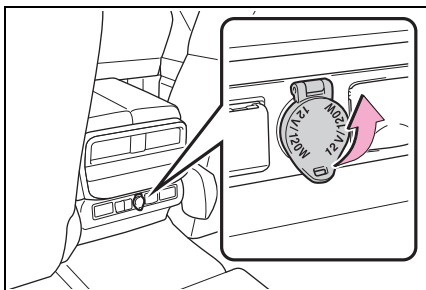


► Luggage compartment (if equipped)

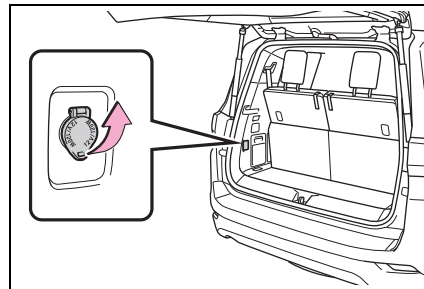

■ 220 V AC (if equipped)

Accessories that use less than 100 W.

Open the lid.

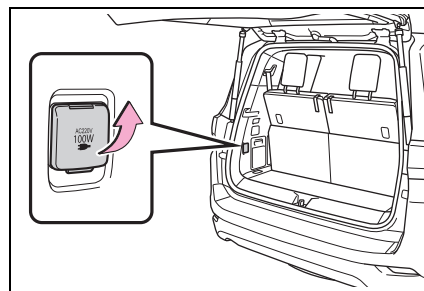

■ The power outlet can be used when

► 12 V DC

The engine switch is in ACC or ON.


► 220 V AC

The engine switch is in ON.

■ When turning the engine switch off

Disconnect electrical devices with charging functions, such as mobile battery packs.

If such devices are left connected, the engine switch may not be turned off normally.

 **NOTICE**

■ **When power outlet is not in use**
To avoid damaging the power outlet, close the power outlet lid when the power outlet is not in use.
Foreign objects or liquids that enter the power outlet may cause a short circuit.

■ **To prevent blown fuse**
12 V DC: Do not use an accessory that uses more than 12 V 10 A.
220 V AC: Do not use a 220 V AC appliance that requires more than 100 W. If a 220 V AC appliance that consumes more than 100 W is used, the protection circuit will cut the power supply.

■ **To prevent battery discharge**
Do not use the power outlet longer than necessary when the engine is off.

■ **If a 220 V AC appliance that consumes more than 100 W is used, the protection circuit will cut the power supply.**
The following 220 V AC appliances may not operate properly even if their power consumption is under 100 W:

- Appliances with high initial peak wattage
- Measuring devices that process precise data
- Other appliances that require an extremely stable power supply

USB Type-C charging ports (if equipped)

The USB Type-C charging ports are used to supply 3 A of electricity at 5 V to external devices. The USB Type-C charging ports are for charging only. They are not


designed for data transfer or other purposes.

Depending on the external device, it may not charge properly. Refer to the manual included with the device before using a USB charging port.

■ **Using the USB Type-C charging ports**


▶ **Front**

Open the lid.
Make sure that a small object does not enter into a gap between the lid and instrument panel.

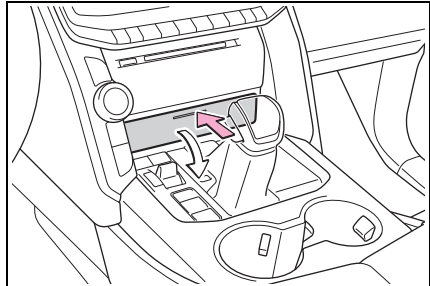


▶ **Rear side of the console box**

Open the lid.

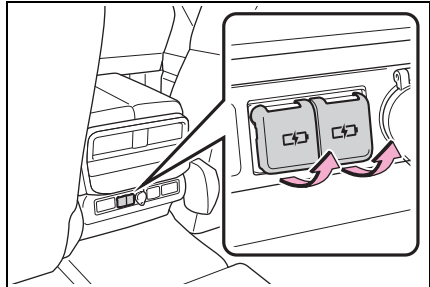

▶ **Side of the third seat**

Open the lid.

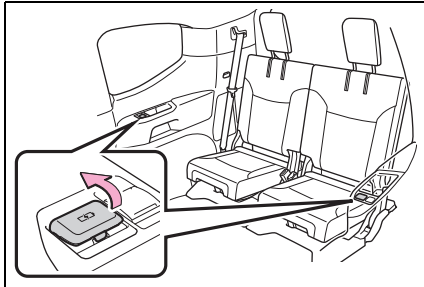

■ **The USB Type-C charging ports can be used when**

The engine switch is in ACC.

■ **Situations in which the USB Type-C charging ports may not operate correctly**

- If a device which consumes more than 3 A at 5 V is connected
- If a device designed to communicate with a personal computer, such as a USB memory device, is connected
- If the connected external device is turned off (depending on device)
- If the temperature inside the vehicle is high, such as after the vehicle has been parked in the sun

■ **About connected external devices**

Depending on the connected external device, charging may occasionally be suspended and then start again. This is not a malfunction.

 NOTICE

■ **To prevent damage to the USB Type-C charging ports**

- Do not insert foreign objects into the ports.
- Do not spill water or other liquids into the ports.
- When the USB Type-C charging ports are not in use, close the lids. If a foreign object or liquid enters a port may cause a short circuit.

● Do not apply excessive force to or impact the USB Type-C charging ports.

● Do not disassemble or modify the USB Type-C charging ports.

■ **To prevent damage to external devices**

● Do not leave external devices in the vehicle. The temperature inside the vehicle may become high, resulting in damage to an external device.

● Do not push down on or apply unnecessary force to an external device or the cable of an external device while it is connected.

■ **To prevent battery discharge**

Do not use the USB Type-C charging ports for a long period of time with the engine stopped.

Wireless charger (if equipped)

A portable device can be charged by just placing Qi standard wireless charge compatible portable devices according to the Wireless Power Consortium, such as smartphones and mobile batteries, etc., on the charge area.


This function cannot be used with portable devices that are larger than the charging tray. Also, depending on the portable device, it may not operate as normal. Please read the operation manual for portable devices to be used.

■ **The “Qi” logo**

The “Qi” logo is a trademark of the Wireless Power Consortium.



■ **Name for all parts**

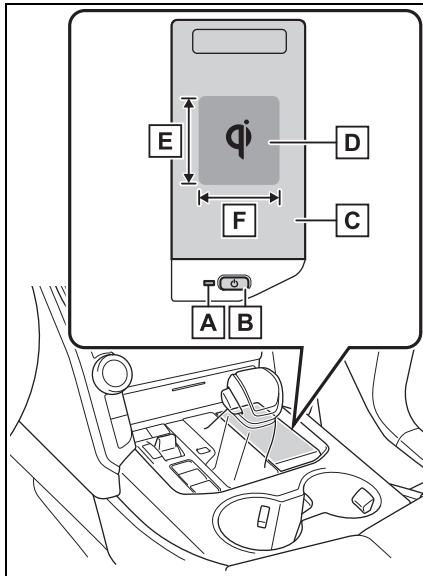

- A** Operation indicator light
- B** Power supply switch
- C** Charging tray
- D** Charge area *

*: Portable devices and wireless chargers contain charging coils. The charging coil in the wireless charger can be moved within the charge area near the center of the charging tray. If the charging coil inside a portable device is detected in the charge area, the charging coil inside the wireless charger will move toward it and start charging. If the charging coil inside a portable device moves outside of the charge area, charging will automatically stop.

If 2 or more portable devices are placed on the charging tray, their charging coils may not be properly detected and they may not be charged.

E Approximately 6 cm (2.4 in.)

F Approximately 7 cm (2.8 in.)


■ **Using the wireless charger**

- 1** Press the power supply switch of the wireless charger.

Switches on and off with each press of the power supply switch.

When turned on, the operation indicator light (green) comes on.

Even with the engine off, the on/off state of the power supply switch is memorized.

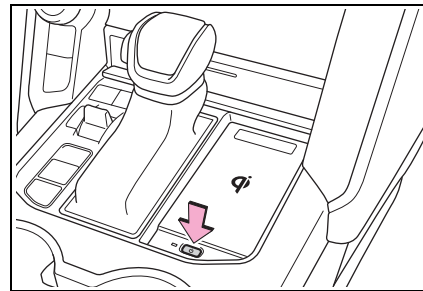

- 2** Place the portable device on the charging tray


Place the charging side of the portable device down with the outer edge of the device aligned against the edge **A** of the tray.

When charging, the operation indicator light (orange) comes on.

If charging is not occurring, try placing the portable device as close to the center of the charging area as possible.

When charging is complete, the opera-

tion indicator light (green) comes on.

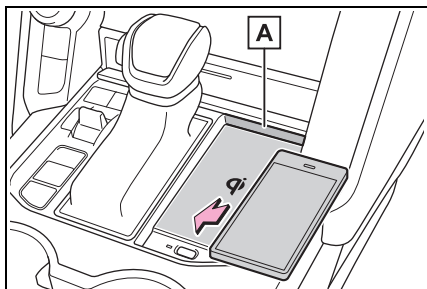

■ **Recharging function**

- When charging is complete and after a fixed time in the charge suspension state, charging restarts.
- When the portable device is moved, charging is stopped for a moment and then it restarts.

■ **Rapid charging function**

- The following portable devices support rapid charging.
- Portable devices compliant with WPC Ver1.2.4 and compatible with rapid charging
- iPhone's with an iOS version that supports 7.5 W charging (iPhone 8 and later models)
- To switch to the rapid charging function, press the power supply switch 3 times while charging. When rapid charging is possible, the operation indicator light will switch from orange to flashing between green and orange.
- When charging is complete, the rapid charging function will stop. Switch again to the rapid charging function to use rapid charging again.

■ **Lighting conditions of operation indicator light**

Operation indicator light	Conditions
Turning off	When the Wireless charger power supply is off
Green (comes on)	On Standby (charging possible state)*1
	When charging is complete*2
Orange (comes on)	When placing the portable device on the charging area (detecting the portable device)
	Charging
Flashing between green and orange	When any of the following portable devices is using rapid charging <ul style="list-style-type: none"> ● Portable devices compliant with WPC Ver1.2.4 and compatible with rapid charging ● iPhone's with an iOS version that supports 7.5 W charging (iPhone 8 and later models)

*1: Charging power will not be output during standby. A metallic object will not be heated, if it is placed on the charging tray in this state.

*2: Depending on the portable device, there are cases where the operation indicator light will continue being lit up orange even after the charging is complete.

- When the operation indicator light flashes

When an error occurs, the operation indicator light flashes an orange color.

Handle the error based on the following tables.

- Flashing repeatedly once every second (Orange)

Suspected causes	Handling method
Wireless charger and smart key communication failure	If the engine is running, stop and then restart the engine. If the engine switch is in ACC, start the engine. (→P.256)

- Repeatedly flashes 3 times continuously (Orange)

Suspected causes	Handling method
A metallic foreign substance is in the charge area, and so the abnormal heating prevention function of the charging coil operated	Remove the foreign substance from the charge area.
Portable device misaligned: The charging coil in the portable device moved outside of the charge area, and so the abnormal heating prevention function of the charging coil operated	Remove the portable device from the charging tray, check that the operation indicator light switches back to green, and then once again place the device near the center of the charging tray. If there is a case or cover attached to the portable device, remove it.

- Repeatedly flashes 4 times continuously (Orange)

Suspected causes	Handling method
Safety shutdown resulting when the temperature within the wireless charger exceeded the set value	Stop charging, remove the portable device from the charging tray, wait for the temperature to drop, and then start charging again.

■ **The wireless charger can be operated when**

The engine switch is in ACC or ON.

■ **Usable portable devices**

- Qi standard wireless charge standard can be used on compatible devices. However, not all Qi standard devices and compatibility are guaranteed.
- Starting with mobile phones and smartphones, it is aimed for low power electrically supplied portable devices of no more than 5W.
- However, charging exceeding 5 W is supported by the following portable devices.
 - Charging at 7.5 W or less is supported by iPhone's that support 7.5 W charging.
 - Charging at 10 W or less is supported by portable devices compliant with WPC standard Ver1.2.4.
- Using the smart entry & start system
If the smart entry & start system detects the key while a device is being charged, charging will be temporarily stopped.

■ **When covers and accessories are attached to portable devices**

Do not charge in situations where cover and accessories not able to handle Qi are attached to the portable device. Depending on the type of cover and accessory, it may not be possible to charge. When charging is not performed even with the portable device placed on the charge area, remove the cover and accessories.

■ **While charging, noise enters the AM radio**

- Turn off the wireless charger and confirm that the noise has decreased. If the noise decreases, continuously pushing the power supply switch of the wireless charger for 2 seconds, the frequency of the charger can be changed and the noise can be reduced. Also, on that occasion, the operation indicator light will flash orange 2 times.
- iPhone's use a particular frequency for rapid charging. Depending on the iOS version, rapid charging may not

be performed while switching frequencies.


■ **Important points of the wireless charger**

- If the electronic key cannot be detected within the vehicle interior, charging cannot be done. When the door is opened and closed, charging may be temporarily suspended.
- When charging, the wireless charging device and portable device will get warmer, however this is not a malfunction.
When a portable device gets warm while charging, charging may stop due to the protection function on the portable device side. In this case, when the temperature of the portable device drops significantly, charge again.

The fan may start operating to lower the temperature inside the wireless charger, however this is not a malfunction.

■ **Operation sounds**

A buzzing noise may be heard when pressing the power supply switch to turn the power supply on, when turning the engine switch to ACC or ON while the wireless charger power supply is on, or when detecting a portable device. However, this is not a malfunction.

 **WARNING**

■ **Caution while driving**
When charging a portable device, for safety reasons, the driver should not operate the main part of the portable device while driving.

■ **Caution while in motion**
Do not charge lightweight devices such as wireless headphones while in motion. These devices are very light and may be ejected from the charging tray, which may lead to unforeseen accidents.

**WARNING****■ Caution regarding interference with electronic devices**

People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverters, as well as any other electrical medical device, should consult their physician about the usage of the wireless charger.

■ To prevent malfunctions or burns


Observe the following precautions. Failure to do so may result in a equipment failure and damage, catch fire, burns due to overheat or electric shock.

- Do not insert any metallic objects between the charge area and the portable device while charging
- Do not attach an aluminum sticker or other metallic object to the charge area
- Do not attach an aluminum sticker or other metallic object to the side of the portable device (or to its case or cover) that touches the charge area
- Do not use the charging tray as a small storage space
- Do not subject to a strong force or impact
- Do not disassemble, modify or remove
- Do not charge devices other than specified portable devices
- Keep away from magnetic items
- Do not charge devices if the charge area is covered in dust
- Do not cover with a cloth or similar material

**NOTICE****■ Situations in which the function may not operate normally**

Devices may not be charged normally in the following situations.

- The portable device is fully charged
- The portable device is being charged with a cable connected
- There is foreign matter between the charge area and portable device
- Charging has caused the portable device to heat up
- The temperature around the charging tray is 35°C (95°F) or higher, such as in extreme heat
- The portable device is placed with its charging side facing up
- The portable device is placed in an area misaligned from the charge area
- The portable device is larger than the charging tray
- A foldable and portable device is placed outside the charge area
- The vehicle is in an area where strong electrical waves or noise are emitted, such as near a television tower, power plant, gasoline station, broadcasting station, large display, airport, etc.
- Any of the following objects that is 2mm (0.08 in) or thicker is between the charging side of the portable device and the charge area
 - A card that has metal on it, such as aluminum foil, etc.
 - A pack of cigarettes that includes aluminum foil
 - A wallet or bag that is made of metal

 NOTICE

- Coins
- A heating pad
- CDs, DVDs or other media
- A metal accessory
- A case or cover made of metal
- Electric wave type wireless remote controls are being used nearby
- 2 or more portable devices are placed on the charging tray at the same time

If charging is abnormal or the operation indicator light continues to flash for any other reason, the wireless charger may be malfunctioning. Contact your Toyota dealer.

■ **To prevent malfunctions and data corruptions**

- When charging, bringing a credit, or other magnetic card, or magnetic storage media close to the charge area may clear any stored data due to magnetic influence. Also, do not bring a wristwatch or other precision instrument close to the charge area since doing so may cause it to malfunction.
- Do not charge with a non-contact IC card such as a transportation system IC card inserted between the charging side of a portable device and the charge area. The IC chip may become extremely hot and damage the portable device or IC card. Be especially careful not to charge a portable device inside a case or cover with a non-contact IC card attached.
- Do not leave portable devices inside the vehicle. The inside of the vehicle can become hot in extreme heat, which could cause a malfunction.

■ **If the smartphone OS has been updated**


If the smartphone OS has been updated to a newer version, its charging specifications may have changed significantly. For details, check the information on the manufacturer's website.

■ **To prevent battery discharge**

Do not use the wireless charger for a long period of time when the engine is stopped.

Armrest (if equipped)

Fold down the armrest for use.

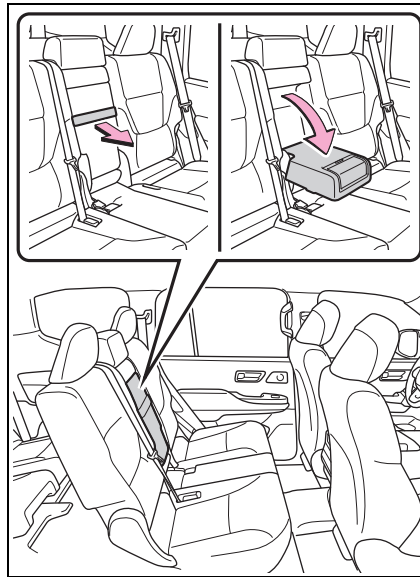


 NOTICE

■ **To prevent damage to the armrest**

Do not apply too much load on the armrest.

Coat hooks

The coat hooks are provided with the second seat assist grips.

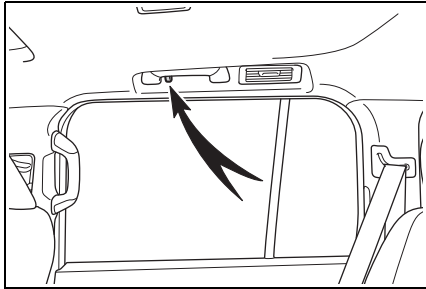


WARNING

Items that must not be hanged on the hook (vehicles with SRS curtain shield airbags)

Do not hang coat hangers or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles, causing death or serious injury.

can be used when getting in or out of the vehicle and others.

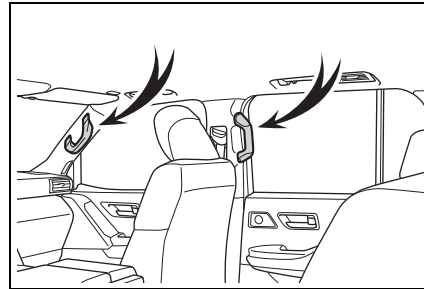

WARNING

Assist grips (type A)

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.

NOTICE


To prevent damage to the assist grip

Do not hang any heavy object or put a heavy load on the assist grip.

Assist grips

► Type A

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

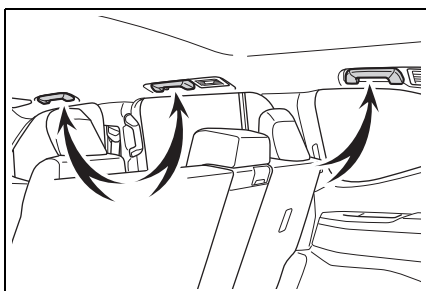

► Type B

An assist grip installed on the pillar

Maintenance and care**7****7-1. Maintenance and care**

Cleaning and protecting the
vehicle exterior **620**

Cleaning and protecting the
vehicle interior **623**

7-2. Maintenance

Maintenance requirements **626**

Scheduled maintenance ... **628**

7-3. Do-it-yourself maintenance

Do-it-yourself service precau-
tions **638**

Hood **640**

Engine compartment **641**

Draining the fuel filter water
(diesel engine only) **655**

AdBlue™ **657**

Electric winch **661**

Tires **662**

Tire inflation pressure **674**

Wheels **675**

Air conditioning filter **677**

Electronic key battery **679**

Checking and replacing fuses
..... **681**

Light bulbs **685**

Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition:

Cleaning instructions

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the water-proof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

Automatic car washes

- Before washing the vehicle:
 - Fold the mirrors
 - Turn off the power back door (if equipped)

Start washing from the front of the vehicle.

Extend the mirrors before driving.

- Brushes used in automatic car washes may scratch the vehicle surface, parts (wheel, etc.) and harm your vehicle's paint.

- Rear spoiler may not be washable in some automatic car washes. There may also be an increased risk of damage to vehicle.

High pressure car washes

- As water may enter the cabin, do not bring the nozzle tip near the gaps around the doors or perimeter of the windows, or spray these areas continuously.
- Do not use the high-pressure washer too close to the bearings and oil seals of drivetrain system parts (such as the differential gear).

If used too close to such parts, the high water pressure may cause water to enter the parts and grease to be washed out, causing the system performance to decrease.

Wheels and wheel ornaments

- Remove any dirt immediately by using a neutral detergent.
- Wash detergent off with water immediately after use.
- To protect the paint from damage, make sure to observe the following precautions.
 - Do not use acidic, alkaline or abrasive detergent.
 - Do not use hard brushes.
 - Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather.

Bumpers and side moldings

Do not scrub with abrasive cleaners.

Plated portions

If dirt cannot be removed, clean the parts as follows:

- Use a soft cloth dampened with an approximately 5% solution of neutral detergent and water to clean the dirt off.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.
- To remove oily deposits, use alcohol wet wipes or a similar product.

■ Note for a smart entry & start system

If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:

- Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.



WARNING


■ When washing the vehicle

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components, etc. to catch fire.

■ When cleaning the windshield (vehicles with rain-sensing windshield wipers)

Set the wiper switch to off.

If the wiper switch is in "AUTO", the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

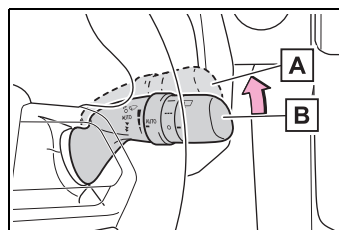

A Off

B AUTO

- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor
- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

■ Precautions regarding the exhaust pipes

Exhaust gasses cause the exhaust pipes to become quite hot.

When washing the vehicle, be careful not to touch the pipes until they have cooled sufficiently, as touching hot exhaust pipes can cause burns.

**WARNING****■ Precaution regarding the rear bumper with Blind Spot Monitor (if equipped)**

If the paint of the rear bumper is chipped or scratched, the system may malfunction. If this occurs, consult your Toyota dealer.

**NOTICE****■ To prevent paint deterioration and corrosion on the body and components (aluminum wheels, etc.)**

- Wash the vehicle immediately in the following cases:
 - After driving near the sea coast
 - After driving on salted roads
 - If coal tar or tree sap is present on the paint surface
 - If dead insects, insect droppings or bird droppings are present on the paint surface
 - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
 - If the vehicle becomes heavily soiled with dust or mud
 - If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.
- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

■ Cleaning the exterior lights

- Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.

- Do not apply wax to the surfaces of the lights. Wax may cause damage to the lenses.

■ When using an automatic car wash (vehicles with rain-sensing windshield wipers)

Set the wiper switch to off position. If the wiper switch is in "AUTO", the wipers may operate and the wiper blades may be damaged.

■ When using a high pressure car wash

- When washing the vehicle, do not spray the camera or its surrounding area directly with a high pressure washer. Shock applied from high pressure water may cause the device to not operate normally.
- Vehicles with Toyota Safety Sense: Do not spray water directly on the radar which is equipped behind the emblem. Otherwise it may cause the device to be damaged.
- Do not bring the nozzle tip close to boots (rubber or resin manufactured cover), connectors or the following parts. The parts may be damaged if they come into contact with high-pressure water.
 - Traction related parts
 - Steering parts
 - Suspension parts
 - Brake parts
- Keep the cleaning nozzle at least 30 cm (11.9 in.) away from the vehicle body. Otherwise resin section, such as moldings and bumpers, may be deformed and damaged. Also, do not continuously hold the nozzle in the same place.

**NOTICE**

- Do not spray the lower part of the windshield continuously. If water enters the air conditioning system intake located near the lower part of the windshield, the air conditioning system may not operate correctly.
- Do not wash the underside of the vehicle using a high pressure car washer.

Cleaning and protecting the vehicle interior

Perform cleaning in a manner appropriate to each component and its material.

Protecting the vehicle interior

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

Handling the seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

**WARNING****■ Water in the vehicle**

- Do not splash or spill liquid in the vehicle. Doing so may cause electrical components, etc., to malfunction or catch fire.
- Do not get any of the SRS components or wiring in the vehicle interior wet. (→P.44)
An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.
- Vehicles with wireless charger: Do not let the wireless charger (→P.610) get wet. Failure to do so may cause the charger to become hot and cause burns or could cause electric shock resulting in death or serious injury.

■ Cleaning the interior (especially instrument panel)

Do not use a polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

**NOTICE****■ Cleaning detergents**

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
 - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, and bleach
 - Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol

- Do not use a polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

■ Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

■ Water on the floor

Do not wash the vehicle floor with water. Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

■ When cleaning the inside of the windshield (vehicles with Toyota Safety Sense)

Do not allow glass cleaner to contact the lens. Also, do not touch the lens. (→P.297)

**NOTICE****■ Cleaning the inside of the rear quarter windows and rear window**

- Do not use glass cleaner to clean the rear quarter windows and rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.
- Be careful not to scratch or damage the heater wires or antenna.

Cleaning the areas with satin-finish metal accents

- Remove dirt using a water-dampened soft cloth or synthetic chamois.
- Wipe the surface with a dry soft cloth to remove any remaining moisture.

■ Cleaning the areas with satin-finish metal accents

The metal areas use a layer of real metal to the surface. It is necessary to clean them regularly. If dirty areas are left uncleaned for long period of time, they may be difficult to clean.

Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.

Use a diluted water solution of approxi-

mately 5% neutral wool detergent.

- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

■ Caring for leather areas

Toyota recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

Cleaning the synthetic leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Toyota recommends the following maintenance:

WARNING

■ If your vehicle is not properly maintained

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

■ Handling of the battery

Battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P.649)

Scheduled maintenance

- Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

The interval for scheduled maintenance is determined by the odometer reading or the time interval, whichever comes first, shown in the schedule.

Maintenance beyond the last period should be performed at the same intervals.

- Where to go for the maintenance service?

It makes good sense to take your vehicle to your local Toyota dealer for the maintenance service as well as other

inspections and repairs.

Toyota technicians are well-trained specialists receiving the latest service information through technical bulletins, service tips and in-dealership training programs. They learn to work on Toyota before they work on your vehicle, rather than while they are working on it. Doesn't that seem like the best way?

Your Toyota dealer has invested a lot of money in special Toyota tools and service equipment. It helps them to do the job better and at less cost.

Your Toyota dealer's service department will perform all of the scheduled maintenance on your vehicle reliably and economically.

Rubber hoses (for cooling and heater system, brake system and fuel system) should be inspected by a qualified technician according to the Toyota maintenance schedule.

Rubber hoses are particularly important maintenance items. Have any deteriorated or damaged hoses replaced immediately. Note that rubber hoses will deteriorate with age, resulting in swelling, chafing or cracking.

Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools.

Simple instructions for how to perform them are presented in this section.

Note, however, that some maintenance tasks require special tools and skills.

These are best performed by qualified technicians. Even if you are an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by your Toyota dealer who will keep a record of maintenance on your vehicle. This record could be helpful should you ever require Warranty Service.

■ Does your vehicle need repairs?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driven straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal (→P.129, 133)
- Engine continually runs hot, oil pressure gauge stays low

If you notice any of these clues, take your vehicle to your Toyota dealer as soon as possible. Your vehicle may need adjustment or repair.

Scheduled maintenance

Perform maintenance by the schedule as follows:

Maintenance schedule requirements

Your vehicle needs to be serviced according to the normal maintenance schedule. (See "Maintenance schedule".)

If you mainly operate your vehicle under one or more of the special operating conditions below, some of the maintenance schedule items need to be serviced more frequently in order to keep your vehicle in good condition. (See "Additional maintenance schedule".)

<p>A. Road Conditions</p> <ol style="list-style-type: none"> 1. Operating on rough or muddy roads, or roads with melted snow. 2. Operating on dusty roads. (Roads in areas where their pavement rate is low, or a cloud of dust often arises and the air is dry.) 3. Operating on road which has road salt applied. 4. Diesel engine: Very dusty environments (mining/construction sites or unsealed roads). 	<p>B. Driving Conditions</p> <ol style="list-style-type: none"> 1. Heavily loaded vehicle. (Example: Towing a trailer (with towing hitch), using a camper, using a car top carrier, etc.) 2. Repeated short trips of less than 8 km (5 miles) and outside temperatures remain below freezing. (Engine temperature will not reach to normal temperature.) 3. Extensive idling and/or low speed driving for a long distance such as police, professional/private use like taxi or door-to-door delivery use. 4. Continuous high speed driving (80% or more of maximum vehicle speed) for over 2 hours.
---	---

Maintenance schedule

Maintenance operations:

I = Inspect, correct or replace as necessary

R = Replace, change or lubricate

L = Lubricate

T = Tighten to specified torque

SERVICE INTERVAL:		ODOMETER READING								MONTHS	
(Odometer reading or months, whichever comes first.)		x1000 km	10	20	30	40	50	60	70		80
		x1000 miles	6	12	18	24	30	36	42	48	
BASIC ENGINE COMPONENTS											
1	Drive belts	Gasoline engine		I		I		I		I	24
		Diesel engine	Inspect at first 100000 km (60000 miles) or 72 months, after 100000 km (60000 miles) inspect every 20000 km (12000 miles) or 12 months								
2	Engine oil	1GR-FE engine	R	R	R	R	R	R	R	R	12
		V35A-FTS engine	Replace when the maintenance reminder appears. <<See note 1.>>								
		F33A-FTV engine	Replace when the maintenance reminder appears. <<See notes 2 and 3.>>								
3	Engine oil filter	1GR-FE engine	R	R	R	R	R	R	R	R	12
		V35A-FTS engine	Replace when the maintenance reminder appears. <<See note 1.>>								
		F33A-FTV engine	Replace when the maintenance reminder appears. <<See notes 2 and 4.>>								
4	Cooling and heater system <<See note 5.>>					I				I	24
5	Engine coolant (including inter-cooler coolant) <<See note 6.>>					I				I	-
6	Engine oil cooler hoses and connections (1GR-FE engine) <<See note 5.>>					I				I	24
7	Exhaust pipes and mountings			I		I		I		I	12
IGNITION SYSTEM											
8	Spark plugs	1GR-FE engine	Replace every 100000 km (60000 miles)							-	
		V35A-FTS engine						R			-
9	DPF hoses for checking exhaust pressure (diesel engine for EURO V engines)		-							R: 36	

630 7-2. Maintenance

SERVICE INTER-VAL:		ODOMETER READING									MONTHS	
		x1000 km	10	20	30	40	50	60	70	80		
(Odometer reading or months, whichever comes first.)		x1000 km	10	20	30	40	50	60	70	80		
		x1000 miles	6	12	18	24	30	36	42	48		
10	Battery		I	I	I	I	I	I	I	I	12	
FUEL AND EMISSION CONTROL SYSTEMS												
11	Fuel filter (gasoline engine) <<See note 7.>>										-	96
12	Fuel injection system (gasoline engine) <<See notes 8, 9 and 10.>>										Add injector cleaner to the fuel tank every 10000 km (6000 miles).	-
13	Water sediment accumulator (diesel engine)		I	I	I	I	I	I	I	I		12
14	Air cleaner filter (including checking pre-air cleaner, if equipped)	Gasoline engine		I		R		I		R		I: 24 R: 48
		Diesel engine for Russia	I	I	R	I	I	R	I	I		I: 12 R: 36
		Diesel engine except for Russia										Inspect every 5000 km (3000 miles) Replace every 30000 km (18000 miles)
15	Air flow meter (diesel engine)	For Russia									Blow air to the sensor intermittently for about 30 seconds every 10000 km (6000 miles) or 6 months.	
		For Argentina									Blow air to the sensor intermittently for about 30 seconds every 10000 km (6000 miles) or 12 months.	
16	Diesel smoke (diesel engine)					I				I		48
17	Fuel tank cap, fuel lines, connections and fuel vapor control valve (gasoline engine) <<See note 5.>>					I				I		24
18	Fuel tank cap, fuel lines and connections (diesel engine) <<See note 5.>>					I				I		24

SERVICE INTER-VAL:	ODOMETER READING										MONTHS
	(Odometer reading or months, whichever comes first.)	x1000 km	10	20	30	40	50	60	70	80	
	x1000 miles	6	12	18	24	30	36	42	48		
19	Charcoal canister (gasoline engine)				I					I	24
CHASSIS AND BODY											
20	Brake pedal and parking brake <<See note 11.>>	I	I	I	I	I	I	I	I	I	6
21	Brake pads and discs	I	I	I	I	I	I	I	I	I	6
22	Brake fluid	I	I	I	R	I	I	I	R		I: 6 R: 24
23	Brake pipes and hoses		I		I		I		I		12
24	Vacuum pump (diesel engine)	Inspect every 200000 km (120000 miles)									-
25	Power steering fluid	I	I	I	I	I	I	I	I	I	6
26	Steering wheel, linkage and steering gear box	I	I	I	I	I	I	I	I	I	6
27	Propeller shafts grease <<See notes 12 and 13.>>	L	L	L	L	L	L	L	L	L	6
28	Propeller shaft bolts	T	T	T	T	T	T	T	T	T	6
29	Propeller shaft boots	I	I	I	I	I	I	I	I	I	6
30	Drive shaft boots		I		I		I		I		24
31	Suspension ball joints and dust covers	I	I	I	I	I	I	I	I	I	6
32	Automatic transmission fluid				I				I		24
33	Automatic transmission fluid cooler hoses and connections				I				I		24
34	Transfer oil				I				I		48
35	Front differential oil		I		R		I		R		I: 12 R: 48
36	Rear differential oil		I		R		I		R		I: 12 R: 48

SERVICE INTER-VAL:	ODOMETER READING										MONTHS
	(Odometer reading or months, whichever comes first.)	x1000 km	10	20	30	40	50	60	70	80	
	x1000 miles	6	12	18	24	30	36	42	48		
37	Front and rear suspensions									6	
38	Tires and inflation pressure									6	
39	Lights, horn, wipers and washers									6	
40	Air conditioning filter		R		R		R		R	-	

NOTE:

1. Replace both the engine oil and oil filter, even when the maintenance reminder does not appear, after 12 months have passed, or when driven over 10000 km (6000 miles) since the last oil change. This may cause the maintenance reminder appear even when driven less than 10000 km (6000 miles). Replace both engine oil and oil filter every 5000 km (3000 miles) or 6 months, in which the vehicle is mainly driven in dirt or dusty roads, even when the maintenance reminder does not appear.

2. For Ukraine, Belarus, Armenia, Uzbekistan, Kazakhstan, Russia, India, Kyrgyzstan and Fiji: Replace both the engine oil and oil filter even when the maintenance reminder does not appear, after 12 months have passed, or when you have driven over 10000 km (6000 miles) since the last oil change. Replace both engine oil and oil filter every 5000 km (3000 miles) or 6 months, in which the vehicle is mainly driven in dirt or dusty roads, even when the maintenance reminder does not appear.

3. Except for Ukraine, Belarus, Armenia, Uzbekistan, Kazakhstan, Russia, India, Kyrgyzstan and Fiji: Replace the engine oil even when the maintenance reminder does not appear, after 6 months have passed, or when you have driven over 5000 km (3000 miles) since the last oil change. Replace the engine oil every 2500 km (1500 miles) or 3 months, in which the vehicle is mainly driven in dirt or dusty roads, even when the maintenance reminder does not appear.

4. Except for Ukraine, Belarus, Armenia, Uzbekistan, Kazakhstan, Russia, India, Kyrgyzstan and Fiji: Replace the engine oil filter even when the maintenance reminder does not appear, after 6 months have passed, or when you have driven over 5000 km (3000 miles) since the last oil change.

5. After 80000 km (48000 miles) or 48 months inspection, inspect every 20000 km (12000 miles) or 12 months.
6. First replace at 160000 km (100000 miles), then replace every 80000 km (48000 miles).
7. Including the filter in fuel tank.
8. 1GR-FE engine: For Bahrain, Qatar, Kuwait, the United Arab Emirates, Saudi Arabia, and Oman only.
9. V35A-FTS engine: For Guatemala, Honduras, Nicaragua, Panama, El Salvador, Bolivia, Azerbaijan, Armenia, Kyrgyzstan, Tajikistan, Turkmenistan, Angola, Lesotho, Botswana, Cameroon, Eritrea, Chad, the Republic of the Congo, Benin, Djibouti, Ethiopia, Somalia, Zambia, Guinea, Cote d'Ivoire, Liberia, Libya, Madagascar, Mali, Malawi, Mozambique, Nigeria, Guinea-Bissau, Namibia, the Democratic Republic of the Congo, Rwanda, Sierra Leone, the Central African Republic, Senegal, Sudan, Tanzania, Swaziland, Togo, Uganda, Egypt, Burkina Faso, Equatorial Guinea, Cabo Verde, Gambia, Mauritania, Burundi, Niger, Comoro, South Sudan, Iraq, Bahrain, Qatar, Kuwait, the United Arab Emirates, Yemen, Saudi Arabia, Bangladesh, Oman, Pakistan, Mongolia, Vanuatu, and Micronesia only.
10. Toyota genuine fuel injector cleaner or equivalent.
11. Parking brake inspection is not necessary.
12. Lubricate within 24 hours after submerging.
13. With grease fitting only.

Additional maintenance schedule

Refer to the following table for normal maintenance schedule items requiring more frequent service specific to the type of severe conditions. (For outline, see "Maintenance schedule requirements".)

A-1: Operating on rough or muddy roads, or roads with melted snow.	
Inspection* of brake pads and discs	Every 5000 km (3000 miles) or 3 months
Inspection* of brake pipes and hoses	Every 10000 km (6000 miles) or 6 months
Inspection* of drive shaft boots	Every 10000 km (6000 miles) or 12 months
Replacement of transfer oil	Every 40000 km (24000 miles) or 48 months

634 **7-2. Maintenance**

A-1: Operating on rough or muddy roads, or roads with melted snow.	
Lubrication of propeller shafts <<See notes 1 and 2.>>	Every 5000 km (3000 miles) or 3 months
Tightening of propeller shaft bolts	Every 5000 km (3000 miles) or 3 months
Inspection* of propeller shaft boots	Every 5000 km (3000 miles) or 3 months
Inspection* of steering wheel, linkage and steering gear box	Every 5000 km (3000 miles) or 3 months
Inspection* of front and rear suspensions	Every 5000 km (3000 miles) or 3 months
Tightening of bolts and nuts on chassis and body <<See note 3.>>	Every 10000 km (6000 miles) or 6 months

*: Perform correction or replacement as necessary.

A-2: Operating on dusty roads. (Roads in areas where their pavement rate is low, or a cloud of dust often arises and the air is dry.)	
Replacement of engine oil (1GR-FE engine)	Every 5000 km (3000 miles) or 6 months
Replacement of engine oil filter (1GR-FE engine)	Every 5000 km (3000 miles) or 6 months
Inspection* or replacement of air cleaner filter (including checking pre-air cleaner, if equipped)	<p>▶ Gasoline engine</p> <p>I: Every 10000 km (6000 miles) or 12 months</p> <p>R: Every 40000 km (24000 miles) or 48 months</p> <p>▶ Diesel engine for Russia</p> <p>I: Every 5000 km (3000 miles) or 6 months</p> <p>R: Every 30000 km (18000 miles) or 36 months</p> <p>▶ Diesel engine except for Russia</p> <p>I: Every 2500 km (1500 miles) or 3 months</p> <p>R: Every 30000 km (18000 miles) or 36 months</p>
Inspection* of brake pads and discs	Every 5000 km (3000 miles) or 3 months
Replacement of transfer oil	Every 40000 km (24000 miles) or 48 months

A-2: Operating on dusty roads. (Roads in areas where their pavement rate is low, or a cloud of dust often arises and the air is dry.)	
Lubrication of propeller shafts <<See notes 1 and 2.>>	Every 5000 km (3000 miles) or 3 months
Tightening of propeller shaft bolts	Every 5000 km (3000 miles) or 3 months
Inspection* of propeller shaft boots	Every 5000 km (3000 miles) or 3 months
Replacement of air conditioning filter	Every 15000 km (9000 miles)

*: Perform correction or replacement as necessary.

A-3: Operating on road which has road salt applied.	
Lubrication of propeller shafts <<See notes 1 and 2.>>	Every 5000 km (3000 miles) or 3 months
Tightening of propeller shaft bolts	Every 5000 km (3000 miles) or 3 months
Inspection* of propeller shaft boots	Every 5000 km (3000 miles) or 3 months

*: Perform correction or replacement as necessary.

A-4: Diesel engine: Very dusty environments (mining/construction sites or unsealed roads).	
Cleaning of air flow meter	<p>▶ Except for Argentina Blow air to the sensor intermittently for about 30 seconds every 5000 km (3000 miles) or 3 months</p> <p>▶ For Argentina Blow air to the sensor intermittently for about 30 seconds every 5000 km (3000 miles) or 6 months</p>

B-1: Heavily loaded vehicle. (Example: Towing a trailer (with towing hitch), using a camper, using a car top carrier, etc.)	
Replacement of engine oil (1GR-FE engine)	Every 5000 km (3000 miles) or 6 months
Replacement of engine oil filter (1GR-FE engine)	Every 5000 km (3000 miles) or 6 months
Inspection* of brake pads and discs	Every 5000 km (3000 miles) or 3 months

B-1: Heavily loaded vehicle. (Example: Towing a trailer (with towing hitch), using a camper, using a car top carrier, etc.)	
Inspection* or replacement of automatic transmission fluid	I: Every 40000 km (24000 miles) or 24 months R: Every 80000 km (48000 miles) or 48 months
Replacement of transfer oil	Every 40000 km (24000 miles) or 48 months
Replacement of front differential oil	Every 20000 km (12000 miles) or 24 months
Replacement of rear differential oil	Every 20000 km (12000 miles) or 24 months
Lubrication of propeller shafts <<See notes 1 and 2.>>	Every 5000 km (3000 miles) or 3 months
Tightening of propeller shaft bolts	Every 5000 km (3000 miles) or 3 months
Inspection* of propeller shaft boots	Every 5000 km (3000 miles) or 3 months
Inspection* of front and rear suspensions	Every 5000 km (3000 miles) or 3 months
Tightening of bolts and nuts on chassis and body <<See note 3.>>	Every 10000 km (6000 miles) or 6 months

*: Perform correction or replacement as necessary.

B-2: Repeated short trips of less than 8 km (5 miles) and outside temperatures remain below freezing. (Engine temperature will not reach to normal temperature.)	
Replacement of engine oil (1GR-FE engine)	Every 5000 km (3000 miles) or 6 months
Replacement of engine oil filter (1GR-FE engine)	Every 5000 km (3000 miles) or 6 months

B-3: Extensive idling and/or low speed driving for a long distance such as police, professional/private use like taxi or door-to-door delivery use.	
Replacement of engine oil (1GR-FE engine)	Every 5000 km (3000 miles) or 6 months
Replacement of engine oil filter (1GR-FE engine)	Every 5000 km (3000 miles) or 6 months

B-3: Extensive idling and/or low speed driving for a long distance such as police, professional/private use like taxi or door-to-door delivery use.	
Inspection* of brake pads and discs	Every 5000 km (3000 miles) or 3 months
Inspection* or replacement of automatic transmission fluid	I: Every 40000 km (24000 miles) or 24 months R: Every 80000 km (48000 miles) or 48 months

*: Perform correction or replacement as necessary.

B-4: Continuous high speed driving (80% or more of maximum vehicle speed) for over 2 hours.	
Inspection* or replacement of automatic transmission fluid	I: Every 40000 km (24000 miles) or 24 months R: Every 80000 km (48000 miles) or 48 months
Replacement of transfer oil	Every 40000 km (24000 miles) or 48 months
Replacement of front differential oil	Every 20000 km (12000 miles) or 24 months
Replacement of rear differential oil	Every 20000 km (12000 miles) or 24 months

*: Perform correction or replacement as necessary.

NOTE:

1. Lubricate within 24 hours after submerging.
2. With grease fitting only.
3. For seat mounting bolts, suspension member retaining bolts and leaf springs retaining U bolts.

Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.

Maintenance

Items	Parts and tools
Battery condition (→P.649)	<ul style="list-style-type: none"> • Warm water • Baking soda • Grease • Conventional wrench (for terminal clamp bolts) • Distilled water
Electric winch (if equipped) (→P.661)	<ul style="list-style-type: none"> • Grease • Automatic transmission fluid
Engine coolant/intercooler coolant level (if equipped) (→P.648)	<ul style="list-style-type: none"> • “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology • “Toyota Super Long Life Coolant” is pre-mixed with 50% coolant and 50% deionized water. • Funnel (used only for adding coolant)

Items	Parts and tools
Engine oil level (→P.645)	<ul style="list-style-type: none"> • “Toyota Genuine Motor Oil” or equivalent • Rag or paper towel • Funnel (used only for adding engine oil)
Fuses (→P.681)	<ul style="list-style-type: none"> • Fuse with same amperage rating as original
Light bulbs (→P.685)	<ul style="list-style-type: none"> • Bulb with same number and wattage rating as original • Phillips-head screwdriver • Flathead screwdriver • Wrench
Engine radiator, condenser and inter-cooler radiator (if equipped) (→P.649)	—
Tire inflation pressure (→P.674)	<ul style="list-style-type: none"> • Tire pressure gauge • Compressed air source
Washer fluid (→P.652)	<ul style="list-style-type: none"> • Water or washer fluid containing anti-freeze (for winter use) • Funnel (used only for adding water or washer fluid)

⚠ WARNING

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

■ When working on the engine compartment

- Keep hands, clothing and tools away from the moving fan and engine drive belt.
- Be careful not to touch the engine, engine radiator, exhaust manifold, etc., right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel or the battery. Fuel and battery fumes are flammable.
- Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.
- Take care because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately. If you still experience discomfort, consult a doctor.

■ When working near the cooling fan or radiator grille

Be sure the engine switch is off. With the engine switch in ON, the cooling fan may automatically start to run if the air conditioning is on and/or the coolant temperature is high.
(→P.649)

■ When working on or under the vehicle

Do not get under the vehicle with just the jack supporting it. Always use automotive jack stands or other solid supports.

■ Safety glasses

Wear safety glasses to prevent flying or falling material, fluid spray, etc., from getting in your eyes.

⚠ NOTICE**■ If you remove the air cleaner filter**

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

■ If the fluid level is low or high

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.

If the reservoir needs frequent refilling, it may indicate a serious problem.


Hood

Release the lock from the inside of the vehicle to open the hood.


Opening the hood

- 1 Pull the hood lock release lever.

The hood will pop up slightly.

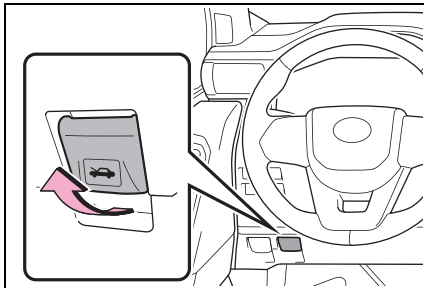

- 2 Pull up the auxiliary catch lever and lift the hood.

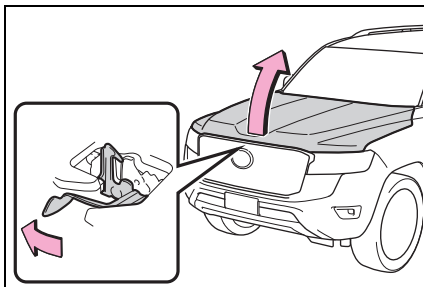

WARNING

■ Pre-driving check


Check that the hood is fully closed and locked.

If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

Engine compartment


Components

► 1GR-FE engine

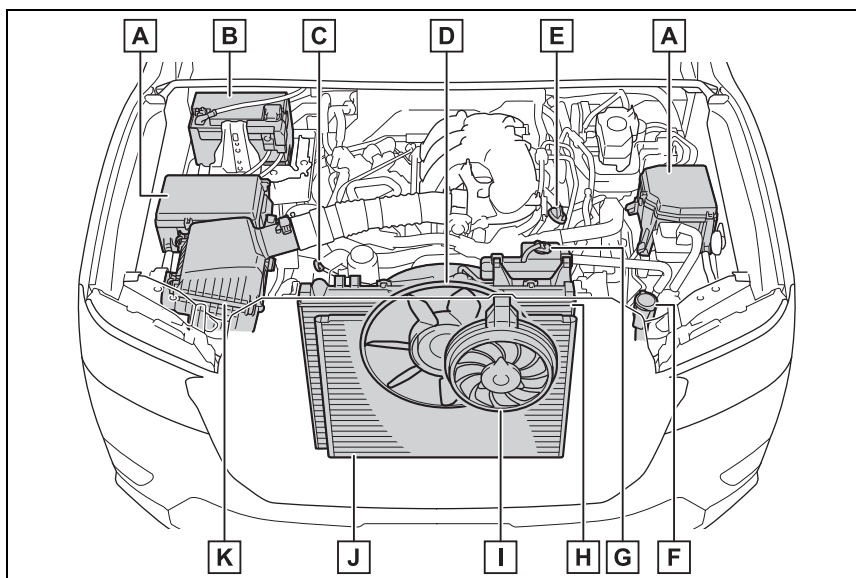


- A** Fuse box (→P.681)
- B** Battery (→P.649)
- C** Engine oil level dipstick (→P.645)
- D** Radiator cooling fan (→P.649)
- E** Engine oil filler cap (→P.646)
- F** Washer fluid tank (→P.652)
- G** Engine coolant reservoir (→P.648)
- H** Engine radiator (→P.649)
- I** Electric cooling fan (if equipped)
- J** Condenser (→P.649)
- K** Air cleaner (→P.653)

► V35A-FTS engine

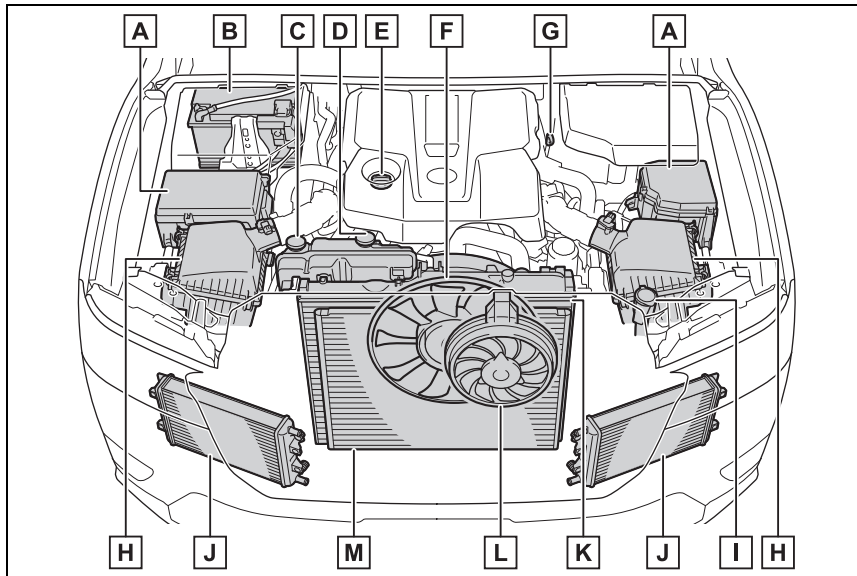

- A** Fuse box (→P.681)
- B** Battery (→P.649)
- C** Intercooler coolant reservoir (→P.648)
- D** Engine coolant reservoir (→P.648)
- E** Engine oil filler cap (→P.646)
- F** Radiator cooling fan (→P.649)
- G** Engine oil level dipstick (→P.645)
- H** Air cleaner (→P.653)
- I** Washer fluid tank (→P.652)
- J** Intercooler radiator (→P.649)
- K** Engine radiator (→P.649)
- L** Electric cooling fan (if equipped)
- M** Condenser (→P.649)

► F33A-FTV engine

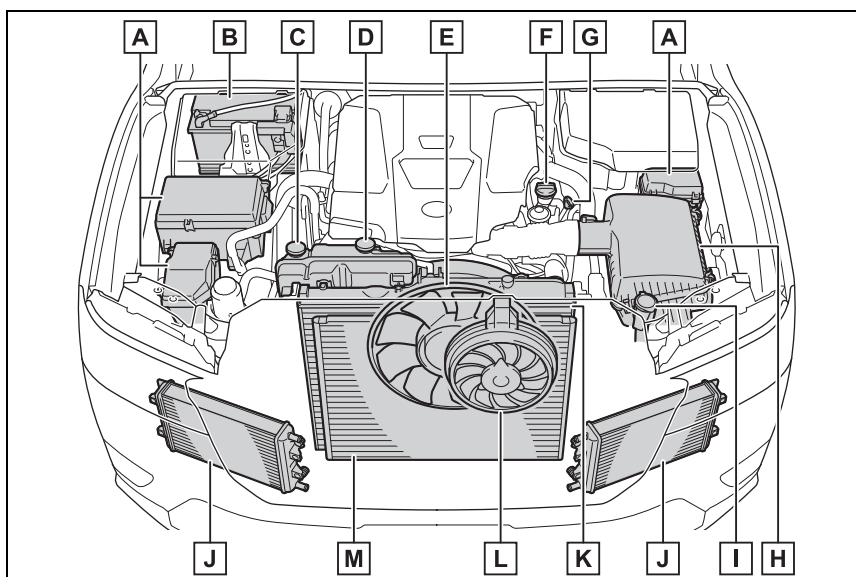

- A** Fuse box (→P.681)
- B** Battery (→P.649)
- C** Intercooler coolant reservoir (→P.648)
- D** Engine coolant reservoir (→P.648)
- E** Radiator cooling fan (→P.649)
- F** Engine oil filler cap (→P.646)
- G** Engine oil level dipstick (→P.645)
- H** Air cleaner (→P.653)
- I** Washer fluid tank (→P.652)
- J** Intercooler radiator (→P.649)
- K** Engine radiator (→P.649)
- L** Electric cooling fan (if equipped)
- M** Condenser (→P.649)

⚠ WARNING


■ When the engine is hot (F33A-FTV engine)

Do not touch the engine cover as it become very hot and cause serious injuries, such as burns.


Engine compartment cover (if equipped)

■ Keep the engine compartment cover opened

- 1 Push the tab in and pull the lock release, and lift the cover.

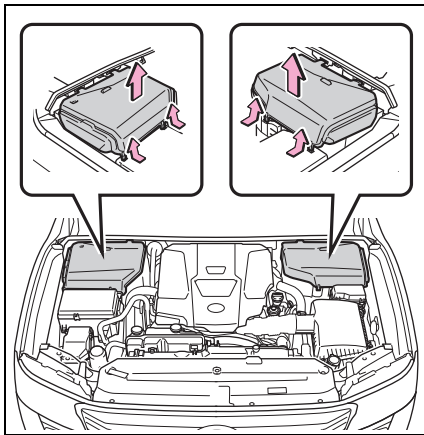


- 2 Install the cover shown in the illustration.

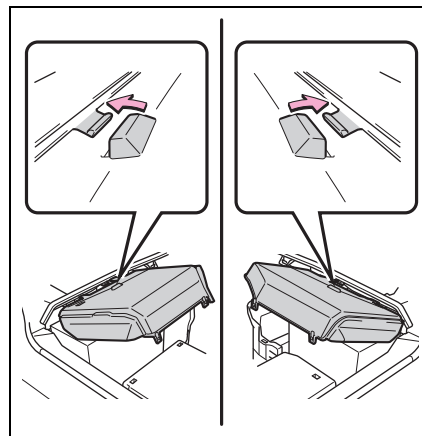


■ Removing the engine compartment cover

- 1 Push the tab in and pull the lock release, and lift the cover.

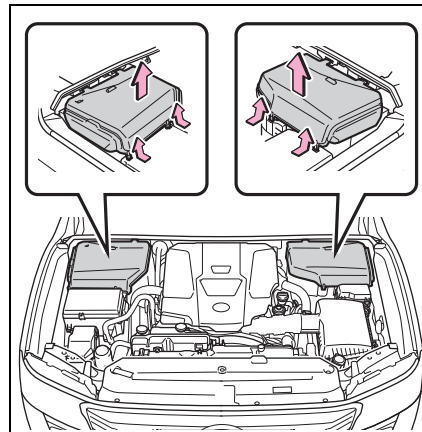


- 2 Pull the cover toward the front of the vehicle to remove it.

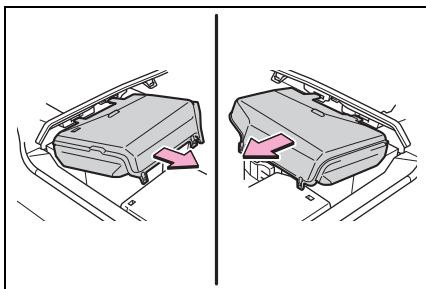

■ Installing the engine compartment cover

Install the cover as shown in the illustration.

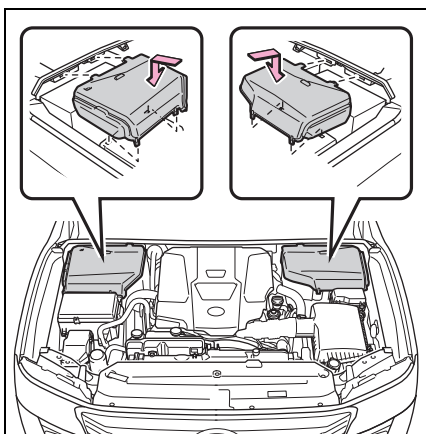

⚠ NOTICE

■ After installing an engine compartment cover

Make sure the cover is securely installed in its original position.

Checking and adding the engine oil


With the engine at operating temperature and turned off, check the

oil level on the dipstick.


■ Checking the engine oil

- 1 Park the vehicle on level ground. After warming up the engine and turning off the engine, wait more than 5 minutes for the oil to drain back into the bottom of the engine.
- 2 Holding a rag under the end, pull the dipstick out.


▶ 1GR-FE engine

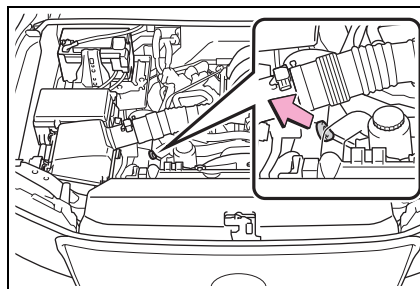


▶ V35A-FTS engine

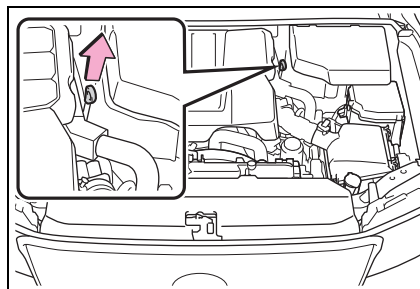

► F33A-FTV engine

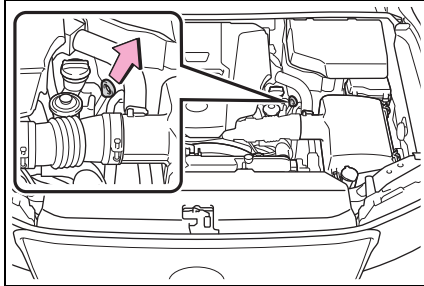

- 3 Wipe the dipstick clean.
- 4 Reinsert the dipstick fully.
- 5 Holding a rag under the end, pull the dipstick out and check the oil level.

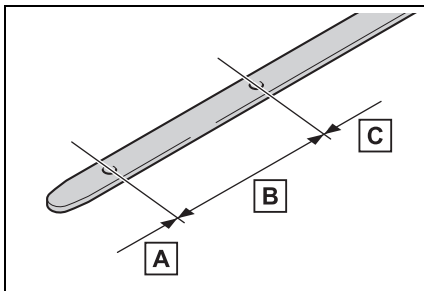

- A** Low
- B** Normal
- C** Excessive

The shape of the dipstick may differ depending on the type of vehicle or engine.

- 6 Wipe the dipstick and reinsert it fully.

■ **Checking the oil type and preparing the items needed**

Make sure to check the oil type and prepare the items needed before adding oil.

● Engine oil selection

→P.748

● Oil quantity (Low → Full)

1GR-FE engine:
1.7 L (1.8 qt., 1.5 Imp. qt.)

V35A-FTS engine:
1.5 L (1.6 qt., 1.3 Imp. qt.)

F33A-FTV engine:
2.1 L (2.2 qt., 1.8 Imp. qt.)


● Items

Clean funnel


■ **Adding engine oil**

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.


► 1GR-FE engine

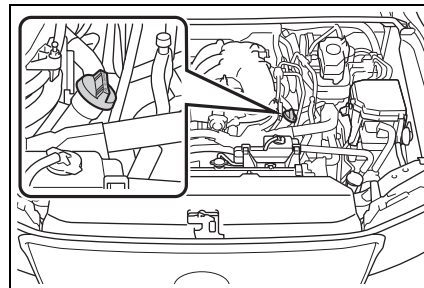

► V35A-FTS engine

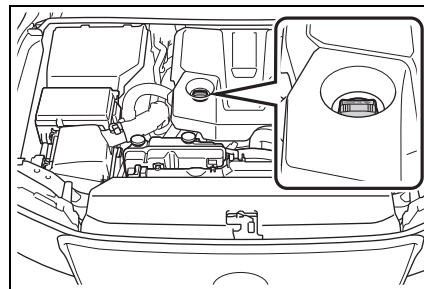

▶ F33A-FTV engine

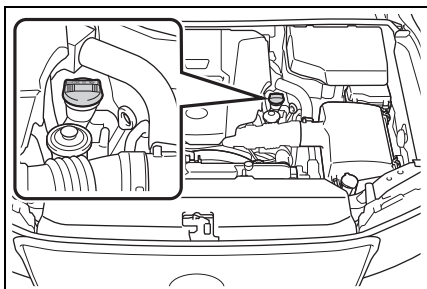

- 1 Remove the oil filler cap by turning it counterclockwise.
- 2 Add engine oil slowly, checking the dipstick.
- 3 Install the oil filler cap by turning it clockwise.



■ **Engine oil consumption**

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, when towing, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

■ **After changing the engine oil (except for 1GR-FE engine)**


The engine oil maintenance data should be reset. Perform the following procedures:

- 1 Select  / "Vehicle Settings" in  screen of the multi-information display, and then press and hold OK .
- 2 Select "Oil Maintenance" and then press OK .
- 3 Select "Yes" and then press OK .


"Reset Complete" will be displayed when the reset procedure has been completed.

 **WARNING**
■ **Used engine oil**

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground. Call your Toyota dealer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

 **NOTICE**
■ **To prevent serious engine damage**

Check the oil level on a regular basis.

 NOTICE

- **When replacing the engine oil**
- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.
- **After changing the engine oil (except for 1GR-FE engine)**


Make sure to reset the engine oil maintenance data. If it is not reset, the next maintenance timing will not be displayed properly.

Checking the coolant

■ **Engine coolant reservoir**

▶ 1GR-FE engine

The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir when the engine is cold.

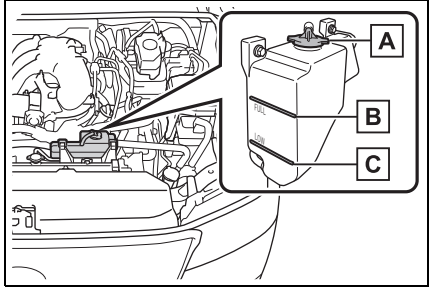


- A Reservoir cap
 - B “FULL” line
 - C “LOW” line
- If the level is on or below the “LOW”

line, add coolant up to the “FULL” line. (→P.736)

▶ V35A-FTS and F33A-FTV engines


The coolant level is satisfactory if it is between the “F” and “L” lines on the reservoir when the engine is cold.

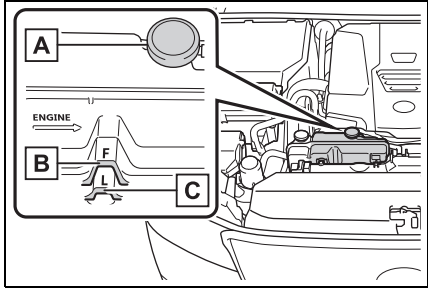

- A Reservoir cap
 - B “F” line
 - C “L” line
- If the level is on or below the “L” line, add coolant up to the “F” line. (→P.736)

■ **Intercooler coolant reservoir (if equipped)**

The coolant level is satisfactory if it is between the “F” and “L” lines on the reservoir when the engine is cold.

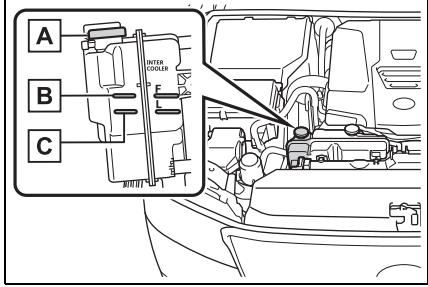

- A Reservoir cap
- B “F” line
- C “L” line

A Reservoir cap

B “F” line

C “L” line

If the level is on or below the “L” line, add coolant up to the “F” line. (→P.736)

■ Coolant selection

Only use “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology. “Toyota Super Long Life Coolant” is a mixture of 50% coolant and 50% deionized water. (Enabled: -35°C [-31°F]) For more details about coolant, contact your Toyota dealer.

■ If the coolant level drops within a short time of replenishing

Visually check the engine radiator, hoses, engine coolant reservoir cap, radiator cap (if equipped), intercooler radiator (if equipped), intercooler coolant reservoir cap (if equipped), drain cock and water pump.

If you cannot find a leak, have your Toyota dealer, test the cap and check for leaks in the cooling system.



WARNING

■ When the engine is hot

Do not remove the radiator cap (if equipped), the engine coolant reservoir cap or intercooler coolant reservoir cap (if equipped).

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.



NOTICE

■ When adding coolant

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

■ If you spill coolant

Be sure to wash it off with water to prevent it from damaging parts or paint.

Checking the engine radiator, condenser and intercooler radiator (if equipped)

Check the engine radiator, condenser and intercooler radiator (if equipped) and clear any foreign objects. If any of the above parts are extremely dirty or you are not sure of their condition, have your vehicle inspected by your Toyota dealer.



WARNING

■ When the engine is hot







Do not touch the engine radiator, condenser or intercooler radiator (if equipped) as they may be hot and cause serious injuries, such as burns.

Checking the battery

Check the battery as follows.

■ Caution symbols

The meanings of each caution symbol on the top of the battery are as follows:

	No smoking, no naked flames, no sparks
	Shield eyes
	Keep away from children
	Battery acid
	Note operating instructions
	Explosive gas


■ **Keep the engine compartment cover opened or removing the cover (if equipped)**

→P.644

■ **Battery exterior**

Make sure that the battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.


► Type A

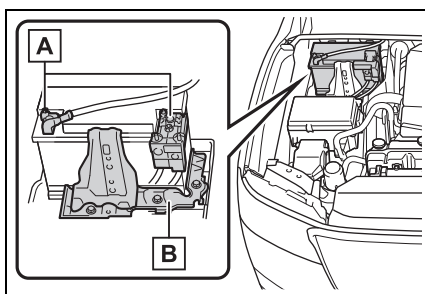

A Terminals

B Clamp


► Type B

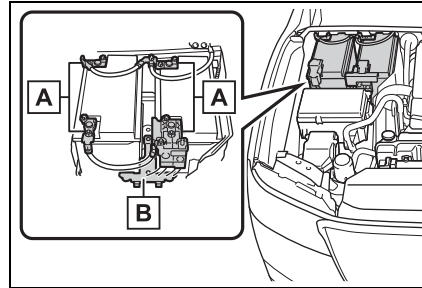

A Terminals

B Clamp

► Type C

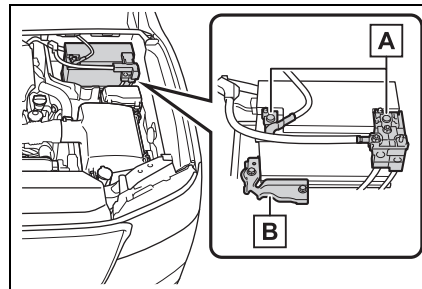


A Terminals

B Clamp

■ **Checking battery fluid**

Check that the level is between the upper and lower lines.

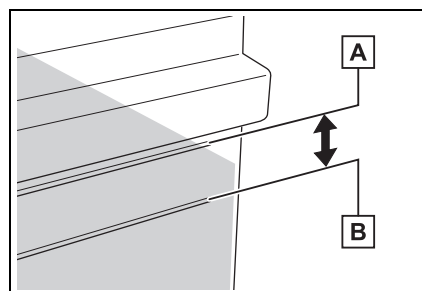


A Upper line

B Lower line

If the fluid level is at or below the lower line, add distilled water.

■ **Checking the battery condition (vehicles with battery indicator)**

Check the battery condition by indicator color.

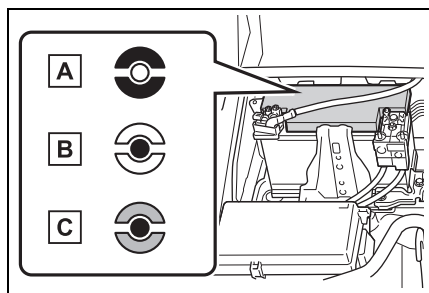

A Red and clear: Replacement is necessary. Have the battery checked by your Toyota dealer.


B Clear and red: Charging is necessary. Have the vehicle inspected by your Toyota dealer.

C Blue and red: Good condition

■ **Adding distilled water**

- 1 Remove the vent plug.
- 2 Add distilled water.

If the upper line cannot be seen, check the fluid level by looking directly at the cell.

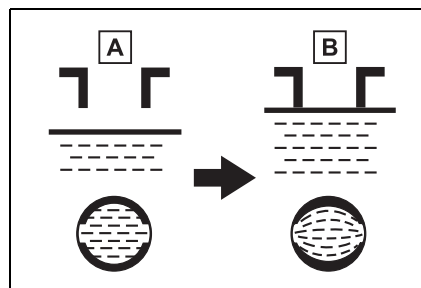

A LOW

B O.K.

- 3 Put the vent plug back on and close it securely.

■ **Install the engine compartment cover (if equipped)**

→P.644

■ **Before recharging**

When recharging, the battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the battery.

■ **After recharging/reconnecting the battery**

The engine may not start. Follow the procedure below to initialize the system.

- 1 Shift the shift lever to P.
 - 2 Open and close any of the doors.
 - 3 Restart the engine.
- Unlocking the doors using the smart entry & start system may not be possible immediately after reconnecting the battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.

- Start the engine with the engine switch in ACC. The engine may not start with the engine switch turned off. However, the engine will operate normally from the second attempt.
- The engine switch mode is recorded by the vehicle. If the battery is reconnected, the vehicle will return the engine switch mode to the status it was in before the battery was disconnected. Make sure to turn off the engine before disconnect the battery. Take extra care when connecting the battery if the engine switch mode prior to discharge is unknown.

If the engine will not start even after multiple attempts, contact your Toyota dealer.



WARNING

■ Chemicals in the battery

A battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the battery:

- Do not cause sparks by touching the battery terminals with tools.
- Do not smoke or light a match near the battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

■ Where to safely charge the battery

Always charge the battery in an open area. Do not charge the battery in a garage or closed room where there is not sufficient ventilation.

■ Emergency measures regarding electrolyte

- If electrolyte gets in your eyes
Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte
Drink a large quantity of water or milk. Get emergency medical attention immediately.



NOTICE

■ When recharging the battery

Never recharge the battery while the engine is running. Also, be sure all accessories are turned off.


■ When adding distilled water

Avoid overfilling. Water spilled during battery recharging may cause corrosion.

Adding the washer fluid

If none of the washer does not work or the "Windshield Washer Fluid

Low” appears on the multi-information display, the washer tank may be empty. Add washer fluid.

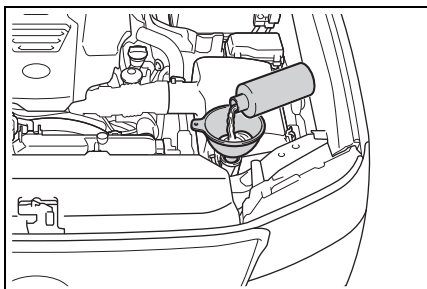

⚠ WARNING

■ **When adding washer fluid**
Do not add washer fluid when the engine is hot or running as washer fluid contains alcohol and may catch fire if spilled on the engine, etc.

⚠ NOTICE

■ **Do not use any fluid other than washer fluid**
Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle’s painted surfaces, as well as damaging the pump leading to problems of the washer fluid not spraying.

■ **Diluting washer fluid**
Dilute washer fluid with water as necessary. Refer to the freezing temperatures listed on the label of the washer fluid bottle.

Checking the air cleaner filter


Check the air cleaner filter as follows:

- 1 Use compressed air to remove dust or sand etc. from the area


surrounding the air cleaner filter case.

- 2 Release the clips.


▶ 1GR-FE engine

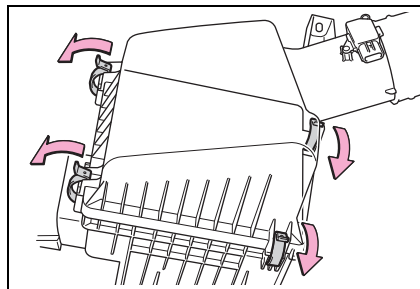

▶ V35A-FTS engine

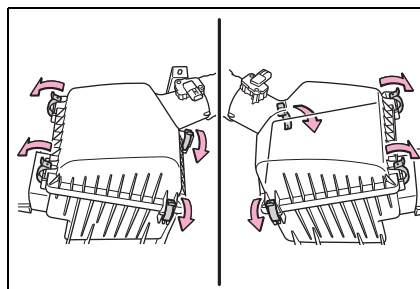


▶ F33A-FTV engine

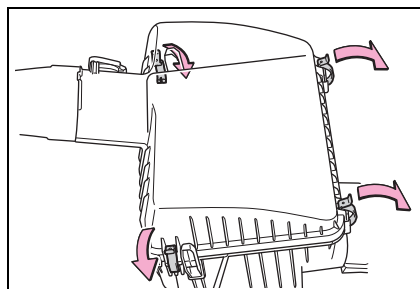


- 3 Lift the cover and take out the air cleaner filter.

Inspect the outer surface of the filter, and replace the filter if it is extremely dirty. If the filter is only moderately dusty, use compressed air to blow dust out of the filter.


► 1GR-FE engine

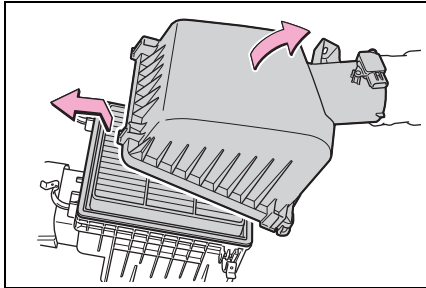


► 1GR-FE engine

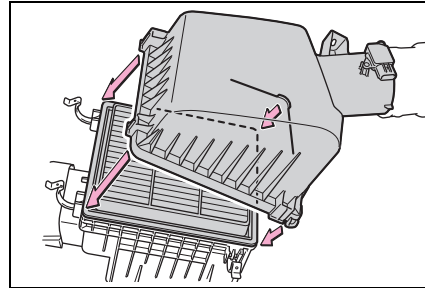


► V35A-FTS engine

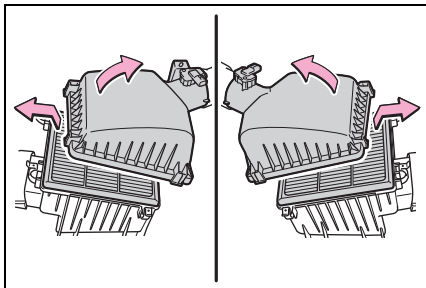


► V35A-FTS engine

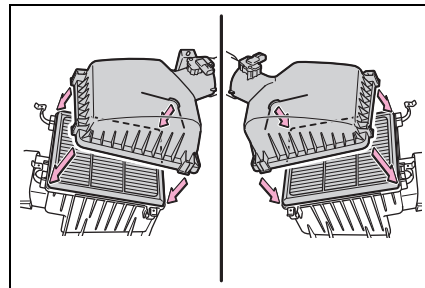

► F33A-FTV engine

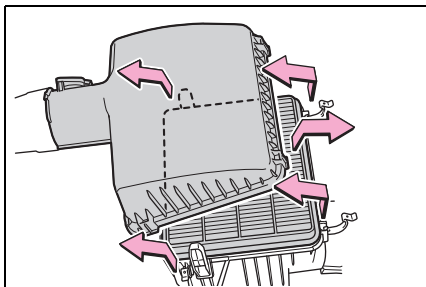

► F33A-FTV engine

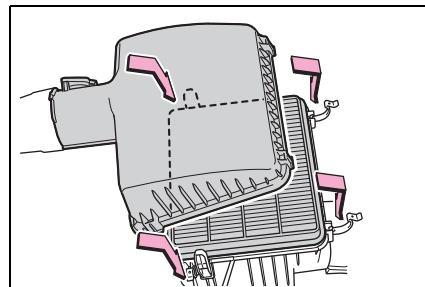

- 4 After checking, make sure the filter is set properly. Fully engage the claws and then secure the upper cover of the air cleaner case.

⚠ WARNING

■ To prevent inhaling dust

Wear a respirator when using compressed air to clean the air cleaner filter.



NOTICE


■ **To prevent damaging the engine**

- Do not drive with the air cleaner filter removed. Doing so causes excessive engine wear.
- Do not hit or drop the filter, as it may contain dust or sand etc.

Draining the fuel filter water (diesel engine only)

You may drain the fuel filter yourself. However, as the operation is difficult, we recommend having it drained by your Toyota dealer. Even if you decide to drain it yourself, contact your Toyota dealer.

Components

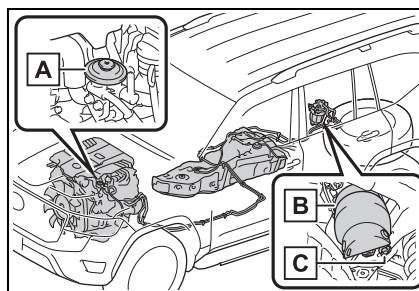

A Priming pump

B Fuel filter


C Drain plug

Draining the water


The water in the fuel filter needs to be drained if the warning message is shown on the multi-information display and a buzzer sounds (if equipped). (→P.709)

- 1 Turn the engine switch off.
- 2 Place a small tray under the drain plug to catch the water and any fuel that comes out.

- 3 Turn the drain plug counter-clockwise about 2 to 2 1/2 turns.

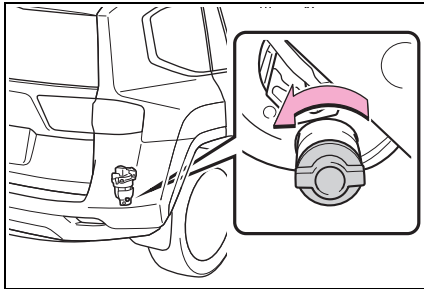

- 4 Operate the priming pump until fuel begins to run out.

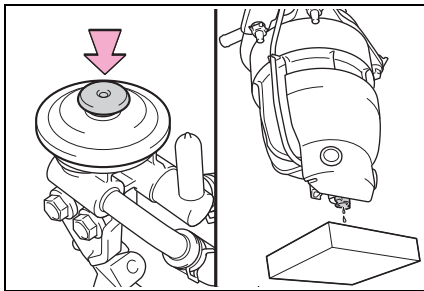

- 5 After draining, tighten the drain plug by hand.

AdBlue™*

*: If equipped

AdBlue™ is used to reduce the amount of nitrogen oxides in exhaust gas. Make sure to observe the following precautions regarding AdBlue™.

- AdBlue™ is consumed in the process of driving.
- When AdBlue™ is depleted, the engine cannot be restarted.
- When AdBlue™ needs to be refilled, have it refilled at your Toyota dealer

It may be a criminal offence to use a vehicle that does not consume any reagent if it is required for the reduction of emissions.

Possible driving range

The amount of AdBlue™ that is consumed while driving differs according to the driving conditions and driving environment. When the amount of AdBlue™ that is consumed increases, the possible driving range until it is necessary to refill AdBlue™ decreases.

Possible driving range		
Short* ¹		Long
[High-load driving] <ul style="list-style-type: none"> ● When firmly depressing the accelerator pedal ● When driving on long uphill slopes ● When the DPF system is operating 	[Normal driving]* ²	[Low-load driving] <ul style="list-style-type: none"> ● When driving short distances ● When in traffic congestion

*¹: When the vehicle is used at high elevations and in low temperatures, the amount of AdBlue™ that is consumed increases.

*²: During normal driving, 1.0 L (1.1 qt., 0.9 Imp.qt.) of AdBlue™ is consumed approximately every 1000 km (621 miles). Also, after a full refill, the vehicle can be driven for approximately 17000 km (10564 miles) before all AdBlue™ is depleted.

■ **AdBlue™ gauge**


Displays the quantity of AdBlue™ remaining in the tank. (→P.151)

AdBlue™ warning light and warning message

When the AdBlue™ level is low, the low AdBlue™ level warning light turns on and a warning message appears on the multi-information display. (→P.658)

When the possible driving range based on the remaining amount of AdBlue™ reaches approximately 2400 km (1491 miles), the low AdBlue™ level warning light turns on and a warning message is displayed.

When refilling AdBlue™ by yourself in an emergency, be sure to follow the correct refilling procedures. (→P.659)

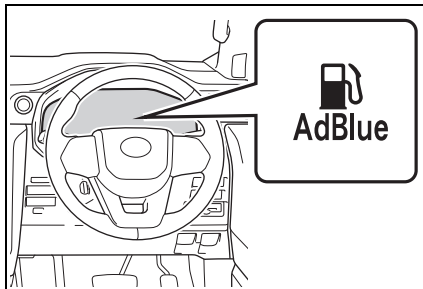

■ **Warning message**

If the following warning message is displayed on the multi-information display, follow the appropriate troubleshooting procedure.

Warning message	Details/Actions
"AdBlue level Low Fill up AdBlue in 2400km See Owner's Manual"*1	When AdBlue™ needs to be refilled → Have AdBlue™ refilled at your Toyota dealer.
"AdBlue level Low No start in 1100km Fill up AdBlue See Owner's Manual"*1, 2	When AdBlue™ needs to be refilled If the displayed driving distance is exceeded, the engine cannot be restarted. → Have AdBlue™ refilled at your Toyota dealer immediately.
"AdBlue Empty Unable to restart Engine Fill up AdBlue See Owner's Manual"*2	When AdBlue™ needs to be refilled → If the engine is stopped, it cannot be restarted. Without stopping the engine, contact your Toyota dealer immediately.

*1: Use the driving range as a reference. The possible driving range that is displayed may differ from the actual driving range depending on the refill method, driving conditions and driving environment. (→P.657)

*2: The buzzer sounds in accordance with the warning message.

**NOTICE**


■ **When the AdBlue™ level is low**

When AdBlue™ is depleted, the engine cannot be restarted.

Be sure to have AdBlue™ refilled at your Toyota dealer before it is completely depleted.

Refilling AdBlue™ by yourself in an emergency

■ **Location of the AdBlue™ tank cap**

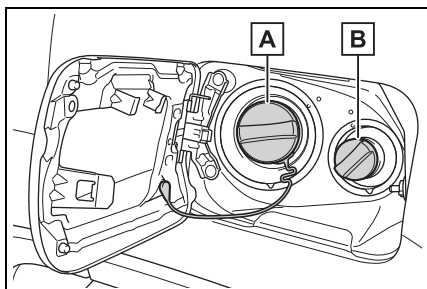

A Fuel tank cap (→P.295)


B AdBlue™ tank cap

■ **Refilling AdBlue™**


When the engine cannot be restarted due to the depletion of AdBlue™, adding approximately 7.0 L (7.4 qt., 6.2 Imp.qt.) or more of AdBlue™ will allow the engine to be started again. Perform the following procedures to refill AdBlue™. (The AdBlue™ tank has a capacity of 17.4 L (18.4 qt., 15.3 Imp.qt.).)

▶ Refilling with the refilling equipment


- 1 Park the vehicle on a level surface, turn the engine switch off, and then open the fuel filler door. (→P.295)
- 2 Open the AdBlue™ tank cap.

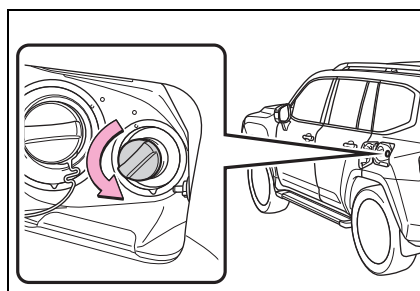

- 3 Insert the nozzle and refill AdBlue™.

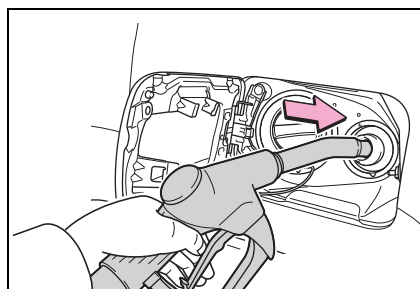

- 4 Close the AdBlue™ tank cap. Turn the cap until you hear a click.

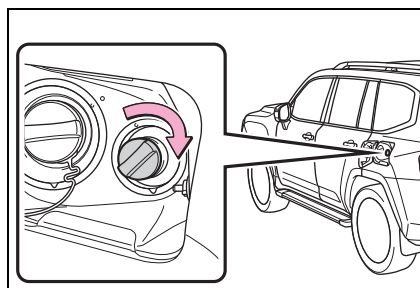


- 5 Check that the engine starts.


► Refilling with the bottle

1 Park the vehicle on a level surface, turn the engine switch off, and then open the fuel filler door. (→P.295)

2 Open the AdBlue™ tank cap.

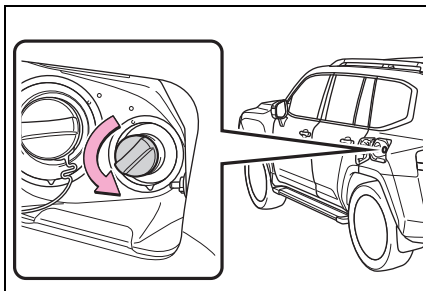


3 Insert a bottle of AdBlue™ and fully tighten it.

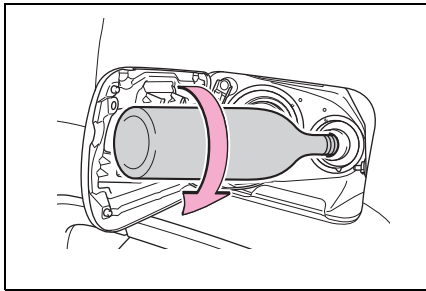


4 Push down on the bottle.

AdBlue™ will begin to be refilled. Refill AdBlue™ slowly so that it does not spill. Do not remove the bottle until it is empty.

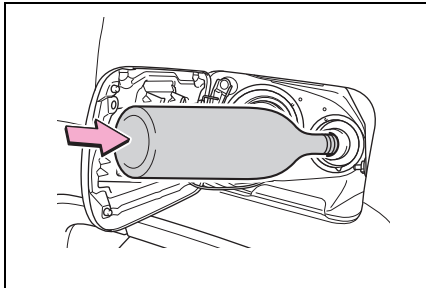


5 Check that no AdBlue™ remains in the bottle, and then remove it.

Repeat steps 3 to 5 until approximately 7.0 L (7.4 qt., 6.2 Imp.qt.) or more of AdBlue™ have been refilled.

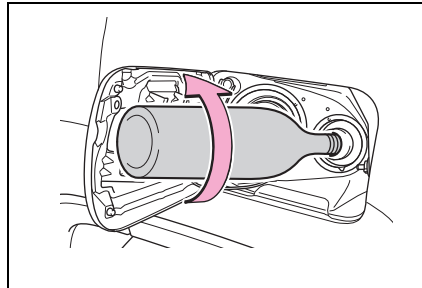

6 Close the AdBlue™ tank cap.

Turn the cap until you hear a click.

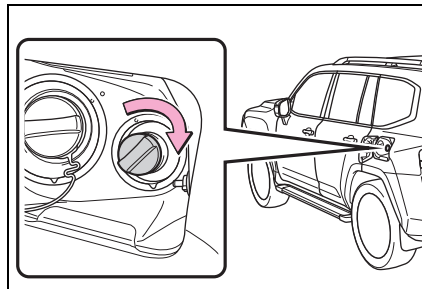

7 Check that the engine starts.

The way of refilling may differ from those shown in the illustration.

■ Refilling AdBlue™

- Use AdBlue™ (compliant with ISO 22241-1). AdBlue™ is a trademark of the German Association of the Automotive Industry (VDA).
- Before driving for a long period of time in an area where AdBlue™ cannot be refilled, consult your Toyota dealer.

■ When refilling AdBlue™

After refilling AdBlue™, the engine may

take a few seconds longer than normal to start.



NOTICE

■ When refilling AdBlue™

Observe the following precautions. Failure to do so may result in damage to the vehicle parts, paint, etc.

- Do not use urea solution other than AdBlue™.
- If AdBlue™ comes into contact with any painted surfaces on the vehicle, immediately wash the affected areas with water.

■ When refilling AdBlue™ with the refilling equipment

Observe the following precautions to prevent AdBlue™ overflowing from the AdBlue™ tank:

- Securely insert the nozzle into the AdBlue™ filler neck.
- Stop filling the tank after the nozzle automatically clicks off.
- Do not top off the AdBlue™ tank.

■ When storing AdBlue™ containers

Observe the following precautions. Failure to do so may result in damage to vehicle parts, paint, etc., and changes in the chemical compounds of AdBlue™ may cause unpleasant odors.

- Do not leave AdBlue™ containers inside the vehicle.
- Tightly seal AdBlue™ containers and store them in a cool, dry location with good ventilation and no exposure to direct sunlight.

Electric winch*

*: If equipped

Maintenance

- To prevent rusting of the cable, apply Castle MP grease No.2 to the cable once a month or after it has been exposed to rainfall.
- When the winch assembly gets wet, wipe it thoroughly to dry.
- Operate the winch once a month.
- Check the winch's fluid level once a year. Fluid should reach up to 5 - 10 mm (0.2 - 0.4 in.) from the fluid hole. If the fluid level is low, add Automatic transmission fluid DEXRON® II or III. Consult your Toyota dealer for details.
- After using the winch, always replace the winch cover to protect the winch from dirt and rust.
- Before using the electric winch, check that the vehicle's battery terminals are tight and the battery fluid level is sufficient.



NOTICE

■ When replacing cable

If replacing the cable with a new one, use a genuine Toyota product or equivalent.


Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

Checking tires

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear, such as excessive wear on one side of the tread.

Check the spare tire condition and pressure if not rotated.

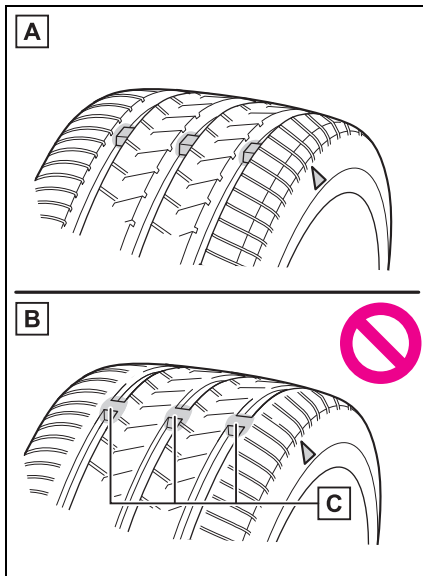

A New tread

B Worn tread

C Treadwear indicator

The location of treadwear indicators is shown by a "TWI" or "△" mark, etc.,

molded into the sidewall of each tire. Replace the tires if the treadwear indicators are showing on a tire.

When to replace your vehicle's tires

Tires should be replaced if:

- The treadwear indicators are showing on a tire.
- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage.
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage.

If you are not sure, consult with your Toyota dealer.

Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

If the tread on snow tires wears down below 4 mm (0.16 in.)

The effectiveness of the tires as snow tires is lost.

WARNING

When inspecting or replacing tires

Observe the following precautions to prevent accidents. Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models or tread patterns. Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Toyota.

⚠ WARNING

- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle. Do not use tires if you do not know how they were used previously.

⚠ NOTICE**■ Driving on rough roads**


Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

■ If tire inflation pressure of each tire becomes low while driving

Do not continue driving, or your tires and/or wheels may be ruined.

Tire rotation

Rotate the tires in the order shown.

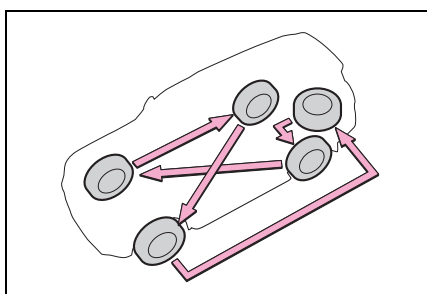

To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately

every 5000 km (3000 miles).

Vehicles with the tire pressure warning system: Do not fail to initialize the tire pressure warning system after tire rotation.

■ When rotating the tires (vehicles with the tire pressure warning system)

Make sure that the engine switch is OFF. If the tires are rotated while the engine switch is in ON, the tire position information will not be updated.

If this accidentally occurs, either turn the engine switch to OFF and then to ON, or initialize the system after checking that the tire pressure is properly adjusted.

Tire pressure warning system (if equipped)

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

The tire pressure warning system of this vehicle adopts a 2-type warning system

- When “Adjust Pressure” is displayed (Normal Warning)

The tire pressure warning light comes on and a buzzer sounds when the tire inflation pressure becomes low due to natural air leakage or outside temperature. (Ways of coping:→P.706, 757)

- When “Immediately Check Tire when Safe” is displayed (Emergency Warning)

The tire pressure warning light comes

on and a buzzer sounds when the tire inflation pressure becomes low suddenly due to a blowout. (Ways of coping: →P.706, 714) However, the system may not be able to detect sudden tire ruptures (bursting, etc.).


- The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

The unit can be changed.

▶ With 4.2-inch display



▶ With 7-inch display

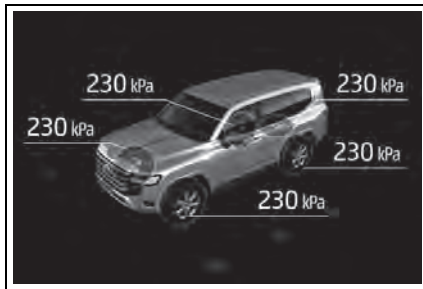


■ **How to change the unit**

▶ With 4.2-inch display

- 1 Park the vehicle in a safe place and turn the engine switch off.

Changing the unit cannot be performed while the vehicle is moving.

- 2 Turn the engine switch to ON.

- 3 Press < or > of the meter control switches on the steering wheel and select .

- 4 Press ^ or v of the meter control switches and select “Vehicle Settings”, and then press and hold OK .

- 5 Press ^ or v of the meter control switches and select “TPWS”, and then press OK .


- 6 Press ^ or v of the meter control switches and select “Setting Unit”, and then press OK .


- 7 Press ^ or v of the meter control switches and select the desired unit and, then press OK .

▶ With 7-inch display

- 1 Park the vehicle in a safe place and turn the engine switch off.

Changing the unit cannot be performed while the vehicle is moving.

- 2 Turn the engine switch to ON.
- 3 Press ^ or v of the meter control switches on the steering wheel and select .

- 4 Press < or > of the meter control switches and select , and then press and hold OK .

- 5 Press \wedge or \vee of the meter control switches and select "TPWS", and then press OK .
- 6 Press \wedge or \vee of the meter control switches and select "Setting Unit", and then press OK .
- 7 Press \wedge or \vee of the meter control switches and select the desired unit, and then press OK .

■ Routine tire inflation pressure checks

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

■ Tire inflation pressure

- It may take a few minutes to display the tire inflation pressure after the engine switch is turned to ON. It may also take a few minutes to display the tire inflation pressure after inflation pressure has been adjusted.
- Tire inflation pressure changes with temperature. The displayed values may also be different from the values measured using a tire pressure gauge.

■ Situations in which the tire pressure warning system may not operate properly

- In the following cases, the tire pressure warning system may not operate properly.
 - If non-genuine Toyota wheels are used.
 - A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
 - A tire has been replaced with a tire

- that is not of the specified size.
- Tire chains, etc. are equipped.
- An auxiliary-supported run-flat tire is equipped.
- If a window tint that affects the radio wave signals is installed.
- If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
- If the tire inflation pressure is extremely higher than the specified level.
- If wheels without tire pressure warning valves and transmitters are used.
- If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer.

- Performance may be affected in the following situations.
 - Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
 - When carrying a portable radio, cellular phone, cordless phone or other wireless communication device

If tire position information is not correctly displayed due to the radio wave conditions, the display may be corrected by driving and changing the radio wave conditions.

- When the vehicle is parked, the time taken for the warning to start or go off could be extended.
- When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

■ Warning performance of the tire pressure warning system

For some models, the warning of the tire pressure warning system will change in accordance with the conditions under which it was initialized. For this reason, the system may give a warning even if the tire pressure does not reach a low enough level, or if the pressure is higher than the pressure that was adjusted to

when the system was initialized.

Installing tire pressure warning valves and transmitters (vehicles with tire pressure warning system)

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. (→P.669)

■ When replacing the tires and wheels (vehicles with the tire pressure warning system)

▶ Type A

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 20 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.

▶ Type B

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 10 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.



NOTICE

■ Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps (vehicles with the tire pressure warning system)

- When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact your Toyota dealer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
- Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves and the tire pressure warning valves could be bound.
- When replacing tire valve caps, do not use tire valve caps other than those specified. The cap may become stuck.

■ To avoid damage to the tire pressure warning valves and transmitters (vehicles with the tire pressure warning system)

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Toyota dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P.663)

Initializing the tire pressure warning system (if equipped)

■ **The tire pressure warning system must be initialized in the following circumstances:**

- When rotating the tires.
- When changing the tire size.
- When changing between two registered wheel sets.
- After registering the ID codes. (→P.669)

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.

■ **How to initialize the tire pressure warning system**


▶ With 4.2-inch display

- 1 Park the vehicle in a safe place and stop the engine for 20 minutes or more.
- 2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level.

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.


- 3 Turn the engine switch to ON.

Initialization cannot be performed while the vehicle is moving.

- 4 Press < or > of the meter control switches on the steering wheel and select .

- 5 Press ^ or v of the meter control switches and select "Vehicle Settings", and then press and hold OK .
- 6 Press ^ or v of the meter control switches and select "TPWS", and then press OK .
- 7 Press ^ or v of the meter control switches and select "Setting Pressure". Then press and hold OK until the tire pressure warning light blinks 3 times.

Then "Set Pressure Accepted" will be displayed on the multi-information display. "--" will be displayed on the multi-information display for the inflation pressure of each tire while initialization is being performed.

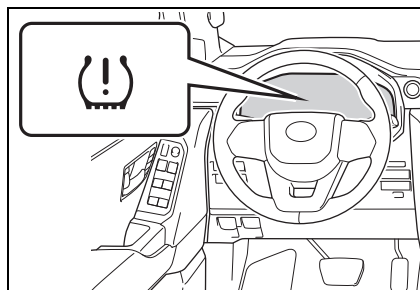

- 8 Drive straight (with occasional left and right turns) at approximately 40 km/h (25 mph) or more for approximately 10 to 30 minutes.

When initialization is complete, the inflation pressure of each tire will be displayed on the multi-information display.

Even if the vehicle is not driven at approximately 40 km/h (25 mph) or more, initialization can be completed by

driving for a long time. However, if initialization does not complete after driving for 1 hour or more, park the vehicle in a safe place for approximately 20 minutes and then drive the vehicle again.











▶ With 7-inch display

- 1 Park the vehicle in a safe place and stop the engine for 20 minutes or more.
- 2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level.


Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

- 3 Turn the engine switch to ON.

Initialization cannot be performed while the vehicle is moving.

- 4 Press  or  of the meter control switches on the steering wheel and select .
- 5 Press  or  of the meter control switches and select , and then press and hold OK.
- 6 Press  or  of the meter control switches and select "TPWS", and then press OK.
- 7 Press  or  of the meter control switches and select the "Setting Pressure". Then press and hold OK until the tire pressure warning light blinks 3 times.

Then "Set Pressure Accepted" will be displayed on the multi-information display. "---" will be displayed on the multi-information display for the inflation pressure of each tire while initialization is being performed.

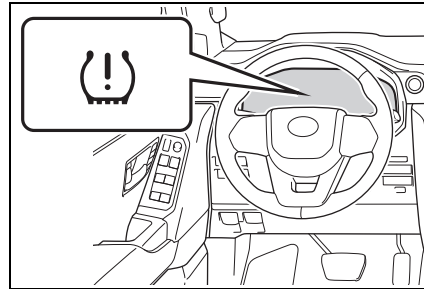

- 8 Drive straight (with occasional left and right turns) at approximately 40 km/h (25 mph) or more for approximately 10 to 30 minutes.

When initialization is complete, the inflation pressure of each tire will be displayed on the multi-information display.

Even if the vehicle is not driven at approximately 40 km/h (25 mph) or more, initialization can be completed by driving for a long time. However, if initialization does not complete after driving for 1 hour or more, park the vehicle in a safe place for approximately 20 minutes and then drive the vehicle again.

■ When initializing

- Initialization is performed while driving at a vehicle speed of approximately 40 km/h (25mph) or more.
- Make sure to carry out initialization after adjusting the tire inflation pressure. Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.
- The tire pressure warning system can be initialized by yourself, but depending on the driving conditions and driv-

ing environment, initialization may take some time to complete.

■ The initialization operation

- If you have accidentally turned the engine switch to OFF during initialization, it is not necessary to restart the initialization again as initialization will restart automatically when the engine switch has been turned to ON for the next time.
- If you accidentally perform initialization when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.
- While the position of each tire is being determined and the inflation pressures are not being displayed on the multi-information display, if the inflation pressure of a tire drops, the tire pressure warning light will come on.

■ If the tire pressure warning system is not initialized properly

- In the following situations, initialization may take longer than usual to be completed or may not be possible. Normally, initialization completes within approximately 30 minutes.
 - Vehicle is not driven at approximately 40 km/h (25 mph) or more
 - Vehicle is driven on unpaved roads
 If initialization does not complete after driving for 1 hour or more, park the vehicle in a safe place for approximately 20 minutes and then drive the vehicle again.
- If the vehicle is reversed during initialization, the data up to that point is reset, so perform the initialization procedure again from the beginning.
- In the following situations, initialization will not be started or was not completed properly and the system will not operate properly. Perform the initialization procedure again.
 - If, when attempting to start initialization, the tire pressure warning light

does not blink 3 times.

- If, when the vehicle has been driven for about 20 minutes after performing initialization, the tire pressure warning light blinks for approximately 1 minute and then illuminates.
- If initialization cannot be completed after performing the above procedure, contact your Toyota dealer.



WARNING

■ When initializing the tire pressure warning system

Do not initialize tire inflation pressure without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

Registering ID codes (vehicles with tire pressure warning system)


■ The ID codes must be registered in the following circumstances:

- When installing the new tire pressure warning valve and transmitters
- When installing already registered tire pressure warning valve and transmitters (such as replacing summer and winter tire, etc.)

Every tire pressure warning valve and transmitter has a unique ID code. It is necessary to register the ID code in the tire pressure warning computer

■ **How to register the ID codes**


▶ With 4.2-inch display

- 1 Park the vehicle in a safe place and turn the engine switch off for 20 minutes or more.
- 2 Turn the engine switch to ON. (→P.256)
- 3 Press < or > of the meter control switches on the steering wheel and select .
- 4 Press ^ or v of the meter control switches and select "Vehicle Settings", and then press and hold OK .
- 5 Press ^ or v of the meter control switches and select "TPWS", and then press OK .
- 6 Press ^ or v of the meter control switches and select "Identifying Each Wheel & Position". Then press and hold OK until the tire pressure warning light starts slowly blinking 3 times.

Then "Identify Wheel Accepted" will be displayed on the multi-information display.

When registration is being performed, the tire pressure warning light will blink for approximately 1 minute then illuminate and "---" will be displayed for the inflation pressure of each tire on the

multi-information display.

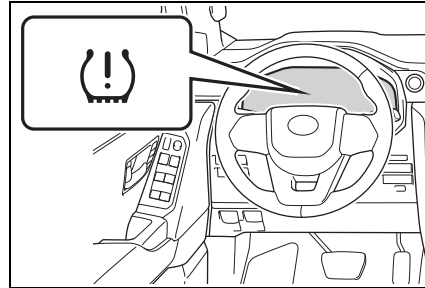


- 7 Drive straight (with occasional left and right turns) at approximately 40 km/h (25 mph) or more for approximately 10 to 30 minutes.


Registration is complete when the tire pressure warning light turns off and the inflation pressure of each tire is displayed on the multi-information display.





Registration may take longer than approximately 1 hour in certain situations, such as when the vehicle is stopped for a long time at traffic lights, etc.

- 8 Initialize the tire pressure warning system. (→P.667)

▶ With 7-inch display


- 1 Park the vehicle in a safe place and turn the engine switch off for 20 minutes or more.
- 2 Turn the engine switch to ON. (→P.256)
- 3 Press ^ or v of the meter control switches on the steering wheel and select .
- 4 Press < or > of the meter control switches and select

 , and then press and hold OK .

- 5 Press  or  of the meter control switches and select “TPWS”, and then press OK .
- 6 Press  or  of the meter control switches and select “Identifying Each Wheel & Position”. Then press and hold OK until the tire pressure warning light starts slowly blinking 3 times.

Then “Identify Wheel Accepted” will be displayed on the multi-information display.

When registration is being performed, the tire pressure warning light will blink for approximately 1 minute then illuminate and “---” will be displayed for the inflation pressure of each tire on the multi-information display.

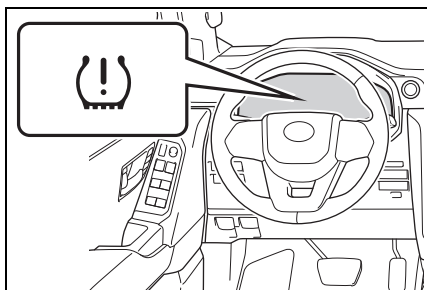

- 7 Drive straight (with occasional left and right turns) at approximately 40 km/h (25 mph) or more for approximately 10 to 30 minutes.

Registration is complete when the tire pressure warning light turns off and the inflation pressure of each tire is displayed on the multi-information display.

Registration may take longer than approximately 1 hour in certain situations, such as when the vehicle is stopped for a long time at traffic lights, etc.

- 8 Initialize the tire pressure warning system. (→P.667)

■ When registering ID codes

- ID code registration is performed while driving at a vehicle speed of approximately 40 km/h (25 mph) or more.
- Before performing ID code registration, make sure that no wheels with tire pressure warning valve and transmitters installed are near the vehicle.
- Make sure to initialize the tire pressure warning system after registering the ID codes. If the system is initialized before registering the ID codes, the initialized values will be invalid.
- As the tires will be warm when registration is completed, make sure to allow the tires to cool before performing initialization.
- ID codes can be registered by yourself, but depending on the driving conditions and driving environment, registration may take some time to complete.

■ Canceling ID code registration

- To cancel ID code registration after it has been started, select “Identifying Each Wheel & Position” on the multi-information display and press and hold OK again.
- If ID code registration has been canceled, the tire pressure warning light will blink for approximately 1 minute when the engine switch is turned to ON and then illuminate. The tire pressure warning system will be operational when the tire pressure warning light turns off.
- If the warning light does not turn off even after several minutes have

elapsed, ID code registration may not have been canceled correctly. To cancel registration, perform the ID code registration start procedure again and then turn the engine switch off before driving.

■ If ID codes are not registered properly

- In the following situations, ID code registration may take longer than usual to be completed or may not be possible. Normally, registration completes within approximately 30 minutes.
 - If ID code registration is not complete after driving for approximately 30 minutes, continue driving for a while.
 - Vehicle is not parked for approximately 20 minutes or more before driving
 - Vehicle is not driven at approximately 40 km/h (25 mph) or more
 - Vehicle is driven on unpaved roads
 - Vehicle is driven near other vehicles and system cannot recognize tire pressure warning valve and transmitters of your vehicle over those of other vehicles
 - Wheel with tire pressure warning valve and transmitter installed is inside or near the vehicle
- If registration does not complete after driving for 1 hour or more, perform the ID code registration procedure again from the beginning.
- If the vehicle is reversed during registration, the data up to that point is reset, so perform the registration procedure again from the beginning.
 - In the following situations, ID code registration will not be started or was not completed properly and the system will not operate properly. Perform the ID code registration procedure again.
 - If, when attempting to start ID code registration, the tire pressure warning light does not blink slowly 3 times.
 - If, when the vehicle has been driven for about 20 minutes after performing

ID code registration, the tire pressure warning light blinks for approximately 1 minute and then illuminates.

If the ID codes cannot be registered even when performing the above procedure, contact your Toyota dealer.

Selecting wheel set

Your vehicle is equipped with tire pressure warning system with the function to have ID codes registered for a second wheel set, for example a winter set. You can register a second wheel set by yourself or your Toyota dealer.


After registration of a second wheel set, either of these two wheel sets can be selected for usage with the tire pressure warning system.

■ Operating conditions for the function


- This function will perform the change of wheel set only if a second wheel set has been registered. If no second wheel set has been registered, no change will be made when selecting this function in the menu.
- Only a change between both registered wheel set is possible, mixing between these wheel sets is not supported.

■ How to change between wheel sets

▶ With 4.2-inch display

- 1 Park the vehicle in a safe place and fit the vehicle with your preferred wheel set.
- 2 Press < or > of the meter control switches on the steering wheel and select .
- 3 Press ^ or v of the meter control switches and select "Vehicle Settings", and then press and hold OK .
- 4 Press ^ or v of the meter control switches and select "TPWS", and then press OK .
- 5 Press ^ or v of the meter control switches and select "Identifying Each Wheel & Position". Then press and hold OK until the tire pressure warning light starts slowly blinking 3 times.

Afterward, the tire pressure warning light turns on after flashing for 1 minute.

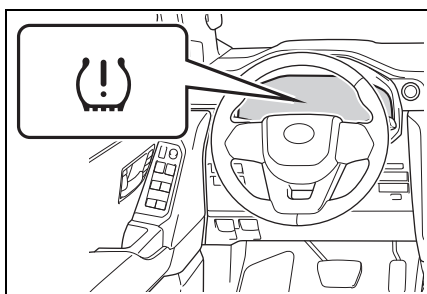

After 2 minutes, changing the ID codes

of a second wheel set is being performed. The tire pressure warning light will turn off.



- 6 Initialize the tire pressure warning system. (→P.667)

If the tire inflation pressure settings for the installed tires change, initialization operations are required, but if the tire inflation pressure settings are the same, initialization is not required.

- 7 Drive straight (with occasional left and right turns) at approximately 40 km/h (25 mph) or more for approximately 10 to 30 minutes.


Changing a second wheel set is complete when the tire pressure warning light turns off and the inflation pressure of each tire is displayed on the multi-information display.

▶ With 7-inch display

- 1 Park the vehicle in a safe place and fit the vehicle with your preferred wheel set.
- 2 Press ^ or v of the meter control switches on the steering wheel and select .
- 3 Press < or > of the meter control switches and select , and then press and hold OK .
- 4 Press ^ or v of the meter control switches and select "TPWS", and then press OK .
- 5 Press ^ or v of the meter control switches and select

“Identifying Each Wheel & Position”. Then press and hold OK until the tire pressure warning light starts slowly blinking 3 times.

Afterward, the tire pressure warning light turns on after flashing for 1 minute.

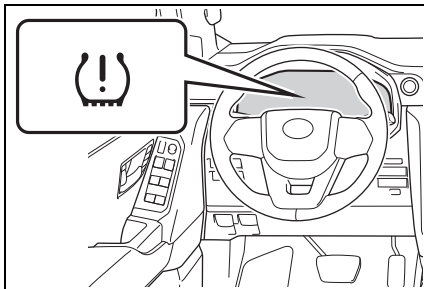

After 2 minutes, changing the ID codes of a second wheel set is being performed. The tire pressure warning light will turn off.

6 Initialize the tire pressure warning system. (→P.667)

If the tire inflation pressure settings for the installed tires change, initialization operations are required, but if the tire inflation pressure settings are the same, initialization is not required.

7 Drive straight (with occasional left and right turns) at approximately 40 km/h (25 mph) or more for approximately 10 to 30 minutes.

Changing a second wheel set is complete when the tire pressure warning light turns off and the inflation pressure of each tire is displayed on the multi-information display.

Tire inflation pressure

Make sure to maintain the proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Toyota recommends that tire inflation pressure be checked once every two weeks.

■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel economy
- Reduced driving comfort and poor handling
- Reduced tire life due to wear
- Reduced safety
- Damage to the drive train

If a tire needs frequent refilling, have it checked by your Toyota dealer.

■ Instructions for checking tire inflation pressure


When checking tire inflation pressure, observe the following:

- Check only when the tires are cold. If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge. It is difficult to judge if a tire is properly inflated based only on its appearance.
- It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.
- Passengers and luggage weight should be placed so that the vehicle is balanced.

 **WARNING****■ Proper inflation is critical to save tire performance**

Keep your tires properly inflated. If the tires are not properly inflated, the following conditions may occur which could lead to an accident resulting in death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Air leaking from between tire and wheel
- Wheel deformation and/or tire damage
- Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges in the road, etc.)

 **NOTICE****■ When inspecting and adjusting tire inflation pressure**

Be sure to put the tire valve caps back on. If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset*.

Replacement wheels are available at your Toyota dealer.

*: Conventionally referred to as offset.

Toyota does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

■ When replacing wheels (vehicles with tire pressure warning system)

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed. (→P.666)

**WARNING****■ When replacing wheels**

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

■ When installing the wheel nuts

- Be sure to install the wheel nuts with the tapered ends facing inward. (→P.721) Installing the nuts with the tapered ends facing outward can cause the wheel to break and eventually cause the wheel to come off while driving, which could lead to an accident resulting in death or serious injury.
- Never use oil or grease on the wheel bolts or wheel nuts. Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing an accident and resulting in death or serious injury. Remove any oil or grease from the wheel bolts or wheel nuts.

■ Use of defective wheels prohibited

Do not use cracked or deformed wheels.

Doing so could cause the tire to leak air during driving, possibly causing an accident.

**NOTICE****■ Replacing tire pressure warning valves and transmitters (vehicles with tire pressure warning system)**

- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by your Toyota dealer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at your Toyota dealer.
- Ensure that only genuine Toyota wheels are used on your vehicle. Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

Aluminum wheel precautions (if equipped)


- Use only Toyota wheel nuts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Toyota genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

Air conditioning filter


The air conditioning filter must be cleaned or changed regularly to maintain air conditioning efficiency.

Removal method

- 1 Turn the engine switch off.
- 2 Open the glove box and remove the separate tray. (→P.594)
- 3 Remove the panel.

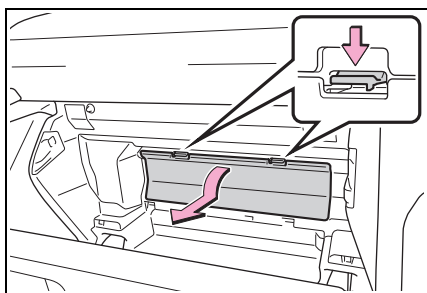


- 4 Unlock the filter cover (A), pull the filter cover out of the claws (B), and remove the filter cover.

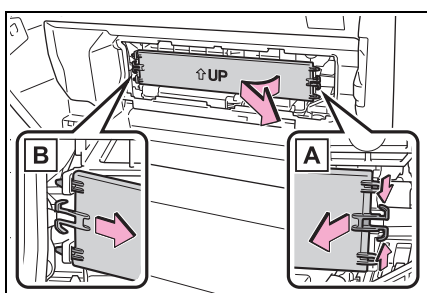

- ▶ Except for vehicles with model code* that has "V" as the last letter


*: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P.744)

- 5 Remove the filter case.

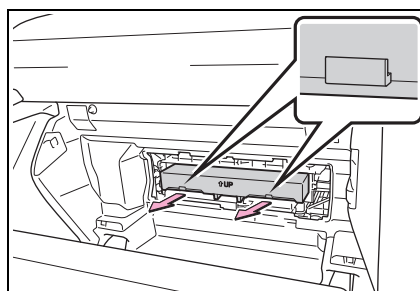

- 6 Remove the air conditioning filter from the filter case and replace it with a new one.

The "↑ UP" marks shown on the filter and the filter case should be pointing up.

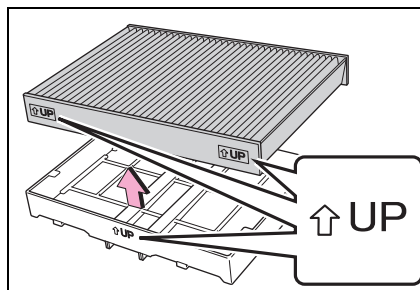


- ▶ For vehicles with model code* that has "V" as the last letter

*: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P.744)

- 5 Remove the air conditioning filter and replace it with a new one.

The “↑ UP” marks shown on the filter should be pointing up.

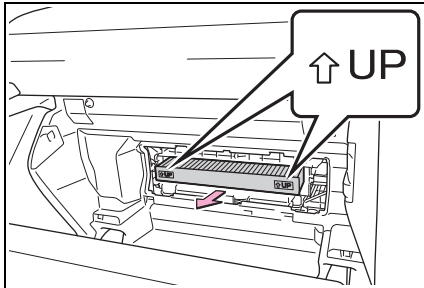

■ **Checking interval**


Inspect, clean and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, more frequent cleaning or early replacement may be required. (→P.628)


■ **If air flow from the vents decreases dramatically**

The filter may be clogged. Check the filter and replace if necessary.

■ **To prevent damage to the filter cover**

When moving the filter cover in the direction of arrow to release the fitting, pay attention not to apply excessive force to the claws. Otherwise, the claws may be damaged.

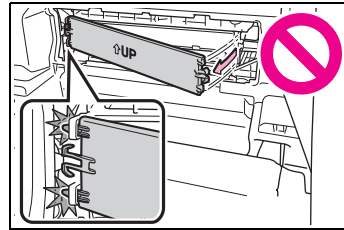

 NOTICE

■ **When using the air conditioning system**

Make sure that a filter is always installed. Using the air conditioning system without a filter may cause damage to the system.

Electronic key battery

Replace the battery with a new one if it is depleted.

If the electronic key battery is depleted

The following symptoms may occur:

- The smart entry & start system and wireless remote control will not function properly.
- The operational range will be reduced.

Items to prepare

Prepare the following before replacing the battery:


- Flathead screwdriver
- Small flathead screwdriver
- Lithium battery CR2450

Use a CR2450 lithium battery

- Batteries can be purchased at your Toyota dealer, local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the local laws.


Replacing the battery

- 1 Release the lock and remove the mechanical key.

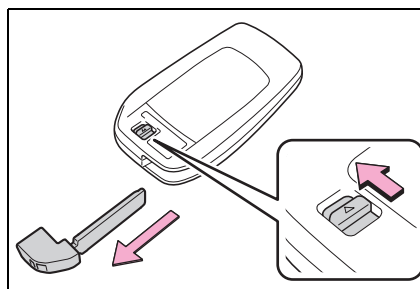

- 2 Remove the cover.

To prevent damage to the key, cover the tip of the flathead screwdriver with a rag.

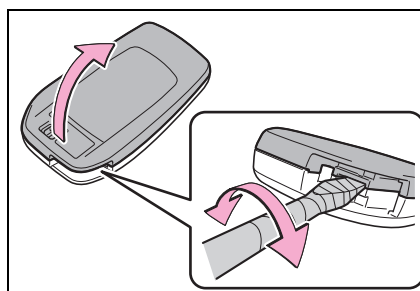


- 3 Remove the depleted battery using a small flathead screwdriver.

When removing the cover, the electronic key module may stick to the cover and the battery may not be visible. In this case, remove the electronic key module in order to remove the battery.

Insert a new battery with the “+” termi-

nal facing up.

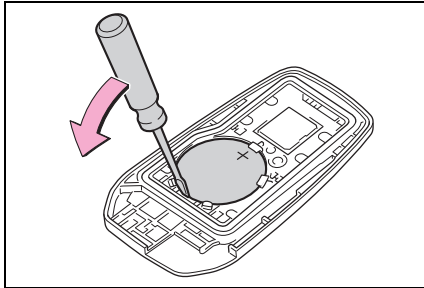

- 4 When installing, reverse the steps listed.

WARNING

■ Battery precautions

Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not swallow the battery. Doing so may cause chemical burns.
- A coin battery or button battery is used in the electronic key. If a battery is swallowed, it may cause severe chemical burns in as little as 2 hours and may result in death or serious injury.
- Keep away new and removed batteries from children.
- If the cover cannot be firmly closed, stop using the electronic key and stow the key in the place where children cannot reach, and then contact your Toyota dealer.
- If you accidentally swallow a battery or put a battery into a part of your body, get emergency medical attention immediately.

■ To prevent battery explosion or leakage of flammable liquid or gas

- Replace the battery with a new battery of the same type. If a wrong type of battery is used, it may explode.

- Do not expose batteries to extremely low pressure due to high altitude or extremely high temperatures.
- Do not burn, break or cut a battery.

NOTICE

■ When replacing the battery

Use a flathead screwdriver of appropriate size. Applying excessive force may deform or damage the cover.

■ For normal operation after replacing the battery

Observe the following precautions to prevent accidents:

- Always work with dry hands. Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.


Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.


Checking and replacing fuses

- 1 Turn the engine switch off.
 - 2 Open the fuse box cover.
- Engine compartment (1GR-FE engine)

Type A:
Push the tab in and lift the lid off.

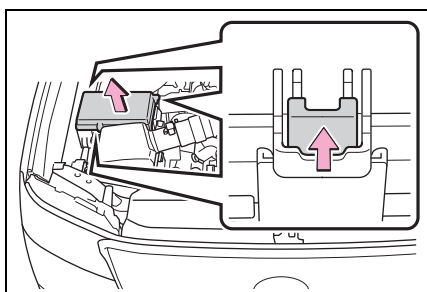


Type B:
Push the tab in and lift the lid off.

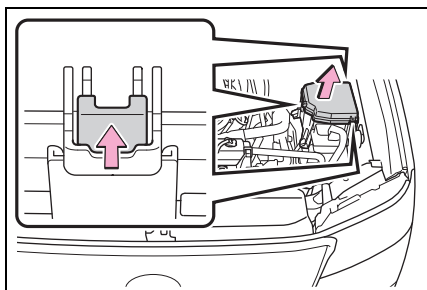


- Engine compartment (V35A-FTS engine)

Type A:
Keep the engine compartment cover opened or removing the cover (→P.644) and push the tab in and lift the lid off.

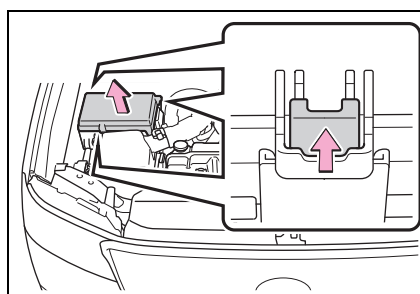


Type B:
Keep the engine compartment cover opened or removing the cover (→P.644) and push the tab in and lift the lid off.

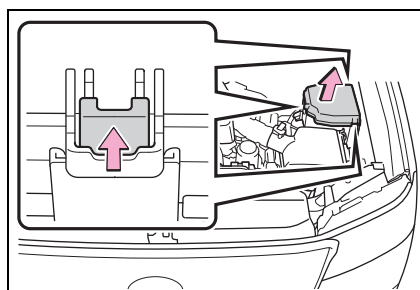


- Engine compartment (F33A-FTV engine)


Type A:
Keep the engine compartment cover opened or removing the cover (→P.644) and push the tab in and lift the lid off.

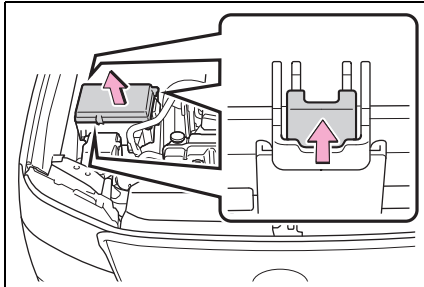

Type B:
Keep the engine compartment cover opened or removing the cover (→P.644) and push the tab in and lift the lid off.

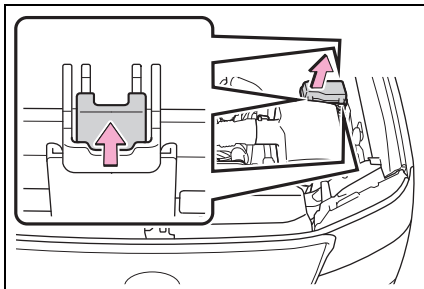


Type C:
Push the tab in and lift the lid off.

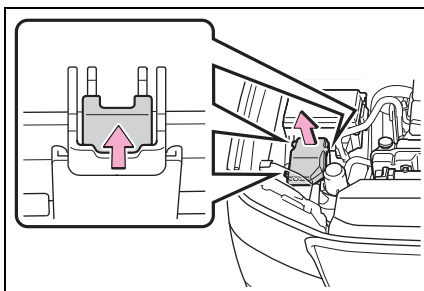


► Instrument panel (left-hand drive vehicles)

Remove the cover **A** and then remove the footwell light connector **B** (if equipped).

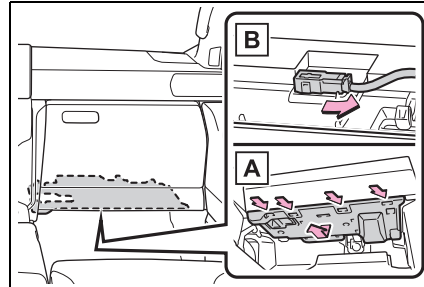


Remove the lid.

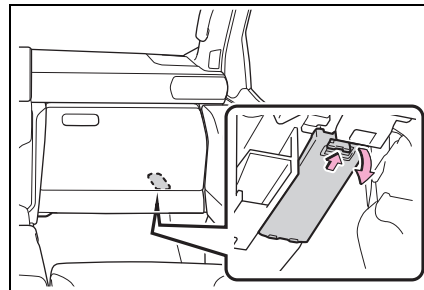


► Instrument panel (right-hand drive vehicles)

Remove the lid.

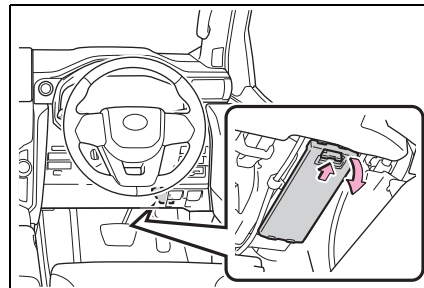


► Luggage compartment (if equipped)

Remove the cover.

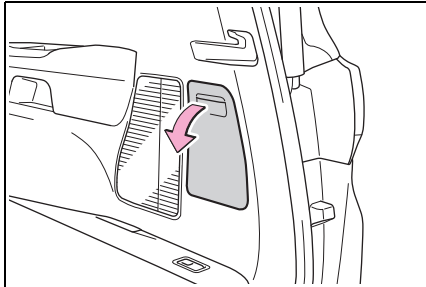


Remove the lid.

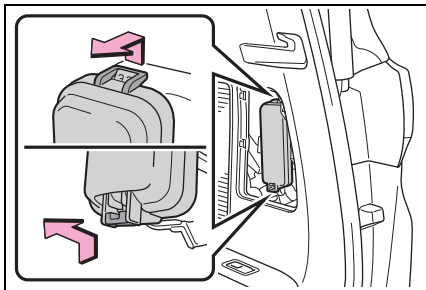

3 Remove the fuse with the pull-out tool.


► 1GR-FE engine

Only type A fuse can be removed using the pullout tool.

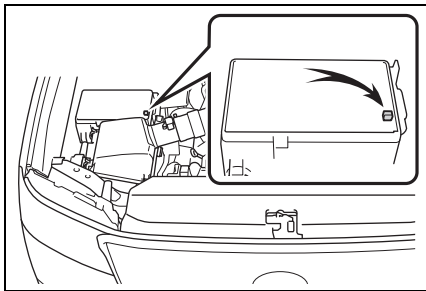


► V35A-FTS engine

Only type A fuse can be removed using the pullout tool.

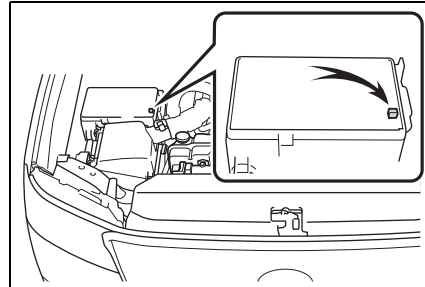

► F33A-FTV engine

Only type A fuse can be removed using the pullout tool.

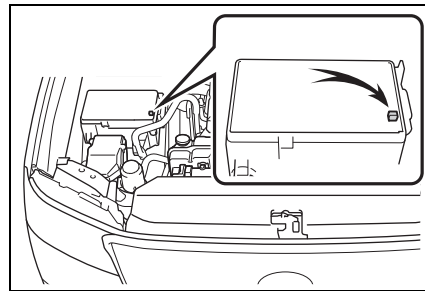


4 Check if the fuse is blown.

Type A and B:
Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

Type C and D:
Contact your Toyota dealer.


► Type A

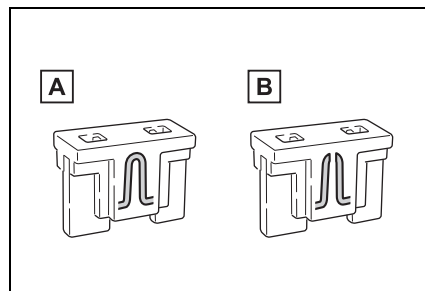

A Normal fuse

B Blown fuse


► Type B

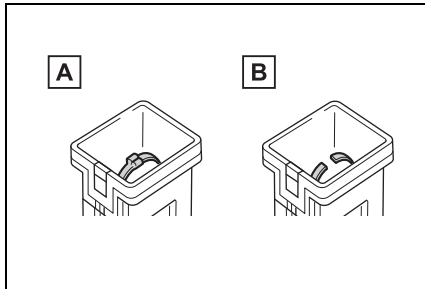

A Normal fuse

B Blown fuse


► Type C

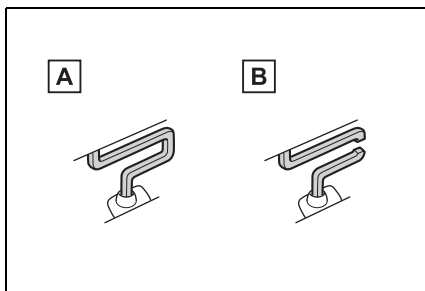

A Normal fuse

B Blown fuse

► Type D

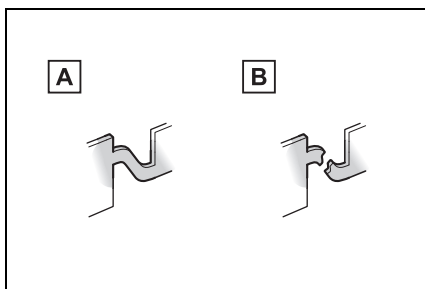

A Normal fuse

B Blown fuse

■ After a fuse is replaced

- When installing the lid, make sure that the tab is installed securely.
- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P.685)
- If the replaced fuse blows again, have the vehicle inspected by your Toyota dealer.

■ If there is an overload in a circuit

The fuses are designed to blow, protecting the wiring harness from damage.

■ When replacing light bulbs

Toyota recommends that you use genuine Toyota products designed for this vehicle. Because certain bulbs are connected to circuits designed to prevent overload, non-genuine parts or parts not designed for this vehicle may be unusable.

! WARNING

■ To prevent system breakdowns and vehicle fire

Observe the following precautions. Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Toyota fuse or equivalent. Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuses or fuse boxes.



NOTICE

■ **Before replacing fuses**

Have the cause of electrical overload determined and repaired by your Toyota dealer as soon as possible.


Light bulbs

You may replace the following bulb by yourself. Before replacing, check the wattage of the light bulb to be replaced. As there is a danger that components may be damaged, we recommend that replacement is carried out by your Toyota dealer.

Preparing for light bulb replacement

Check the wattage of the light bulb to be replaced. (→P.758)

Bulb location

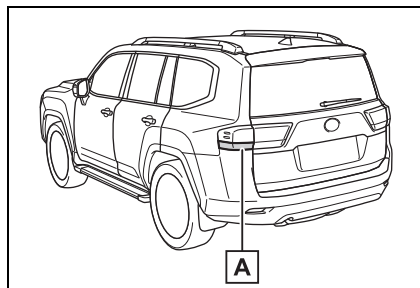

A Rear turn signal lights (bulb type) (if equipped)

■ **Lights that need to be replaced by your Toyota dealer**

- Headlights
- Front position lights and daytime running lights
- Front turn signal lights

- Front fog lights (if equipped)
- Cornering lights (if equipped)
- Side turn signal lights
- Tail lights
- Stop lights
- Rear turn signal lights (LED type) (if equipped)
- Rear fog lights (if equipped)
- Back-up lights
- High mounted stoplight
- License plate lights
- Outer foot lights (if equipped)
- Running board lights (if equipped)

■ **LED lights**

The lights other than the rear turn signal lights (bulb type) (if equipped) each consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to your Toyota dealer to have the light replaced.

■ **Condensation build-up on the inside of the lens**

Temporary condensation build-up on the inside of the light lens does not indicate a malfunction. Contact your Toyota dealer for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the light.


■ **When replacing light bulbs**

→P.684

Replacing light bulb

■ **Rear turn signal lights (bulb type) (if equipped)**

- 1 Open the back door and remove the cover.

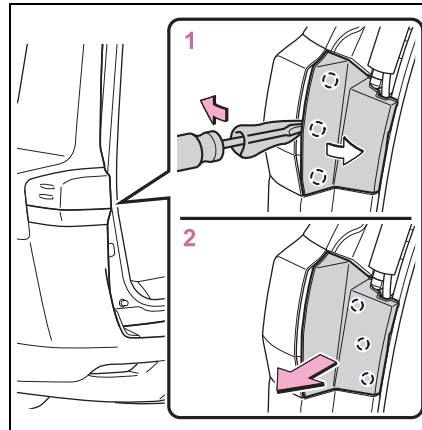

- 1 Remove the 3 claws of the cover using a flathead screwdriver as shown in the illustration.

To prevent damage to the unit, cover the tip of the flathead screwdriver with a rag.


When removing the cover, use a screwdriver of an appropriate size.

- 2 Remove the 3 claws by pulling the cover backward.


- 2 Remove the securing screws and remove the light unit.

Remove the light unit by pulling it directly backward from the rear of the


vehicle.

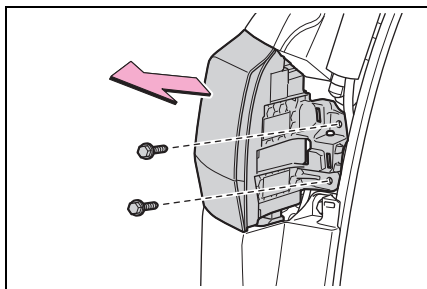

3 Turn the bulb base counter-clockwise.

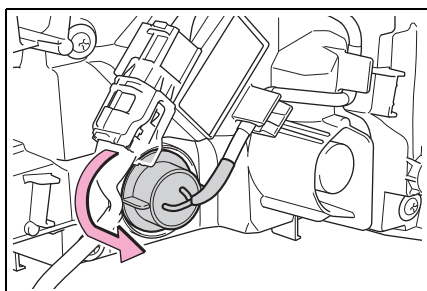


4 Remove the light bulb.

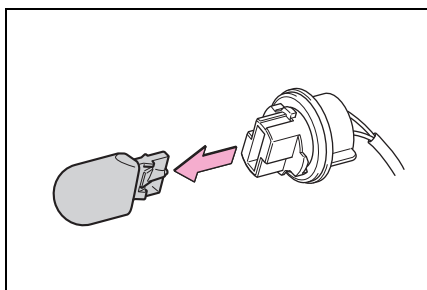

5 Install a new light bulb then install the bulb base to the light

unit by inserting it and turning the bulb base clockwise.

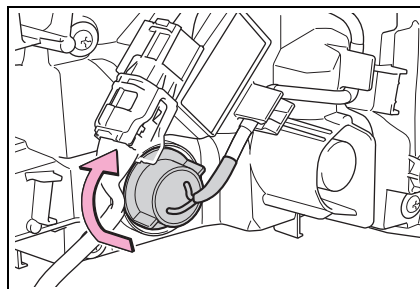


6 Reinstall the light unit.


Align the grooves on the light unit with the claws, and insert the light unit straight so that the pin on the light unit fit into the hole.

Confirm that the light unit is completely secured.


Vehicles with power back door: Confirm that the wiring of the spindle unit **A** is fixed securely by the claw **B**.

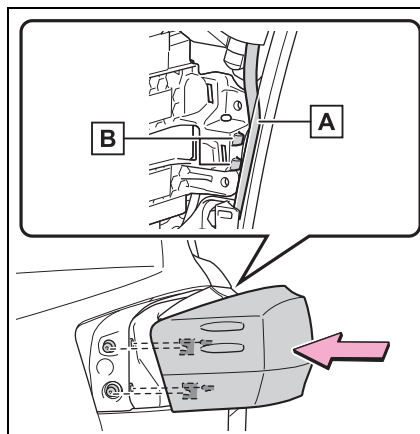

7 Reinstall the screws.

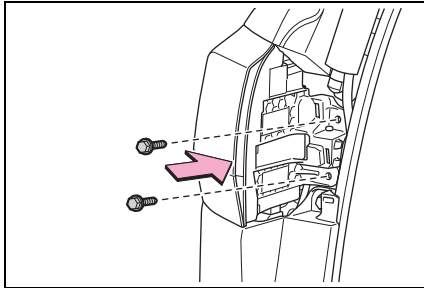

8 Reinstall the cover.

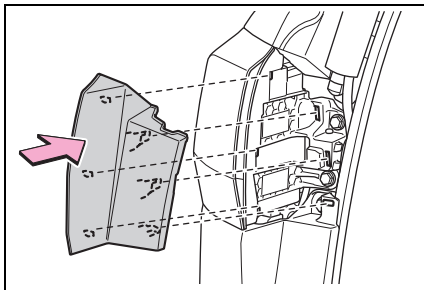

- Do not attempt to repair or disassemble light bulbs, connectors, electric circuits or component parts. Doing so may result in death or serious injury due to electric shock.

■ To prevent damage or fire

- Make sure bulb is fully seated and locked.
- Check the wattage of the bulb before installing to prevent heat damage.

⚠ WARNING

■ Replacing light bulb

- Turn off the light. Do not attempt to replace the bulb immediately after turning off the light. The bulb become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb. Also, if the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulb and any parts used to secure it. Failure to do so may result in heat damage, fire, or water entering the light unit. This may damage the light or cause condensation to build up on the lens.

When trouble arises

8

8-1. Essential information

Emergency flashers **690**

If your vehicle has to be stopped in an emergency **690**

If the vehicle is submerged or water on the road is rising **691**

8-2. Steps to take in an emergency

If your vehicle needs to be towed **693**

If you think something is wrong **696**

Fuel pump shut off system (gasoline engine only) **697**

If a warning light turns on or a warning buzzer sounds... **698**

If a warning message is displayed **709**

If you have a flat tire **714**

If the engine will not start.. **725**

If you lose your keys **727**

If the electronic key or fingerprint authentication system does not operate properly **727**

If the vehicle battery is discharged **729**

If your vehicle overheats... **736**

If you run out of fuel and the engine stalls (diesel engine only)..... **739**

If the vehicle becomes stuck **739**

Emergency flashers


The emergency flashers are used to warn other drivers when the vehicle has to be stopped in the road due to a breakdown, etc.

Operating instructions

Press the switch.

All the turn signal lights will flash.

To turn them off, press the switch once again.

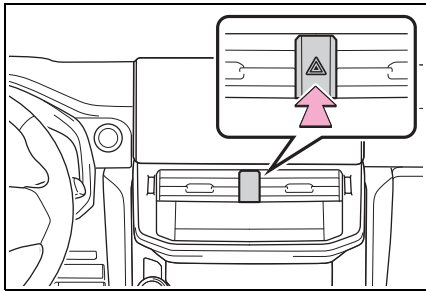

Emergency flashers

- If the emergency flashers are used for a long time while the engine is not running, the battery may discharge.
- If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the emergency flashers will turn on automatically. The emergency flashers will turn off automatically after operating for approximately 20 minutes. To manually turn the emergency flashers off, press the switch twice. (The emergency flashers may not turn on automatically depending on the force of the impact and conditions of the collision.)

If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:


Stopping the vehicle

- 1 Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

- 2 Shift the shift lever to N.
 - ▶ If the shift lever is shifted to N
- 3 After slowing down, stop the vehicle in a safe place by the road.
- 4 Stop the engine.
 - ▶ If the shift lever cannot be shifted to N
- 3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.
- 4 To stop the engine, press and hold the engine switch for 2 consecutive seconds or more, or

press it briefly 3 times or more in succession.

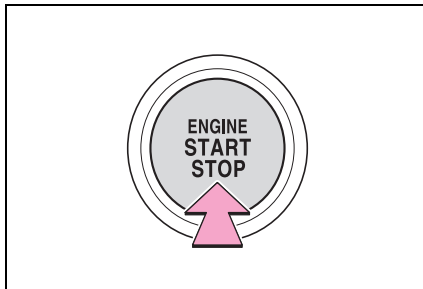

- 5 Stop the vehicle in a safe place by the road.

■ If emergency stopped

The functions of the air conditioning, etc. may be partially limited in order to reduce the power consumption of the battery.

⚠ WARNING

■ If the engine has to be turned off while driving

Turning the engine off while driving will not cause loss of steering or braking control. However, power assist for these systems may be lost making it difficult to steer or brake before stopping the vehicle depending on the remaining charge in the battery or usage conditions. Decelerate as much as possible before turning off the engine.

If the vehicle is submerged or water on the road is rising

This vehicle is not designed to be able to drive on roads that are deeply flooded with water. Do not drive on roads where the roads may be submerged or the water may be rising. It is dangerous to remain in the vehicle, if it anticipated that the vehicle will be flooded or set a drift. Remain calm and follow the following.

- If the door can be opened, open the door and exit the vehicle.
- If the door can not be opened, open the window using the power window switch and ensure an escape route.
- If the window can be opened, exit the vehicle through the window.
- If the door and window cannot be opened due to the rising water, remain calm, wait until the water level inside the vehicle rises to the point that the water pressure inside of the vehicle equals the water pressure outside of the vehicle and then open the door after waiting for the rising water to enter the vehicle, and exit the vehicle. When the outside water level exceeds half the height of the door, the door cannot be opened from the inside due to

water pressure.

■ **Water level exceeds the floor**

When the water level exceeds the floor and time has passed, the electrical equipment will get damaged, the power windows will not operate, the engine stop, and the vehicle may not be able to get moving.

■ **Using an emergency escape hammer^{*1}**


Laminated glass^{*2} is used in the windshield and the windows on this vehicle. Laminated glass cannot be shattered with an emergency hammer^{*1}.

^{*1}: Contact your Toyota dealer or aftermarket accessory manufacturer for further information about an emergency hammer.

^{*2}: If equipped

■ **How to distinguish laminated glass**

When looking from the cross-sectional view point, laminated glass is two sheets of glass pasted together.

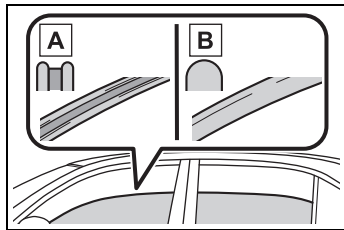

A Laminated glass

B Tempered glass

! WARNING

■ **Caution while driving**

Do not drive on roads where the roads may be submerged or the water may be rising. Otherwise the vehicle may be damaged and cannot move, as well as become flooded and set a drift, which may lead to death.

If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Toyota dealer or commercial towing service, using a wheel-lift type truck or flatbed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.


Situations when it is necessary to contact dealers before towing

The following may indicate a problem with your transmission. Contact your Toyota dealer or commercial towing service before towing.

- The engine is running but the vehicle does not move.
- The vehicle makes an abnormal sound.


Towing with a wheel-lift type truck

- From the front

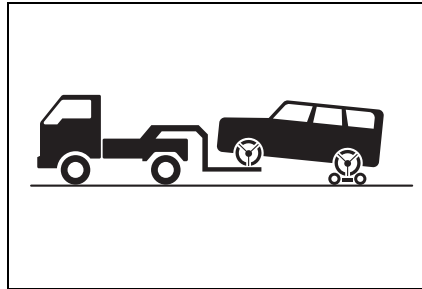

Use a towing dolly under the rear wheels.

- From the rear

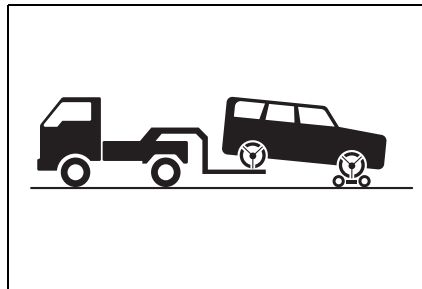

Use a towing dolly under the front wheels.


⚠ WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

WARNING

When towing the vehicle

Be sure to transport the vehicle with all four wheels raised off the ground. If the vehicle is towed with the tires contacting the ground, the drivetrain or related parts may be damaged, the vehicle may fly off the truck.

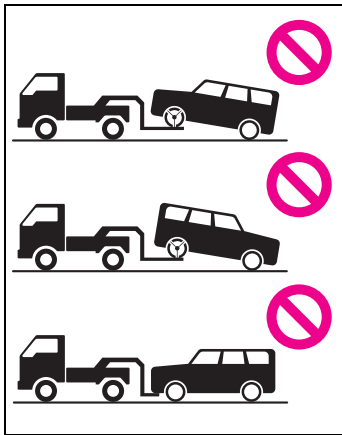


NOTICE

To prevent damage to the vehicle when towing using a wheel-lift type truck

- Do not tow the vehicle from the rear when the engine switch is off. The steering lock mechanism is not strong enough to hold the front wheels straight.
- When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.


Towing with a sling-type truck

Do not tow with a sling-type truck to prevent body damage.

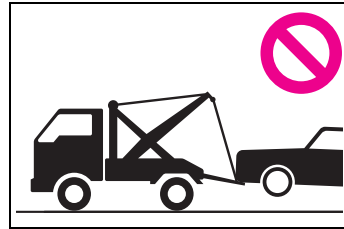


Using a flatbed truck

If your vehicle is transported by a flatbed truck, it should be tied down at the locations shown in the illustration.

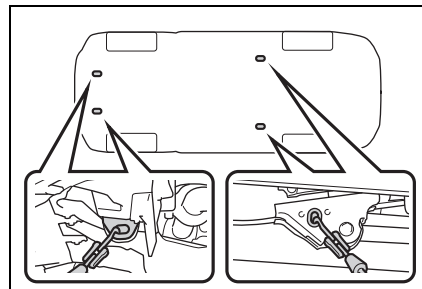

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

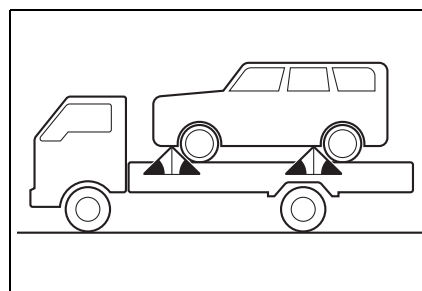

If you cannot tie down the vehicle using the method above, use tire

strapping belts.



NOTICE

■ Using a flatbed truck

Do not overly tighten the tie downs or the vehicle may be damaged.

Emergency towing


If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing hooks. This should only be attempted on hard surfaced roads for at most 80 km (50 miles) at under 30 km/h (18 mph).

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

Emergency towing procedure

- 1 Securely attach cables or chains to the towing hook.

Take care not to damage the vehicle body.

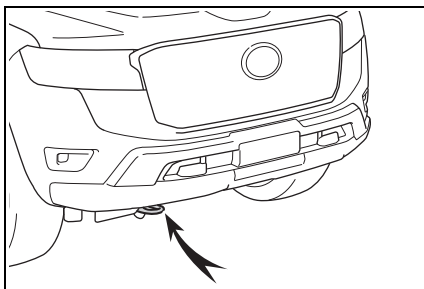

- 2 Enter the vehicle being towed and start the engine.

If the engine does not start, turn the engine switch to ON.

- 3 Put the four-wheel drive control switch in "H4". (The front, center and rear differentials are unlocked.)

- 4 Shift the shift lever to N and release the parking brake.

Turn automatic mode off. (→P.270)

When the shift lever cannot be shifted:
→P.262, 266

■ While towing

If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.



WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

■ While towing

- When towing using cables or chains, avoid sudden starts, etc. which place excessive stress on the towing hooks, cables or chains. The towing hooks, cables or chains may become damaged, broken debris may hit people, and cause serious damage.
- Do not turn the engine switch off. There is a possibility that the steering wheel is locked and cannot be operated.



NOTICE

■ To prevent damage to the vehicle when towing with a sling-type truck

Do not tow with a sling-type truck, either from the front or rear.

■ To prevent damage to the vehicle during emergency towing

Do not secure cables or chains to the suspension components.

■ When towing a vehicle equipped with a Stop & Start system

If it is necessary to tow the vehicle with all 4 wheels on the ground, perform the following procedure before towing the vehicle, in order to protect the system.

Turn the engine switch off and then start the engine or turn the engine switch to ON.

If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Toyota dealer as soon as possible.

Visible symptoms

- Fluid leaks under the vehicle
(Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge needle continually points higher than normal.
- Engine oil pressure gauge continually points lower than normal.
- Voltmeter continually points higher or lower than normal.

Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the engine

Operational symptoms

- Engine missing, stumbling or

running roughly

- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

Fuel pump shut off system (gasoline engine only)

To minimize the risk of fuel leakage when the engine stalls or when an airbag inflates upon collision, the fuel pump shut off system stops the supply of fuel to the engine.

Restarting the engine

Follow the procedure below to restart the engine after the system is activated.

- 1 Turn the engine switch to ACC or OFF.
- 2 Restart the engine.



NOTICE

■ Before starting the engine


Inspect the ground under the vehicle. If you find that fuel has leaked onto the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

If a warning light turns on or a warning buzzer sounds


Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by your Toyota dealer.

Actions to the warning lights or warning buzzers


■ Brake system warning light (warning buzzer)

Warning light	Details/Actions
 (Red)	Indicates that: <ul style="list-style-type: none"> ● The brake fluid level is low; or ● The brake system is malfunctioning → Immediately stop the vehicle in a safe place and contact your Toyota dealer. Continuing to drive the vehicle may be dangerous.

■ Brake system warning light (warning buzzer)


Warning light	Details/Actions
 (Yellow)	Indicates a malfunction in: <ul style="list-style-type: none"> ● The parking brake system; or ● The electronically controlled brake system → Have the vehicle inspected by your Toyota dealer immediately.

■ Charging system warning light* (warning buzzer)

Warning light	Details/Actions
	Indicates a malfunction in the vehicle's charging system → Immediately stop the vehicle in a safe place and contact your Toyota dealer.


*: This light illuminates on the multi-information display with a message.

■ Low engine oil pressure warning light* (warning buzzer)

Warning light	Details/Actions
	Indicates that the engine oil pressure is too low → Immediately stop the vehicle in a safe place and contact your Toyota dealer.


*: This light illuminates on the multi-information display with a message.

■ High coolant temperature warning light* (warning buzzer)


Warning light	Details/Actions
	Indicates that the engine is overheating → Immediately stop the vehicle in a safe place. Handling method (→P.736)

*: This light illuminates on the multi-information display with a message.


■ Malfunction indicator lamp

Warning light	Details/Actions
	Indicates a malfunction in: <ul style="list-style-type: none"> ● The electronic engine control system; ● The electronic throttle control system; ● The emission control system (if equipped); ● The electronic automatic transmission control system; or ● The DPF system (if equipped) → Have the vehicle inspected by your Toyota dealer immediately.


■ SRS warning light

Warning light	Details/Actions
	Indicates a malfunction in: <ul style="list-style-type: none"> ● The SRS airbag system; or ● The seat belt pretensioner system → Have the vehicle inspected by your Toyota dealer immediately.


■ **ABS warning light**

Warning light	Details/Actions
	<p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> ● The Multi-terrain ABS; or ● The brake assist system <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p>


■ **Power steering system warning light**

Warning light	Details/Actions
 <p>(If equipped)</p>	<p>Indicates a malfunction in the power steering system</p> <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p>


■ **PCS warning light (warning buzzer)**

Warning light	Details/Actions
 <p>(Flashes or illuminates) (If equipped)</p>	<p>When a buzzer sounds simultaneously: Indicates a malfunction has occurred in the PCS (Pre-Collision System). → Have the vehicle inspected by your Toyota dealer immediately.</p> <p>When a buzzer does not sound: The PCS (Pre-Collision System) has become temporarily unavailable, corrective action may be necessary. → Follow the instructions displayed on the multi-information display. (→P.300, 712)</p> <p>If the PCS (Pre-Collision System) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate. → P.314</p>


■ LTA indicator/LDA indicator (warning buzzer)

Warning light	Details/Actions
 <p>(Orange) (If equipped)</p>	<p>Indicates a malfunction in the LTA (Lane Tracing Assist) or LDA (Lane Departure Alert with Yaw Assist Function)</p> <p>→ Follow the instructions displayed on the multi-information display. (→P.323, 330)</p>


■ BSM OFF indicator (warning buzzer)

Warning light	Details/Actions
 <p>(If equipped)</p>	<p>Indicates a malfunction in the BSM (Blind Spot Monitor) function</p> <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p> <p>Indicates that the rear bumper around the radar sensor is covered with dirt, etc. (→P.368)</p> <p>→ Follow the instructions displayed on the multi-information display. (→P.368, 709)</p>


■ RCTA OFF indicator (warning buzzer)

Warning light	Details/Actions
 <p>(If equipped)</p>	<p>Indicates a malfunction in the RCTA (Rear Cross Traffic Alert) function</p> <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p> <p>Indicates that the rear bumper around the radar sensor is covered with dirt, etc. (→P.368)</p> <p>→ Follow the instructions displayed on the multi-information display. (→P.380, 709)</p>


■ **RCD OFF indicator (warning buzzer)**

Warning light	Details/Actions
	<p>Indicates a malfunction in the RCD (Rear Camera Detection) function</p> <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p> <p>Indicates that the function temporarily cannot be used due to the camera being dirty, etc.</p> <p>→ Follow the instructions displayed on the multi-information display. (→P.386, 709)</p>


■ **Toyota parking assist-sensor OFF indicator (warning buzzer)**

Warning light	Details/Actions
	<p>Indicates a malfunction in the Toyota parking assist-sensor function</p> <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p> <p>Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc.</p> <p>→ Follow the instructions displayed on the multi-information display. (→P.374, 709)</p>

■ **PKSB OFF indicator (warning buzzer)**


Warning light	Details/Actions
	<p>Indicates a malfunction in the PKSB (Parking Support Brake) system</p> <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p> <p>Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc.</p> <p>→ Follow the instructions displayed on the multi-information display. (→P.392, 709)</p>

■ Inappropriate pedal operation warning light* (warning buzzer)


Warning light	Details/Actions
	<p>When a buzzer sounds: Indicates a malfunction in:</p> <ul style="list-style-type: none"> ● The Brake Override System ● The Drive-Start Control <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p> <ul style="list-style-type: none"> ● Indicates that the shift position was changed and Drive-Start Control was operated while depressing the accelerator pedal. <p>→ Momentarily release the accelerator pedal.</p> <ul style="list-style-type: none"> ● Parking Support Brake function (for static objects) (if equipped) is operating. <p>→ Follow the instructions displayed on the multi-information display.</p> <p>When a buzzer does not sound: Indicates that the accelerator and brake pedals are being depressed simultaneously, and the Brake Override System is operating.</p> <p>→ Release the accelerator pedal and depress the brake pedal.</p>

*: This light illuminates on the multi-information display with a message.


■ Stop & Start cancel indicator

Warning light	Details/Actions
 <p>(Flashes) (If equipped)</p>	<p>Indicates a malfunction in the Stop & Start system</p> <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p>


■ Slip indicator light

Warning light	Details/Actions
	<p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> ● The VSC system; ● The Trailer Sway Control system (If equipped); ● The Active TRC system; ● The hill-start assist control system; ● The downhill assist control system (if equipped) ● The Multi-terrain Select (If equipped); or ● The Crawl Control (If equipped) <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p>


■ Low speed four-wheel drive indicator light

Warning light	Details/Actions
 <p>(Flashes)</p>	<p>Indicates a malfunction in the four-wheel drive system when the light flashes rapidly.</p> <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p>


■ Center differential lock indicator

Warning light	Details/Actions
 <p>(Flashes)</p>	<p>Indicates a malfunction in the center differential lock system when the light flashes rapidly.</p> <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p>


■ Front differential lock indicator

Warning light	Details/Actions
 <p>(Flashes) (If equipped)</p>	<p>Indicates a malfunction in the front differential lock system when the light flashes rapidly.</p> <p>→ Have the vehicle inspected by your Toyota dealer immediately.</p>


■ Rear differential lock indicator

Warning light	Details/Actions
 (Flashes) (If equipped)	Indicates a malfunction in the rear differential lock system when the light flashes rapidly. → Have the vehicle inspected by your Toyota dealer immediately.


■ Parking brake indicator

Warning light	Details/Actions
 (Flashes)	It is possible that the parking brake is not fully engaged or released → Operate the parking brake switch once again. This light comes on when the parking brake is not released. If the light turns off after the parking brake is fully released, the system is operating normally.


■ Brake hold operated indicator (warning buzzer)

Warning light	Details/Actions
 (Flashes)	Indicates a malfunction in the brake hold system → Have the vehicle inspected by your Toyota dealer immediately.


■ Low fuel level warning light

Warning light	Details/Actions
	▶ Vehicles without sub fuel tank system Indicates that remaining fuel is approximately 12.0 L (3.2 gal., 2.6 Imp.gal.) or less ▶ Vehicles with sub fuel tank system Indicates that remaining fuel is approximately 16.5 L (4.4 gal., 3.6 Imp.gal.) or less → Refuel the vehicle.


■ Low AdBlue™ level warning light (warning buzzer)

Warning light	Details/Actions
 (If equipped)	Insufficient level of AdBlue™ → Refill AdBlue™.

■ Tire pressure warning light

Warning light	Details/Actions
 <p>(If equipped)</p>	<p>When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system → Have the system checked by your Toyota dealer.</p> <p>When the light comes on: Low tire inflation pressure such as</p> <ul style="list-style-type: none"> ● Natural causes ● Flat tire <p>→ Immediately stop the vehicle in a safe place. Handling method (→P.707)</p>

■ Driver's and front passenger's seat belt reminder light (warning buzzer)^{*1, 2}

Warning light	Details/Actions
	<p>Warns the driver and/or front passenger to fasten their seat belts</p> <p>→ Fasten the seat belt.</p> <p>If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) turn off.</p>

^{*1}: Driver's seat belt warning buzzer (for GCC countries^{*3}, Iraq, Jordan, Lebanon, and Yemen):

The driver's seat belt warning buzzer sounds to alert the driver that his or her seat belt is not fastened. Once the engine switch is turned to ON, the buzzer sounds. If the seat belt is still unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

Front passenger's seat belt warning buzzer (for GCC countries^{*3}, Iraq, Jordan, Lebanon, and Yemen):

The front passenger's seat belt warning buzzer sounds to alert the front passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.


^{*2}: Driver's and passenger's seat belt warning buzzer (except for GCC countries^{*3}, Iraq, Jordan, Lebanon, and Yemen):

The driver's and front passenger's seat belt warning buzzer sounds to alert the driver and front passenger that his or her seat belt is not fastened. If the seat belt

is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

*3: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar and Kuwait

■ **Rear passengers' seat belt reminder light (warning buzzer)***

Warning light	Details/Actions
 <p>(If equipped)</p>	<p>Warns the rear passengers to fasten their seat belts → Fasten the seat belt.</p>

*: Rear passengers' seat belt warning buzzer:

The rear passengers' seat belt warning buzzer sounds to alert the rear passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time, after the seat belt is fastened and unfastened and the vehicle reaches a certain speed.

■ **Warning buzzer**

In some cases, the buzzer may not be heard because of noisy place or an audio sound.

■ **Front passenger detection sensor, seat belt reminder and warning buzzer**

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ **Speed warning buzzer (for India)**

The buzzer sounds when your vehicle speed reaches or exceeds 80 km/h (50 mph). Then, the buzzer sounds when your vehicle speed reaches or exceeds 120 km/h (75 mph) in a different tone.

■ **If the malfunction indicator lamp comes on while driving**

For some models, the malfunction indicator lamp will come on if the fuel tank becomes completely empty. If the fuel

tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact your Toyota dealer as soon as possible.

■ **Power steering system warning light (if equipped)**

When the battery charge becomes insufficient or the voltage temporarily drops, the power steering system warning light may come on.

■ **When the tire pressure warning light comes on (vehicles with tire pressure warning system)**

Inspect the tires to check if a tire is punctured.

If a tire is punctured: →P.714

If none of the tires are punctured:

Turn the engine switch to OFF then turn it to ON. Check if the tire pressure warning light comes on or blinks.

- ▶ If the tire pressure warning light blinks for approximately 1 minute then stays on

There may be a malfunction in the tire pressure warning system. Have the vehicle inspected by your Toyota dealer

immediately.

► If the tire pressure warning light comes on

- 1 After the temperature of the tires has lowered sufficiently, check the inflation pressure of each tire and adjust them to the specified level.
- 2 If the warning light does not turn off even after several minutes have elapsed, check that the inflation pressure of each tire is at the specified level and perform initialization. (→P.667)

■ **The tire pressure warning light may come on due to natural causes (vehicles with tire pressure warning system)**

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

■ **When a tire is replaced with a spare tire (vehicles with tire pressure warning system)**

The spare tire is also equipped with the tire pressure warning valve and transmitter. The tire pressure warning light will turn on if the tire inflation pressure of the spare tire is low. If a tire goes flat, even though the flat tire is replaced with the spare tire, the tire pressure warning light does not turn off. Replace the spare tire with the repaired tire and adjust the proper tire inflation pressure. The tire pressure warning light will turn off after a few minutes.

■ **Conditions that the tire pressure warning system may not function properly**

→P.665



WARNING

■ **If a warning light comes on or a warning buzzer sounds when a warning message is shown on the multi-information display**

Check and follow the message shown on the multi-information display.

Failure to do so may result in death or serious injury.

■ **If both the ABS and the brake system warning lights remain on**

Stop your vehicle in a safe place immediately and contact your Toyota dealer. The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

■ **When the power steering system warning light comes on (if equipped)**

The assist to the power steering is restricted and handling operations of the steering wheel become extremely heavy.

If the steering wheel becomes heavier than usual when operating, hold firmly and operate using more force than usual.

■ **If the tire pressure warning light comes on (vehicles with tire pressure warning system)**

Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.

⚠ WARNING


- If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest Toyota dealer.
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.
- **If a blowout or sudden air leakage should occur (vehicles with tire pressure warning system)**
The tire pressure warning system may not activate immediately.

⚠ NOTICE

- **To ensure the tire pressure warning system operates properly (vehicles with tire pressure warning system)**
Do not install tires with different specifications or manufacturers, as the tire pressure warning system may not operate properly.

If a warning message is displayed

The multi-information display shows warnings of system malfunctions, incorrectly performed operations, and messages that indicate a need for maintenance. When a message is shown, perform the correction procedure appropriate to the message.

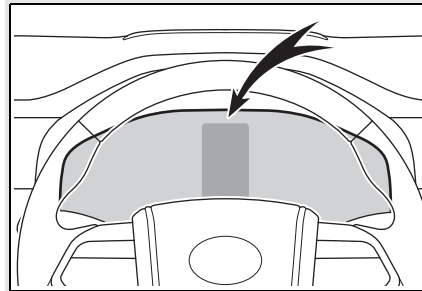

If a warning message is displayed again after the appropriate actions have been performed, contact your Toyota dealer.

Messages and warnings

The warning lights and warning buzzers operate as follows depending on the content of the message. If a message indicates the need for inspection by a dealer, have the vehicle inspected by your Toyota dealer immediately.

Warning light	Warning buzzer*	Warning
—	Sounds	<ul style="list-style-type: none"> • Indicates an important situation, such as when a system related to driving is malfunctioning or that danger may result if the correction procedure is not performed • Indicates a situation, such as when damage to the vehicle or danger may result
Comes on or flashes	Sounds	Indicates an important situation, such as when the systems shown on the multi-information display may be malfunctioning
—	Does not sound	<ul style="list-style-type: none"> • Indicates a condition, such as malfunction of electrical components, their condition, or indicates the need for maintenance • Indicates a situation, such as when an operation has been performed incorrectly, or indicates how to perform an operation correctly

*: A buzzer sounds the first time a message is shown on the multi-information display.

■ Warning messages

The warning messages explained below may differ from the actual messages according to operation conditions and vehicle specifications.

■ Warning buzzer

In some cases, the buzzer may not be heard because of noisy place or an audio sound.

■ If a message that indicates the need for visiting your Toyota dealer is displayed

The system or part shown on the multi-information display is malfunctioning. Have the vehicle inspected by your Toyota dealer immediately.

■ If a message about an operation is shown

- If a message about an operation of the accelerator pedal or brake pedal is shown

A warning message about an operation

of the brake pedal may be shown while the driving assist systems such as PCS (Pre-Collision system) (if equipped), the dynamic radar cruise control with full-speed range (if equipped) or the dynamic radar cruise control (if equipped) is operating. If a warning message is shown, be sure to decelerate the vehicle or follow an instruction shown on the multi-information display.

A warning message is shown when Drive-Start Control or Parking Support Brake (if equipped) (→P.237, 388) operates. Follow the instructions on the multi-information display.

- If a message about an operation of the engine switch is shown

An instruction for operation of the engine switch is shown when the incorrect procedure for starting the engine is performed or the engine switch is operated incorrectly. Follow the instructions

shown on the multi-information display to operate the engine switch again.

- If a message about a shift lever operation is shown

To prevent the shift lever from being operated incorrectly or the vehicle from moving unexpectedly, a message that requires shifting the shift lever may be shown on the multi-information display. In that case, follow the instruction of the message and shift the shift lever.

- If a message or image about an open/close state of a part or replenishment of a consumable is shown

Confirm the part indicated by the multi-information display or a warning light, and then perform the coping method such as closing the open door or replenishing a consumable.

■ **If a message that indicates the need for referring to Owner's Manual is displayed**

- If the following messages are shown, follow the instructions, accordingly.
 - "Engine Coolant Temp High Stop in a Safe Place" (→P.736)
 - "Blind Spot Monitor Unavailable" (→P.368)
 - "Rear Cross Traffic Alert Unavailable" (→P.380)
 - "Rear Camera Detection Unavailable" (→P.386)
 - "Water in Fuel Filter" (→P.655)
 - "AdBlue level Low Fill up AdBlue in 2400km" (→P.658)
 - "AdBlue Level Low No Restart in 1100 km Fill up AdBlue" (→P.658)
 - "AdBlue Empty Unable to Restart Engine Fill up AdBlue" (→P.658)
 - "DPF full" (→P.492)
- If the following messages are shown, there may be a malfunction. Immediately stop the vehicle in a safe place and contact your Toyota dealer. Continuing to drive the vehicle may be dangerous.
 - "Transmission Oil Temp. High Stop in

a Safe Place and See Owner's Manual"

- "Smart Entry & Start System Malfunction"
- "Brake Hold Unavailable" (→P.273)
- If the following messages are shown, there may be a malfunction. Immediately have the vehicle inspected by your Toyota dealer.
 - "Oil Pressure Low"
 - "Braking Power Low"
- If "12-Volt Battery Charging System Malfunction Stop in a Safe Place" is shown

Indicates a malfunction in the vehicle's charging system. Pull over and stop the vehicle as soon as it is safe to do so. While the message is displayed, the functions of the air conditioning, etc. may be partially limited in order to reduce the power consumption of the battery.

■ **If "Shift into P before exiting vehicle" is shown**

Message is displayed when the driver's door is opened without turning the engine switch to OFF with the shift lever in any position other than P.

Shift the shift lever to P.

■ **If "Auto Power OFF to Conserve Battery" is shown**

Power was turned off due to the automatic power off function.

Next time when starting the engine, increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the battery.

■ **If "Engine Oil Level Low Add or Replace" is displayed**

The engine oil level may be low. Check the level of the engine oil, and add engine oil if necessary. This message may be displayed if the vehicle is stopped on a slope. Move the vehicle to a level surface and check if the message disappears.

■ **If “Oil Maintenance Required Soon” is displayed (except for 1GR-FE engine)**

Indicates that the engine oil should be scheduled to be changed.

Check the engine oil and change it if necessary. After changing the engine oil, make sure to reset the message. (→P.647)

■ **If “Oil Maintenance Required Visit Your Dealer” is displayed (except for 1GR-FE engine)**

Indicates that the engine oil should be changed.

Check and change the engine oil, and oil filter by your Toyota dealer. After changing the engine oil, make sure to reset the message. (→P.647)

■ **If “Replace fuel filter” is shown**

The fuel filter needs to be replaced.

For Indonesia: If the engine is operated with biodiesel mixed fuel with more than 5% FAME (B5), fuel filter replacement intervals tend to become shorter.

■ **If “DPF full Manual regeneration required See owner’s manual” is displayed**

The deposit collected in the filter needs to be regenerated. (→P.492)

■ **If “DPF Regeneration in Progress” is displayed**

Regeneration is being automatically carried out by the DPF system. (→P.492)

■ **“Accelerator and Brake Pedals Pressed Simultaneously” is displayed**

The accelerator and brake pedal are being depressed simultaneously. (→P.232) Release the accelerator pedal and depress the brake pedal.

■ **If a message that indicates the malfunction of front camera is displayed**

The following systems may be suspended until the problem shown in the message is resolved. (→P.300, 698)

● PCS (Pre-Collision System)*

● LTA (Lane Tracing Assist)*

● LDA (Lane Departure Alert with Yaw Assist Function)*

● AHS (Adaptive High-beam System)*

● AHB (Automatic High Beam)*

● RSA (Road Sign Assist)*

● Dynamic radar cruise control with full-speed range*

● Dynamic radar cruise control*

*: If equipped

■ **If a message that indicates the malfunction of radar sensor is displayed**

The following systems may be suspended until the problem shown in the message is resolved. (→P.300, 698)

● PCS (Pre-Collision System)*

● LTA (Lane Tracing Assist)*

● LDA (Lane Departure Alert with Yaw Assist Function)*

● Dynamic radar cruise control with full-speed range*

● Dynamic radar cruise control*

*: If equipped

■ **If “Radar Cruise Control Unavailable See Owner’s Manual” is shown**

The dynamic radar cruise control with full-speed range (if equipped) or dynamic radar cruise control (if equipped) system is suspended temporarily or until the problem shown in the message is resolved. (causes and coping methods: →P.300)

■ **If “Radar Cruise Control Unavailable” is shown**

The dynamic radar cruise control with full-speed range (if equipped) or dynamic radar cruise control (if equipped) system cannot be used tem-

porarily. Use the system when it becomes available again.

■ **If a following message is shown, take appropriate action and confirm that the message has disappeared.**

- “CRAWL Unavailable See Owner’s Manual” (→P.483)
- “Turn Assist Function Unavailable Check System Operation Conditions” (→P.485)
- “Turn Assist Function Unavailable Activate CRAWL” (→P.482)

■ **If “Speed Limit Exceeded” is displayed (on some models)**

The vehicle speed has reached or exceeded 120 km/h (75 mph). At this time, a buzzer also sounds. The buzzer will stop sounding after 6 seconds or if you decelerate to below 120 km/h (75 mph). Reduce your vehicle speed.



WARNING

■ **If a warning light comes on or a warning buzzer sounds when a warning message is shown on the multi-information display**

Check and follow the message displayed on the multi-information display. Failure to do so may result in death or serious injury.



NOTICE

■ **While the engine oil level warning is displayed**

Continued engine operation with low engine oil will damage the engine.

■ **If “Water in Fuel Filter See Owner’s Manual” is shown**

Never drive the vehicle if the warning message is displayed. Continued driving with water accumulated in the fuel filter will damage the fuel injection pump.

If you have a flat tire

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.
For details about tires: →P.662

WARNING

■ If you have a flat tire

Do not continue driving with a flat tire.


Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Before jacking up the vehicle


- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Turn off the intrusion sensor and tilt sensor (if equipped) (→P.112)
- Stop the engine.
- Turn on the emergency flashers. (→P.690)

Location of the spare tire, jack and tools


▶ 5-passenger models

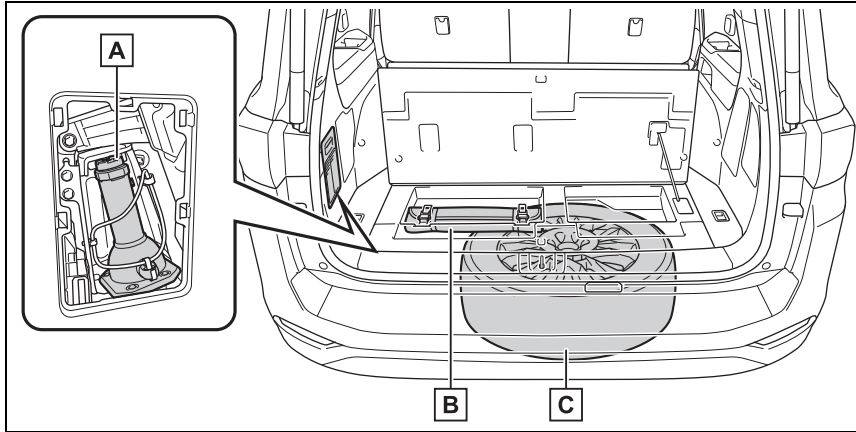**A** Jack**B** Tool bag**C** Spare tire

▶ 7-passenger models

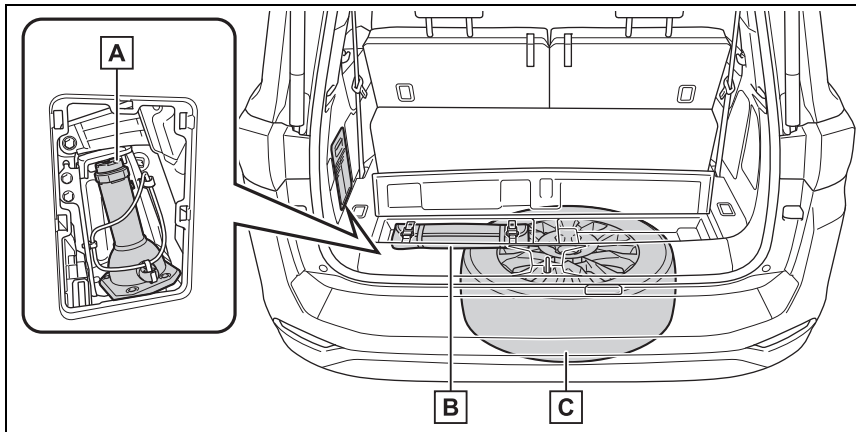**A** Jack**B** Tool bag**C** Spare tire

Tools

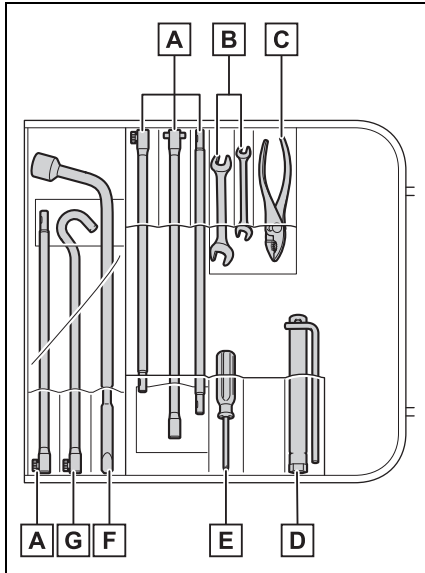

- A** Jack handle extension bar
- B** Spanner
- C** Plier
- D** Spark plug wrench (if equipped)
- E** Screwdriver
- F** Wheel nut wrench
- G** Jack handle bar


⚠ WARNING

■ Using the tire jack

Observe the following precautions. Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.

- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Put the jack properly in its jack point.
- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start the engine or drive the vehicle while the vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Do not continue jacking up once the yellow caution line **A** has appeared.

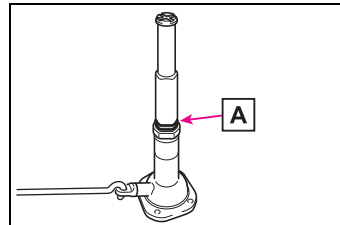

- Use a jack stand if it is necessary to get under the vehicle.


Take particular care when lowering the vehicle to ensure that no one working on or near the vehicle will be injured.

■ Using the jack handle


Tighten all the jack handle bolts securely using a Phillips-head screwdriver, to prevent the extension parts from coming apart unexpectedly.

Taking out the jack


- 1 Remove the cover.

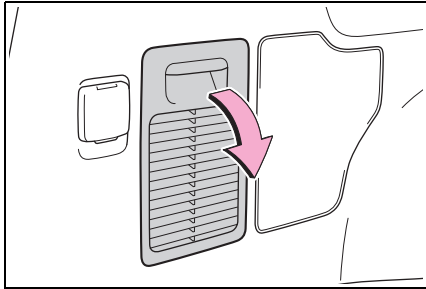

- 2 Unhook the rubber strap.

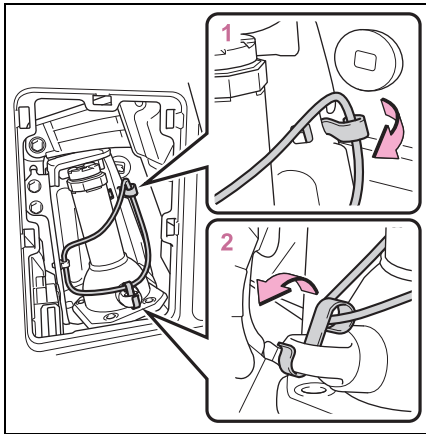

- 3 Take out the jack.

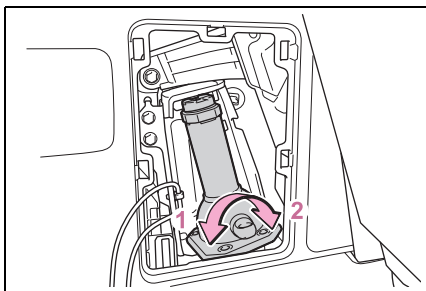


- 1 Loosen
- 2 Tighten

After using the jack, install the jack in


the exact reverse order from which they were removed. Also, the jack should be properly secured using a rubber strap.

Taking out the tool bag


- 1 Lift the deck board.
- ▶ 5-passenger models

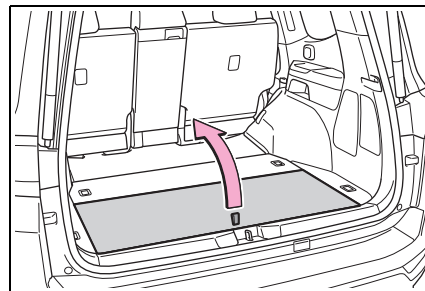

- ▶ 7-passenger models

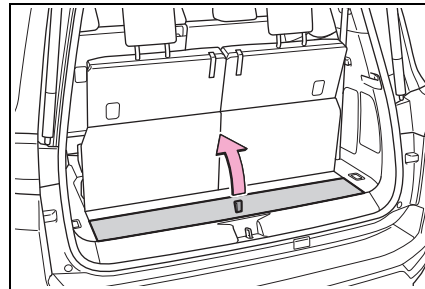


- 2 Take out the tool box.
- ▶ 5-passenger models

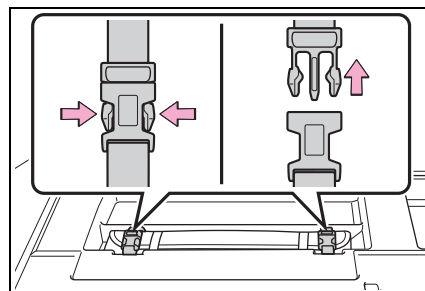

718 8-2. Steps to take in an emergency


► 7-passenger models

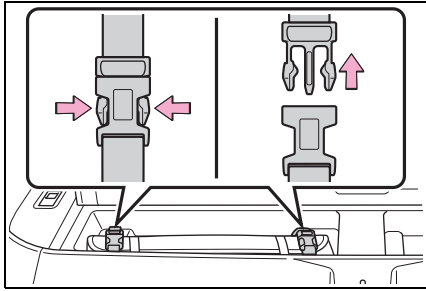


Taking out the spare tire

1 Assembling the jack handle.


Remove the jack handle extension bar and wheel nut wrench from the tool bag and assemble by following these steps.

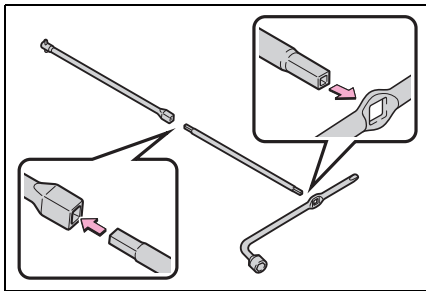

2 Remove the cover.

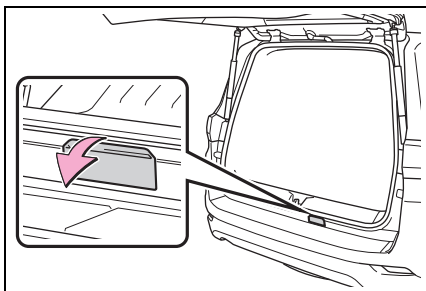

3 Insert the jack handle into the lowering screw.

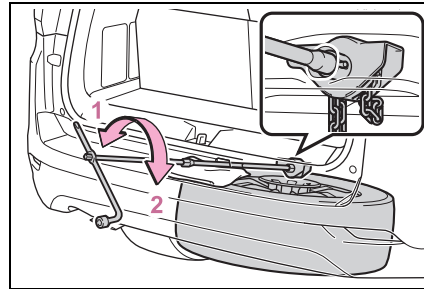


1 Lower


2 Raise

Place a rag under the jack handle to protect the rear bumper.


4 Lower the spare tire completely to the ground.

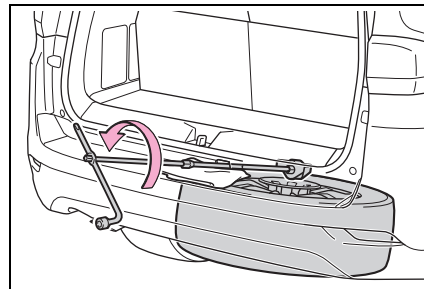


5 Pull out the spare tire and remove the holding bracket.

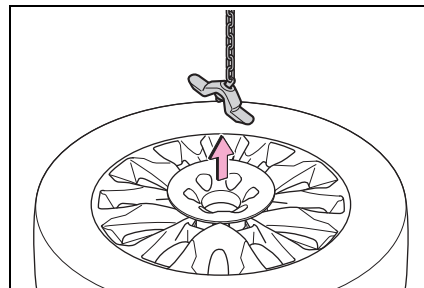

6 Vehicles with aluminum wheels:
Remove the spare wheel cover.

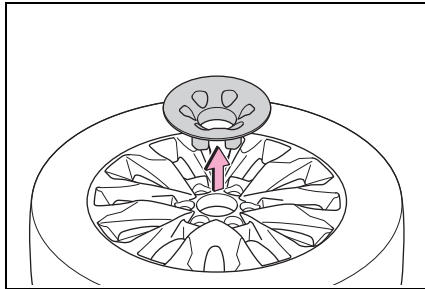


the beveled end of the wheel ornament remover as shown.

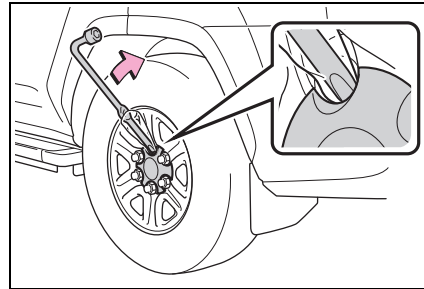


Replacing a flat tire

1 Chock the tires.

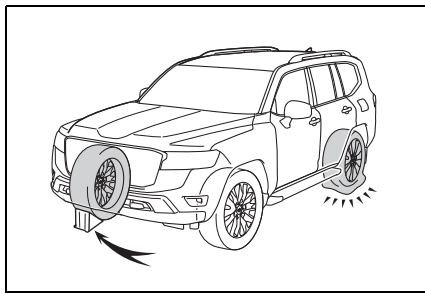


3 Slightly loosen the wheel nuts (one turn).

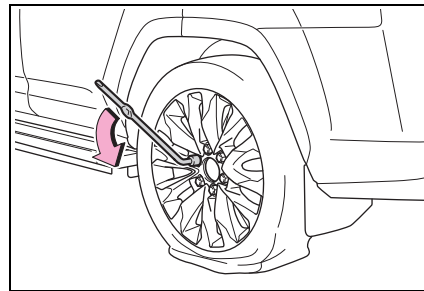

4 Assembling the jack handle.


Remove the jack handle bar, jack handle extension bar and wheel nut wrench from the tool bag and assemble by following these steps.

Flat tire	Wheel chock positions
Front left-hand side	Behind the rear right-hand side tire
Front right-hand side	Behind the rear left-hand side tire
Rear left-hand side	In front of the front right-hand side tire
Rear right-hand side	In front of the front left-hand side tire

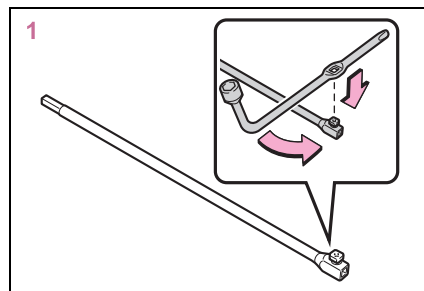

1 Loosen the bolt using a wheel

nut wrench.

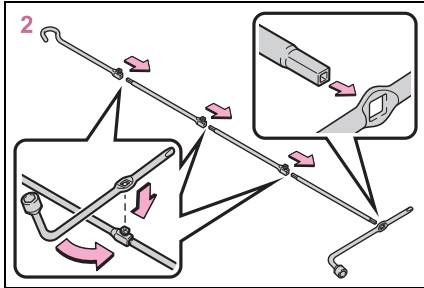


- 2** Assemble the jack handle bar, jack handle extension bar and wheel nut wrench and tighten the bolts.


Check that the bolts are firmly tightened.

- 5** Position the jack at the jack points as shown.


► Front

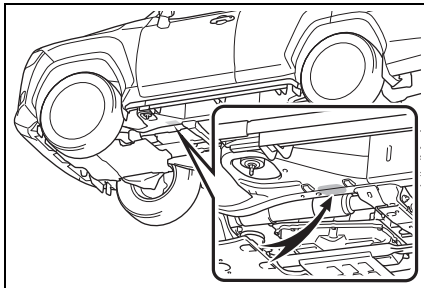

► Rear

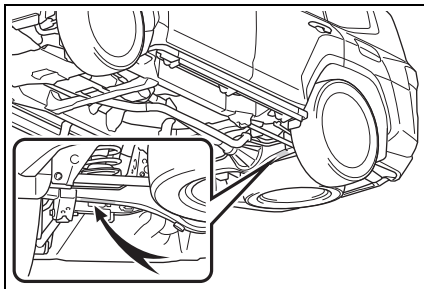


- 6** Raise the vehicle until the tire is slightly raised off the ground.

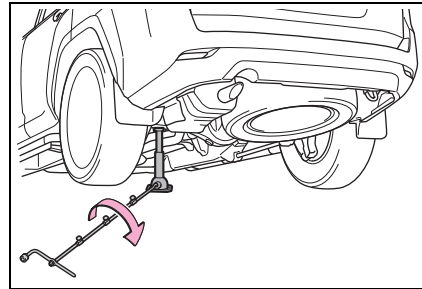

- 7** Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

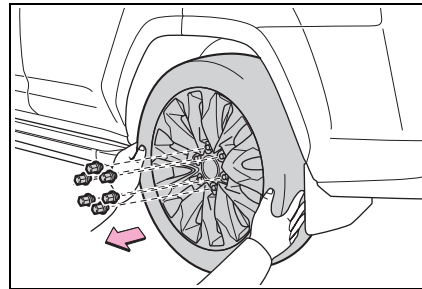

⚠ WARNING

■ Replacing a flat tire

- Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.

After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.

- Observe the following precautions. Failure to do so may result in serious injury:

⚠ WARNING

- Lower the spare tire completely to the ground before removing it from under the vehicle.
- Do not try to remove the wheel ornament by hand. Take due care in handling the ornament to avoid unexpected personal injury.
- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
- Have the wheel nuts tightened with a torque wrench to 209 N•m (21.3 kgf•m, 154 ft•lbf) (steel wheel), or 131 N•m (13.4 kgf•m, 97 ft•lbf) (aluminum wheel), as soon as possible after changing wheels.
- When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
- If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by your Toyota dealer.
- Do not attach a heavily damaged wheel ornament, as it may fly off the wheel while the vehicle is moving.
- When installing the wheel nuts, be sure to install them with the tapered ends facing inward.


■ Replacing a flat tire for vehicles with power back door

In cases such as when replacing tires, make sure to cancel the power back door system. (→P.189) Failure to do so may cause the back door to operate unintentionally if the power back door switch is accidentally touched, resulting in hands and fingers being caught and injured.

Installing the spare tire


- 1 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

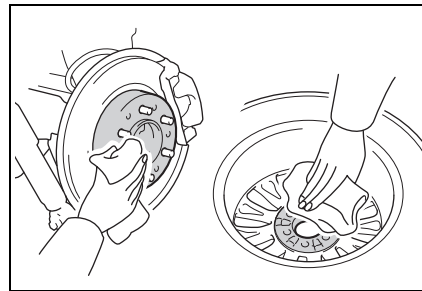


- 2 Install the spare tire and loosely tighten each wheel nut by hand by approximately the same amount.

When replacing a steel wheel with a steel wheel, tighten the nuts until the tapered portion **A** comes into loose contact with the disc wheel seat **B**.

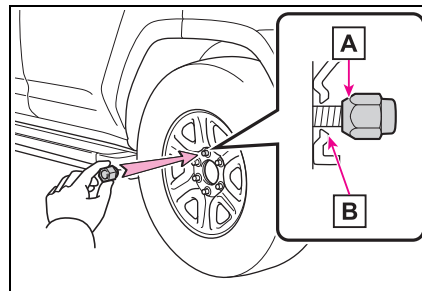


When replacing an aluminum wheel with an aluminum wheel, turn the wheel nuts until the washers **A** come into

contact with the disc wheel **B** .

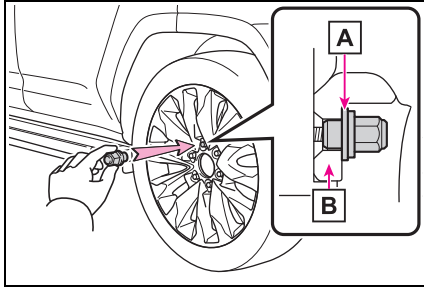


3 Lower the vehicle.

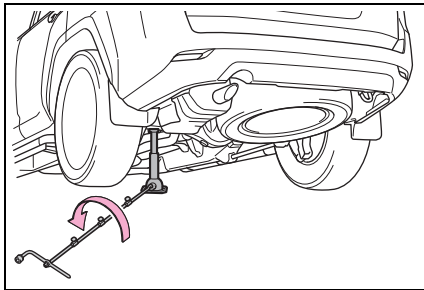

4 Firmly tighten each wheel nut two or three times in the order shown in the illustration.


Tightening torque:
 Steel wheels
 209 N•m (21.3 kgf•m, 154 ft•lbf)
 Aluminum wheels
 131 N•m (13.4 kgf•m, 97 ft•lbf)

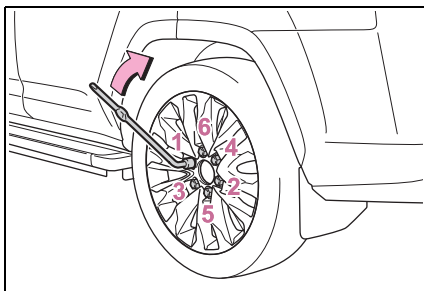

5 Reinstall the wheel ornament.


► Vehicles with steel wheels

Reinstall the wheel ornament.

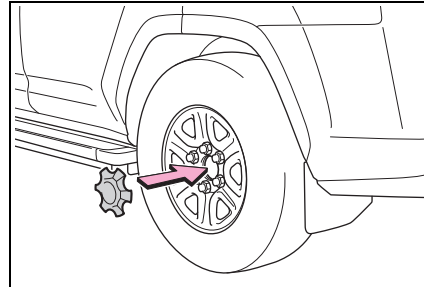


► Vehicles with aluminum wheels

Remove the center wheel ornament from the flat tire by pushing from the reverse side, and reinstall it.

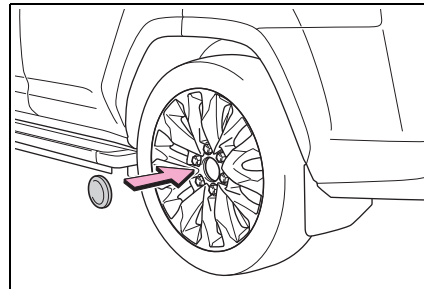


Stowing the flat/spare tire, jack and tools

- 1** Lay down the tire with the valve stem facing up
- 2** Aluminum wheels: Install the spare wheel cover.

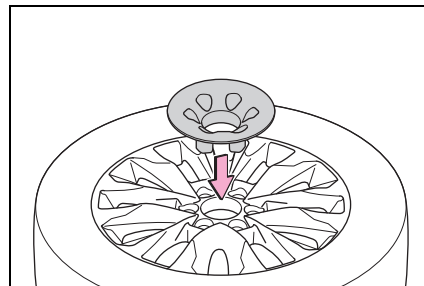

- 3** Install the holding bracket **A**.
Turn the jack handle extension clockwise to take up slack in the chain.

Then, check to ensure the holding bracket is centered in the wheel hub.

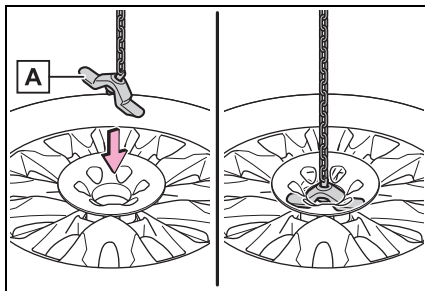


- 4** Raise the tire.


While raising, secure the tire, taking care that the tire goes straight up without catching on any surrounding part, to prevent it from flying forward during a collision or sudden braking.

Tightening torque:

47 N•m (4.8 kgf•m, 34.7 ft•lbf)

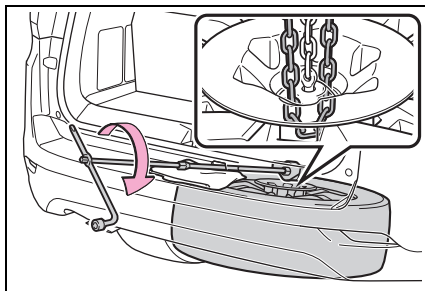

- 5** Confirm that the tire is not loose after tightening:

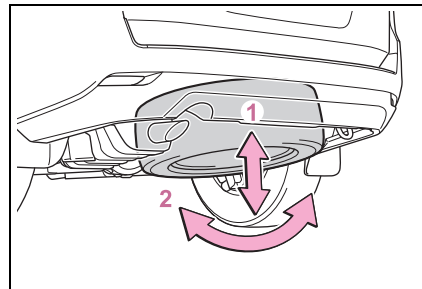


- 1** Push and pull the tire
2 Try rotating

Visually check to ensure the tire is not hung on surrounding parts.

If looseness or misassembly exists, repeat step **4** and step **5**.

- 6** Repeat step **5**, any time the tire is lowered or disturbed.
7 Install the cover as shown in the illustration.

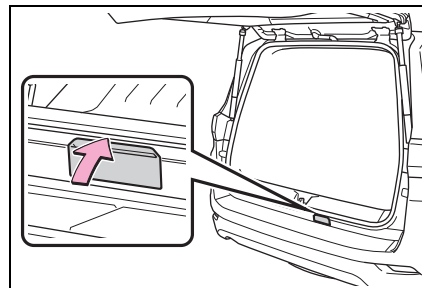

- 8** Stow the tools and jack securely.

■ **After completing the tire change (vehicles with the tire pressure warning system)**

The tire pressure warning system must be reset. (→P.663)

724 8-2. Steps to take in an emergency

■ Certification for the jack

Declaration of Conformity

Manufacturer: OKAYA&CO.,LTD. / TAKEUCHI INDUSTRIAL CO.,LTD.

EU Representative:

The EU Directives covered by this Declaration

1999/5/EC R & TTE Directive of the European Parliament and of the Council
2006/95/EC Low Voltage Directive

The product covered by the declaration

Model 1.8 t

The basis on which conformity is being declared

The product identified above complies with the requirements of Low Voltage Directive and R&TTE Directive above by meeting following standards.

ISO9001/JISD8103

The technical documentation required to demonstrate that the product meets the requirements of LVD and R&TTE has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

A sample of the product has been tested by the manufacturer.


Technical File No: E-HA0296 / E-HA0297

The CE mark was first applied in 2010

Done at *January 26, 2010*

OKAYA & CO., LTD.

Fumihiko Yoshida

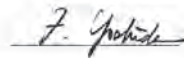

TAKEUCHI INDUSTRIAL CO., LTD.

Masuo Takeuchi



**WARNING****■ Stowing the flat tire**

Failure to follow the proper steps listed under stowing the tire may result in damage to the spare tire carrier and loss of the tire, which could result in death or serious injury.

■ After using the tools and jack

Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

**NOTICE****■ When stowing the flat tire**

Ensure that there is no object caught between the tire and the vehicle underbody.

■ When replacing the tires (vehicles with the tire pressure warning system)

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Toyota dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

■ To avoid damage to the tire pressure warning valves and transmitters (vehicles with the tire pressure warning system)

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Toyota dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P.666)

If the engine will not start

If the engine will not start even though correct starting procedures are being followed (→P.256), consider each of the following points:

The engine will not start even though the starter motor operates normally

One of the following may be the cause of the problem:

- There may not be sufficient fuel in the vehicle's tank.
Gasoline engine:
Refuel the vehicle.
Diesel engine: →P.739
- The engine may be flooded.
(gasoline engine)
Try to restart the engine again following correct starting procedures. (→P.256)
- There may be a malfunction in the engine immobilizer system. (→P.109)

The starter motor turns over slowly, the interior lights and headlights are dim, or the horn does not sound or sounds at a low volume

One of the following may be the cause of the problem:

- The battery may be discharged. (→P.729)
- The battery terminal connections may be loose or corroded.

The starter motor does not turn over

- Vehicles with fingerprint authentication system: When the fingerprint authentication system is on, fingerprint authentication may have failed or the fingerprint sensor may be malfunctioning. (→P.115)
- The engine starting system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, an interim measure is available to start the engine. (→P.726)

The starter motor does not turn over, the interior lights and headlights do not turn on, or the horn does not sound

One of the following may be the cause of the problem:

- The battery may be discharged. (→P.729)
- One or both of the battery terminals may be disconnected.
- There may be a malfunction in the steering lock system.

Contact your Toyota dealer if the

problem cannot be repaired, or if repair procedures are unknown.

Emergency start function

When the engine does not start, the following steps can be used as an interim measure to start the engine if the engine switch is functioning normally:

- 1** Pull the parking brake switch to check that the parking brake is set. (→P.269)

Parking brake indicator will come on.

- 2** Shift the shift lever to P.
- 3** Turn the engine switch to ACC.
- 4** Press and hold the engine switch for about 15 seconds while depressing the brake pedal.

Even if the engine can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

If you lose your keys

New genuine keys can be made by your Toyota dealer using the other key and the key number stamped on your key number plate. Keep the plate in a safe place such as your wallet, not in the vehicle.



NOTICE

■ When an electronic key is lost

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit your Toyota dealer immediately with all remaining electronic keys that were provided with your vehicle.

If the electronic key or fingerprint authentication system* does not operate properly

*: If equipped

If communication between the electronic key and vehicle is interrupted (→P.192) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors can be opened and the engine can be started by following the procedure below.

Vehicles with fingerprint authentication system: When the engine cannot be started without successfully performing fingerprint authentication, or when the fingerprint sensor has malfunctioned, the engine can be started using the following procedure.

■ When the electronic key does not work properly

- Make sure that the smart entry & start system has not been deactivated in the customization setting. If it is off, turn the function on. (Customizable features: →P.765)
- Check if battery-saving mode is set. If it is set, cancel the function. (→P.192)




NOTICE

■ In case of a smart entry & start system malfunction, or other key related problems

Take your vehicle with all the electronic keys provided with your vehicle to your Toyota dealer.


Locking and unlocking the doors

Use the mechanical key (→P.168) in order to perform the following operations.

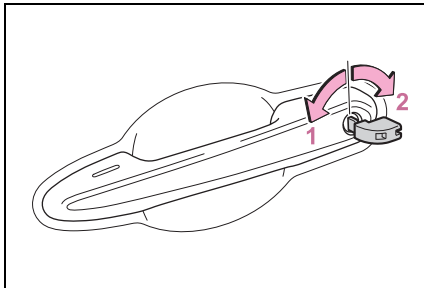

- 1 Locks all the doors
- 2 Unlocks all the doors

■ Key linked functions (if equipped)

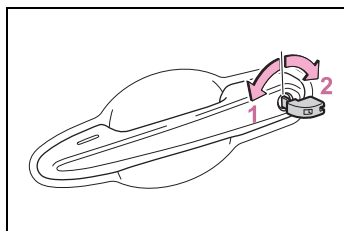

- 1 Closes the windows and the moon roof*¹ (turn and hold)*²
- 2 Opens the windows and the moon roof*¹ (turn and hold)*²

*¹: If equipped

*²: These settings must be customized at your Toyota dealer.



WARNING

■ When using the mechanical key and operating the power windows or the moon roof (if equipped)


Operate the power window or moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window or moon roof. Also, do not allow children to operate the mechanical key. It is possible for children and other passengers to get caught in the power window or moon roof.


Starting the engine

- 1 Ensure that the shift lever is in P and depress the brake pedal.
- 2 Touch the area behind the buttons on the electronic key to engine switch.

When the electronic key is detected, a buzzer sounds and the engine switch will turn to ON.

When the smart entry & start system is deactivated in customization setting, the engine switch will turn to ACC.

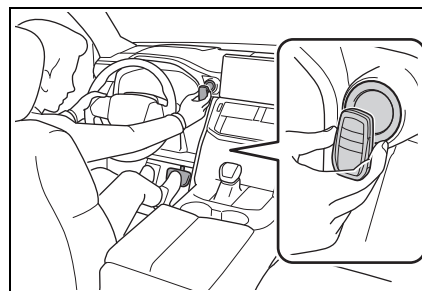

- 3** Firmly depress the brake pedal and check that  is displayed on the multi-information display.
- 4** Press the engine switch shortly and firmly.

Vehicles with fingerprint authentication system: Use the customization function to turn the fingerprint authentication system off. The engine can be started even in this state, as long as you are holding the electronic key. (→P.776)

In the event that the engine still cannot be started, contact your Toyota dealer.

■ Stopping the engine

Shift the shift lever to P, set the parking brake and press the engine switch as you normally do when stopping the engine.

■ Replacing the key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P.679)

■ Alarm (if equipped)

Using the mechanical key to lock the doors will not set the alarm system.

If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered. (→P.111)

■ Changing engine switch modes

Release the brake pedal and press the engine switch in step **3** above. The engine does not start and modes will be changed each time the switch is pressed. (→P.259)

If the vehicle battery is discharged

The following procedures may be used to start the engine if the vehicle's battery is discharged.


You can also call your Toyota dealer or a qualified repair shop.

Restarting the engine

If you have a set of jumper (or booster) cables and a second vehicle with a battery, you can jump start your vehicle by following the steps below.

- 1 Confirm that the electronic key is being carried.

When connecting the jumper (or booster) cables, depending on the situation, the alarm may activate and the doors locked. (→P.112)


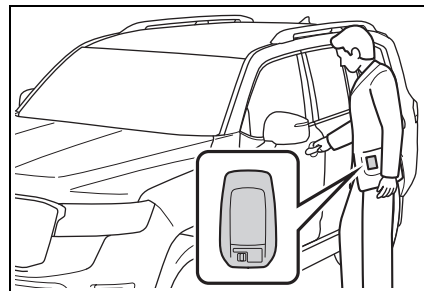


- 2 Open the hood (→P.640) and keep the engine compartment cover opened or removing the cover (if equipped). (→P.644)

730 8-2. Steps to take in an emergency

- 3 Open the positive (+) battery terminal cover.


Lift the edge of the cover to disengage the fixed pins, and then pull the cover towards you to remove it.

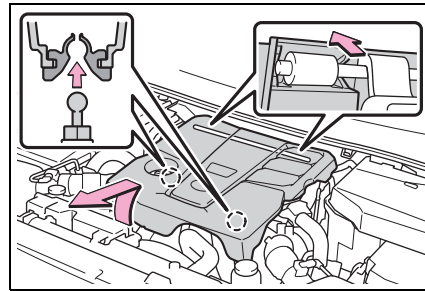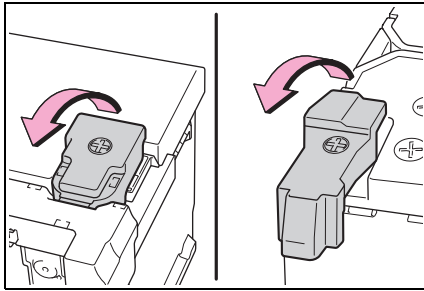

- 4 V35A-FTS engine: Remove the engine cover.

- 5 Connect a positive jumper cable clamp to **A** on your vehicle and connect the clamp on the other end of the positive cable to **B** on the second vehicle. Then, connect a negative cable clamp to **C** on the second vehicle and connect the clamp at the other end of the negative cable to **D**.


- 1GR-FE engine

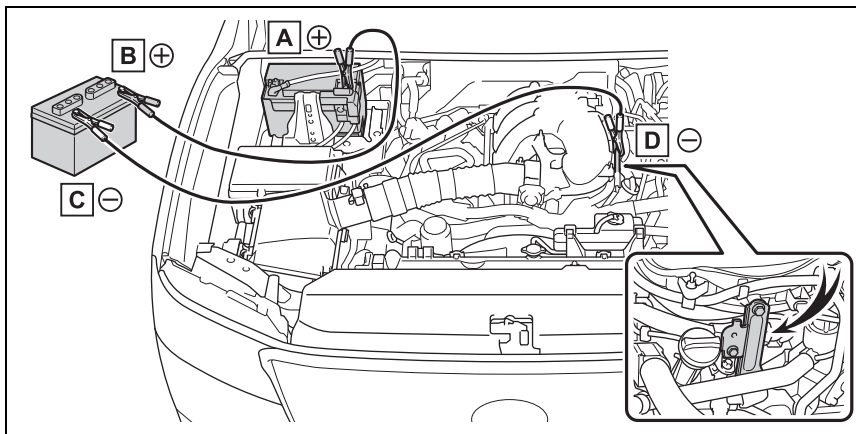

- A** Positive (+) battery terminal (your vehicle)
B Positive (+) battery terminal (second vehicle)
C Negative (-) battery terminal (second vehicle)
D Solid, stationary, unpainted metallic point away from the battery and any


moving parts as shown in the illustration

► V35A-FTS engine (left-hand drive vehicles)

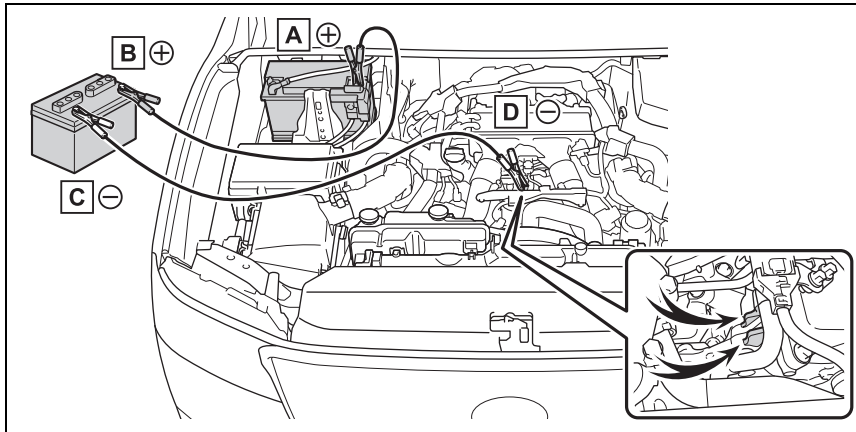

- A** Positive (+) battery terminal (your vehicle)
- B** Positive (+) battery terminal (second vehicle)
- C** Negative (-) battery terminal (second vehicle)
- D** Solid, stationary, unpainted metallic point away from the battery and any moving parts as shown in the illustration

► V35A-FTS engine (right-hand drive vehicles)

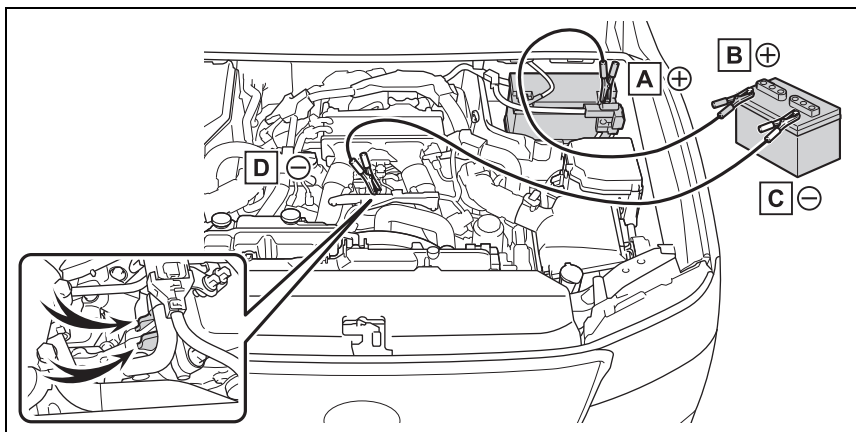


- A** Positive (+) battery terminal (your vehicle)
- B** Positive (+) battery terminal (second vehicle)

732 8-2. Steps to take in an emergency


- C** Negative (-) battery terminal (second vehicle)
 - D** Solid, stationary, unpainted metallic point away from the battery and any moving parts as shown in the illustration
- F33A-FTV engine (left-hand drive vehicles)

Type A:

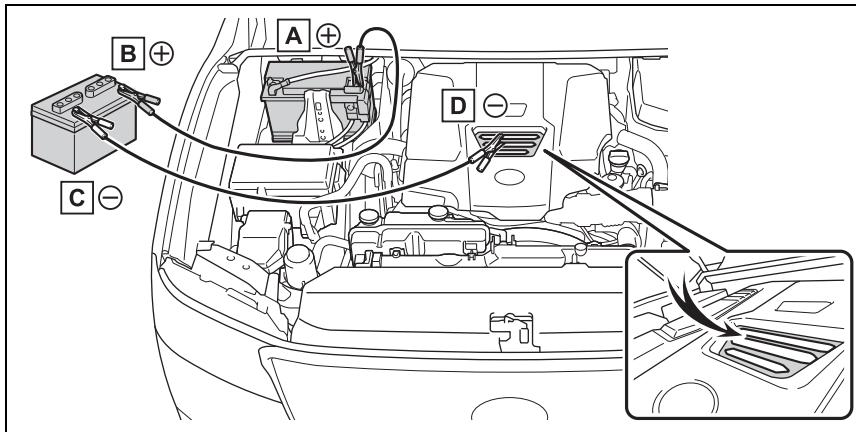


- A** Positive (+) battery terminal (your vehicle)
- B** Positive (+) battery terminal (second vehicle)
- C** Negative (-) battery terminal (second vehicle)
- D** Solid, stationary, unpainted metallic point away from the battery and any moving parts as shown in the illustration

Type B:

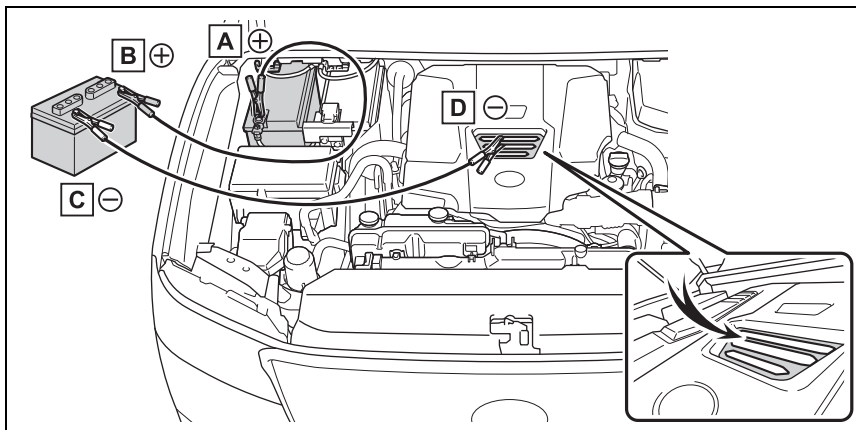

- A** Positive (+) battery terminal (your vehicle)
 - B** Positive (+) battery terminal (second vehicle)
 - C** Negative (-) battery terminal (second vehicle)
 - D** Solid, stationary, unpainted metallic point away from the battery and any moving parts as shown in the illustration
- F33A-FTV engine (right-hand drive vehicles)

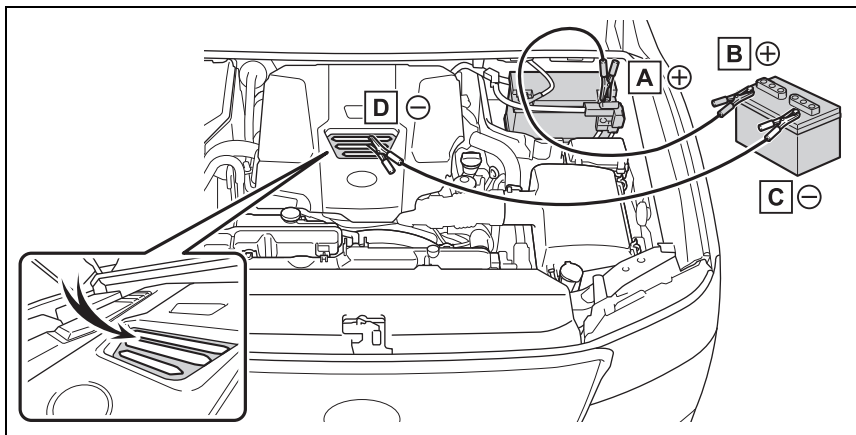

- A** Positive (+) battery terminal (your vehicle)
 - B** Positive (+) battery terminal (second vehicle)
 - C** Negative (-) battery terminal (second vehicle)
 - D** Solid, stationary, unpainted metallic point away from the battery and any moving parts as shown in the illustration
- 6** Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the battery of your vehicle.
 - 7** Open and close any of the doors of your vehicle with the engine switch off.
 - 8** Maintain the engine speed of the second vehicle and start the engine of your vehicle by turning the engine switch to ON.
 - 9** Once the vehicle's engine has started, remove the jumper cables in the exact reverse order from which they were connected.
- Once the engine starts, have the vehicle inspected at your Toyota dealer as soon as possible.

■ Starting the engine when the battery is discharged

The engine cannot be started by push-starting.

■ To prevent battery discharge

- Turn off the headlights and the audio system while the engine is stopped.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ When the battery is removed or discharged

Some systems may require initialization. (→P.777)

■ When removing the battery terminals

When the battery terminals are removed, the information stored in the ECU is cleared. Before removing the battery terminals, contact your Toyota dealer.

■ Charging the battery

The electricity stored in the battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the battery may discharge, and the engine may be unable to start. (The battery recharges automatically during driving.)

■ Replacing the battery

- Vehicles with Stop & Start system: Use a genuine battery specifically designed for use with the Stop & Start system or a battery with equivalent specifications to a genuine battery. If an unsupported battery is used, Stop & Start system functions may be restricted to protect the battery. Also, battery performance may decrease and the engine may not be able to restart. Contact your Toyota dealer for details.
- Use a battery that conforms to Euro-

pean regulations.

Type A: Use a battery that the case size is same as the previous one (LN3), 20 hours rate capacity (20HR) is equivalent (70Ah) or greater, and performance rating (CCA) is equivalent (600A) or greater.

Type B: Use a battery that the case size is same as the previous one (LN4), 20 hours rate capacity (20HR) is equivalent (80Ah) or greater, and performance rating (CCA) is equivalent (689A) or greater.

Type C: Use a battery that the case size is same as the previous one (LN4), 20 hours rate capacity (20HR) is equivalent (75Ah) or greater, and performance rating (CCA) is equivalent (776A) or greater.

- If the sizes differ, the battery cannot be properly secured.
- If the 20 hour rate capacity is low, even if the time period where the vehicle is not used is a short time, the battery may discharge and engine may not be able to start.

■ When recharging or replacing the battery (vehicles with Stop & Start system)

The Stop & Start system may not automatically stop the engine for up to an hour.

WARNING

■ When removing the battery terminals

Always remove the negative (-) terminal first. If the positive (+) terminal contacts any metal in the surrounding area when the positive (+) terminal is removed, a spark may occur, leading to a fire in addition to electrical shocks and death or serious injury.

**WARNING****■ Avoiding battery fires or explosions**

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the “+” terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the battery.

■ Battery precautions

The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery:

- When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention.
Place a wet sponge or cloth over the affected area until medical attention can be received.

- Always wash your hands after handling the battery support, terminals, and other battery-related parts.

- Do not allow children near the battery.

■ When replacing the battery

For information regarding battery replacement, contact your Toyota dealer.

**NOTICE****■ When handling jumper cables**

When connecting the jumper cables, ensure that they do not become entangled in the cooling fan or engine drive belt.

If your vehicle overheats


The following may indicate that your vehicle is overheating.

- The needle of the engine coolant temperature gauge (→P.129, 133) enters the red zone or a loss of engine power is experienced. (For example, the vehicle speed does not increase.)
- “Engine Coolant Temp High Stop in a Safe Place See Owner’s Manual” is shown on the multi-information display.
- Steam comes out from under the hood.

Correction procedures

- 1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the engine.
- 2 If you see steam: Carefully lift the hood after the steam subsides.
If you do not see steam: Carefully lift the hood.

- 3 After the engine has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.

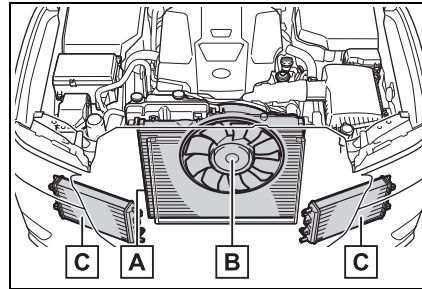


- A** Engine radiator
- B** Cooling fan
- C** Intercooler radiator (if equipped)

If a large amount of coolant leaks, immediately contact your Toyota dealer.

- 4 The coolant level is satisfactory if it is between the “FULL” and “LOW”/“F” and “L” lines on the reservoir.

► Engine coolant


1GR-FE engine:

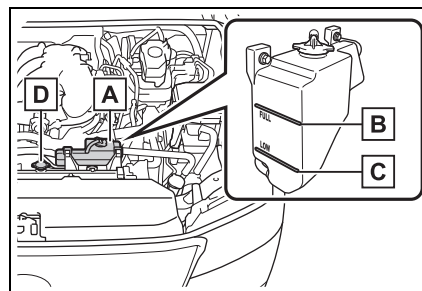

- A** Reservoir
- B** “FULL” or “F”
- C** “LOW” or “L”

D Radiator cap

V35A-FTS and F33A-FTV engines:

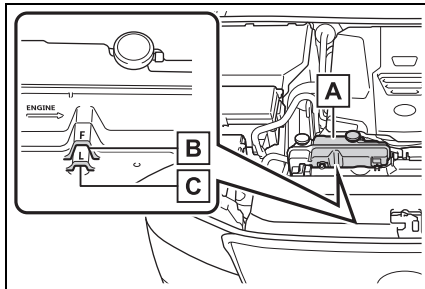


A Reservoir

B "F"

C "L"

► Intercooler coolant (if equipped)

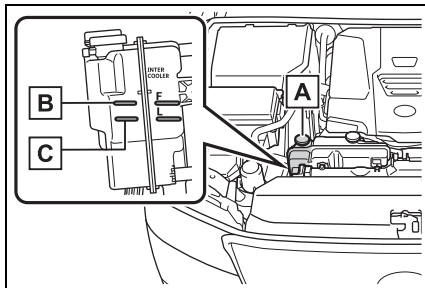

A Reservoir

B "F"


C "L"

5 Add coolant if necessary.


Water can be used in an emergency if coolant is unavailable.

► Engine coolant


1GR-FE engine:

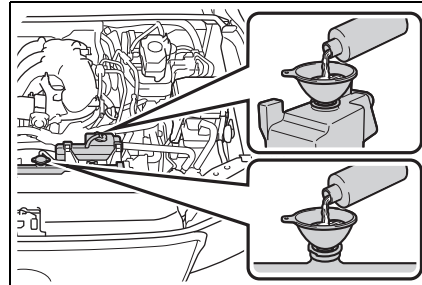

V35A-FTS and F33A-FTV engines:

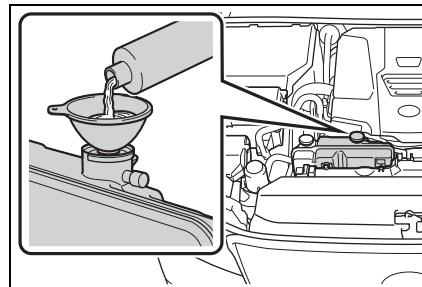

► Intercooler coolant (if equipped)

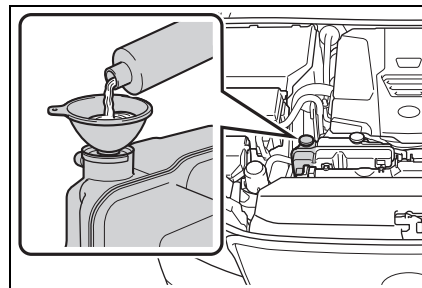

6 Start the engine to check that the radiator cooling fan operates and to check for coolant leaks from the radiators or hoses.

7 If the fans are not operating:
Stop the engine immediately and contact your Toyota dealer.
If the fans are operating:
Have the vehicle inspected at the nearest Toyota dealer.

- 8 Check if “Engine Coolant Temp High Stop in a Safe Place See Owner’s Manual” is shown on the multi-information display.

If the message does not disappear: Stop the engine and contact your Toyota dealer.

If the message is not displayed: Have the vehicle inspected at the nearest Toyota dealer.

■ To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use any coolant additive.

 **WARNING**

■ When inspecting under the hood of your vehicle

Observe the following precautions. Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- Keep hands and clothing (especially a tie, a scarf or a muffler) away from the fans and belts. Failure to do so may cause the hands or clothing to be caught, resulting in serious injury.
- Do not loosen the radiator cap (if equipped) or the engine coolant reservoir cap while the engine and engine radiator are hot. High temperature steam or coolant could spray out.

 **NOTICE**

■ When adding engine coolant


Add coolant slowly after the engine has cooled down sufficiently. Adding cool coolant to a hot engine too quickly can cause damage to the engine.

If you run out of fuel and the engine stalls (diesel engine only)

Operating procedure

If you run out of fuel and the engine stalls:

- 1 Refuel your vehicle.
- 2 To bleed the fuel system, operate the priming pump until you feel more resistance.

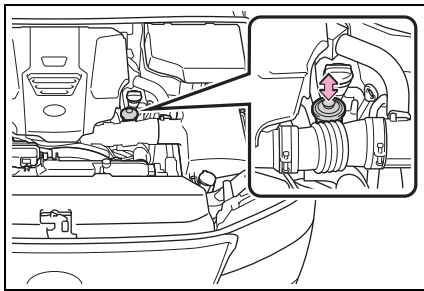

- 3 Start the engine. (→P.256)

If the engine does not start after the above steps have been performed, wait for 10 seconds and try step 2 and 3 again. If the engine still does not start, contact your Toyota dealer.

After starting the engine, depress the accelerator pedal lightly until the engine runs smoothly.



NOTICE

■ When restarting the engine

- Do not crank the engine before refueling and operating the priming pump. This may damage the engine and fuel system.
- Do not crank the engine for more than 30 seconds at a time. This may overheat the starter and wiring system.

If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

Recovering procedure

- 1 Stop the engine. Set the parking brake and shift the shift lever to P.
- 2 Remove the mud, snow or sand from around the rear wheels.
- 3 Place wood, stones or some other material under the rear wheels to help provide traction.
- 4 Restart the engine.
- 5 Shift the shift lever to D or R and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

■ When it is difficult to free the vehicle

Try the followings.

- Turn off the Active TRC (→P.496)
- Using the front differential lock* (→P.478)
- Using the center differential lock (→P.476)
- Using the rear differential lock* (→P.480)
- Switching the four-wheel drive control switch (→P.475)
- Using Crawl Control (with Turn Assist function)* (→P.481)

● Using Multi-terrain Select* (→P.486)

*: If equipped



WARNING

■ **When attempting to free a stuck vehicle**

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

■ **When shifting the shift lever**

Be careful not to shift the shift lever with the accelerator pedal depressed.

This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.



NOTICE

■ **To avoid damaging the transmission and other components**

- Avoid spinning the wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.
- When a warning message for the automatic transmission fluid temperature is displayed while attempting to free a stuck vehicle, immediately remove your foot from the accelerator pedal and wait until the warning message disappears. Otherwise, the transmission may become damaged. (→P.261, 265)

Vehicle specifications

9

741

9-1. Specifications

- Maintenance data (fuel, oil level, etc.)742
- Fuel information759

9-2. Customization

- Customizable features761

9-3. Initialization

- Items to initialize777

9

Vehicle specifications

Maintenance data (fuel, oil level, etc.)

Dimensions

- ▶ For vehicles with model code* that has “A”, “G”, “V” or “Z” as the 4th letter from “-”

*: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P.744)

Vehicles without aero rear bumper:

Overall length	Vehicles without pintle hook and hitch cover (type A) (→P.243)	4950 mm (194.9 in.) ^{*1, 3}
		4965 mm (195.5 in.) ^{*2, 3, 5}
		4980 mm (196.1 in.) ^{*1, 4}
		4995 mm (196.7 in.) ^{*2, 4, 5}
		5000 mm (196.9 in.) ^{*2, 6}
	Vehicles with hitch cover (type A) (→P.243)	4980 mm (196.1 in.) ^{*3}
		5010 mm (197.2 in.) ^{*4}
	Vehicles with pintle hook	5115 mm (201.4in.) ^{*1, 3}
		5130 mm (202.0 in.) ^{*2, 3, 5}
5145 mm (202.6 in.) ^{*1, 4}		
5160 mm (203.1 in.) ^{*2, 4, 5}		
5165 mm (203.3 in.) ^{*2, 6}		

^{*1}: Vehicles without license bracket

^{*2}: Vehicles with license bracket

^{*3}: Vehicles without bumper guard

^{*4}: Vehicles with bumper guard

^{*5}: Vehicles without electric winch

^{*6}: Vehicles with electric winch

Vehicles with aero rear bumper:

Overall length	4985 mm (196.3 in.) ^{*1, 4, 5}
	5005 mm (197.0 in.) ^{*1, 6}
	5015 mm (197.4in.) ^{*2}
	5140 mm (202.4 in.) ^{*3}

^{*1}: Vehicles without pintle hook and hitch cover (type A) (→P.243)

^{*2}: Vehicles with hitch cover (type A) (→P.243)

^{*3}: Vehicles with pintle hook

^{*4}: Vehicles without license bracket

^{*5}: Vehicles with license bracket (except for EU license plate model)

^{*6}: Vehicles with license bracket (for EU license plate model)

► For vehicles with model code^{*} that has “S” as the 4th letter from “-”

^{*}: The model code is indicated on the manufacturer’s label or the Certification Regulation label. (→P.744)

Overall length	4965 mm (195.5 in.) ^{*1}
	4995 mm (196.7 in.) ^{*2}
	5130 mm (202.0 in.) ^{*3}

^{*1}: Vehicles without pintle hook and hitch cover (type A) (→P.243)

^{*2}: Vehicles with hitch cover (type A) (→P.243)

^{*3}: Vehicles with pintle hook

Overall width	1980 mm (78.0 in.) ^{*1}
	1990 mm (78.3 in.) ^{*2}

^{*1}: For vehicles with model code^{*3} that has “A”, “G”, “V” or “Z” as the 4th letter from “-”

^{*2}: For vehicles with model code^{*3} that has “S” as the 4th letter from “-”

^{*3}: The model code is indicated on the manufacturer’s label or the Certification Regulation label. (→P.744)

Overall height	1905 mm (75.0 in.) ^{*1}
	1945 mm (76.6 in.) ^{*2}
	1950 mm (76.8 in.) ^{*3}
	2145 mm (84.4 in.) ^{*4}

^{*1}: Vehicles without roof rail, roof antenna and roof rack

*2: Vehicles with roof rail

*3: Vehicles with roof antenna

*4: Vehicles with roof rack

Wheelbase		2850 mm (112.2 in.)
Tread	Front	1687 mm (66.4 in.)
	Rear	1688 mm (66.5 in.)

Weights (with towing hitch)


Gross vehicle mass		3230 kg (7121 lb.)
Maximum permissible axle capacity	Front	1630 kg (3594 lb.)
	Rear	1930 kg (4255 lb.)
Drawbar load		140 kg (309 lb.)
Towing capacity	With brake	3500 kg (7716 lb.)
	Without brake	750 kg (1653 lb.)

Vehicle identification


■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Toyota. It is used in registering the ownership of your vehicle.


This number is stamped on the front right frame.

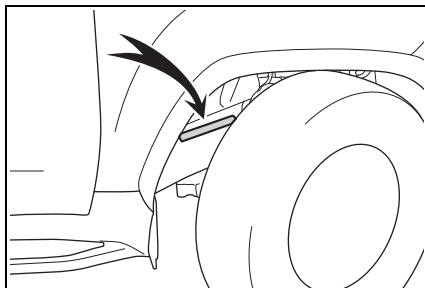

On some models, this number is also on the top left of the instrument panel.

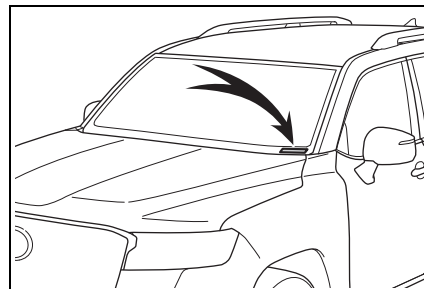

This number is also on the manufacturer's label (Jordan^{*1} and except GCC countries^{*2}, Yemen, Iraq, Lebanon) or the Certification Regulation label (Jordan^{*3} and GCC countries^{*2}, Yemen, Iraq, Lebanon).

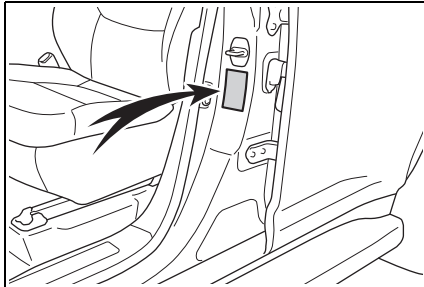

*1: Diesel engine

*2: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait

*3: Gasoline engine

■ **Year of manufacture and country of origin (GCC countries*, Yemen, Iraq, Lebanon and Jordan)**


The year of the manufacture and country of origin are shown on the Certification Regulation label.

*: Saudi Arabia, Sultanate of Oman, Bahrain, United Arab Emirates, Qatar, Kuwait


■ **Engine number**

The engine number is stamped on the engine block as shown.


▶ 1GR-FE engine

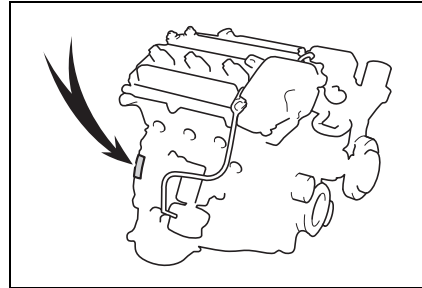

▶ V35A-FTS engine

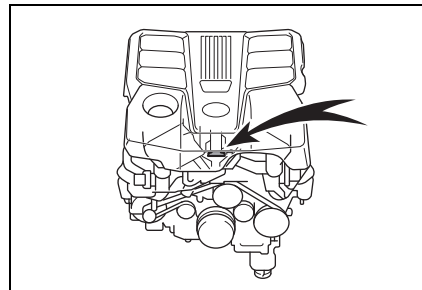

▶ F33A-FTV engine

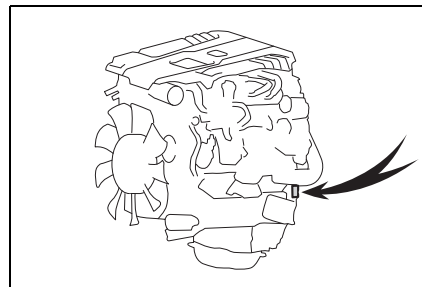

Engine

▶ 1GR-FE engine

Model	1GR-FE
Type	6-cylinder V type, 4-cycle, gasoline
Bore and stroke	94.0 × 95.0 mm (3.70 × 3.74 in.)
Displacement	3956 cm ³ (241.4 cu.in.)

Valve clearance	Automatic adjustment
Drive belt tension	Automatic adjustment
Maximum vehicle speed ^{*1}	190 km/h (118 mph)
Maximum torque (NET) ^{*1}	385 N•m @ 4400 rpm
Maximum output (NET) ^{*1}	202 kW @ 5600 rpm

^{*1}: For vehicles with model code ^{*2} that has “V” as the last letter

^{*2}: The model code is indicated on the manufacturer’s label or the Certification Regulation label. (→P.744)

► V35A-FTS engine

Model	V35A-FTS
Type	6-cylinder V type, 4-cycle, gasoline (with turbocharger)
Bore and stroke	85.5 × 100.0 mm (3.37 × 3.94 in.)
Displacement	3445 cm ³ (210.2 cu.in.)
Valve clearance	Automatic adjustment
Drive belt tension	Automatic adjustment
Maximum vehicle speed ^{*1}	210 km/h (130 mph)
Maximum torque (NET) ^{*1}	650 N•m @ 2000-3600 rpm
Maximum output (NET) ^{*1}	305 kW @ 5200 rpm

^{*1}: For vehicles with model code ^{*2} that has “V” as the last letter

^{*2}: The model code is indicated on the manufacturer’s label or the Certification Regulation label. (→P.744)

► F33A-FTV engine

Model	F33A-FTV
Type	6-cylinder V type, 4-cycle, diesel (with turbocharger)
Bore and stroke	86.0 × 96.0 mm (3.39 × 3.78 in.)
Displacement	3346 cm ³ (204.2 cu.in.)
Valve clearance	Automatic adjustment
Drive belt tension	Automatic adjustment

Maximum vehicle speed ^{*1}	210 km/h (130 mph)
Maximum torque (NET) ^{*1}	700 N•m @ 1600 - 2600 rpm
Maximum output (NET) ^{*1}	225 kW @ 4000 rpm

^{*1}: For vehicles with model code ^{*2} that has "V" as the last letter

^{*2}: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P.744)

Fuel

► Gasoline engine

Fuel type	Unleaded gasoline only	
Research Octane Number	95 (octane rating 91) or higher	
Fuel tank capacity (Reference)	Vehicles without sub fuel tank system	80 L (21.1 gal., 17.6 Imp.gal.)
	Vehicles with sub fuel tank system	110 L (29.1 gal., 24.2 Imp.gal.)

► Diesel engine

Fuel type	Except for Argentina	<p>► Vehicles without DPF system Diesel fuel only</p> <p>► Vehicles with DPF system Diesel fuel that contains 10 ppm or less of sulfur</p>
	For Argentina	Diesel fuel Grade 3 [*] with sulfur content less than 10 ppm only
Cetane number	Vehicles without DPF system	44 or higher
	Vehicles with DPF system	48 or higher
Fuel tank capacity (Reference)	Vehicles without sub fuel tank system	80 L (21.1 gal., 17.6 Imp.gal.)
	Vehicles with sub fuel tank system	110 L (29.1 gal., 24.2 Imp.gal.)

^{*}: In accordance with the latest Resolution of Secretary of Energy.

Lubrication system

► Gasoline engine

■ **Oil capacity (Drain and refill [Reference*])**

With filter	1GR-FE engine: 6.1 L (6.4 qt., 5.4 Imp.qt.) V35A-FTS engine: 7.3 L (7.7 qt., 6.4 Imp.qt.)
Without filter	1GR-FE engine: 5.6 L (5.9 qt., 4.9 Imp.qt.) V35A-FTS engine: 7.0 L (7.4 qt., 6.2 Imp.qt.)

*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

■ **Engine oil selection**

“Toyota Genuine Motor Oil” is used in your Toyota vehicle. Use Toyota approved “Toyota Genuine Motor Oil” or equivalent to satisfy the following grade and viscosity.

Oil grade:


0W-20, 5W-20, 5W-30 and 10W-30:

API grade SL “Energy-Conserving”, SM “Energy-Conserving”, SN “Resource-Conserving”, SN PLUS “Resource-Conserving” or SP “Resource-Conserving”; or ILSAC GF-6A multigrade engine oil

Recommended viscosity (SAE):

SAE 0W-20 is filled into your Toyota vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 0W-20, 5W-20 or 5W-30 engine oil is recommended.

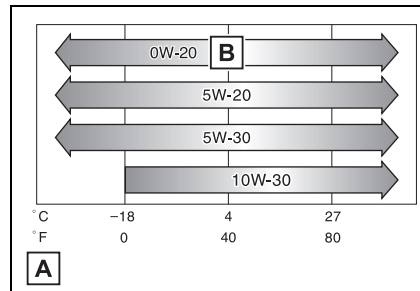

A Temperature range anticipated before next oil change


B Preferred

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscos-

ity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:
 Either or both API registered marks are added to some oil containers to help you select the oil you should use.

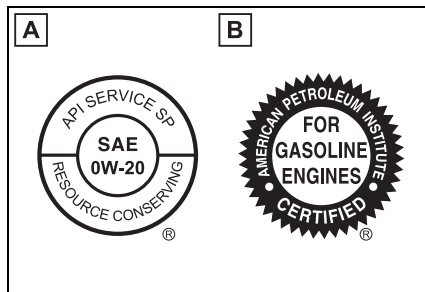

A API Service Symbol
 Top portion: "API SERVICE SP" means the oil quality designation by American Petroleum Institute (API).
 Center portion: "SAE 0W-20" means the SAE viscosity grade.
 Lower portion: "Resource-Conserving" means that the oil has fuel-saving and environmental protection capabilities.

B ILSAC Certification Mark
 The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

► Diesel engine

■ **Oil capacity (Drain and refill [Reference*])**

With filter	6.6 L (7.0 qt., 5.8 Imp.qt.)
Without filter	6.2 L (6.6 qt., 5.5 Imp.qt.)

*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

■ **Engine oil selection (except for EURO V and VI models*)**


*: EURO V and VI are emission standards. If it is not clear that your vehicle meets relevant standards, contact your Toyota dealer

"Toyota Genuine Motor Oil" is used in your Toyota vehicle. Use Toyota approved "Toyota Genuine Motor Oil" or equivalent to satisfy the following grade and viscosity.

Oil grade:
 API CF-4, CF or ACEA B3, B4, B5 or JASO DL-0

Recommended viscosity (SAE):
 SAE 5W-30 is the best choice for good fuel economy and good starting in cold weather.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 5W-30 engine oil is recommended.

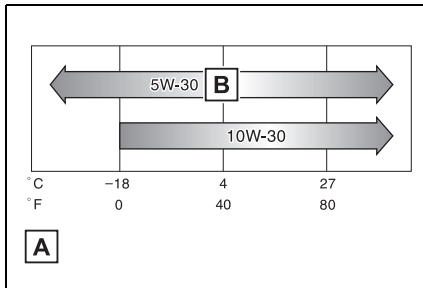

A Temperature range anticipated before next oil change

B Preferred

Oil viscosity (5W-30 is explained here as an example):

- The 5W in 5W-30 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 30 in 5W-30 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container label:

The Japanese Automobile Standard Organization (JASO) DL-0 Mark is added to some oil containers to help you select the oil you should use.



■ Engine oil selection (for EURO V and VI models*)

*: EURO V and VI are emission standards. If it is not clear that your vehicle meets relevant standards, contact your Toyota dealer

“Toyota Genuine Motor Oil” is used in your Toyota vehicle. Toyota recommends the use of approved “Toyota Genuine Motor Oil”. Another motor oil of matching quality can also be used

Oil grade:

0W-20: ACEA C5


0W-30 and 5W-30: ACEA C2

 NOTICE

Using engine oil other than ACEA C5 or C2 may damage the catalytic converter.

Recommended viscosity (SAE):

SAE 0W-20 is filled into your Toyota vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather.

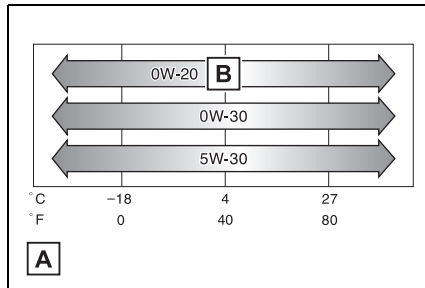

A Temperature range anticipated before next oil change

B Preferred

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

Cooling system

► 1GR-FE engine

Capacity ^{*1}	11.6 L (12.3 qt., 10.2 Imp.qt.) ^{*2} 13.8 L (14.6 qt., 12.1 Imp.qt.) ^{*3}
Coolant type	Use either of the following: <ul style="list-style-type: none"> • "Toyota Super Long Life Coolant" • Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

^{*1}: The coolant capacity is the quantity of reference. If replacement is necessary, contact your Toyota dealer.

^{*2}: Vehicles without rear air conditioning system

^{*3}: Vehicles with rear air conditioning system

752 **9-1. Specifications**

► V35A-FTS engine

Capacity* ¹	Intercooler coolant	3.8 L (4.0 qt., 3.3 Imp.qt.)
	Engine coolant	12.4 L (13.1 qt., 10.9 Imp.qt.)* ^{2, 4}
		12.6 L (13.3 qt., 11.1 Imp.qt.)* ^{2, 5}
		14.6 L (15.4 qt., 12.8 Imp.qt.)* ^{3, 4}
14.7 L (15.5 qt., 12.9 Imp.qt.)* ^{3, 5}		
Coolant type	Use either of the following: <ul style="list-style-type: none"> • “Toyota Super Long Life Coolant” • Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.	

*¹: The coolant capacity is the quantity of reference. If replacement is necessary, contact your Toyota dealer.

*²: Vehicles without rear air conditioning system

*³: Vehicles with rear air conditioning system

*⁴: Vehicles without Stop & Start system

*⁵: Vehicles with Stop & Start system

► F33A-FTV engine

Capacity* ¹	Intercooler coolant	<p>Except for EURO V and VI models*² and except for India: 3.8 L (4.0 qt., 3.3 Imp.qt.)</p> <p>For EURO V models*²: 3.9 L (4.1 qt., 3.4 Imp.qt.)</p> <p>For EURO VI models*² and for India: 4.0 L (4.2 qt., 3.5 Imp.qt.)</p>
	Engine coolant	<p>Left-hand drive vehicles: 13.2 L (13.9 qt., 11.6 Imp.qt.)*^{3, 5, 7} 13.3 L (14.1 qt., 11.7 Imp.qt.)*^{3, 5, 8} 13.7 L (14.5 qt., 12.1 Imp.qt.)*^{3, 6, 7} 13.9 L (14.7 qt., 12.2 Imp.qt.)*^{3, 6, 8} 15.3 L (16.2 qt., 13.5 Imp.qt.)*^{4, 5, 7} 15.5 L (16.4 qt., 13.6 Imp.qt.)*^{4, 5, 8} 15.8 L (16.7 qt., 13.9 Imp.qt.)*^{4, 6, 7} 16.0 L (16.9 qt., 14.1 Imp.qt.)*^{4, 6, 8}</p> <p>Right-hand drive vehicles: 13.1 L (13.8 qt., 11.5 Imp.qt.)*^{3, 5} 13.7 L (14.5 qt., 12.1 Imp.qt.)*^{3, 6} 15.3 L (16.2 qt., 13.5 Imp.qt.)*^{4, 5} 15.8 L (16.7 qt., 13.9 Imp.qt.)*^{4, 6}</p>
Coolant type	<p>Use either of the following:</p> <ul style="list-style-type: none"> • “Toyota Super Long Life Coolant” • Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology <p>Do not use plain water alone.</p>	

*¹: The coolant capacity is the quantity of reference. If replacement is necessary, contact your Toyota dealer.

*²: EURO V and VI are emission standards. If it is not clear that your vehicle meets relevant standards, contact your Toyota dealer.

- *3: Vehicles without rear air conditioning system
- *4: Vehicles with rear air conditioning system
- *5: Vehicles without exhaust gas recirculation system
- *6: Vehicles with exhaust gas recirculation system
- *7: Vehicles without power heater
- *8: Vehicles with power heater

Ignition system (gasoline engine only)

■ Spark plug

	V35A-FTS engine	1GR-FE engine
Make	DENSO EC22HPR-D7	DENSO SK16HR11
Gap	0.7 mm (0.028 in.)	1.1 mm (0.043 in.)



NOTICE

■ Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust gap when tuning engine.

Electrical system

■ Battery

Specific gravity reading at 20°C (68°F):	1.250 or higher
--	-----------------

■ Charging rates

Quick charge	15 A max.
Slow charge	5 A max.

Differential

► Front

Oil capacity	Without front differential lock system: 1.16 L (1.23 qt., 1.02 Imp.qt.) With front differential lock system: 1.32 L (1.39 qt., 1.16 Imp.qt.)
Oil type and viscosity	Toyota Genuine Differential Gear Oil LT 75W-85 GL-5 or equivalent

► Rear

Oil capacity	1GR-FE engine	Without rear differential lock system: 5.47L (5.78 qt., 4.81 Imp.qt.) With rear differential lock system: 4.91L (5.19 qt., 4.32 Imp.qt.)
	V35A-FTS and F33A-FTV engines	Without rear differential lock system and Limited-slip differential: 5.45L (5.76 qt., 4.80 Imp.qt.) With rear differential lock system: 5.18L (5.47 qt., 4.56 Imp.qt.) With rear Limited-slip differential: 5.25L (5.55 qt., 4.62 Imp.qt.)
Oil type and viscosity	Without Limited-slip differential	Toyota Genuine Differential Gear Oil LT 75W-85 GL-5 or equivalent
	With Limited-slip differential	Toyota Genuine Differential Gear Oil LX 75W-85 GL-5 or equivalent


Your Toyota vehicle is filled with “Toyota Genuine Differential Gear Oil” at the factory.

Use Toyota approved “Toyota Genuine Differential Gear Oil” or an equivalent of matching quality to satisfy the above specification. Please contact your Toyota dealer for further details.

Automatic transmission

Fluid capacity (Reference)	V35A-FTS engine	With Stop & Start system: 10.61L (11.21 qt, 9.34 Imp.qt) Without Stop & Start system: 10.51L (11.11 qt, 9.25 Imp.qt)
	1GR-FE engine	9.8L (10.36 qt, 8.62 Imp.qt)
	F33A-FTV engine	With Stop & Start system: 11.49L (12.14 qt, 10.11 Imp.qt) Without Stop & Start system: 11.69L (12.35 qt, 10.29 Imp.qt)
Fluid type		Toyota Genuine ATF WS

The fluid capacity is the quantity of reference. If replacement is necessary, contact your Toyota dealer.

 NOTICE
<p>■ Automatic transmission fluid type</p> <p>Using transmission fluid other than the above type may cause abnormal noise or vibration, or damage the transmission of your vehicle.</p>

Transfer

Oil capacity	1.79L (1.89 qt, 1.58 Imp.qt)
Oil type*	Toyota Genuine Transfer Gear oil LF
Recommended oil viscosity	SAE 75W

*: Your Toyota vehicle is filled with “Toyota Genuine Transfer Gear oil LF” at the factory. Use Toyota approved “Toyota Genuine Transfer Gear oil LF” or an equivalent of matching quality to satisfy the above specification. Please contact your Toyota dealer for further details.

Brakes

Pedal clearance*	<p>Left-hand drive vehicles: 129 mm (5.08in.)Min</p> <p>Right-hand drive vehicles: 145 mm (5.71in.)Min.</p>
Pedal free play	1 — 6 mm (0.04 — 0.24 in.)
Fluid type	<p>SAE J1703 or FMVSS No. 116 DOT 3</p> <p>SAE J1704 or FMVSS No. 116 DOT 4</p>

*: Minimum pedal clearance when depressed with a force of 300 N (31 kgf, 67 lbf) while the engine is running

Chassis lubrication (propeller shafts)

► Front

Spider	Lithium base chassis grease, NLGI No.2
Slide yoke	Molybdenum-disulfide lithium base chassis grease, NLGI No.2 or lithium base chassis grease, NLGI No.2

► Rear

Spider	Lithium base chassis grease, NLGI No.2
--------	--

Steering

Free play	Less than 30 mm (1.18 in.)
Power steering fluid type	Automatic transmission fluid DEXRON® II or III

Electrical winch (if equipped)

Capacity	9806N (1000 kgf, 2204lbf)
Fluid capacity	1.0 L (1.1 qt., 0.9 Imp.qt.)
Fluid type	Automatic transmission fluid DEXRON® II or III

Tires and wheels

► 20-inch tires

Tire size	265/55R20 113V		
Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	Front tire kPa (kgf/cm ² or bar, psi)	Rear tire kPa (kgf/cm ² or bar, psi)
	More than 160 km/h (99 mph)	230 (2.3, 33)	260 (2.6, 38)
	160 km/h (99 mph) or less	230 (2.3, 33)	230 (2.3, 33)
Wheel size	20 × 8 J		
Wheel nut torque	131 N•m (13.4 kgf•m, 97 ft•lbf)		

► 18-inch tires

Tire size	265/65R18 114V	
Tire inflation pressure (Recommended cold tire inflation pressure)	Front tire kPa (kgf/cm ² or bar, psi)	Rear tire kPa (kgf/cm ² or bar, psi)
	230 (2.3, 33)	230 (2.3, 33)

758 **9-1. Specifications**

Wheel size	18 × 7 1/2J
Wheel nut torque	131 N•m (13.4 kgf•m, 97 ft•lbf)

► 17-inch tires

Tire size	245/75R17 112H	
Tire inflation pressure (Recommended cold tire inflation pressure)	Front tire kPa (kgf/cm ² or bar, psi)	Rear tire kPa (kgf/cm ² or bar, psi)
	230 (2.3, 33)	230 (2.3, 33)
Wheel size	17 × 7J	
Wheel nut torque	209 N•m (21.3 kgf•m, 154 ft•lbf)	

■ **Certification**

The tires fitted on this vehicle meet the requirements of Indian Standard IS 15633 and they comply with the requirements of Rule 95 as specified under Central Motor Vehicle Rules (CMVR) 1989.

Light bulbs

	Light bulbs	W	Type
Exterior	Rear turn signal lights (bulb type)*	21	A
Interior	Vanity lights (bulb type)*	8	A
	Rear interior lights (bulb type)* / rear personal lights (bulb type)*		
	Without overhead console	8	B
	With overhead console	5	A
	Rear personal lights (bulb type)*	8	B
	Door courtesy lights (bulb type)*	5	A
	Luggage compartment light (bulb type)*	5	A

A: Wedge base bulbs

B: Double end bulbs

*: If equipped

Fuel information

▶ Gasoline engine

You must only use unleaded gasoline.

Select premium unleaded gasoline with a Research Octane Number of 95 (octane rating 91) or higher for optimum engine performance.

If this premium type cannot be obtained, you may temporarily use unleaded gasoline with a Research Octane Number as low as 91 (octane rating 87).

▶ Diesel engine (except for Argentina)

Vehicles without DPF system:

You must only use diesel fuel with a cetane number of 44 or higher.

Vehicles with DPF system:

You must only use diesel fuel that contains 10 ppm or less of sulfur with a cetane number of 48 or higher.

▶ Diesel engine (for Argentina)

You must only use diesel fuel Grade 3* with sulfur content less than 10 ppm.

*: In accordance with the latest Resolution of Secretary of Energy.

■ **Use of ethanol blended gasoline in a gasoline engine**

Toyota allows the use of ethanol


blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

■ **If you plan to drive in foreign countries (vehicles with DPF system)**

Low sulfur diesel fuel may not be available, so please check the availability with your distributor.

■ **If your engine knocks**

- Consult your Toyota dealer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

 NOTICE

■ **Notice on gasoline fuel quality**

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use gasoline with metallic additives, for example manganese, iron or lead, otherwise it may cause damage on your engine or emission control system.
- Do not add aftermarket fuel additives which contain metallic additives.
- Do not use the methanol blended gasoline such as M15, M85, M100. The use of gasoline containing methanol may cause engine damage or failure.

■ **Notice on diesel fuel quality**

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Vehicles with DPF system: Do not use a fuel that contains more than 10 ppm of sulfur. Use of such a high sulfur fuel may damage the engine.



NOTICE

● Except for Argentina: FAME (Fatty Acid Methyl Ester) fuel sold under names such as “B40” or “B100” and fuel containing a large amount of FAME should not be used. Your vehicle can use diesel mixed with 5% max biodiesel FAME (B5) or diesel equivalent to EN590/EN16734. If the engine is operated with more than 5% FAME (B5) or diesel not equivalent to EN590/EN16734, fuel filter replacement intervals tend to become shorter or the fuel system may be damaged. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask your Toyota dealer.

● For Argentina: Observe the following INFORMATION

FUEL QUALITY: Use only diesel fuel Grade 3* with sulfur content less than 10 ppm.

Do not use a diesel fuel containing sulfur content above 10 ppm.

The repetitive use of a diesel fuel of sulfur content above 10 ppm can cause damage in the engine and the exhaust system and affect the durability of your vehicle.

TOYOTA ARGENTINA SA assumes no liability for damages due to the use of diesel fuel with sulfur content above 10 ppm.

Check this information at the service station before refueling.

*: In accordance with the latest Resolution of Secretary of Energy.

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed using the multi-information display, multimedia system, or at your Toyota dealer.

Customizing vehicle features

■ **Changing using the multimedia system**

- 1 Press the "MENU" button and select "Setup".
- 2 Select "Vehicle" on the "Setup" screen.
- 3 Select "Vehicle Customization".

Various setting can be changed. Refer to the list of settings that can be changed for details.

■ **Changing using the multi-information display**

→P.141, 151

■ **When customizing using the multimedia system or multi-information display**

Stop the vehicle in a safe place, apply the parking brake, and shift the shift lever to P. Also, to prevent battery discharge, leave the engine running while customizing the features.

 **WARNING**

■ **During customization**

As the engine needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

 **NOTICE**

■ **During customization**

To prevent battery discharge, ensure that the engine is running while customizing features.

Customizable Features

Some function settings are changed simultaneously with other functions being customized. Contact your Toyota dealer for further details.

- A** Settings that can be changed using the multimedia system
- B** Settings that can be changed using the multi-information display
- C** Settings that can be changed by your Toyota dealer

Definition of symbols: O = Available, – =Not available

■ Alarm* (→P.111)

Function	Default setting	Customized setting	A	B	C
Cancellation when the mechanical key is used to unlock	Off	On	-	-	O

*: If equipped

■ Gauges, meters and multi-information display (→P.129, 133, 137, 146)

Function* ¹	Default setting	Customized setting	A	B	C
Clock (time adjustment)	-	-	O	O ²	-
Clock (display type) ³	12-hour display	24-hour display	O	O ²	-
Language ³	English	Except English ⁴	-	O	-
Units ³	L/100 km	km (km/L)	-	O	-
Eco Driving Indicator Light	On	Off	-	O	-
Digital Speed ⁵	On	Off	-	O	-
Gadget Content ⁵	No Display	Distance	-	O	-
		Total Time			
		Average Speed			
Drive information type ⁵	Total	Trip ⁶	-	O	-
		Tank ⁷			
"Fuel Economy" ⁸	"Total Average"	"Trip Average"	-	O	-
		"Tank Average"			
Audio system linked display ^{8, 9}	On	Off	-	O	-
Drive information type ⁸	Trip	Total	-	O	-
Drive information items (first item) ⁸	Distance	Average Speed	-	O	-
		Total Time			
Drive information items (second item) ⁸	Total Time	Average Speed	-	O	-
		Distance			
Pop-up display	On	Off	-	O	-

Function* ¹	Default setting	Customized setting	A	B	C
Multi-Information display off	Off	On	-	O	-
Suggestion function	On	On (when the vehicle is stopped)	O	-	O
		Off			
Sensor sensitivity for darkening the brightness of the instrument cluster depending on the outside brightness	Standard	-2 to 2	-	-	O
Sensor sensitivity for returning the brightness of the instrument cluster to the original level depending on the outside brightness	Standard	-2 to 2	-	-	O

*1: For details about each function: →P.141, 151

*2: Vehicles without navigation system or multimedia system only

*3: The default setting varies according to country.

*4: Available languages may differ depending on the target region.

*5: Vehicles with 7-inch display only

*6: Even if "Trip" is selected, the display of the average fuel consumption will not change.

*7: If "Tank" is selected, the gadget will be hidden.

*8: Vehicles with 4.2-inch display only

*9: If equipped

■ **Head-up display* (→P.157)**

Function	Default setting	Customized setting	A	B	C
Head-up display	On	Off	-	O	-
Tachometer settings	Tachometer	Eco Driving Indicator	-	O	-
		No content			
Navigation display*	On	Off	-	O	-
Driving support system display	On	Off	-	O	-

Function	Default setting	Customized setting	A	B	C
Compass*	On	Off	-	O	-
Audio system operation status*	On	Off	-	O	-

*: If equipped

■ **Door lock (→P.169, 727)**

Function	Default setting	Customized setting	A	B	C
Unlocking using a mechanical key	All doors unlocked in first step	Driver's door unlocked in first step, all doors unlocked in second step	-	-	O
Speed linked door locking function* ¹	On	Off	O	-	O
Shift position linked door locking function* ¹	Off	On	O	-	O
Shift position linked door unlocking function* ¹	Off	On	O	-	O
Driver's door linked door unlocking function* ^{1, 2}	On	Off	O	-	O

*¹: If equipped

*²: The default setting varies according to country.

■ **Smart entry & start system and wireless remote control (→P.167, 190)**

Function	Default setting	Customized setting	A	B	C
Operation signal (Emergency flashers)*	On	Off	O	-	O
Operating signal (Buzzers)*	5	Off	O	-	O
		1 to 7			

Function	Default setting	Customized setting	A	B	C
Time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked	30 seconds	60 seconds	O	-	O
		120 seconds			
Open door reminder buzzer (When locking the vehicle)	On	Off	-	-	O

*: If equipped

■ **Smart entry & start system (→P.190)**


Function	Default setting	Customized setting	A	B	C
Smart entry & start system	On	Off	O	-	O
Smart door unlocking	All the doors	Driver's door	O	-	O
Number of consecutive door lock operations *1	2 times	As many as desired	-	-	O
Time elapsed before unlocking all the door when gripping and holding the driver's door handle *2	Off	1.5 seconds	-	-	O
		2 seconds			
		2.5 seconds			
Engine switch illumination	On	Off	-	-	O

*1: The default setting varies according to country.

*2: This setting can be changed when the smart door unlocking setting is set to "Driver's door".

■ **Wireless remote control (→P.167)**

Function	Default setting	Customized setting	A	B	C
Wireless remote control	On	Off	-	-	O
Unlocking operation	All doors unlocked in first step	Driver's door unlocked in first step, all doors unlocked in second step	O	-	O

Function	Default setting	Customized setting	A	B	C
The function that activates the  switch of the wireless remote control when locking the door (→P.176) ^{*1, 2}	Off	On (Unlocking all the door)	-	-	O
		On (Unlocking back door only)			
Alarm (panic mode) ^{*1}	On	Off	-	-	O


^{*1}: If equipped

^{*2}: The default setting varies according to country.

■ Rear seat reminder (→P.170)

Function	Default setting	Customized setting	A	B	C
Rear seat reminder function	On	Off	-	O	-

■ Power back door^{*1} (→P.176)

Function	Default setting	Customized setting	A	B	C
Power back door operations	On	Off	-	O	-
Back door opener switch operations	Press and hold	One short press	-	-	O
 switch of the wireless remote control operation	Press and hold	One short press	-	-	O
		Push twice			
		Off			
Operation buzzer volume	3	1	-	O	-
		2			
Operation buzzer while the back door is operating ^{*2, 3}	On	Off	-	-	O
Opening angle	5	1 to 4	-	O	-
		User setting ^{*4}			
Automatic closing of the back door when lowered	On	Off	-	-	O

Function	Default setting	Customized setting	A	B	C
Automatic opening of the back door using the back door opener switch	On	Off	-	-	O
Close & lock (Walk-Away) function	On	Off	-	-	O
Hands free power back door ^{*1}	On	Off	-	O	-
Kick sensor sensitivity ^{*1}	+0	+1	-	-	O
		+2	-	-	O
Hands Free close & lock (Walk-Away) function ^{*1}	Off	On	-	-	O

^{*1}: If equipped

^{*2}: The operation buzzer that sounds when the back door begins to operate cannot be turned off.

^{*3}: The default setting varies according to country.

^{*4}: The open position is set by the power back door switch. (→P.189)

■ **Driving position memory^{*} (→P.220)**

Function	Default setting	Customized setting	A	B	C
Function to prevent contact between the head restraint and ceiling (while moving to memory location)	On	Off	-	-	O

^{*}: If equipped

■ **Enabling easier driver entry and exit (power easy access system)^{*} (→P.220)**

Function	Default setting	Customized setting	A	B	C
Driver's seat slide movement when exiting the vehicle	Full	Off	O	-	O
		Partial			

Function	Default setting	Customized setting	A	B	C
			Steering wheel movement when exiting the vehicle	Tilt & telescopic	Tilt only
		Telescopic only			
		off			

*: If equipped

■ **Outside rear view mirrors (→P.211)**

Function	Default setting	Customized setting	A	B	C
			Automatic folding and extending operation*	Linked to locking/unlocking of the doors	Off
		Linked to operation of engine switch modes			

*: If equipped

■ **Power windows and moon roof*¹ (→P.214, 217)**

Function	Default setting	Customized setting	A	B	C
			Mechanical key linked operation* ^{1, 2}	Off	On
Wireless remote control linked operation* ^{1, 2}	Off	On	-	-	O
Wireless remote control linked operation signal (buzzer)	On	Off	-	-	O

*¹: If equipped

*²: The settings of the moon roof are changed in conjunction with the settings of the power windows.

■ **Moon roof* (→P.217)**

Function	Default setting	Customized setting	A	B	C
Linked operation of components when mechanical key is used*	Slide only	Tilt only	-	-	O
Linked operation of components when wireless remote control is used*	Slide only	Tilt only	-	-	O

*: If equipped

■ **Lights (→P.275)**

Function	Default setting	Customized setting	A	B	C
Light reminder buzzer	On	Off	-	-	O
Welcome lighting*	On	Off	-	-	O

*: If equipped

■ **Automatic light control system (→P.275)**

Function	Default setting	Customized setting	A	B	C
Light sensor sensitivity	Standard	-2 to 2	O	-	O
Automatic light off system*	Linked to operation of the engine switch	Linked to the driver's door	-	-	O
Time elapsed before headlights automatically turn off after doors are closed (Extended Headlight Lighting)*	30 seconds	60 seconds	-	-	O
		90 seconds			
		120 seconds			
Time elapsed before headlights automatically turn on*	Standard	Long	-	-	O

*: If equipped

■ Rear window wiper (→P.292)

Function	Default setting	Customized setting	A	B	C
Back door opening linked rear window wiper stop function	Off	On	-	-	O
Washer linked rear window wiper operation	On	Off	-	-	O

■ AHS (Adaptive High-beam System)*¹ (→P.280)

Function	Default setting	Customized setting	A	B	C
Adaptive High-beam System	On	Off* ²	—	—	O
Clearance between a vehicle ahead and the shaded high beams	Wide	Narrow	—	—	O
		Standard	—	—	O
Brightness and illuminated area adjustment of the high beams according to the vehicle speed	Operates at approximately 15 km/h (9 mph) or more	Operates at approximately 30 km/h (19 mph) or more	—	—	O
		Operates at approximately 40 km/h (25 mph) or more* ³ , or 60 km/h (37 mph) or more* ⁴			
Intensity adjustment of the high beams when driving around a curve (illuminates the area in the direction vehicle is turning more brightly)	On	Off	—	—	O
Projection distance adjustment of the low beams according to the distance to a preceding vehicle	On	Off	—	—	O
High beam light distribution control for rain	On	Off	—	—	O
Light distribution control for urban areas	On	Off	—	—	O

*1: If equipped

*2: The headlights will operate under Automatic High Beam control. (→P.284)

*3: For vehicles without model code^{*5} that has "W" as the last letter

*4: For vehicles with model code^{*5} that has "W" as the last letter

*5: The model code is indicated on the manufacturer's label or the Certification Regulation label. (→P.744)

■ **PCS (Pre-Collision System)^{*}** (→P.302)

Function	Default setting	Customized setting	A	B	C
PCS (Pre-Collision System)	On	Off	-	O	-
Adjust alert timing	Middle	Early	-	O	-
		Late	-	O	-

*: If equipped

■ **LTA (Lane Tracing Assist)^{*}** (→P.314)/**LDA (Lane Departure Alert with Yaw Assist Function)^{*}** (→P.324)

Function	Customized setting	A	B	C
Lane centering function [*]	On, Off	-	O	-
Alert	Steering wheel vibration, Buzzer	-	O	-
Alert sensitivity	High, Standard	-	O	-
Vehicle sway warning function	On, Off	-	O	-
Vehicle sway warning sensitivity	High, Standard, Low	-	O	-

*: If equipped

■ **RSA (Road Sign Assist)^{*1}** (→P.331)

Function	Default setting	Customized setting	A	B	C
RSA (Road Sign Assist) ^{*2}	On	Off	-	O	-
Excess speed notification method ^{*3}	Display only	No notification	-	O	-
		Display and buzzer	-	O	-

Function	Default setting	Customized setting	A	B	C
Excess speed notification level	2km/h (1mph)	5km/h (3mph)	-	O	-
		10km/h (5mph)			
No overtaking notification method	Display only	No notification	-	O	-
		Display and steering wheel vibration			
Other notifications method (No-entry notification)* ⁴	Display only	No notification	-	O	-
		Display and buzzer			

*¹: If equipped

*²: RSA function becomes On when the engine switch is turned to ON.

*³: If a Speed limit with supplemental mark is exceeded, the notification buzzer does not operate.

*⁴: Vehicles with navigation system

■ **Dynamic radar cruise control with full-speed range***
 (→P.335)/Dynamic radar cruise control* (→P.348)

Function	Default setting	Customized setting	A	B	C
Curve speed reduction function	High	Low	-	O	-
		Off			
Dynamic Radar Cruise Control with Road Sign Assist*	Off	ON	-	O	-

*: If equipped

■ **BSM (Blind Spot Monitor)* (→P.367)**

Function	Default setting	Customized setting	A	B	C
BSM (Blind Spot Monitor)	On	Off	-	O	-
Outside rear view mirror indicator brightness	Bright	Dim	-	O	-

Function	Default setting	Customized setting	A	B	C
Alert timing for presence of approaching vehicle (sensitivity)	Intermediate	Early	-	O	-
		Late			
		Only when vehicle detected in blind spot			

*: If equipped

■ **RCTA (Rear cross traffic alert) function* (→P.379)**

Function	Default setting	Customized setting	A	B	C
RCTA (Rear cross traffic alert) function	On	Off	-	O	-
Buzzer volume	Level 2	Level 1	-	O	-
		Level 3			

*: If equipped

■ **Toyota parking assist-sensor* (→P.372)**

Function	Default setting	Customized setting	A	B	C
Toyota parking assist-sensor	On	Off	-	O	-
Buzzer volume	Level 2	Level 1	-	O	-
		Level 3			

*: If equipped

■ **RCD (Rear Camera Detection) function* (→P.384)**

Function	Default setting	Customized setting	A	B	C
RCD (Rear Camera Detection) function	On	Off	-	O	-
Buzzer volume	Level 2	Level 1	-	O	-
		Level 3			

*: If equipped

■ Stop & Start system* (→P.361)

Function	Default setting	Customized setting	A	B	C
Change the Stop & Start system duration when the A/C is on	Standard	Extended	-	O	-

*: If equipped

■ Automatic air conditioning system (→P.556, 567)

Function	Default setting	Customized setting	A	B	C
Switching between outside air and recirculated air mode linked to "AUTO" switch operation	On	Off	O	-	O
A/C Auto switch operation	On	Off	O	-	O

■ Seat heater*/seat ventilators* (→P.583)

Function	Default setting	Customized setting	A	B	C
Driver's seat temperature preference in automatic mode	Standard	-2 (cooler) to 2 (warmer)	O	-	O
Passenger's seat temperature preference in automatic mode	Standard	-2 (cooler) to 2 (warmer)	O	-	O
Left-hand rear seat temperature preference in automatic mode*	Standard	-2 (cooler) to 2 (warmer)	O	-	O
Right-hand rear seat temperature preference in automatic mode*	Standard	-2 (cooler) to 2 (warmer)	O	-	O

*: If equipped

■ Illumination (→P.589)

Function	Default setting	Customized setting	A	B	C
Time elapsed before the interior lights turn off	15 seconds	Off	O	-	O
		7.5 seconds			
		30 seconds			

Function	Default setting	Customized setting	A	B	C
Operation after the engine switch is turned off	On	Off	-	-	O
Operation when you approach the vehicle with the electronic key on your person	On	Off	-	-	O
Operation when the doors are unlocked	On	Off	-	-	O
Time elapsed before the outer foot lights* and running board lights* turn off	15 seconds	Off	-	-	O
		7.5 seconds	O	-	O
		30 seconds	-	-	O
Operation of the outer foot lights* and running board lights* when you approach the vehicle with the electronic key on your person	On	Off	-	-	O
Operation of the outer foot lights* and running board lights* when the doors are unlocked	On	Off	-	-	O
Footwell lighting*	On	Off	-	-	O
Inside door handle lights*	On	Off	-	-	O

*: If equipped

■ **Driving mode select switch* (→P.473)**

Function	Default setting	Customized setting	A	B	C
Powertrain control in Custom mode*	Normal	Power	O	-	-
		Eco	-	-	-
Chassis control in Custom mode*	Normal	Sport	O	-	-
		Comfort	-	-	-
Air conditioning operation in Custom mode*	Normal	Eco	O	-	-

*: If equipped

■ My Settings (→P.224)

Function	Default setting	Customized setting	A	B	C
My Settings function	On	Off	-	O	-

■ Fingerprint authentication system*1 (→P.115)

Function	Default setting	Customized setting	A	B	C
Fingerprint authentication system function*2	Off*3	On	-	O	O

*1: If equipped

*2: The setting cannot be changed if fingerprint information is not registered.

*3: It will automatically switch to "ON" when fingerprint information is registered.

■ Vehicle customization

- When the speed linked door locking function and shift position linked door locking function are both on, the door lock operates as follows.
- If the vehicle is started with all the doors locked, the speed linked door locking function would not operate.
- If the vehicle is started with any door unlocked, the speed linked door locking function will operate.
- When shifting the shift lever to any position other than P, all the doors will be locked.
- When the smart entry & start system is off, the selecting door to unlock cannot be customized.

Items to initialize

The following items must be initialized for normal system operation after such cases as the battery being reconnected, or maintenance being performed on the vehicle:

List of the items to initialize

Item	When to initialize	Reference
PKSB (Parking Support Brake)*	<ul style="list-style-type: none"> After reconnecting or changing the battery 	P.393
Tire pressure warning system*	<ul style="list-style-type: none"> When rotating the tires When the tire inflation pressure is changed by changing tire size. (When there are multiple specified pressures) After registering the ID codes 	P.663, 667
Oil maintenance (except for 1GR-FE engine)	<ul style="list-style-type: none"> After the maintenance is performed 	P.647
Multi-terrain Monitor*	<ul style="list-style-type: none"> Battery has been reinstalled 	P.469
Toyota parking assist monitor*	<ul style="list-style-type: none"> The steering wheel has been moved while the battery was being reinstalled Battery power is low 	P.418
Crawl Control (with Turn Assist function)*	<ul style="list-style-type: none"> After reconnecting the battery 	P.485
Power back door*	<ul style="list-style-type: none"> After reconnecting or changing the battery 	P.185
Power window	<ul style="list-style-type: none"> When functioning abnormally 	P.214
Moon roof*		P.218

*: If equipped

Index

What to do if... (Troubleshooting)780
Alphabetical Index783

What to do if... (Troubleshooting)

If you have a problem, check the following before contacting your Toyota dealer.

The doors cannot be locked, unlocked, opened or closed



You lose your keys

- If you lose your keys or mechanical keys, new genuine keys or mechanical keys can be made by your Toyota dealer. (→P.727)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact your Toyota dealer immediately. (→P.727)



The doors cannot be locked or unlocked

- Is the key battery weak or depleted? (→P.679)
- Is the engine switch in ON? When locking the doors, turn the engine switch off. (→P.259)
- Is the electronic key left inside the vehicle? When locking the doors, make sure that you have the electronic key on your person.
- The function may not operate properly due to the condition of the radio wave. (→P.192)



The rear door cannot be opened

- Is the child-protector lock set? The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P.172)



The engine does not start

- Did you press the engine switch while firmly depressing the brake pedal? (→P.256)
- Is the shift lever in P? (→P.256)
- Is the electronic key anywhere detectable inside the vehicle? (→P.191)
- Is the steering wheel unlocked? (→P.257)
- Is the electronic key battery weak or depleted? In this case, the engine can be started in a temporary way. (→P.728)
- Is the battery discharged? (→P.729)
- Vehicles with fingerprint authentication system: Have fingerprint authentication been done successfully?



The shift lever cannot be shifted from P even if you depress the brake pedal

- Is the engine switch in ON? If you cannot release the shift lever by depressing the brake pedal with the engine switch in ON. (→P.262, 266)



The steering wheel cannot be turned after the engine is stopped

- It is locked automatically to prevent theft of the vehicle. (→P.257)



The windows do not open or close by operating the power window switches

- Is the window lock switch pressed?
The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P.216)



The engine switch is turned off automatically

- The auto power off function will be operated if the vehicle is left in ACC or ON (the engine is not running) for a period of time. (→P.259)



A warning buzzer sounds during driving

- The seat belt reminder light is

flashing

Are the driver and the passengers wearing the seat belts? (→P.706, 707)

- The parking brake indicator is on
Is the parking brake released? (→P.269)

Depending on the situation, other types of warning buzzer may also sound. (→P.698, 709)



An alarm is activated and the horn sounds (if equipped)

- Did anyone inside the vehicle open a door during setting the alarm?

The sensor detects it and the alarm sounds. (→P.111)

To stop the alarm, turn the engine switch to ON or start the engine.



A warning buzzer sounds when leaving the vehicle

- Is the message displayed on the multi-information display?
Check the message on the multi-information display. (→P.709)



A warning light turns on or a warning message is displayed

- When a warning light turns on or a warning message is displayed, refer to P.698, 709.

When a problem has occurred



If you have a flat tire

- Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P.714)



The vehicle becomes stuck

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P.739)

Alphabetical Index**A**

- A/C** **556, 567, 580**
 Air conditioning filter..... 677
 Automatic air conditioning system
 556, 567, 580
 Eco air conditioning mode.. 559, 571
 Front seat concentrated airflow
 mode (S-FLOW) 563, 575
- AAC disc** **518**
- ABS (Anti-lock Brake System)** **494**
 Warning light 700
- Adaptive High-beam System (AHS)**
 **280**
- Adaptive Variable Suspension System (AVS)** **495**
- AdBlue™** **657**
 AdBlue™ gauge 151
 Capacity 659
 Low AdBlue™ level warning light 705
 Refilling 659
 Warning message 658
- AHB (Automatic High Beam)** **284**
- AHS (Adaptive High-beam System)**
 **280**
- Airbags** **43**
 Airbag operating conditions 46
 Airbag precautions for your child . 48
 Airbag warning light 699
 Correct driving posture..... 37
 Curtain shield airbag operating conditions
 46
 Curtain shield airbag precautions 48
 General airbag precautions..... 48
 Locations of airbags 43
 Modification and disposal of airbags
 51
 Side airbag operating conditions.. 46
 Side airbag precautions 48
 Side and curtain shield airbags operating
 conditions..... 46
- Side and curtain shield airbags precautions..... 48
 SRS airbags 43
 SRS warning light..... 699
- Air conditioning filter** **677**
- Air conditioning system** **556, 567, 580**
 Air conditioning filter..... 677
 Automatic air conditioning system
 556, 567, 580
 Eco air conditioning mode.. 559, 571
 Front seat concentrated airflow
 mode (S-FLOW)..... 563, 575
- Alarm**..... **111**
 Alarm 111
 Warning buzzer 698, 709
- Anchor brackets** **83, 87, 100**
- Antenna**
 Radio 517
 Smart entry & start system 190
- Anti-lock Brake System (ABS)**..... **494**
 Warning light 700
- Approach warning** **342, 354**
- Armrest** **616**
- Assist grips** **617**
- Audio system** **512**
 Audio input 514
 AUX port/USB port 514
 AUX..... 533
 Bluetooth® audio 534
 CD player 518
 iPod 524
 MP3/WMA/AAC disc 518
 Optimal use 515
 Portable music player..... 514
 Radio 517
 Steering wheel audio switch..... 513
 USB memory device 529
 USB memory 514
- Automatic air conditioning system**
 **556, 567, 580**
 Air conditioning filter..... 677

Eco air conditioning mode.. 559, 571
 Front seat concentrated airflow
 mode (S-FLOW) 563, 575
Automatic headlight leveling system
 276
Automatic High Beam (AHB)..... 284
Automatic light control system... 276
Automatic transmission..... 261, 264
 M mode 263
 S mode..... 267
Auxiliary boxes 597
AUX port..... 514
Average fuel economy 138, 148
Average vehicle speed. 140, 148, 150
AVS (Adaptive Variable Suspension
System) 495

B

Back door 173
 Back door closer 181
 Back door opener switch..... 177
 Hands Free Power Back Door . 179,
 180
 Luggage compartment light 181
 Power back door opener and closer
 switch..... 177
 Power back door switch 177
 Power back door 176
 Wireless remote control 176
Back-up lights
 Replacing light bulbs 685
Battery
 Checking 649
 If the vehicle battery is discharged
 729
 Preparing and checking before win-
 ter 504
 Replacing 734
 Warning light 698
Blind Spot Monitor (BSM) 367
 Blind Spot Monitor function 369

Bluetooth® 553
 Audio system..... 534
 Hands-free system (for cellular
 phone)..... 534
 Registering a Bluetooth® device 538
 Selecting a Bluetooth® device... 540
 Wireless communication 534
Bluetooth® audio 548
Bluetooth® phone 534
 Deleting call histories 544
 Deleting favorites 546
 Making a call 550
 Managing the contacts 543
 Phone settings 540
 Receiving a call 551
 Speaking on the phone 551
 Steering wheel switches..... 538
Bottle holders..... 596
Brake
 Brake Hold 272
 Parking brake 269
 Warning light 698
Brake assist..... 494
Brake Hold..... 272
Break-in tips 232
BSM (Blind Spot Monitor) 367
 Blind Spot Monitor function 369
 Warning message 368

C

Card holder..... 597
Care
 Aluminum wheels 620
 Exterior 620
 Interior 623
 Seat belts 623
Cargo hooks..... 598
CD player 518
Center differential lock system ... 476
Chains..... 506

Child-protectors..... 172
Child restraint system..... 54, 85
 Child restraint system installation
 method..... 79, 87
 Child seats definition..... 54, 85
 Child seats installation 55, 88
 Fixed with a seat belt 79, 91
 Fixed with an ISOFIX lower anchorage..... 81, 96
 Installing a CRS to the passenger seat..... 55, 88
 Installing a CRS to the rear seat .. 88
 Installing CRS with an ISOFIX lower anchorage..... 81, 96
 Installing CRS with seat belts 79, 91
 Installing CRS with top strap 83, 100
 Points to remember..... 54, 85
 Riding with children..... 53
 Types of child restraint system installation method..... 79, 87
 Using a top tether anchorage 83, 100
Child safety 53
 Airbag precautions 48
 Back door precautions 173
 Battery precautions 652, 735
 Child restraint system 54, 85
 Heated steering wheel and seat heater precautions 583
 How your child should wear the seat belt..... 40
 Installing child restraints..... 54, 85
 Moon roof precautions 218
 Power window lock switch 216
 Power window precautions 215
 Rear door child-protectors 172
 Seat belt precautions 38
 Seat heater precautions 583
Cleaning 620, 623
 Aluminum wheels..... 620
 Exterior..... 620
 Interior..... 623

Radar sensor..... 298
 Seat belts 623
Clock..... 131, 135
Coat hooks 617
Condenser 649
Console box 594
Consumption screen 161
Coolant
 Capacity 751
 Checking 648
 Preparing and checking before winter..... 504
 Warning light 699
Cooling system 751
 Engine overheating 736
Cornering lights 279
Crawl Control 481
Cruise control
 Cruise control 358
 Dynamic radar cruise control with full-speed range 335
 Dynamic radar cruise control 348
Cup holders..... 595
Current fuel economy..... 138, 148
Curtain shield airbags 43
Customizable features 761

D

DAC
 Downhill assist control system ... 489
Daytime running light system 275
 Replacing light bulbs 685
Deck board 599
Defogger
 Outside rear view mirrors... 559, 571
 Rear window 559, 571
 Windshield..... 559, 571
Dimensions 742
Display
 Consumption screen 161
 Cruise control 358

- Drive information..... 140
- Driving information 138, 148
- Dynamic radar cruise control with full-speed range 335
- Dynamic radar cruise control 348
- Head-up display 157
- LDA (Lane Departure Alert with Yaw Assist Function) 328
- LTA (Lane-Tracing Assist) 320
- Multi-information display 137, 146
- Parking Support Brake function (rear pedestrians) 399
- RCD (Rear Camera Detection) .. 385
- RCTA (Rear Cross Traffic Alert) 379
- RSA (Road Sign Assist)..... 331
- Toyota multi-operation touch 602
- Toyota parking assist-sensor 372
- Warning messages 709
- Do-it-yourself maintenance 638**
- Door lock**
 - Back door..... 173
 - Side doors..... 169
 - Smart entry & start system..... 190
 - Wireless remote control 167
- Doors**
 - Automatic door locking and unlocking system 172
 - Back door..... 173
 - Door glasses 214
 - Door lock..... 169
 - Open door warning buzzer..... 170
 - Outside rear view mirrors..... 211
 - Rear door child-protectors 172
 - Side doors..... 169
- Double locking system 110**
- Downhill assist control system... 489**
- DPF (Diesel Particulate Filter) system..... 491**
 - Warning message 492
- Drive information..... 140**
- Driver's seat belt reminder light.. 706**
- Driver's seat position memory220**
 - Driving position memory.....220
 - Memory recall function222
 - Power easy access system.....220
- Drive-Start Control (DSC)**
 - Sudden start restraint control237
- Driving**
 - Break-in tips232
 - Correct posture37
 - Driving mode select switch.....473
 - Eco-friendly driving tips507
 - Procedures.....231
 - Winter drive tips504
- Driving information display .138, 148**
- Driving mode select switch473**
- Driving position memory220**
 - Memory recall function222
 - Power easy access system.....220
- Driving support system information display140, 150**
- DSC (Drive-Start Control)**
 - Sudden start restraint control237
- Dynamic radar cruise control**
 - Function348
 - Warning message 709
- Dynamic radar cruise control with full-speed range**
 - Function335
 - Warning message 709

E

- eCall 102**
- Eco Driving Indicator....139, 149, 160**
- Eco Driving Indicator Light..139, 149**
- Eco-friendly driving tips.....507**
- EDR (Event data recorder) 10**
- Elapsed time.....140, 150**
- Electric winch.....247**
- Electronic key 166**
 - Battery-saving function..... 192
 - If the electronic key does not operate

properly 727

Replacing the battery 679

Electronic-Kinetic Dynamic Suspension System 495

Emergency, in case of

If a warning buzzer sounds 698

If a warning light turns on 698

If a warning message is displayed 709

If the electronic key does not operate properly 727

If the engine will not start 725

If the vehicle battery is discharged 729

If the vehicle is submerged or water on the road is rising 691

If you have a flat tire 714

If you lose your keys 727

If you run out of fuel and the engine stalls 739

If you think something is wrong.. 696

If your vehicle becomes stuck.... 739

If your vehicle has to be stopped in an emergency 690

If your vehicle needs to be towed 693

If your vehicle overheats 736

Emergency brake signal 496

Emergency flashers 690

Engine

ACC 259

Compartment 641

Engine switch 256

Fuel pump shut off system 697

Hood 640

How to start the engine 256

Identification number 745

If the engine will not start 725

If you run out of fuel and the engine stalls 739

If your vehicle has to be stopped in

an emergency 690

Ignition switch (Engine switch) ... 256

Overheating 736

Tachometer 129, 133

Engine coolant

Capacity 751

Checking 648

Preparing and checking before winter 504

Warning light 699

Engine coolant temperature gauge 129, 133

Engine immobilizer system 109

Engine oil

Capacity 748

Checking 645

Preparing and checking before winter 504

Warning light 699

Engine oil pressure gauge... 129, 133

Engine switch (ignition switch)... 256

Auto power off function 260

Changing the engine switch modes 259

If your vehicle has to be stopped in an emergency 690

Engine switch..... 256

ERA-GLONASS/EVAK 105

Event data recorder (EDR)..... 10

Extended Headlight Lighting 277

F

Fingerprint Authentication System 115

Flat tire 714

Tire pressure warning system 663

Floor mats 36

Fluid

Automatic transmission 755

Brake 756

Steering 757

Washer..... 652

Fog lights

 Replacing light bulbs..... 685

 Switch 287

Footwell lights 589

Front differential lock system 478

Front fog lights

 Replacing light bulbs..... 685

 Switch 287

Front passenger’s seat belt reminder light..... 706

Front position lights

 Replacing light bulbs..... 685

 Switch 275

Front seats 195

 Adjustment 195

 Cleaning..... 623

 Correct driving posture..... 37

 Driving position memory 220

 Head restraints..... 205

 Memory recall function..... 222

 Power easy access system..... 220

 Seat heaters..... 584

 Seat position memory 220

 Seat ventilators 583

Front turn signal lights

 Replacing light bulbs..... 685

 Turn signal lever 268

Fuel

 Fuel filter 655

 Fuel gauge..... 129, 133

 Fuel pump shut off system..... 697

 If you run out of fuel and the engine stalls 739

 Information 759

 Refueling..... 294

 Warning light..... 705

Fuel consumption information.... 161

 Average fuel consumption 162

 Current fuel consumption..... 162

Fuel filler door 295

 Refueling..... 294

Fuel filter..... 655

Fuel gauge..... 129, 133

Fuel pump shut off system 697

Fuses 681

G

Gauges..... 129, 133

Glove box 594

Glove box light..... 594

H

Hands Free Power Back Door 179

Headlight cleaners..... 288

Headlights 275

 AHB (Automatic High Beam)..... 284

 AHS (Adaptive High-beam System) 280

 Automatic headlight leveling system 276

 Manual headlight leveling..... 277

 Replacing light bulbs 685

 Switch..... 275

Head restraints..... 205

Head-up display 157

 Driving support system display area 159

 Eco Driving Indicator 160

 Pop-up display 159

 Settings 158

Heated steering wheel..... 583

Heaters

 Automatic air conditioning system 556, 567, 578

 Heated steering wheel 583

 Outside rear view mirrors... 559, 571

 Seat heaters..... 583

High mounted stoplight

 Replacing light bulbs 685

Hill-start assist control..... 495

Hood
 Hood 640
 Open 640
 Warning message 172

Hooks
 Cargo hooks 598
 Coat hooks 617
 Retaining hooks (floor mat) 36

Horn 209

I

Identification
 Engine 745
 Vehicle 744

Ignition switch (engine switch) ... 256
 Auto power off function 260
 Changing the engine switch modes
 259
 If your vehicle has to be stopped in
 an emergency 690
 Starting the engine 256

Illuminated entry system 591

Indicators 122

Initialization
 Crawl Control 485
 Items to initialize 777
 Moon roof 218
 Parking Support Brake 393
 Power back door 185
 Power windows 214
 Tire pressure warning system 667

Inside door handle lights 589

Inside rear view mirror 210

**Installing a child restraint system to
 a front passenger seat 55, 88**

Interior lights 589
 Switch 590

Intrusion sensor 112

ISOFIX rigid anchors 81, 96

J

Jack
 Vehicle-equipped jack 715

Jack handle 715

Jam protection function
 Front seats 195
 Moon roof 217
 Power back door 182
 Power windows 214

K

Keyless entry
 Smart entry & start system 190
 Wireless remote control 167

Keys 166
 Battery-saving function 192
 Electronic key 166
 Engine switch 256
 If the electronic key does not operate
 properly 727
 If you lose your keys 727
 Key number plate 166
 Keyless entry 167, 190
 Mechanical key 168
 Replacing the battery 679
 Warning buzzer 191
 Wireless remote control key 167

Knee airbags 43

L

Lane Departure Alert with Yaw
Assist Function (LDA) 324
 Operation 324
 Warning messages 330

Lane Tracing Assist (LTA) 314
 Operation 314
 Warning messages 323

Language (multi-information display) 144, 154, 762

LDA (Lane Departure Alert with Yaw Assist Function) 324
 Operation 324
 Warning messages 330

Lever
 Auxiliary catch lever 640
 Hood lock release lever 640
 Shift lever 261, 264
 Turn signal lever 268
 Wiper lever 288, 292

License plate lights
 Replacing light bulbs 685
 Switch 275

Light
 Cornering lights 279

Light bulbs
 Replacing 685
 Wattage 758

Lights
 AHB (Automatic High Beam) 284
 AHS (Adaptive High-beam System) 280
 Extended Headlight Lighting 277
 Fog light switch 287
 Front interior lights 590
 Headlight switch 275
 Illuminated entry system 591
 Interior light list 589
 Interior lights 590
 Personal lights 590
 Replacing light bulbs 685
 Turn signal lever 268
 Vanity lights 607

Lock steering column 257

LTA (Lane Tracing Assist) 314
 Operation 314
 Warning messages 323

Luggage compartment light 175, 181

Luggage cover 600

M

Maintenance
 Do-it-yourself maintenance 638
 Maintenance data 742
 Maintenance requirements 626

Malfunction indicator lamp 699

Manual headlight leveling dial 277

Menu icons 138, 147

Meter
 Clock 131, 135
 Indicators 122
 Meter control switches 137, 147
 Meters 129, 133
 Multi-information display 137, 146
 Settings 141, 151, 761
 Units 144, 154
 Warning lights 698
 Warning messages 145, 155, 709

Meter control switches 137, 147

Mirrors
 Inside rear view mirror 210
 Outside rear view mirror defoggers 559, 571
 Outside rear view mirrors 211
 Vanity mirrors 607

Moon roof
 Door lock linked moon roof operation 217
 Jam protection function 217
 Operation 217
 Warning message 218

MP3 disc 518

Multi-information display
 Audio system-linked display 140, 150
 Changing the display 137, 147
 Cruise control 358
 Display contents 137, 146
 Driving information display 138, 148
 Driving support system information display 140, 150

Dynamic radar cruise control with full-speed range 335
 Dynamic radar cruise control 348
 Eco Driving Indicator 139, 149
 Language 144, 154, 762
 LDA (Lane Departure Alert with Yaw Assist Function) 324
 LTA (Lane-Tracing Assist) 320
 Menu icons 138, 147
 Meter control switches 137, 147
 Navigation system-linked display 140, 150
 PCS (Pre-Collision System) 302
 Pop-up display 144, 154
 RSA (Road Sign Assist) 331
 Settings 141, 151, 761
 Suggestion function 145, 155
 Tire pressure 663
 Toyota parking assist-sensor 372
 Units 144, 154, 762
 Vehicle information display 140, 150
 Warning message display .. 145, 155
 Warning messages 709
Multi Terrain ABS (Anti-lock Brake System) 494
Multi-terrain Monitor 421
 How to switch the display 425
 If you notice any symptoms 469
 Screen display 421
Multi-terrain Select 486
My Settings 224

N

nanoe™ X 560, 572
Navigation system-linked display 140, 150

O

Odometer 129, 133
Odometer and trip meter display

 “ODO TRIP” switch 131, 135
“ODO TRIP” switch 131, 135
Off-road precautions 502
Oil
 Engine oil 748
 Front differential oil 754
 Rear differential oil 754
 Transfer oil 756
Opener
 Back door 175, 177
 Fuel filler door 295
 Hood 640
Open tray 598
Outer foot lights
 Replacing light bulbs 685
Outside rear view mirrors 211
 Adjusting and folding 211
 BSM (Blind Spot Monitor) 368
 Folding and extending 212
 Linked mirror function when reversing 213
 Mirror position memory 220
 Outside rear view mirror defoggers 559, 571
 RCTA (Rear Cross Traffic Alert) function 379
Outside temperature 129, 133
Overheating 736

P

Parking assist sensors (Toyota parking assist-sensor) 372
Parking brake
 Operation 269
 Parking brake engaged warning buzzer 271
 Warning light 705
 Warning message 271
Parking Support Brake (PKSB) ... 388
 Parking Support Brake function (rear pedestrians) 399

- Parking Support Brake function (rear-crossing vehicles) 397
- Parking Support Brake function (static objects) 394
- Warning light 702
- Warning message 392
- PCS (Pre-Collision System)**
 - Enabling/disabling the pre-collision system 306
 - Function 302
 - Warning light 700
 - Warning message 300, 712
- Personal lights** 590
 - Switch 590
- Pintle hook** 246
- PKSB (Parking Support Brake)** ... 388
 - Parking Support Brake function (rear pedestrians) 399
 - Parking Support Brake function (rear-crossing vehicles) 397
 - Parking Support Brake function (static objects) 394
 - Warning light 702
 - Warning message 392
- Power back door switch** 177
- Power easy access system** 220
- Power outlet** 607
- Power steering**
 - Warning light 700
- Power windows**
 - Jam protection function 214
 - Window lock switch 216
- Pre-Collision System (PCS)**
 - Enabling/disabling the pre-collision system 306
 - Function 302
 - Warning light 700
 - Warning message 300, 712
- Dynamic radar cruise control with full-speed range** 335
- Dynamic radar cruise control** 348
- Radiator** 649
- Radio** 517
- RCD (Rear Camera Detection)** 384
 - Function 384
 - Warning message 386
- RCTA (Rear Cross Traffic Alert)** .. 379
 - RCTA Function 379
- RCTA**
 - Function 379
 - Warning message 380
- RCTA function** 380
- Rear automatic air conditioning system** 580
- Rear cooler system** 578
- Rear Cross Traffic Alert (RCTA)** .. 379
- Rear differential lock system** 480
- Rear fog light**
 - Replacing light bulbs 685
 - Switch 287
- Rear passengers' seat belt reminder light** 707
- Rear seat** 196
 - Adjustment 196
 - Head restraints 205
 - Seat heaters 585
 - Seat ventilators 587
 - Stowing the third seats 201
 - Tumbling the second seats 197
- Rear turn signal lights**
 - Replacing light bulbs 685
 - Turn signal lever 268
 - Wattage 758
- Rear view mirror**
 - Inside rear view mirror 210
 - Outside rear view mirrors 211
- Rear view monitor system** 401
 - Driving precautions 402
 - Screen display 401

R

Radar cruise control

Using the system 401

Rear window defogger 559, 571

Rear window wiper 292

Refueling 294

Capacity 747

Fuel types 747

Opening the fuel tank cap 295

Replacing

Electronic key battery 679

Fuses 681

Light bulbs 685

Tires 714

Wireless remote control battery . 679

Road Sign Assist (RSA) 331

RSA (Road Sign Assist) 331

S

Seat belt reminder light 706, 707

Seat belts 38

Adjusting the seat belt shoulder anchor height 40

Child restraint system installation 79, 91

Cleaning and maintaining the seat belt 623

Emergency Locking Retractor 40

How to wear your seat belt 39

How your child should wear the seat belt 40

Pregnant women, proper seat belt use 39

Reminder light and buzzer . 706, 707

Seat belt pretensioners 41

SRS warning light 699

Seat heaters 583

Seat position memory 220

Seats

Adjustment precautions 195

Adjustment 195, 196

Child restraint system installation 54

Child seats/child restraint system installation 54, 85

Cleaning 623

Driving position memory 220

Head restraint 205

Power easy access system 220

Properly sitting in the seat 37

Seat heaters 583

Seat position memory 220

Seat ventilators 583

Seat ventilators 583

Secondary Collision Brake 496

Sensor

Automatic headlight system 276

BSM (Blind Spot Monitor) 368

Hands Free Power Back Door . 179, 180

Inside rear view mirror 211

LDA (Lane Departure Alert with Yaw Assist Function) 324

LTA (Lane Tracing Assist) 314

Parking Support Brake function (rear-crossing vehicles) 368

Parking Support Brake function (static objects) 372

Power back door 182

Rain-sensing windshield wipers . 290

RCTA 368

Tilt sensor 112

Toyota parking assist-sensor 372

Toyota Safety Sense 297

Shift lever 261, 264

Automatic transmission 261, 264

If the shift lever cannot be shifted from P 262, 266

Shift lock system 262, 266

Side airbags 43

Side doors 169

Side mirrors 211

Adjustment 212

BSM (Blind Spot Monitor) 367

Folding and extending 212

- Heaters 559, 571
- Linked mirror function when reversing 213
- Mirror position memory 221
- RCTA (Rear Cross Traffic Alert) 379
- Side turn signal lights**
 - Replacing light bulbs 685
 - Turn signal lever 268
- Side windows** 214
- Smart entry & start system** 190
 - Antenna location 190
 - Entry functions 169, 175
 - Starting the engine 256
 - Warning message 709
- Snow tires** 504
- “SOS” button** 102, 105
- Spare tire**
 - Storage location 715
- Spark plug** 754
- Specifications** 742
- Speedometer** 129, 133
- Sport mode** 473
- Steering lock** 257
 - Column lock release 257
 - Steering lock system warning message 257
- Steering wheel**
 - Adjustment 208
 - Audio switches 513
 - Auto tilt away 209
 - Heated steering wheel 583
 - Meter control switches 137, 147
 - Power easy access system 220
 - Steering wheel position memory 221
 - Telephone switch 538
- Stop lights**
 - Replacing light bulbs 685
- Stop & Start system**
 - Function 361
- Storage feature** 593
- Storage precautions** 594
- Stuck**
 - If the vehicle becomes stuck 739
- Suggestion function** 145, 155
- Sunshade** 217
- Sun visors** 607
- Switches**
 - “SOS” button 102, 105
 - Adaptive High-beam System switch 281
 - Audio remote control switches ... 513
 - Automatic High Beam switch 284
 - Brake hold switch 272
 - Cruise control switch 358
 - DAC/CRAWL 489
 - Door lock switch 171
 - DPF system switch 492
 - DRIVE MODE switch 473
 - Driving mode select switch 473
 - Driving position memory switches 221
 - Dynamic radar cruise control with full-speed range 335
 - Dynamic radar cruise control 348
 - Emergency flashers switch 690
 - Engine switch 256
 - Fog light switch 287
 - Headlight switch 275
 - Heated steering wheel 584
 - Ignition switch 256
 - Intrusion sensor cancel switch ... 112
 - LDA switch 328
 - Light switch 275
 - LTA switch 319
 - Meter control switches 137, 147
 - Moon roof switches 217
 - MTS 486
 - Outside rear view mirror switches 212
 - Parking brake switch 269
 - PCS (Pre-Collision System) 306
 - Phone switch 538

PKSB (Parking Support Brake).. 390
 Power back door switches 177
 Power window switch.....214
 Rear window and outside rear view
 mirror defoggers switch ... 559, 571
 Rear window wiper and washer
 switch.....292
 Seat heater switches..... 584
 Turn Assist switch 482
 Vehicle-to-vehicle distance switch
 335, 348
 Ventilators (seat ventilators) 586
 VIEW switch..... 424
 VSC OFF switch 496
 Window lock switch.....216
 Windshield defogger switch559, 571
 Windshield wipers and washer
 switch.....288
 Wireless charger switch 611

T

Tachometer 129, 133
Tail lights
 Replacing light bulbs..... 685
 Switch 275
Theft deterrent system
 Alarm..... 111
 Double locking system 110
 Engine immobilizer system 109
 Intrusion sensor 112
 Tilt sensor 112
Things you should know
 If you notice any symptoms
 405, 418, 469
Tilt sensor 112
Tire inflation pressure
 Warning light..... 706
Tire pressure warning system..... 663
 Function 663
 Initializing 667
 Installing tire pressure warning

 valves and transmitters 666
 Registering ID codes..... 669
 Warning light 706
Tires 662
 Chains 506
 Checking 662
 If you have a flat tire..... 714
 Inflation pressure..... 674
 Replacing 714
 Rotating tires 663
 Size 757
 Snow tires 504
 Spare tire..... 714
 Tire pressure warning system 663
 Warning light 706
Tools 715
Top strap 83, 100
Top tether anchorages 83, 100
Towing
 Emergency towing..... 693
 Towing hook..... 695
 Trailer sway control 495
 Trailer towing..... 239
Toyota multi-operation touch 602
Toyota parking assist monitor 408
 Driving precautions 408
 Screen display..... 409
 Using the system..... 410
Toyota parking assist-sensor 372
 Function 372
 Warning message 374
Toyota Safety Sense..... 297
 AHB (Automatic High Beam)..... 284
 AHS (Adaptive High-beam System)
 280
 Dynamic radar cruise control with
 full-speed range 335
 Dynamic radar cruise control 348
 LDA (Lane Departure Alert with Yaw
 Assist Function) 324
 LTA (Lane Tracing Assist)..... 314

PCS (Pre-Collision System) 302
 RSA (Road Sign Assist) 331
Traction control (TRC) 495
Trailer sway control 495
Trailer towing 239
Transmission
 Automatic transmission 261, 264
 M mode 263
 S mode 267
TRC (Traction Control) 495
Trip meters 129, 133
Turn signal lights
 Replacing light bulbs 685
 Turn signal lever 268

U

USB charging ports 609
USB port 514

V

Vanity lights 607
Vanity mirrors 607
Vehicle data recordings 9
Vehicle identification number 744
Vehicle Stability Control (VSC) ... 495
Ventilators (seat ventilators) 583
Voltmeter 129, 133
VSC (Vehicle Stability Control) ... 495

W

Warning buzzers

Approach warning 342, 354
 Brake hold 705
 Brake Override System 703
 Brake system 698
 Downshifting 264, 268
 Drive-Start Control 703
 High coolant temperature 699
 LDA (Lane Departure Alert with Yaw

Assist Function) 324, 701
 Low engine oil pressure 699
 LTA (Lane Tracing Assist) .. 314, 701
 Pre-collision warning 303
 RCTA (Rear Cross Traffic Alert) 379
 RSA (Road Sign Assist) 331
 Seat belt reminder 706, 707
 Toyota parking assist-sensor 372
 Vehicle sway warning 318, 327

Warning lights

ABS 700
 Brake hold operated indicator ... 705
 Brake Override System 703
 Brake system 698
 Center differential lock indicator .704
 Charging system 698
 Drive-Start Control 703
 Front differential lock indicator ... 704
 High coolant temperature 699
 LDA indicator 701
 Low AdBlue™ level 705
 Low engine oil pressure 699
 Low fuel level 705
 Low speed four-wheel drive indicator
 light 704
 LTA indicator 701
 Malfunction indicator lamp 699
 Parking brake indicator 705
 PCS (Pre-Collision System) 700
 PKSB (Parking Support Brake) .. 703
 PKSB OFF indicator 702
 Power steering 700
 RCD OFF indicator 702
 RCTA OFF indicator 701
 Rear differential lock indicator 705
 Seat belt reminder light 706, 707
 Slip indicator 704
 SRS 699
 Stop & Start cancel indicator 703
 Tire pressure 706
 Toyota parking assist-sensor OFF

indicator 702

Warning messages..... 709

Washer

 Checking 652

 Low washer fluid warning message
 652, 709

 Preparing and checking before win-
 ter 504

 Switch 288, 292

Washing and waxing 620

Wheels 675

 Replacing wheels..... 714

Window glasses

 Power windows 214

Window lock switch 216

Windows

 Power windows 214

 Rear window defogger 559, 571

 Washer..... 288, 292

Windshield defogger 559, 571

Windshield wiper de-icer 563, 575

Windshield wipers

 Intermittent windshield wipers 288

 Position 288

Winter driving tips 504

Wireless charger 610

Wireless remote control..... 167

 Battery-saving function 192

 Locking/Unlocking..... 167

 Replacing the battery 679

WMA disc 518

listed below.

- Navigation system
- Audio system

**Toyota Motor Europe NV/SA,
Avenue du Bourget 60 - 1140
Brussels, Belgium
www.toyota-europe.com**

**For vehicles with navigation
system or multimedia sys-
tem, refer to “Navigation and
Multimedia System Owner’s
Manual” for information
regarding the equipment**



Certifications

ERA-GLONASS/EVAK

Подтверждение соответствия Минкомсвязи России:

Декларация соответствия №Д-МДРТ-12465 от 21.10.2019 года, действительна до 21.10.2024 года, зарегистрирована в Федеральном агентстве связи 01.11.2019 года

Smart entry & start system and engine immobilizer system

- For vehicles sold in Tahiti

<p>Transmitter: Model: TMLF19D-1 Operation frequency: 134.2kHz Maximum output power (ERP): 0.41mW Manufacturer: TOYOTA MOTOR CORPORATION Address:1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan</p>	00
<p>Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.denso.com/global/en/contact-us/doc/</p>	01 81
<p>TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.denso.com/global/en/contact-us/doc/</p>	02 81
<p>Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.denso.com/global/en/contact-us/doc/</p>	03 81
<p>Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://www.denso.com/global/en/contact-us/doc/</p>	04 81
<p>Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www.denso.com/global/en/contact-us/doc/</p>	05 81

<p>Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.denso.com/global/en/contact-us/doc/</p>	06 81
<p>Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.denso.com/global/en/contact-us/doc/</p>	07 81
<p>Με την παρούσα ο/η TOYOTA MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://www.denso.com/global/en/contact-us/doc/</p>	08 81
<p>Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.denso.com/global/en/contact-us/doc/</p>	09 81
<p>Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.denso.com/global/en/contact-us/doc/</p>	10 81
<p>O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://www.denso.com/global/en/contact-us/doc/</p>	11 81

B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: https://www.denso.com/global/en/contact-us/doc/	12 81
Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www.denso.com/global/en/contact-us/doc/	13 81
TOYOTA MOTOR CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://www.denso.com/global/en/contact-us/doc/	14 81
TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://www.denso.com/global/en/contact-us/doc/	15 81
Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://www.denso.com/global/en/contact-us/doc/	16 81
TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: https://www.denso.com/global/en/contact-us/doc/	17 81

Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.denso.com/global/en/contact-us/doc/	18 81
Ar šo TOYOTA MOTOR CORPORATION deklarė, ka radioiekārta atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso.com/global/en/contact-us/doc/	19 81
TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.denso.com/global/en/contact-us/doc/	20 81
Hér með lýsir TOYOTA MOTOR CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskípun 2014/53/EU. Samræmisýfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/	21 81
TOYOTA MOTOR CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU. Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettsadresse: https://www.denso.com/global/en/contact-us/doc/	22 81
С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/	23 81

<p>Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: https://www.denso.com/global/en/contact-us/doc/</p>	24 81
<p>TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: https://www.denso.com/global/en/contact-us/doc/</p>	25 81
<p>Овиме, TOYOTA MOTOR CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU. Цео текст ЕУ декларације о усаглашености доступан је на следећој интернет адреси: https://www.denso.com/global/en/contact-us/doc/</p>	26 81
<p>Amb aquest document, TOYOTA MOTOR CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE. El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet: https://www.denso.com/global/en/contact-us/doc/</p>	27 81
<p>Işbu belge; TOYOTA MOTOR CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder. AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur: https://www.denso.com/global/en/contact-us/doc/</p>	28 81
<p>Me anë të kësaj deklaratë, subjekti TOYOTA MOTOR CORPORATION deklaroi se pajisjet radio është në përputhje me këtë rregull teknik për pajisjet radio dhe fundore të komunikimeve elektronike. Teksti i plotë i Deklaratës së Konformitetit është i disponueshëm në adresën e mëposhtme të internetit: https://www.denso.com/global/en/contact-us/doc/</p>	29 811

► For vehicles sold in Ukraine

передавач: модель: TMLF19D-1
сму́гу радіочастот: 134.2 кГц
максимальну потужність
випромінювання (ERP): 0.41мВт
виробник: TOYOTA MOTOR CORPORATION
адреса: 1, Toyota-Cho, Toyota, Aichi, 471-8572, Japan
справжнім TOYOTA MOTOR CORPORATION заявляє, що тип
радіообладнання відповідає Технічному регламенту
радіообладнання;
повний текст декларації про відповідність доступний на
веб-сайті за такою адресою:
<https://www.denso.com/global/en/contact-us/doc/>



► For vehicles sold in the Dominican Republic and Federated States of Micronesia

FCC ID: NI4TMLF19D-1

NOTE


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► For vehicles sold in Argentina

TOYOTA
Model: TMLF19D-1



► For vehicles sold in Jamaica

This product has been Type Approved by Jamaica: SMA – TMLF19D-1.

► For vehicles sold in Paraguay

[Para los vehículos que se venden en Paraguay]
Nombre del proveedor en Paraguay: Toyotoshi S.A.
Dirección: Av. Mariscal López esq. Victor Cáceres, San
Lorenzo, Central, Paraguay

► For vehicles sold in Nigeria

Model: TMLF19D-1

Connection and use of this communications equipment is permitted by
the Nigerian Communications Commission.

Smart entry & start system

- For vehicles sold in Federated States of Micronesia and Saint Martin

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type B3N2K2R is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.tokai-rika.co.jp/pc>

Frequency band: 433.050 - 434.790 MHz

Maximum radio-frequency power: 10mW(ERP)

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi B3N2K2R on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<http://www.tokai-rika.co.jp/pc>

Radiotaajuus: 433.050 - 434.790 MHz

suurin mahdollinen lähetysteho: 10mW(ERP)

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur B3N2K2R conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<http://www.tokai-rika.co.jp/pc>

Frequentieband: 433.050 - 434.790 MHz

Maximaal radiofrequentievermogen: 10mW(ERP)

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type B3N2K2R est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<http://www.tokai-rika.co.jp/pc>

Bande de fréquences: 433.050 - 434.790 MHz

Puissance de radiofréquence maximale: 10mW(ERP)

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning B3N2K2R överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<http://www.tokai-rika.co.jp/pc>

Frekvensband: 433.050 - 434.790 MHz

Maximal radiofrekvensseffekt: 10mW(ERP)

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen B3N2K2R er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://www.tokai-rika.co.jp/pc>

Frekvensbånd: 433.050 - 434.790 MHz

Maksimal radiofrekvensseffekt: 10mW(ERP)

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp B3N2K2R der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://www.tokai-rika.co.jp/pc>

Frequenzband: 433.050 - 434.790 MHz

Abgestrahlte maximale Sendeleistung: 10mW(ERP)

Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός B3N2K2R πληροί την οδηγία 2014/53/EE.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<http://www.tokai-rika.co.jp/pc>

Ζώνη συχνότητων: 433.050 - 434.790 MHz

Μέγιστη ισχύς ραδιοσυχνότητας: 10mW(ERP)

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio B3N2K2R è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://www.tokai-rika.co.jp/pc>

Banda di frequenza: 433.050 - 434.790 MHz

Potenza massima radiofrequenza: 10mW(ERP)

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico B3N2K2R es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<http://www.tokai-rika.co.jp/pc>

Banda de frecuencia: 433.050 - 434.790 MHz

Potencia máxima de radiofrecuencia: 10mW(ERP)

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio B3N2K2R está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<http://www.tokai-rika.co.jp/pc>

Banda de frequência: 433.050 - 434.790 MHz

Potência máxima de radiofrequências: 10mW(ERP)

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju B3N2K2R huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<http://www.tokai-rika.co.jp/pc>

Tíðnisvið: 433.050 - 434.790 MHz

Hámarks útværpsbylgjutíðni: 10mW(ERP)

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp B3N2K2R vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<http://www.tokai-rika.co.jp/pc>

Sagedusriba: 433.050 - 434.790 MHz
Maksimaalne saatevõimsus: 10mW(ERP)

TOKAI RIKA CO., LTD. igazolja, hogy a B3N2K2R típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<http://www.tokai-rika.co.jp/pc>

Frekvenciasáv: 433.050 - 434.790 MHz
Maximális jelerősség: 10mW(ERP)

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu B3N2K2R je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<http://www.tokai-rika.co.jp/pc>

Frekvenčné pásmo: 433.050 - 434.790 MHz
Maximálny rádiový výkon: 10mW(ERP)

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení B3N2K2R je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://www.tokai-rika.co.jp/pc>

Kmitočtové pásmo: 433.050 - 434.790 MHz
Maximální radiofrekvenční výkon: 10mW(ERP)

TOKAI RIKA CO., LTD. potvrzuje, da je tip radijske opreme B3N2K2R skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<http://www.tokai-rika.co.jp/pc>

Frekvenčni pas: 433.050 - 434.790 MHz
Največja moč radijske frekvence: 10mW(ERP)

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas B3N2K2R atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<http://www.tokai-rika.co.jp/pc>

Dažnių juosta: 433.050 - 434.790 MHz
Didžiausia radijo dažnių galia: 10mW(ERP)

Ar šo TOKAI RIKAI CO., LTD. deklarē, ka radioiekārta B3N2K2R atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<http://www.tokai-rika.co.jp/pc>

Frekvenču josla: 433.050 - 434.790 MHz
Maksimālā radiofrekvenču jauda: 10mW(ERP)

TOKAI RIKAI CO., LTD. niniešzym oświadcza, że typ urządzenia radiowego B3N2K2R jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<http://www.tokai-rika.co.jp/pc>

Zakres częstotliwości: 433.050 - 434.790 MHz
Maksymalna moc częstotliwości radiowej: 10mW(ERP)

TOKAI RIKAI CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð B3N2K2R er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisýfirlýsingin er tiltæk á eftirfarandi vefslóð:

<http://www.tokai-rika.co.jp/pc>

Tíðnisvið: 433.050 - 434.790 MHz
Hámarks útværpsbylgjutíðni: 10mW(ERP)

TOKAI RIKА CO., LTD. erklærer herved at radioutstyrtypen B3N2K2R er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

<http://www.tokai-rika.co.jp/pc>

Frekvensbånd: 433.050 - 434.790 MHz
Maksimal radiofrekvenseffekt: 10mW(ERP)

С настоящото TOKAI RIKА CO., LTD. декларира, че този тип радиосъоръжение B3N2K2R е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

<http://www.tokai-rika.co.jp/pc>

Радиочестотна лента: 433.050 - 434.790 MHz
Максимална радиочестотна мощност: 10mW(ERP)

Prin prezenta, TOKAI RIKА CO., LTD. declară că tipul de echipamente radio B3N2K2R este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

<http://www.tokai-rika.co.jp/pc>

Banda de frecvență: 433.050 - 434.790 MHz
Puterea maximă de radiofrecvență: 10mW(ERP)

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa B3N2K2R u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

Frekvencijski opseg: 433.050 - 434.790 MHz
Maksimalna radio-frekvencijska snaga: 10mW(ERP)

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaroron se tipi i radiopajisjes B3N2K2R është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:

<http://www.tokai-rika.co.jp/pc>

Brezi i frekuencës: 433.050 - 434.790 MHz
Fuqia maksimale e radiofrekuencës: 10mW(ERP)

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa B3N2K2R u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<http://www.tokai-rika.co.jp/pc>

Frekvencijski pojas: 433.050 - 434.790 MHz
Maksimalna RF snaga: 10mW(ERP)

Ovim TOKAI RIKAI CO., LTD. potvrđuje da je radio-oprema tipa B3N2K2R u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

Frekventni opseg: 433.050 - 434.790 MHz

Maksimalna radio-frekventna snaga: 10mW(ERP)

TOKAI RIKAI CO., LTD., işbu belgeyle telsiz cihazı türünün B3N2K2R 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

<http://www.tokai-rika.co.jp/pc>

Frekans bandı: 433.050 - 434.790 MHz

Maksimum radyo frekans gücü: 10mW(ERP)



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

⚠: This mark is a safety/warning mark.

- Do not ingest battery.

Chemical Burn Hazard

- This product contains a coin / button cell battery.
- If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION

- Risk of explosion if the battery is replaced by an incorrect type.
- Replace battery with the same type.

CAUTION

- Risk of explosion or the leakage of flammable liquid or gas.
- Do not use in /store in /bring into environment of extremely high temperature or extremely low pressure due to the very high altitude.
- Do not attempt to burn, crush, or cut used battery.

⚠ : Tämä on turva-/varoituserkki.

- Paristoa ei saa laittaa suuhun.

Kemiallisen palovamman vaara


- Laitteessa on kolikko-/nappiparisto.
- Elimistöön joutunut kolikko-/nappiparisto voi aiheuttaa vakavia sisäisiä palovammoja vain 2 tunnissa, jolloin seurauksena voi olla hengen menetys.
- Uudet ja käytetyt paristot on pidettävä poissa lasten ulottuvilta.
- Jos paristolokero ei sulkeudu kunnolla, laitteen käyttö on lopetettava, ja laite on pidettävä poissa lasten ulottuvilta.
- Jos on syytä epäillä, että paristo on nielaistu tai muuten päässyt elimistöön, ota välittömästi yhteyttä lääkäriin.

TÄRKEÄ HUOMAUTUS

- Käytetyn pariston vaihtaminen tyypiltään väärään voi aiheuttaa räjähdysvaaran.
- Vaihda paristo tyypiltään samanlaiseen.

TÄRKEÄ HUOMAUTUS

- Räjähdysvaara tai syttyvän nesteen tai kaasun vuotovaara.
- Ei saa käyttää/säilyttää/tuoda lämpötilaltaan tai merenpinnasta mitattuna erittäin korkeaan ympäristöön, jossa ilmanpaine on erittäin alhainen.
- Käytettyä paristoa ei saa polttaa, murskata tai halkaista.

 : Dit teken is een veiligheids-/waarschuwingsteken.

- Slik de batterij niet in.

Risico op chemische brandwonden


- Dit product bevat een munt-/knoopcelbatterij.
- Als de munt-/knoopcelbatterij wordt ingeslikt, kan het al binnen 2 uur ernstige interne brandwonden veroorzaken en de dood tot gevolg hebben.
- Houd nieuwe en gebruikte batterijen buiten bereik van kinderen.
- Als het batterijcompartiment niet goed sluit, stop dan met het gebruik van het product en houd het buiten bereik van kinderen.
- Als u denkt dat batterijen zijn ingeslikt of in enig deel van het lichaam zijn gestopt, roep dan onmiddellijk medische hulp in.

VOORZICHTIG

- Er bestaat een risico op ontploffing als de batterij wordt vervangen door een verkeerd type.
- Vervang de batterij door een van hetzelfde type.

VOORZICHTIG

- Er bestaat een risico op ontploffing of lekkage van brandbare vloeistof of gas.
- Niet gebruiken in/bewaren in/meenemen naar een omgeving met extreem hoge temperatuur of met extreem lage druk als gevolg van zeer grote hoogte.
- Een gebruikte batterij niet verbranden, platdrukken, of doorsnijden.

 : Ce pictogramme est une marque de sécurité/avertissement.

- Ne pas ingérer la pile.

Risques de brûlure chimique

- Ce produit contient une pile bouton.
- Si la pile bouton est avalée, elle peut causer de graves brûlures internes en seulement 2 heures et peut entraîner la mort.
- Conservez les piles neuves et usagées hors de portée des enfants.
- Si le compartiment de la pile ne ferme pas correctement, cessez d'utiliser le produit et conservez-le hors de portée des enfants.
- Si vous pensez que des piles ont pu être avalées ou placées à l'intérieur d'une partie du corps, consultez immédiatement un médecin.

AVERTISSEMENT

- Risque d'explosion si la pile est remplacée par un type incorrect.
- Remplacez la pile par une pile du même type.

AVERTISSEMENT

- Risque d'explosion ou de fuite de liquide ou de gaz inflammable.
- Ne jamais utiliser, stocker, placer dans un environnement à la température extrêmement élevée ou à la pression extrêmement basse en raison d'une très haute altitude.
- Ne jamais essayer de brûler, écraser ou couper des piles usagées.

⚠: Det här märket är ett säkerhets-/varningsmärke.

• Förtär inte batteriet.

Risk för kemisk brännskada

• Den här produkten innehåller ett mynt-/knappbatteri.

• Om mynt-/knappbatteriet sväljs kan det orsaka allvarliga interna brännskador på bara två timmar, vilket kan leda till dödsfall.

• Håll nya och använda batterier borta från barn.

• Om batterifacket inte stängs ordentligt, sluta använda produkten och håll den undan från barn.

• Om du misstänker att batterier har svalts eller placerats inuti någon del av kroppen, sök omedelbart läkarvård.

VARNING

• Risk för explosion om batteriet byts ut mot ett av fel typ.

• Byt ut batteriet mot ett av samma typ.

VARNING

• Risk för explosion eller läckage av brandfarliga vätskor och gaser.

• Använd inte, förvara inte och ta inte in i miljö med extremt hög temperatur eller extremt lågt tryck p.g.a. hög höjd.

• Försök inte bränna, krossa eller skära använt batteri.

⚠ : Dette mærke er et sikkerheds-/advarselsmærke.

• Batteriet må ikke indtages.

Fare for kemisk forbrænding

• Dette produkt indeholder et mønt-/knapcellebatteri.

• Hvis mønt-/knapcellebatteriet sluges, kan det medføre alvorlige indre forbrændinger i løbet af kun 2 timer og kan føre til dødsfald.

• Opbevar nye og brugte batterier utilgængeligt for børn.

• Hvis batterirummet ikke kan lukkes ordentligt, skal du indstille brugen af produktet og opbevare det utilgængeligt for børn.

• Hvis du har mistanke om, at der måske er blevet slugt batterier, eller batterier på anden måde er kommet ind i kroppen, skal du øjeblikkeligt søge lægehjælp.

FORSIGTIG

• Risiko for eksplosion, hvis batteriet udskiftes med en forkert type.

• Udskift batteriet med et batteri af samme type.

FORSIGTIG

• Risiko for eksplosion eller lækage af brændbar væske eller gas.

• Må ikke anvendes på/opbevares på/tages med til meget varme steder eller steder med meget lavt tryk som følge af ekstreme højder.

• Forsøg ikke at brænde, knuse eller adskille brugte batterier.

<p>⚠: Dieses Symbol ist ein Sicherheits-/Warnsymbol.</p> <ul style="list-style-type: none"> •Verschlucken Sie die Batterie nicht. <p>Verätzungsgefahr</p> <ul style="list-style-type: none"> •Dieses Produkt enthält eine Knopfzellenbatterie. •Falls die Knopfzellenbatterie verschluckt wird, kann dies innerhalb von nur 2 Stunden schwere innere Verätzungen verursachen und zum Tode führen. •Halten Sie neue und gebrauchte Batterien von Kindern fern. •Falls sich das Batteriefach nicht sicher schließen lässt, stellen Sie die Verwendung des Produkts ein und halten Sie es von Kindern fern. •Falls Sie glauben, dass Batterien eventuell verschluckt oder in einen Teil des Körpers eingeführt worden sind, begeben Sie sich sofort in ärztliche Behandlung. <p>ACHTUNG</p> <ul style="list-style-type: none"> •Es besteht Explosionsgefahr, falls die Batterie durch eine Batterie der falschen Art ersetzt wird. •Ersetzen Sie Batterien nur durch die gleiche Art. <p>ACHTUNG</p> <ul style="list-style-type: none"> •Es besteht Explosionsgefahr oder die Gefahr eines Austritts von brennbarer Flüssigkeit oder entzündlichem Gas. <ul style="list-style-type: none"> •Das Produkt darf nicht in Umgebungen mit hohen Temperaturen oder extrem niedrigem Luftdruck aufgrund von extremen Höhenlagen verwendet / aufbewahrt / gebracht werden. •Versuchen Sie nicht, gebrauchte Batterien zu verbrennen, zu zerstoßen oder zu schneiden.
<p>⚠: Το σήμα αυτό είναι ένα σήμα ασφαλείας/προειδοποίησης.</p> <ul style="list-style-type: none"> • Μην καταπίνετε την μπαταρία. <p>Κίνδυνος χημικού εγκαύματος</p> <ul style="list-style-type: none"> • Αυτό το προϊόν περιέχει μια μπαταρία σχήματος νομίσματος / κουμπιού. • Αν η μπαταρία σχήματος νομίσματος / κουμπιού καταποθεί, μπορεί να προκαλέσει σοβαρά εσωτερικά εγκαύματα σε μόλις 2 ώρες και μπορεί να επέλθει θάνατος. • Διατηρείτε τις καινούργιες και τις χρησιμοποιημένες μπαταρίες μακριά από παιδιά. • Εάν το διαμέρισμα της μπαταρίας δεν κλείνει καλά, σταματήστε τη χρήση του προϊόντος και κρατήστε το μακριά από παιδιά. • Αν νομίζετε ότι οι μπαταρίες ενδέχεται να έχουν καταποθεί ή τοποθετηθεί μέσα σε οποιοδήποτε μέρος του σώματος, ζητήστε αμέσως ιατρική φροντίδα. <p>ΠΡΟΣΟΧΗ</p> <ul style="list-style-type: none"> • Υπάρχει κίνδυνος έκρηξης εάν η μπαταρία αντικατασταθεί με μπαταρία εσφαλμένου τύπου. • Αντικαταστήστε την μπαταρία με μπαταρία του ίδιου τύπου. <p>ΠΡΟΣΟΧΗ</p> <ul style="list-style-type: none"> • Υπάρχει κίνδυνος έκρηξης ή διαρροής εύφλεκτων υγρών ή αερίων. <ul style="list-style-type: none"> • Μη χρησιμοποιείτε / αποθηκεύετε / μεταφέρετε το προϊόν σε περιβάλλον με εξαιρετικά υψηλή θερμοκρασία ή εξαιρετικά χαμηλή πίεση λόγω πολύ μεγάλου υψομέτρου. • Μην επιχειρήσετε να κάψετε, να συνθλίψετε ή να κόψετε μια χρησιμοποιημένη μπαταρία.

 : Questo è un simbolo di sicurezza/avvertenza.

- Non ingerire la batteria.

Pericolo di ustioni chimiche

- Questo prodotto contiene una batteria a bottone/moneta.
- Se la batteria a bottone/moneta viene ingerita, può causare gravi ustioni interne in sole 2 ore e provocare la morte.
- Tenere le batterie nuove e usate lontano dalla portata dei bambini.
- Se il vano batteria non si chiude in modo saldo, interrompere l'utilizzo del prodotto e tenerlo lontano dalla portata dei bambini.
- Se si ritiene che le batterie siano state ingerite o inserite in qualsiasi parte del corpo, consultare immediatamente un medico.

ATTENZIONE


- Rischio di esplosione in caso di sostituzione della batteria con una di tipo errato.
- Sostituire la batteria con una dello stesso tipo.

ATTENZIONE

- Rischio di esplosione o di perdita di liquidi o gas infiammabili.

- Non utilizzare / immagazzinare / portare in ambienti con temperatura estremamente alta o pressione estremamente alta a causa dell'elevata altitudine.

- Non provare a bruciare, schiacciare o tagliare la batteria usata.

 : Este símbolo es un símbolo de seguridad/precaución.

- No ingerir la batería.

Peligro de quemadura química

- Este producto contiene una batería de pila de botón.
- Si se ingiere la batería de pila de botón, esta puede causar graves quemaduras internas en solo 2 horas y puede provocar la muerte.
- Mantenga las baterías nuevas y usadas alejadas de los niños.
- Si el compartimento de la batería no se cierra correctamente, deje de usar el producto y manténgalo alejado de los niños.
- Si cree que las baterías hayan podido ser ingeridas o introducidas en alguna parte del cuerpo, busque inmediatamente atención médica.

ATENCIÓN

- Riesgo de explosión si la batería es reemplazada por una del tipo incorrecto.
- Reemplace la batería por una del mismo tipo.

ATENCIÓN

- Riesgo de explosión o escape de líquido o gas inflamable.

- No usar / almacenar / introducir en un ambiente de temperatura extremadamente alta o de presión extremadamente baja a causa de la alta altitud.

- No intente quemar, aplastar, o cortar la batería usada.

⚠: Esta marca é uma marca de segurança/aviso.

- Não ingerir a pilha.

Perigo de Queimadura Química

- Este produto contém uma pilha de tipo moeda/botão.
- Se a pilha de tipo moeda/botão for engolida, poderá causar queimaduras internas graves em apenas 2 horas e levar à morte.
- Manter as pilhas novas e usadas longe de crianças.
- Se o compartimento da pilha não se fechar completamente, cessar a utilização do produto e manter fora do alcance das crianças.
- Caso seja possível que as pilhas tenham sido engolidas ou colocadas dentro de qualquer parte do corpo, procurar cuidados médicos imediatamente.

CUIDADO

- Risco de explosão se a pilha for substituída por uma de tipo incorreto.
- Substituir a pilha por uma do mesmo tipo.

CUIDADO

- Risco de explosão ou fuga de líquidos ou gases inflamáveis.
- Não utilizar/armazenar/colocar em ambiente de temperatura extremamente alta, ou pressão extremamente baixa devido a altitude muito alta.
- Não tentar queimar, esmagar ou cortar a pilha usada.

⚠: Din il-marka hija marka ta' sigurtá/twissija.

- Tiblax il-batterija.

Periklu ta' Hruq Kimiku

- Dan il-prodott fih batterija munita / button cell.
- Jekk tinbela' l-batterija munita / button cell, tista' tikkawża hruq intern sever f'temp ta' sagħtejn biss u tista' twassal għall-mewt.
- Żomm il-batteriji għodda u użati 'l bogħod mit-tfal.
- Jekk il-kompartiment tal-batterija ma jagħlaqx sew, waqqaf l-użu tal-prodott u żommu 'l bogħod mit-tfal.
- Jekk taħseb li l-batteriji setgħu nbelgħu jew tpoġġew għewwa xi parti tal-gisem, fittex attenzjoni medika immedjata.

ATTENZJONI

- Riskju ta' splużjoni jekk il-batterija tiġi ssostitwita b'tip inkorrett.
- Ibdel il-batterija bl-istess tip.

ATTENZJONI

- Riskju ta' splużjoni jew tnixxija ta' likwidu jew gass f'jammabbli.
- Tużahx / taħznux / iġġibux f'ambjent ta' temperatura estremament għolja jew pressjoni estremament baxxa minħabba l-altitudni għolja ħafna.
- Tippruvax taħraq, tfarrak jew tqatta' l-batteriji użati.

⚠: See märk on ohutus-/hoiatusmärk.

- Ärge patareid alla neelake.

Keemilise põletuse oht

- See toode sisaldab mündi/nööbi tüüpi elemendiga patareid.
- Mündi/nööbi tüüpi elemendiga patarei allaneelamine võib põhjustada raskeid sisemisi põletusi juba 2 tunni jooksul ning võib lõppeda surmaga.
- Hoidke uued ja kasutatud patareid lastele kättesaamatus kohas.
- Kui patareipesa ei sulgu kindlalt, lõpetage toote kasutamine ja hoidke seda lastele kättesaamatus kohas.
- Kui te arvate, et patareid võivad olla alla neelatud või mistahes kehaossa sattunud, pöörduge viivitamatult arsti poole.

ETTEVAATUST

- Plahvatusoht vahetamisel vale tüüpi patareiga.
- Vahetage sama tüüpi patareiga.

ETTEVAATUST

- Plahvatuse või tuleohtliku vedeliku või gaasi lekke oht.
- Ärge kasutage, hoidke ega tooge keskkonda eriti kõrge temperatuuriga või eriti madala rõhuga väga suure kõrguse tõttu merepinnast.
- Ärge üritage põletada, purustada ega lõigata kasutatud patareid.

⚠ : Ez a jelzés biztonsági/figyelmeztető jelzés.

- Ne nyelje le az elemet.

Vegyí anyag okozta égésisérülés-veszély


- Ez a termék gombelemet tartalmaz.
- Amennyiben a gombelemet lenyeli, az mindössze 2 órán belül komoly belső égési sérüléseket okozhat és halálhoz vezethet.
- Az új és használt elemeket tartsa távol a gyermekektől.
- Amennyiben az elemtartó rekesz nem zárható biztonságosan, függeszse fel a termék használatát és tartsa gyermekektől távol.
- Amennyiben úgy véli, hogy az elemet lenyelték vagy bármely testrészbe helyezték, haladéktalanul forduljon orvoshoz.

VIGYÁZAT

- Nem megfelelő típusú csereelem használata robbanásveszélyes.
- Az elemcseréhez azonos típusú elemet használjon.

VIGYÁZAT

- Robbanásveszély vagy gyúlékony folyadékok vagy gázok szivárgása.
- Ne használja/ne tárolja/ne helyezze szélsőségesen magas hőmérsékletű környezetbe, és ne tegye ki a nagy magasságokban kialakuló rendkívül alacsony nyomásnak.
- A használt elemet ne kísérelje meg elégetni, összezúzni vagy szétvágni.

 : Toto je bezpečnostná/výstražná značka.

- Dbajte na to, aby nedošlo k prehltnutiu batérie.

Nebezpečenstvo poleptania chemikáliou


- Tento výrobok obsahuje mincovú/gombíkovú batériu.
- Ak dôjde k prehltnutiu mincovej/gombíkovej batérie, už v priebehu 2 hodín môže spôsobiť vážne vnútorné poleptanie a viesť k usmrteniu.
- Nové a použité batérie uchovávajte mimo dosahu detí.
- Ak sa priestor pre batériu nezatvorí bezpečne, prestaňte používať výrobok a uchovávajte ho mimo dosahu detí.
- Ak si myslíte, že mohlo dôjsť k prehltnutiu batérii alebo ich umiestneniu do ktorejkoľvek časti tela, okamžite vyhľadajte lekársku pomoc.

UPOZORNENIE

- Hrozí nebezpečenstvo výbuchu, ak sa batéria vymení za nesprávny typ.
- Vymeňte batériu za rovnaký typ.

UPOZORNENIE

- Nebezpečenstvo výbuchu alebo úniku horľavej kvapaliny alebo horľavého plynu.
- Nepoužívajte/neskladujte v prostredí/nepriťahajte do prostredia s mimoriadne vysokou teplotou, alebo mimoriadne nízkym tlakom v dôsledku veľmi vysokej nadmorskej výšky.
- Nepokúšajte sa spáliť, rozdrviť ani rozrezať použitú batériu.

 : Tento symbol je bezpečnostným/výstražným symbolom.

- Baterii nepolykejte.

Nebezpečí chemických popálenin

- Tento výrobok obsahuje mincovou/knoflíkovú baterii.
- Pokiaľ dojde ke spolknutiu mincové/knoflíkové baterie, môže za pouhých 2 hodiny spôsobiť závažné vnútorné popáleniny a v jejich dôsledku prípadne i smrť.
- Použité a nové batérie udržiňte mimo dosah detí.
- Pokiaľ nelze prostor pro baterii pevně uzavřít, přestaňte výrobek používat a udržiňte jej mimo dosah detí.
- Pokiaľ si myslíte, že mohlo dojsť ke spolknutiu baterie nebo jejímu vsunutiu dovnitř kterékoli části těla, okamžitě vyhledejte lékařskou pomoc.

UPOZORNĚNÍ

- Nebezpečí výbuchu v případě výměny baterie za nesprávny druh baterie.
- Proto baterii vždy vyměňte za jinou stejného typu.

UPOZORNĚNÍ

- Nebezpečí výbuchu nebo úniku hořlavé kapaliny či plynu.
- Nepoužívejte/neskladujte/nepřinášejte je do prostředí s nesmírně vysokou teplotou nebo nesmírně nízkým tlakem zapříčiněným vysokou nadmořskou výškou.
- Nesnažte se baterii spálit, rozdrtit či rozříznout.

⚠ : Ta oznaka je varnostna/opozorilna oznaka.

- Ne zaužijte baterije.

Nevarnost kemijske opekline

- Ta izdelek vsebuje gumbasto baterijo.
- Če se gumbasto baterijo zaužije, lahko to povzroči hude notranje opekline v le 2 urah in lahko vodi v smrt.
- Nove in rabljene baterije hranite izven dosega otrok.
- Če se predalček za baterijo ne zapira pravilno, prenehajte z uporabo izdelka in ga hranite izven dosega otrok.
- Če sumite, da je morda nekdo zaužil baterijo ali jo dal v kateri koli del telesa, takoj poiščite zdravniško pomoč.

POZOR

- Nevarnost eksplozije, če baterijo zamenjate z baterijo napačne vrste.
- Zamenjajte baterijo z istim tipom.

POZOR

- Tveganje za eksplozijo ali puščanje vnetljivih tekočin ali plinov.
- Ne uporabljajte/shranjujte/prinašajte v okolje izredno visoke temperature ali izredno nizkega tlaka zaradi zelo visoke nadmorske višine.
- Ne poskušajte zažigati, uničiti, ali rezati rabljene baterije.

⚠: Šis ženklas yra saugos/įspėjamosis ženklas.

- Neprarykite baterijos.

Cheminių nudegimų pavojus

- Šiame gaminyje yra monetos/sagos formos baterija.
- Prarijęs monetos/sagos formos bateriją, asmuo per 2 valandas gali patirti sunkius vidinius nudegimus ir netgi mirti.
- Naujas ir panaudotas baterijas laikykite vaikams nepasiekiamoje vietoje.
- Jei baterijų skyrelio nepavyksta tvirtai uždaryti, nebenaudokite gaminio ir laikykite jį vaikams nepasiekiamoje vietoje.
- Jei manote, kad baterijos buvo prarytos arba pateko į kūną, nedelsdami kreipkitės į gydytoją.

PERSPĖJIMAS

- Bateriją pakeitus netinkamo tipo baterija, kyla sprogdimo pavojus.
- Pakeiskite seną bateriją tik to paties tipo nauja baterija.

PERSPĖJIMAS

- Sprogdimo arba degių skysčių ar dujų nuotėkio pavojus.
- Negalima naudoti/laikyti/turėti labai aukštos temperatūros arba labai dideliame aukštyje esančioje itin žemo slėgio aplinkoje.
- Naudotos baterijos nebandykite deginti, ardyti ar perpjauti.

⚠ : Šī zīme ir drošības/brīdinājuma zīme.

- Nenorijiet bateriju.

Ķīmisku apdegumu briesmas

- Šis izstrādājums satur tabletes tipa bateriju.
- Ja ir norīta tabletes tipa baterija, tā 2 stundu laikā var radīt smagus apdegumus un izraisīt nāvi.
- Jaunas un lietotas baterijas uzglabājiet bērniem nepieejamā vietā.
- Ja bateriju nodalījumu nevar droši aizvērt, pārtrauciet lietot izstrādājumu un novietojiet to bērniem nepieejamā vietā.
- Ja jūsuprāt baterijas ir norītas vai ievietotas kādā ķermeņa daļā, nekavējoties vērsieties pēc medicīniskās palīdzības.

UZMANĪBU!

- Eksplozijas risks, ja baterija tiek nomainīta ar nepareiza tipa bateriju.
- Bateriju nomainiet pret tāda paša tipa bateriju.

UZMANĪBU!

- Eksplozijas vai uzliesmojoša šķidrums vai gāzes noplūdes risks.

- Nelietojiet, neuzglabājiet un neievietojiet vidē ar ļoti augstu temperatūru, kā arī vidē, kur ļoti lielā augstuma virs jūras līmeņa dēļ ir ļoti zems spiediens.
- Nemēģiniet sadedzināt, sagraut vai sagriezt nolietoto bateriju.

⚠ : ten symbol oznacza niebezpieczeństwo/ostrzeżenie.

- Nie połykać baterii.

Ryzyko oparzenia chemicznego

- Ten produkt zawiera baterię guzikową.
- Połknięta bateria guzikowa może spowodować poważne oparzenia wewnętrzne w czasie jedynie 2 godzin i prowadzić do śmierci.
- Przechowywać nowe i zużyte baterie z dala od dzieci.
- Jeśli solidne zamknięcie komory baterii jest niemożliwe, zaprzestać użytkowania produktu i przechowywać go w miejscu niedostępnym dla dzieci.
- W przypadku podejrzenia, że mogło dojść do połknięcia baterii lub ich umieszczenia w dowolnym otworze ciała, niezwłocznie uzyskać pomoc lekarską.

PRZESTROGA


- Istnieje ryzyko wybuchu, jeśli bateria zostanie zastąpiona baterią niewłaściwego typu.
- Wymieniać baterię na baterię tego samego typu.

PRZESTROGA

- Ryzyko wybuchu lub wycieku łatwopalnego płynu lub gazu.

- Nie używać i nie przechowywać w otoczeniu o skrajnie wysokiej temperaturze lub skrajnie niskim ciśnieniu wynikającym z bardzo dużej wysokości ani nie wносить do takiego otoczenia.

- Nie podejmować prób spalania, zgniecenia lub przecięcia zużytej baterii.

 : Този знак е знак за безопасност/предупреждение.

- Не поглъщайте батерията.

Опасност от химическо изгаряне

- Този продукт съдържа плоска/бутонна батерия.
- Ако плоската/бутонна батерия бъде погълната, тя може да причини тежки вътрешни изгаряния само за 2 часа и може да доведе до смърт.
- Пазете новите и използваните батерии далеч от деца.
- Ако отделението за батериите не се затваря добре, спрете да използвате продукта и го дръжте далеч от деца.
- Ако смятате, че батериите може да са били погълнати или поставени в някоя част на тялото, незабавно потърсете медицинска помощ.

ВНИМАНИЕ


- Опасност от експлозия, ако батерията бъде сменена с неправилен тип.
- Сменете батерията със същия вид.

ВНИМАНИЕ

- Опасност от експлозия или изтичане на запалими течности или газове.

- Не използвайте/съхранявайте/носете в среда с изключително висока температура или изключително ниско налягане, причинено от голямата височина.

- Не се опитвайте да изгоряте, смачквате или режете използваната батерия.

 : Acest marcaj este un marcaj de securitate/avertizare.

- Nu ingerați bateria.

Pericol de arsuri chimice

- Acest produs conține o baterie tip pastilă.
- Dacă bateria tip pastilă este înghițită, aceasta poate cauza arsuri interne grave în numai 2 ore și poate duce la deces.
- Nu lăsați bateriile noi și bateriile uzate la îndemâna copiilor.
- În cazul în care compartimentul bateriei nu se închide bine, încetați utilizarea produsului și nu îl lăsați la îndemâna copiilor.
- Dacă bănuți că este posibil ca bateriile să fi fost înghițite sau introduse în orice parte a corpului, consultați imediat medicul.

ATENȚIE

- Risc de explozie dacă bateria este înlocuită cu un tip incorect.
- Înlocuiți bateria cu una de același tip.

ATENȚIE

- Risc de explozie sau de scurgeri de lichide sau gaze inflamabile.

- Nu utilizați/depozitați într-un mediu cu temperatură extrem de înaltă sau cu presiune extrem de joasă din cauza altitudinii foarte mari.

- Nu încercați să ardeți, să spargeți sau să tăiați bateriile uzate.

⚠ : Ova oznaka je oznaka sigurnosti/upozorenja.

- Nemojte gutati bateriju.

Opasnost od kemijskih opekline

- Ovaj proizvod sadrži novčić/gumb bateriju.
- Ako se novčić/gumb baterija proguta, može uzrokovati ozbiljne unutarnje opekline u samo 2 sata i može dovesti do smrti.
- Držite nove i rabljene baterije izvan dohvata djece.
- Ako se pretinac za baterije ne zatvara sigurno, prestanite koristiti proizvod i držite ga dalje od djece.
- Ako smatrate da su baterije možda progutane ili smještene unutar bilo kojeg dijela tijela, zatražite hitnu medicinsku pomoć.

OPREZ

- Ako je baterija zamijenjena pogrešnim tipom, postoji rizik od eksplozije.
- Zamijenite bateriju s baterijama iste vrste.

OPREZ

- Rizik od eksplozije ili istjecanja zapaljive tekućine ili plina.
- Nemojte koristiti u /pohranjivati u /unijeti u prostoru izuzetno visoke temperature ili izuzetno niskog tlaka zbog visoke nadmorske visine.
- Ne pokušavajte spaliti, lomiti ili rezati istrošenu bateriju.

⚠ : Þetta tákn er öryggis-/aðvörunartákn.

- Gleypið ekki rafhlöðuna.

Hætta á efnabruna

- Þessi vara inniheldur flata rafhlöðu.
- Ef rafhlaðan er gleypst getur hún valdið alvarlegum innvortis brunna á innan við 2 klukkustundum sem getur leitt til dauða.
- Geymið nýjar og notaðar rafhlöður þar sem börn ná ekki til.
- Ef rafhlöðuhólfíð lokast ekki örugglega skal hætta notkun vörunnar og geyma hana þar sem börn ná ekki til.
- Ef þú telur að rafhlöður hafi verið gleypar eða settar inn í eitthvert líkamsop, skaltu hafa samband við lækni tafarlaust.

VARÚÐ

- Hætta á sprengingu ef rafhlöðunni er skipt út fyrir ranga tegund.
- Skiptið rafhlöðunni ávallt út fyrir sömu tegund.

VARÚÐ

- Hætta á sprengingu eða leka á eldfimum vökva eða lofttegundum.
- Má ekki nota/geyma/setja í umhverfi þar sem er afar hár hiti, eða afar lágur þrýstingur vegna mikillar hæðar.
- Ekki reyna að brenna, kremja eða skera notaða rafhlöðu.

⚠ : Dette merket er et sikkerhets-/advarselsmerke.

- Ikke svelg batteriet.

Kjemisk brannfare

- Dette produktet inneholder et mynt-/knappcellebatteri.
- Dersom mynt-/knappcellebatteriet svelges, kan det frembringe alvorlige indre forbrenninger i løpet av kun to timer, og kan være dødelig.
- Hold nye og brukte batterier borte fra barn.
- Lukkes ikke batterirommet sikkert må du stanse å bruke produktet og holde det utenfor barns rekkevidde.
- Oppsøk medisinsk hjelp umiddelbart hvis du tror at batterier kan være svelget eller plassert inne i kroppen.

FORSIKTIG

- Eksplosjonsfare hvis batteriet erstattes med feil type.
- Bytt batteri med samme type.

FORSIKTIG

- Fare for eksplosjon eller lekkasje av brannfarlig væske eller gass.

- Ikke bruk i/oppbevar i/ta med inn i miljø med ekstremt høy temperatur eller ekstremt lavt trykk på grunn av den svært store høyden.

- Ikke forsøk å brenne, knuse eller skjære opp et brukt batteri.

⚠ : Ova oznaka je sigurnosna/upozoravajuća oznaka.

- Nemojte gutati bateriju.

Opasnost od hemijskih opekotina

- Ovaj proizvod sadrži bateriju veličine kovanice/dugmeta.
- Ako se baterija veličine kovanice/dugmeta proguta, može izazvati ozbiljne unutrašnje opekotine za samo 2 sata i može dovesti do smrti.
- Čuvajte nove i korišćene baterije dalje od djece.
- Ako se prostor za baterije ne zatvori dobro, prestanite sa korišćenjem proizvoda i držite ga dalje od djece.
- Ako mislite da su baterije možda progutane ili stavljene u unutrašnjost bilo kog dijela tijela, potražite hitnu medicinsku pomoć.

OPREZ


- Opasnost od eksplozije ako se baterija zamijeni s baterijom pogrešnog tipa.
- Zamijenite bateriju sa baterijom istog tipa.

OPREZ

- Opasnost od eksplozije ili curenja zapaljive tečnosti ili gasa.

- Nemojte koristiti /skladištiti /unositi u okruženje izuzetno visoke temperature ili izuzetno niskog pritiska usljed veoma velike visine.

- Ne pokušavajte da spalite, lomite ili isječete iskorišćenu bateriju.

 : Kjo është shenjë sigurie/paralajmërimi.

• Mos e gëlltisni baterinë.

Rrezik djegieje kimike

• Ky produkt përmban një bateri të hollë në formë monedhe/kopse.

• Nëse bateria e hollë në formë monedhe/kopse gëlltitet, ajo mund të shkaktojë djegie të rënda të brendshme brenda vetëm 2 orëve dhe mund të sjellë vdekjen.

• Mbajini bateritë e reja dhe të përdorura larg nga fëmijët.

• Nëse foleja e baterisë nuk mbyllet mirë, ndaloni përdorimin e produktit dhe mbajeni larg nga fëmijët.

• Nëse mendoni se bateritë mund të jenë gëlltitur ose futur brenda ndonjë pjese trupi, kërkoni menjëherë vëmendjen e mjekut.

KUJDES

• Rrezik shpërthimi nëse bateria zëvendësohet me një lloj të pasaktë.


• Zëvendësojeni baterinë me të njëjtin lloj.

KUJDES

• Rrezik shpërthimi nga rrjedhja e lëngut apo gazit të ndezshëm.

• Mos e përdorni / ruani / sillni në mjedise me temperaturë jashtëzakonisht të lartë ose presion jashtëzakonisht të ulët në lartësi shumë të mëdha.

• Mos u përpiqni të digjni, shtypni ose prisni baterinë e përdorur.

 : Ova oznaka je oznaka za bezbednost/upozorenje.

• Nemojte gutati bateriju.

Opasnost od hemijskih opekotina

• Ovaj proizvod sadrži bateriju u obliku novčića/dugmeta.

• Ako se baterija u obliku novčića/gumba proguta, može da izazove ozbiljne interne opekotine za samo 2 sata i može da dovede do smrti.

• Nove i korišćene baterije čuvajte van domašaja dece.

• Ako se odeljak za bateriju ne zatvori dobro, prestanite da koristite proizvod i čuvajte ga van domašaja dece.

• Ako mislite da su baterije možda progutane ili stavljene unutar bilo kog dela tela, odmah zatražite medicinsku pomoć.

OPREZ

• Rizik od eksplozije ako je baterija zamenjena nepravilnim tipom.

• Zamenite bateriju sa istim tipom.

OPREZ

• Rizik od eksplozije ili curenja zapaljive tečnosti ili gasa.

• Ne koristite/ne čuvajte/ne donosite u sredinu izuzetno visoke temperature ili izuzetno niskog pritiska usled vrlo visoke visine.

• Ne pokušavajte da zapalite, smrvite ili isečete korišćenu bateriju.

⚠ : Bu işaret bir güvenlik/uyarı işaretidir.

•Pili yutmayın.

Kimyasal Yanma Tehlikesi

•Bu üründe bir düğme pil bulunmaktadır.

•Düğme pil yutulursa, sadece 2 saat içinde ağır iç yanıklara neden olabilir ve ölüme yol açabilir.

•Yeni ve kullanılmış pilleri çocuklardan uzak tutun.

•Pil yuvası emniyetli bir şekilde kapanmıyorsa, ürünü kullanmayı bırakın ve çocuklardan uzak tutun.

•Pillerin yutulduğunu veya vücudun herhangi bir parçasının içine yerleştirildiğini düşünüyorsanız, derhal tıbbi yardım alın.

DİKKAT

•Pil yanlış tür bir pille değiştirilirse patlama riski vardır.

•Pili aynı tür pillerle değiştirin.

DİKKAT

•Patlama ya da yanıcı sıvı veya gaz sızıntısı riski vardır.

•Aşırı derecede yüksek sıcaklıktaki veya çok yüksek rakımdan dolayı aşırı derecede düşük basınçta sahip ortamlarda kullanmayın /saklamayın veya bu ortamlara götürmeyin.

•Kullanılmış pili yakmaya, ezmeye veya kesmeye çalışmayın.

► For vehicles sold in Ukraine

Справжнім TOKAI RIKAI CO., LTD. заявляє, що тип радіообладнання V3N2K2R відповідає Технічному регламенту радіообладнання;

КАБІНЕТ МІНІСТРІВ УКРАЇНИ ПОСТАНОВА №.355

Повний текст декларації про відповідність доступний на веб-сайті за такою адресою:

<http://www.tokai-rika.co.jp/pc>

Діапазон частот : 433.050 - 434.790 MHz

Максимальна потужність радіочастотного випромінювання :
10 mW(ERP)



Адреса: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195,
Japan



Ця позначка являє собою позначку про необхідність дотримання правил безпеки/застереження.
· Не допускайте проковтування батарейки.

Небезпека хімічного опіку

- Цей виріб містить батарейку монетного / таблеткового типу.
- Проковтування батарейки монетного / таблеткового типу може спричинити тяжкі внутрішні опіки всього лише за 2 години і може призвести до смерті.
- Зберігайте нові та використані батарейки подалі від дітей.
- Якщо кришка батарейного відсіку надійно не закривається, припиніть користуватися виробом і зберігайте його подалі від дітей.
- Якщо існує ймовірність проковтування батарейки або її розміщення всередині будь-якої частини тіла, негайно зверніться за медичною допомогою.

ОБЕРЕЖНО

- Ризик вибуху в разі заміни на батарейку неналежного типу.
- Замініть батарейку на батарейку такого ж самого типу.


ОБЕРЕЖНО

- Ризик вибуху або витоку горючої рідини або газу.
- Не використовуйте /не зберігайте /не розміщуйте в умовах надзвичайно високої температури або надзвичайно низького тиску через дуже велику висоту над рівнем моря.
- Не намагайтеся спалити, розбити або розрізати використану батарейку.

- For vehicles sold in Vietnam



- For vehicles sold in the United Arab Emirates

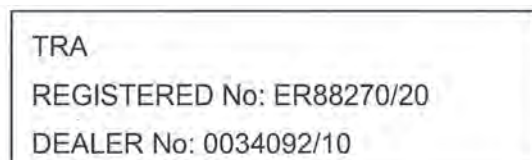

- For vehicles sold in Jordan

- Manufacturer: TOKAI RIKA CO., LTD.
- Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi
480-0195, Japan
- Brand: TOKAI RIKA
- Equipment: Electronic Key
- Model: B3N2K2R

- For vehicles sold in Jamaica

This product has been Type Approved by Jamaica: SMA, Equipment identifier is placed on the product.

► For vehicles sold in Paraguay



NR:2020-07-I-0464

TOKAI RIKA B3N2K2R

[Información de empresas de venta de vehículos en Paraguay]

- Nombre de la empresa: Toyotoshi S.A.
- Dirección de la empresa: Av. Mariscal López esq. Victor Cáceres, San Lorenzo, Central, Paraguay

► For vehicles sold in South Africa



- For vehicles sold in Federated States of Micronesia and Saint Martin

<p>Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BF3US is in compliance with Directive 2014/53/EU.</p> <p>The full text of the EU declaration of conformity is available at the following internet address: http://www.tokai-rika.co.jp/pc</p>
<p>TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BF3US on direktiivin 2014/53/EU mukainen.</p> <p>EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.tokai-rika.co.jp/pc</p>
<p>Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BF3US conform is met Richtlijn 2014/53/EU.</p> <p>De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc</p>
<p>Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BF3US est conforme à la directive 2014/53/UE.</p> <p>Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc</p>
<p>Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BF3US överensstämmer med direktiv 2014/53/EU.</p> <p>Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc</p>

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BF3US er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://www.tokai-rika.co.jp/pc>

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BF3US der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://www.tokai-rika.co.jp/pc>

Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BF3US πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<http://www.tokai-rika.co.jp/pc>

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BF3US è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://www.tokai-rika.co.jp/pc>

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BF3US es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<http://www.tokai-rika.co.jp/pc>

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BF3US está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<http://www.tokai-rika.co.jp/pc>

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BF3US huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej:

<http://www.tokai-rika.co.jp/pc>

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev radioseadme tüüp BF3US vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. igazolja, hogy a BF3US típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BF3US je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<http://www.tokai-rika.co.jp/pc>

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BF3US je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. potvrzuje, da je tip radijske opreme BF3US skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<http://www.tokai-rika.co.jp/pc>

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BF3US atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<http://www.tokai-rika.co.jp/pc>

Ar šo TOKAI RIKA CO., LTD. deklarė, ka radioiekārta BF3US atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BF3US jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKAI CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BF3US er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisýfirlýsingin er tiltæk á eftirfarandi vefslóð:
<http://www.tokai-rika.co.jp/pc>

TOKAI RIKAI CO., LTD. erklærer herved at radioutstyrten BF3US er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:
<http://www.tokai-rika.co.jp/pc>

С настоящото TOKAI RIKAI CO., LTD. декларира, че този тип радиосъоръжение BF3US е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
<http://www.tokai-rika.co.jp/pc>

Prin prezenta, TOKAI RIKAI CO., LTD. declară că tipul de echipamente radio BF3US este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
<http://www.tokai-rika.co.jp/pc>

Ovime TOKAI RIKAI CO., LTD. potvrđuje da je radio-oprema tipa BF3US u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:
<http://www.tokai-rika.co.jp/pc>

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BF3US është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BF3US u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<http://www.tokai-rika.co.jp/pc>

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BF3US u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BF3US 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

<http://www.tokai-rika.co.jp/pc>



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 2

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BH2KV is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BH2KV on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<http://www.tokai-rika.co.jp/pc>

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BH2KV conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<http://www.tokai-rika.co.jp/pc>

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BH2KV est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<http://www.tokai-rika.co.jp/pc>

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BH2KV överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<http://www.tokai-rika.co.jp/pc>

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BH2KV er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://www.tokai-rika.co.jp/pc>

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BH2KV der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://www.tokai-rika.co.jp/pc>

Με την παρούσα ο/η TOKAI RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BH2KV πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<http://www.tokai-rika.co.jp/pc>

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BH2KV è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://www.tokai-rika.co.jp/pc>

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BH2KV es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<http://www.tokai-rika.co.jp/pc>

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BH2KV está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<http://www.tokai-rika.co.jp/pc>

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BH2KV huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<http://www.tokai-rika.co.jp/pc>

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev radioseadme tüüp BH2KV vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. igazolja, hogy a BH2KV típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BH2KV je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<http://www.tokai-rika.co.jp/pc>

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BH2KV je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. potvrzuje, da je tip radijske opreme BH2KV skladen z Direktivo 2014/53/EU,

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<http://www.tokai-rika.co.jp/pc>

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BH2KV atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<http://www.tokai-rika.co.jp/pc>

Ar šo TOKAI RIKA CO., LTD. deklarė, ka radioiekārta BH2KV atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BH2KV jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKAI CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BH2KV er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisýfirlýsingin er tiltæk á eftirfarandi vefslóð:
<http://www.tokai-rika.co.jp/pc>

TOKAI RIKAI CO., LTD. erklærer herved at radioutstyrten BH2KV er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:
<http://www.tokai-rika.co.jp/pc>

С настоящото TOKAI RIKAI CO., LTD. декларира, че този тип радиосъоръжение BH2KV е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
<http://www.tokai-rika.co.jp/pc>

Prin prezenta, TOKAI RIKAI CO., LTD. declară că tipul de echipamente radio BH2KV este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
<http://www.tokai-rika.co.jp/pc>

Ovime TOKAI RIKAI CO., LTD. potvrđuje da je radio-oprema tipa BH2KV u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:
<http://www.tokai-rika.co.jp/pc>

Me anë të këtij dokumenti, TOKAI RIKAI CO., LTD. deklaron se tipi i radiopajisjes BH2KV është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKAI CO., LTD. ovime izjavljuje da je radijska oprema tipa BH2KV u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<http://www.tokai-rika.co.jp/pc>

Ovim TOKAI RIKAI CO., LTD. potvrđuje da je radio-oprema tipa BH2KV u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

<http://www.tokai-rika.co.jp/pc>

TOKAI RIKAI CO., LTD., işbu belgeyle telsiz cihazı türünün BH2KV 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

<http://www.tokai-rika.co.jp/pc>



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 2

► For vehicles sold in Ukraine

Справжнім TOKAI RIKА CO., LTD. заявляє, що тип радіообладнання ВН2KV відповідає Технічному регламенту радіообладнання;
КАБІНЕТ МІНІСТРІВ УКРАЇНИ ПОСТАНОВА №.355

Повний текст декларації про відповідність доступний на веб-сайті за такою адресою:
<http://www.tokai-rika.co.jp/pc>

Категорія приймача: 2



Адреса: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

► For vehicles sold in Pakistan



Model: See product
Year of Approval: See product
Serial No: See product
Year of Manufacture: See product

► For vehicles sold in Jordan

- Manufacturer: TOKAI RIKА CO., LTD.
- Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan
- Brand: TOKAI RIKА
- Equipment: Receiver
- Model: ВН2KV

Millimeter wave radar sensor

- For vehicles sold in Ukraine



UA RF: 3DENS FR09

модель: DNMWR009

смуга радіочастот: 76-77 ГГц

максимальна вихідна потужність: 416.87 мВт або менше

виробник: DENSO CORPORATION

адреса: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan

справжнім DENSO CORPORATION заявляє, що тип радіообладнання відповідає Технічному регламенту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою:

<https://www.denso.com/global/en/contact-us/doc/>

- For vehicles sold in Vietnam



- For vehicles sold in Jordan

For Vehicles sold in Jordan

TRC approval number: TRC/LPD/2016/506

- For vehicles sold in Jamaica

This product has been Type Approved by Jamaica: SMA - DNMWR009.

- ▶ For vehicles sold in Paraguay

[Para los vehículos que se venden en Paraguay]

Nombre del proveedor en Paraguay: Toyotoshi S.A.

Dirección: Av.Mariscal Lopez 2801/2899 Asuncion, Paraguay

- ▶ For vehicles sold in Belize

FCC ID: HYQDNMWR009

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiofrequency radiation exposure Information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator (antenna) and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Blind Spot Monitor



TRA
REGISTERED No:
ER59360

DEALER No:
DA40068

The Equipment Identified hereon is approved for use under the following rules

- 1- This equipment must not cause harmful interference to other service.
- 2- This equipment is subject to harmful interference, and the owner of this equipment must not claim for protection.

ictQATAR
Type approval reg No:
CRA/SA/2014/R-4413

Importer No:
FT-2222

TRC's type approval certificate number: TRC/LPD/2014/254

Name and address of the manufacturer

ADC Automotive Distance Control Systems GmbH
Peter-Dornier-Strasse 10, 88131 Lindau, Germany

Brand, Model, Type and Commercial name

Continental, SRR3-A, Short Range Radar

From the Lebanese Telecommunications Ministry:

Type Approval Number : 12421/O&M/2014

CONTINENTAL

C0243210918AF04A2



ICT



NTC

Type Approved

No.: ESD-1409920C

37739/I/SDPPI/2017

2130

FCC ID : OAYSRR3A

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

<p>Manufacturer Postal Address ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany</p>
<p>ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ С настоящото ADC Automotive Distance Control Systems GmbH декларира, че този тип радиосъоръжение SRR3-A е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://continental.automotive-approvals.com/</p> <p>радиочестотната лента или ленти, в която или които работи радиосъоръжението: 24.05–24.25 GHz</p> <p>максималната радиочестотна мощност, излъчвана в радиочестотната лента или ленти, в която или които работи радиосъоръжението: 100mW (20 dBm) Peak EIRP</p>
<p>DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA Por la presente, ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico SRR3-A es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://continental.automotive-approvals.com/</p> <p>Banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 24.05–24.25 GHz</p> <p>Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 100mW (20 dBm) Peak EIRP</p>

ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ

Tímto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádiového zařízení SRR3-A je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://continental.automotive-approvals.com/>

Kmitočtové pásmo (kmitočtová pásma), v němž (v nichž) rádiové zařízení pracuje: 24.05–24.25 GHz

Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmitočtových pásmech), v němž (v nichž) je rádiové zařízení provozováno: 100mW (20 dBm) Peak EIRP

FORENKLET EU-OVERENSSTEMMELSESERKLÆRING

Hermed erklærer ADC Automotive Distance Control Systems GmbH, at radioudstyret SRR3-A er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://continental.automotive-approvals.com/>

Frekvensbånd, som radioudstyret fungerer på: 24.05–24.25 GHz

Maksimal radiofrekvenseffekt, der udsendes i de frekvensbånd, som radioudstyret fungerer på: 100mW (20 dBm) Peak EIRP

VEREINFACHTE EU-KONFORMITÄTSEKTLÄRUNG

Hiermit erklärt ADC Automotive Distance Control Systems GmbH, dass der Funkanlagentyp SRR3-A der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://continental.automotive-approvals.com/>

Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage betrieben wird: 24.05–24.25 GHz

Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung: 100mW (20 dBm) Peak EIRP

LIHTSUSTATUD ELI VASTAVUSDEKLARATSIOON

Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käesolev raadioseadme tüüp SRR3-A vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
<http://continental.automotive-approvals.com/>

Sagedusriba(d), millel raadioseade töötab: 24.05–24.25 GHz

Raadioseadme töösagedus(t)el edastatav maksimaalne saatevõimsus: 100mW (20 dBm) Peak EIRP

ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ

Με την παρούσα ο/η ADC Automotive Distance Control Systems GmbH, δηλώνει ότι ο ραδιοεξοπλισμός SRR3-A πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
<http://continental.automotive-approvals.com/>

Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 24.05–24.25 GHz

η μέγιστη ραδιοηλεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 100mW (20 dBm) Peak EIRP

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type SRR3-A is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<http://continental.automotive-approvals.com/>

Frequency band(s) in which the radio equipment operates: 24.05–24.25 GHz

Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 100mW (20 dBm) Peak EIRP

DECLARATION UE DE CONFORMITE SIMPLIFIEE

Le soussigné, ADC Automotive Distance Control Systems GmbH, déclare que l'équipement radioélectrique du type SRR3-A est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
<http://continental.automotive-approvals.com/>

Bandes de fréquences utilisées par l'équipement radioélectrique: 24.05–24.25 GHz

Puissance de radiofréquence maximale transmise sur les bandes de fréquences utilisées par l'équipement radioélectrique: 100mW (20 dBm) Peak EIRP

POJEDNOSTAVLJENA EU IZJAVA O SUKLADNOSTI

ADC Automotive Distance Control Systems GmbH ovime izjavljuje da je radijska oprema tipa SRR3-A u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
<http://continental.automotive-approvals.com/>

Frekvencijski pojas (frekvencijski pojasi) u kojem (kojima) radijska oprema radi: 24.05–24.25 GHz

Najveća radiofrekvencijska snaga koja se prenosi u frekvencijskom pojasu (frekvencijskim pojasima) u kojem (kojima) radijska oprema radi: 100mW (20 dBm) Peak EIRP

DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA

Il fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo di apparecchiatura radio SRR3-A è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
<http://continental.automotive-approvals.com/>

Bande di frequenza di funzionamento dell'apparecchiatura radio: 24.05–24.25 GHz

Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui opera l'apparecchiatura radio: 100mW (20 dBm) Peak EIRP

VIENKĀRŠOTA ES ATBILSTĪBAS DEKLARĀCIJA

Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radioiekārta SRR3-A atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
<http://continental.automotive-approvals.com/>

Frekvenču joslu(-as), kurā(-ās) radioiekārtas darbojas: 24.05–24.25 GHz

Frekvenču joslā(-ās), kurā(-ās) darbojas radioiekārtas, maksimālo pārraidītā signāla jaudu.: 100mW (20 dBm) Peak EIRP

SUPAPRĀSTĪTA ES ATBILSTĪBAS DEKLARĀCIJA

Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, ka radio ierīču tipa SRR3-A atbilst Direktīvai 2014/53/ES. Visas ES atbilstības deklarācijas teksts pieejams šī interneta adresē:
<http://continental.automotive-approvals.com/>

Dažņu josla (-os), kurā(-ās) veic radio ierīču: 24.05–24.25 GHz

Liela radio dažņu jauda, kas tiek izstarota (tos) dažņu joslā(-ās), kurā(-ās) veic radio ierīču: 100mW (20 dBm) Peak EIRP

EGYSZERŰSÍTETT EU-MEGFELELŐSÉGI NYILATKOZAT

ADC Automotive Distance Control Systems GmbH igazolja, hogy a SRR3-A típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen::
<http://continental.automotive-approvals.com/>

Az(ok) a frekvenciasáv(ok), amely(ek)en a rádióberendezés működik:
24.05–24.25 GHz

Az abban a frekvenciasávban vagy azokban a frekvenciasávokban továbbított maximális teljesítmény, amely(ek)ben a rádióberendezés üzemel:
100mW (20 dBm) Peak EIRP

DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TAL-UE

B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju SRR3-A huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
<http://continental.automotive-approvals.com/>

Il-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 24.05–24.25 GHz

Il-potenza massima tal-frekwenza tar-radju trażmessa fil-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar- radju: 100mW (20 dBm) Peak EIRP

VEREENVOUDIGDE EU-CONFORMITEITSVERKLARING

Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur SRR3-A conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
<http://continental.automotive-approvals.com/>

Frequentieband(en) waarin de radioapparatuur functioneert: 24.05–24.25 GHz

Maximaal radiofrequent vermogen uitgezonden in de frequentieband(en) waarin de radioapparatuur functioneert: 100mW (20 dBm) Peak EIRP

UPROSZCZONA DEKLARACJA ZGODNOŚCI UE

ADC Automotive Distance Control Systems GmbH niniejszym oświadcza, że typ urządzenia radiowego SRR3-A jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
<http://continental.automotive-approvals.com/>

Zakresu(-ów) częstotliwości, w którym (których) pracuje urządzenie radiowe: 24.05–24.25 GHz

Maksymalnej mocy częstotliwości radiowej emitowanej w zakresie(-ach) częstotliwości, w którym (których) pracuje urządzenie radiowe: 100mW (20 dBm) Peak EIRP

DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA

O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio SRR3-A está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<http://continental.automotive-approvals.com/>

A(s) banda(s) de frequências em que o equipamento de rádio funciona:
24.05–24.25 GHz

A potência máxima de radiofrequências transmitida na(s) banda(s) de frequências em que o equipamento de rádio funciona: 100mW (20 dBm)
Peak EIRP

DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ

Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio SRR3-A este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

<http://continental.automotive-approvals.com/>

Banda (benzile) de frecvențe în care funcționează echipamentul radio:
24.05–24.25 GHz

Puterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 100mW (20 dBm)
Peak EIRP

ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE

ADC Automotive Distance Control Systems GmbH týmto vyhlasuje, že rádiové zariadenie typu SRR3-A je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
<http://continental.automotive-approvals.com/>

Frekvenčné pásmo resp. pásma, v ktorých rádiové zariadenie pracuje:
24.05–24.25 GHz

Maximálny vysokofrekvenčný výkon prenášaný vo frekvenčnom pásme, resp. pásmach, v ktorých rádiové zariadenie pracuje: 100mW (20 dBm)
Peak EIRP

POENOSTAVLJENA IZJAVA EU O SKLADNOSTI

ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme SRR3-A skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<http://continental.automotive-approvals.com/>

Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 24.05–24.25 GHz

Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali pasovih, na katerih radijska oprema deluje: 100mW (20 dBm) Peak EIRP

YKSINKERTAISTETTU EU-VAATIMUSTENMUKAISUUSVAKUUTUS

ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaitetyyppi SRR3-A on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<http://continental.automotive-approvals.com/>

Radiotaajuudet, joilla radiolaite toimii: 24.05–24.25 GHz

Suurin mahdollinen lähetysteho radiotaajuuksilla, joilla radiolaite toimii: 100mW (20 dBm) Peak EIRP

FÖRENKLAD EU-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE

Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ av radioutrustning SRR3-A överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<http://continental.automotive-approvals.com/>

Det eller de frekvensband där radioutrustningen arbetar: 24.05–24.25 GHz

Den maximala radiofrekvens effekt som överförs inom det eller de frekvensband där radioutrustningen arbetar: 100mW (20 dBm) Peak EIRP

EINFÖLDUÐ ESB SAMRÆMISYFIRLÝSING

Hér með lýsir ADC Automotive Distance Control Systems GmbH því yfir, að fjarskiptabúnaðurinn að gerð SRR3-A er í samræmi við tilskipun 2014/53/ ESB. Textinn í fullri lengd um Samræmisyfirlýsingu ESB er að gengilegur á eftirfarandi veffangi:
<http://continental.automotive-approvals.com/>

Bandbreidd(ir), sem fjarskiptabúnaðurinn starfar í: 24.05–24.25 GHz

Hámarks fjarskiptatíðni sendistyrkleika í bandbreiddinni/bandbreiddunum sem fjarskiptabúnaðurinn starfar í: 100mW (20 dBm) Peak EIRP

BASÍLEŢTIRILMIŠ AB UYGUNLUK BEYANI

Íšbu belge ile, ADC Automotive Distance Control Systems GmbH şirketi SRR3-A tipi radyo ekipmanının 2014/53/AB sayılı direktife uygun olduđunu beyan eder. AB uygunluk beyanının tam metni ařađıdaki İnternet adresinde mevcuttur:
<http://continental.automotive-approvals.com/>

Radyo cihazının alıřtıđı frekans bandı/bantları: 24.05–24.25 GHz

Radyo ekipmanının alıřtıđı frekans bandında/bantlarında iletilen maksimum radyo frekansı gücü: 100mW (20 dBm) Peak EIRP



СПРОЩЕНА ДЕКЛАРАЦІЯ про відповідність

справжнім (найменування виробника ADC Automotive Distance Control Systems GmbH) заявляє, що тип радіообладнання (позначення типу радіообладнання SRR3-A) відповідає Технічному регламенту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою: <http://continental.automotive-approvals.com/>

найменування та адресу виробника

АДС Автомобілів Дістанс Контрол Системс ГмбХ
 Пітер-Дорнієр-Штрассе 10, 88131, Ліндау, Німеччина
 (ADC Automotive Distance Control Systems GmbH
 Peter-Dornier-Strasse 10, 88131, Lindau, Germany)

СПРОЩЕНА ДЕКЛАРАЦІЯ ЄС ПРО ВІДПОВІДНІСТЬ

Цим ADC Automotive Distance Control Systems GmbH заявляє, що радіообладнання типу SRR3-A відповідає вимогам Директиви 2014/53/EU. Повний текст декларації ЄС про відповідність доступний за наступною адресою в мережі Інтернет:

<http://continental.automotive-approvals.com/>

Частотний діапазон(-и), в якому працює радіообладнання: 24.05–24.25 ГГц

Максимальна потужність радіочастотного сигналу, що передається у частотному діапазоні(-ах), в якому працює радіообладнання:

100 мВт (20 дБм) Пікова ефективна потужність випромінювання

SRR3-A has been registered with: UA RF: 1CONT 0006

Bluetooth®

Bluetooth®

Wireless charger

[Para los vehículos que se venden en Paraguay]

Toyotoshi S.A.

Avda. Mariscal López 2801/99 y Reclus. Asunción – Paraguay.

FCC ID: ACJ932AT2001

NOTE:

This device complies with part 15 and part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a wireless power charger, pursuant to part 18 of the FCC Rules.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Manufacturer

- Name: Panasonic Corporation
- Address: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Specifications of Wireless charger

Frequency band: 120.3-128.549kHz

Maximum output power: 10W Max

Model No.[*]

CA-QT3BJ0AJ



<p>Hereby, Panasonic Corporation declares that the radio equipment type [*] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.ptc.panasonic.eu/</p>
<p>С настоящото Panasonic Corporation декларира, че този тип радиосъоръжение [*] е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://www.ptc.panasonic.eu/</p>
<p>Tímto Panasonic Corporation prohlašuje, že typ rádiového zařízení [*] je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.ptc.panasonic.eu/</p>
<p>Hermed erklærer Panasonic Corporation, at radioudstyrstypen [*] er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.ptc.panasonic.eu/</p>
<p>Hiermit erkläre Panasonic Corporation, dass der Funkanlagentyp [*] der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://www.ptc.panasonic.eu/</p>
<p>Käesolevaga deklareerib Panasonic Corporation, et käesolev raadioseadme tüüp [*] vastab direktiivi 2014/53/EL nõuetele. Eli vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://www.ptc.panasonic.eu/</p>
<p>Με την παρούσα ο/η Panasonic Corporation, δηλώνει ότι ο ραδιοεξοπλισμός [*] πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.ptc.panasonic.eu/</p>
<p>Por la presente, Panasonic Corporation declara que el tipo de equipo radioeléctrico [*] es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.ptc.panasonic.eu/</p>

<p>Le soussigné, Panasonic Corporation, déclare que l'équipement radioélectrique du type [*] est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.ptc.panasonic.eu/</p>
<p>Il fabbricante, Panasonic Corporation, dichiara che il tipo di apparecchiatura radio [*] è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.ptc.panasonic.eu/</p>
<p>Ar šo Panasonic Corporation deklarē, ka radioiekārta [*] atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.ptc.panasonic.eu/</p>
<p>Aš, Panasonic Corporation, patvirtinu, kad radijo įrenginių tipas [*] atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.ptc.panasonic.eu/</p>
<p>Panasonic Corporation ovime izjavljuje da je radijska oprema tipa [*] u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.ptc.panasonic.eu/</p>
<p>Panasonic Corporation igazolja, hogy a [*] típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: http://www.ptc.panasonic.eu/</p>
<p>B'dan, Panasonic Corporation, niddikjara li dan it-tip ta' tagħmir tar-radju [*] huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.ptc.panasonic.eu/</p>
<p>Hierbij verklaar ik, Panasonic Corporation, dat het type radioapparatuur [*] conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.ptc.panasonic.eu/</p>

<p>Panasonic Corporation niniejszym oświadcza, że typ urządzenia radiowego [*] jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.ptc.panasonic.eu/</p>
<p>O(a) abaixo assinado(a) Panasonic Corporation declara que o presente tipo de equipamento de rádio [*] está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.ptc.panasonic.eu/</p>
<p>Prin prezenta, Panasonic Corporation declară că tipul de echipamente radio [*] este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.ptc.panasonic.eu/</p>
<p>Panasonic Corporation týmto vyhlasuje, že rádiové zariadenie typu [*] je v súlade so smernicou 2014/53/EU. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.ptc.panasonic.eu/</p>
<p>Panasonic Corporation potvrjuje, da je tip radijske opreme [*] skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.ptc.panasonic.eu/</p>
<p>Panasonic Corporation vakuuttaa, että radiolaitetyyppi [*] on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusyakuituksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.ptc.panasonic.eu/</p>
<p>Härmed försäkrar Panasonic Corporation att denna typ av radioutrustning [*] överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.ptc.panasonic.eu/</p>

Бездротовий зарядний пристрій
смуру радіочастот, в якій працює радіообладнання: 119.3-128.6kHz
максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання: 10W

моделі №. [*]
CA-QT3BJ0AJ

справжнім Panasonic Corporation заявляє, що тип радіообладнання [*] ві
дповідає Технічному регламенту радіообладнання;
повний текст декларації про відповідність доступний на веб-сайті за тако
ю адресою:

<https://service.panasonic.ua/>
(розділ «Технічне регулювання»)

Tire pressure warning system

FCC ID: PAXPMVE000

NOTE

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2)
this device must accept any interference received, including
interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the
party responsible for compliance could void the user's
authority to operate the equipment.

FCC ID: PAXPMVE100

NOTE

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2)
this device must accept any interference received, including
interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the
party responsible for compliance could void the user's
authority to operate the equipment.

• Manufacturer's name: PACIFIC INDUSTRIAL CO., LTD.

• Registered trademark: 

This trademark is registered in the following countries:

UK, Italy, Austria, Greece, Germany, France, Belgium,
the Netherlands, Luxembourg, Portugal.

• Manufacturer's address:

1300-1 Yokoi, Godo-cho, Anpachi-gun, Gifu, 503-2397 JAPAN

• Operating frequency band: 433.05 — 434.79MHz

• Maximum radio-frequency power: 100dB μ V/m@3m(Radiated)

Hereby, PACIFIC INDUSTRIAL CO., LTD. declares that the radio equipment type PMV-E100 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. vakuuttaa, että radiolaitetyyppi PMV-E100 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Hierbij verklaar ik, PACIFIC INDUSTRIAL CO., LTD., dat het type radioapparatuur PMV-E100 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Le soussigné, PACIFIC INDUSTRIAL CO., LTD., déclare que l'équipement radioélectrique du type PMV-E100 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Härmed försäkrar PACIFIC INDUSTRIAL CO., LTD. att denna typ av radioutrustning PMV-E100

överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Hermed erklærer PACIFIC INDUSTRIAL CO., LTD., at radioudstyrstypen PMV-E100 er i

overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Hiermit erklährt PACIFIC INDUSTRIAL CO., LTD., dass der Funkanlagentyp PMV-E100 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Με την παρούσα ο/η PACIFIC INDUSTRIAL CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός PMV-E100 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Il fabbricante, PACIFIC INDUSTRIAL CO., LTD., dichiara che il tipo di apparecchiatura radio PMV-E100 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Por la presente, PACIFIC INDUSTRIAL CO., LTD. declara que el tipo de equipo radioeléctrico PMV-E100 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

O(a) abaixo assinado(a) PACIFIC INDUSTRIAL CO., LTD. declara que o presente tipo de equipamento de rádio PMV-E100 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

B'dan, PACIFIC INDUSTRIAL CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju PMV-E100 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Käesolevaga deklareerib PACIFIC INDUSTRIAL CO., LTD., et käesolev raadioseadme tüüp PMV-E100 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. igazolja, hogy a PMV-E100 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu PMV-E100 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Tímto PACIFIC INDUSTRIAL CO., LTD. prohlašuje, že typ rádiového zařízení PMV-E100 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. potrjuje, da je tip radijske opreme PMV-E100 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Aš, PACIFIC INDUSTRIAL CO., LTD., patvirtinu, kad radijo įrenginių tipas PMV-E100 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Ar šo PACIFIC INDUSTRIAL CO., LTD. deklarē, ka radioiekārtā PMV-E100 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. niniešzym oświadcza, że typ urządzenia radiowego PMV-E100 jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Hér með lýsir PACIFIC INDUSTRIAL CO., LTD. yfir því að PMV-E100 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.

Samræmisýfirlýsing er einnig aðgengileg á eftirfarandi vefsíðu:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. erklærer at PMV-E100 er i overensstemmelse med direktiv 2014/53/EU.

Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettsadresse:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

С настоящото PACIFIC INDUSTRIAL CO., LTD. декларира, че този тип радиосъоръжение PMV-E100 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Prin prezenta, PACIFIC INDUSTRIAL CO., LTD. declară că tipul de echipamente radio PMV-E100 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

U ovom dokumentu, PACIFIC INDUSTRIAL CO., LTD. deklarirane da je radio oprema model PMV-E100 usklađena sa Directive 2014/53/EU.

Cio tekst EU deklaracije usklađenosti dostupan je na slijedećoj internet adresi:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Овим, PACIFIC INDUSTRIAL CO., LTD. изјављује да је радио опрема типа PMV-E100 усклађена са Directive 2014/53/EU.

Комплетан текст декларације ЕУ за усаглашеност доступан је на следећој веб адреси:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

PACIFIC INDUSTRIAL CO., LTD. ovime izjavljuje da je radijska oprema tipa PMV-E100 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

Këtu, PACIFIC INDUSTRIAL CO., LTD. deklarone se pajisja radio PMV-E100 është në përputhje me Directive 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të BE-së gjendet në adresën e mëposhtme të internetit:

<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>



- Модель: PMV-E100
- Виробник: Pacific Industrial Co., Ltd.

- Найменування та адреса виробника або його уповноваженого представника

Pacific Industrial Co., Ltd.
1300-1 Yokoi, Godo-cho, Anpachi-Gun, Gifu-Pref., 503-2397
Японія/Японія.

- Діапазон частот, МГц: 433,05 – 434,79
- Максимальна вихідна потужність передавача, мВт (дБм): 1,0 (0);

- Справжнім Pacific Industrial Co., Ltd. заявляє, що радіопередавач системи контролю тиску та температури в шинах автомобіля відповідає Технічному регламенту радіообладнання; повний текст декларації про відповідність доступний на веб-сайті за такою адресою:
<https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/ukr/>



Approval Number: T-789/19

52760/SDPPI/2017
3505



68849/SDPPI/2020
10202



TAC NO: 9.9406/2019



TRA	
REGISTERED	No:
ER58534/17	
DEALER	No:
DA0063612/11	

Type approval No.: TRC/LPD/2017/478

CNC COMISIÓN NACIONAL
DE COMUNICACIONES
H-22736

This product has been Type Approved
by Jamaica: SMA-PMV-E100.



NR: 2019-03-I-000183

Name and Address of local dealer
Toyotoshi S.A.
Av. Mariscal López esq. Victor
Cáceres, San Lorenzo, Central,
Paraguay



NR: 2019-03-I-000184

Name and Address of local dealer
Toyotoshi S.A.
Av. Mariscal López esq. Victor Cáceres,
San Lorenzo, Central, Paraguay

NCA APPROVED: BR3-1M-GE2-14F

Approval number: 18/034/AGR/GF/DG
TPMS transmitter



Model: PMV-E100

Connection and use of this communications Equipment is permitted by the Nigerian Communications Commission.

1. Approval Number: 085/ARCEP/DG/19
2. Date of Issue: 17/01/2019
3. Model: PMV-E100
4. Manufacturer: Pacific Industrial Co., Ltd.
5. Equipment is not intended to be connected to a public network.

1. Approval Number: 9/R/IMS/2018
2. Brand Name: Pacific Industrial Co., Ltd.
3. Model: PMV-E100

Toyota parking assist-sensor

Product name : Intuitive parking assist


Compliance statement : This device complies with part 18 of the FCC Rules.

Responsible Party : DENSO International America, Inc.

24777 Denso Drive, P.O. Box 5047, Southfield, Michigan 48033-5244, U.S.A.

<https://www.denso.com/us-ca/en/about-us/company-information/diam/>

GAS STATION INFORMATION

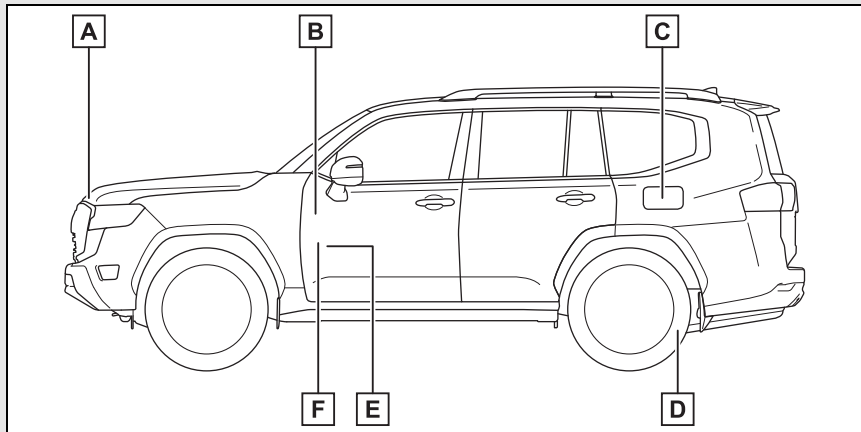

- A** Auxiliary catch lever (→P.640)
- B** Power back door switch* (→P.177)
- C** Fuel filler door (→P.295)
- D** Tire inflation pressure (→P.757)
- E** Fuel filler door opener (→P.295)
- F** Hood lock release lever (→P.640)

*: if equipped

Fuel tank capacity (Reference)	Vehicles without sub fuel tank system	80 L (21.1 gal., 17.6 Imp.gal.)
	Vehicles with sub fuel tank system	110 L (29.1 gal., 24.2 Imp.gal.)
Fuel type		P.747
Cold tire inflation pressure		P.757
Engine oil capacity (Drain and refill — reference)		P.748
Engine oil type		P.748

MX-1



Publication No. OM60S14E
Part No. 01999-60S14
Printed in Japan 01-2104-00 □
ランドクルーザーワゴン(一般E)